



SABER BOOM ASSEMBLIES

JD 72-7520 CAB

Current as of 02/15/2011



PARTS LISTING WITH
MOUNTING AND OPERATING
INSTRUCTIONS

Tiger Corporation
3301 N. Louise Ave.
Sioux Falls, SD 57107
1-800-843-6849
1-605-336-7900
www.tiger-mowers.com

06012000

TO THE OWNER / OPERATOR / DEALER

All implements with moving parts are potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes the potential hazards and follows reasonable safety practices. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents.

BEFORE YOU START!! Read the safety messages on the implement and shown in this manual. Observe the rules of safety and use common sense!

READ AND UNDERSTAND THIS MANUAL! Non-English speaking operators will need to GET THE MANUAL TRANSLATED as needed!



DANGER

FAILING TO FOLLOW SAFETY MESSAGES AND OPERATING INSTRUCTIONS CAN CAUSE SERIOUS BODILY INJURY OR EVEN DEATH TO OPERATOR AND OTHERS IN THE AREA.



1. Study and understand Operator's Manuals, Safety Decals, and Instructional Decals for tractor and implement to prevent misuse, abuse, and accidents. Practice before operating in a confined area or near passersby.

● Learn how to stop engine suddenly in an emergency. Be alert for passersby and especially children

2. Allow no children on or near folding mower or tractor. Allow no riders on tractor or implement. Falling off may cause serious injury or death from being run over by tractor or mower or contact with rotating blades.

3. Operate only with tractor having Roll-Over Protective Structure (ROPS) and with seat belt securely fastened to prevent injury and possible death from falling off or tractor overturn.

● Personal Protective Equipment such as Hard Hat, Safety Glasses, Safety Shoes, & Ear Plugs are recommended.

4. Block up or support raised machine and all lifted components securely before putting hands or feet under or working underneath any lifted component to prevent crushing injury or death from sudden dropping or inadvertent operation of controls. Make certain area is clear before lowering or folding

5. Before transporting, put Lift Lever in detent or full-lift position. Install Transport Safety Devices securely on folding mowers. Put Booms securely in Transport Rest.

● Folding and Boom Mowers have raised center of gravity. Slow down when turning and on hillsides.

6. Make certain that SMV sign, warning lights, and reflectors are clearly visible. Follow local traffic codes.

7. Never operate with Cutting Head or Folding Section raised if passersby, bystanders, or traffic are in the area to reduce possibility of injury or death from objects thrown by Blades under Guards or mower structure.

8. Before dismounting, secure implement in transport position or lower to ground.

● Put tractor in park or set brake, disengage PTO, stop engine, remove key, and wait until noise of rotation has ceased to prevent crushing by entanglement in rotating parts which could cause injury or death.

● Never mount or dismount a moving vehicle. Crushing from runover may cause serious injury or death.



02967827

Warranty Information: Read and understand the complete Warranty Statement found in this manual. Fill out the Warranty Registration form in full and return it within 90 days. Make certain the Serial Number of the machine is recorded on the Warranty Card, and form that you retain.

FORWARD

This manual contains information about many features of the Tiger mowing and roadside maintenance equipment. Some of these include: Safety precautions, Assembly instructions, Operations, Maintenance and Parts. This manual will also assist you in the proper break-in, daily care, and troubleshooting of your new mower.

We recommend that you read carefully the entire manual before operating the unit. Also, time spent in becoming fully acquainted with its performance features, adjustments, and maintenance schedules will be repaid in a long and satisfactory life of the equipment.

Troubleshooting - Please, before you call, help us to help you!

Please look at the equipment to observe what is happening, then:

- Classify the problem
 - Hydraulic, electrical or mechanical - Read the trouble shooting section
 - Tractor or Truck chassis - Contact vehicle dealer

- If unable to correct the problem yourself, contact your local Tiger Dealer after gathering:
 - Machine model _____
 - Serial number _____
 - Dealer name _____
 - Detailed information about the problem including results of troubleshooting

Attention Owner / Operator / Dealer It is your obligation to read, and understand, the warranty information section located at the back of this manual denoting that the purchaser understands the safety issues relating to this machine and has received and will read a copy of this manual.

If at any time, you have a service problem with your Tiger mower, Contact your local dealer for service and parts needed.

MANUFACTURED BY:

Tiger Corporation

3301 N. Louise Ave.

Sioux Falls, SD 57107

1-800-843-6849

1-605-336-7900

www.tiger-mowers.com

DISTRIBUTED BY:

1- _____ - _____ - _____

1- _____ - _____ - _____

TABLE OF CONTENTS

SAFETY _____	1-1
Safety Information_____	1-2
ASSEMBLY / MOUNTING SECTION _____	2-1
OPERATION SECTION _____	3-1
MAINTENANCE SECTION _____	4-1
PARTS SECTION _____	5-1
Parts Ordering Guide_____	5-2
Parts Table of Contents_____	5-3
WARRANTY INFORMATION _____	7-1



1012

This symbol means:

CAUTION – YOUR SAFETY IS AT RISK!

When you see this symbol, read and follow the associated instructions carefully or personal injury or damage may result.

Tiger is a registered trademark.



SAFETY

SAFETY SECTION

SAFETY

General Safety Instructions and Practices

A safe and careful operator is the best operator. Safety is of primary importance to the manufacturer and should be to the owner / operator. Most accidents can be avoided by being aware of your equipment, your surroundings, and observing certain precautions. The first section of this manual includes a list of Safety Messages that, if followed, will help protect the operator and bystanders from injury or death. Read and understand these Safety Messages before assembling, operating or servicing this mower. This equipment should only be operated by those persons who have read the Manual, who are responsible and trained, and who know how to do so safely and responsibly.



1000

The Safety Alert Symbol combined with a Signal Word, as seen below, is used throughout this manual and on decals which are attached to the equipment. The Safety Alert Symbol means: **“ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!”** The symbol and signal word are intended to warn the owner / operator of impending hazards and the degree of possible injury when operating this equipment.

Practice all usual and customary safe working precautions and above all -- remember safety is up to YOU! Only YOU can prevent serious injury or death from unsafe practices.

DANGER!



Indicates an imminently hazardous situation that, if not avoided, WILL result in DEATH OR VERY SERIOUS INJURY.

WARNING!



Indicates an imminently hazardous situation that, if not avoided, COULD result in DEATH OR SERIOUS INJURY.

CAUTION!



Indicates an imminently hazardous situation that, if not avoided, MAY result in MINOR INJURY.

IMPORTANT!

Identifies special instructions or procedures that, if not strictly observed, could result in damage to, or destruction of the machine, attachments or the environment.

NOTE: *Identifies points of particular interest for more efficient or convenient operation or repair.* (SG-1)

READ, UNDERSTAND, and FOLLOW the following Safety Messages. Serious injury or death may occur unless care is taken to follow the warnings and instructions stated in the Safety Messages. Always use good common sense to avoid hazards. (SG-2)

SAFETY INSTRUCTIONS



SAFETY

PELIGRO!



Si no lee Ingles, pida ayuda a alguien que si lo lea para que le traduzca las medidas de seguridad. (SG-3)



¡ LEA EL INSTRUCTIVO!

DANGER!



Never operate the Tractor or Implement until you have read and completely understand this Manual, the Tractor Operator's Manual, and each of the Safety Messages found in the Manual or on the Tractor and Implement. Learn how to stop the tractor engine suddenly in an emergency. Never allow inexperienced or untrained personnel to operate the Tractor and Implement without supervision. Make sure the operator has fully read and understands the manuals prior to operation. (SG-4)



WARNING!



Always maintain the safety decals in good readable condition. If the decals are missing, damaged, or unreadable, obtain and install replacement decals immediately. (SG-5)

WARNING!



Make certain that the "Slow Moving Vehicle" (SMV) sign is installed in such a way as to be clearly visible and legible. When transporting the Equipment use the Tractor flashing warning lights and follow all local traffic regulations. (SG-6)



WARNING!



Operate this Equipment only with a Tractor equipped with an approved roll-over-protective system (ROPS). Always wear seat belts. Serious injury or even death could result from falling off the tractor--particularly during a turnover when the operator could be pinned under the ROPS. (SG-7)



WARNING!




Do not modify or alter this Implement. Do not permit anyone to modify or alter this Implement, any of its components or any Implement function. (SG-8)

DANGER!



BEFORE leaving the tractor seat, always engage the brake and/or set the tractor transmission in parking gear, disengage the PTO, stop the engine, remove the key, and wait for all moving parts to stop. Place the tractor shift lever into a low range or parking gear to prevent the tractor from rolling. Never dismount a Tractor that is moving or while the engine is running. Operate the Tractor controls from the tractor seat only.

(SG-9)

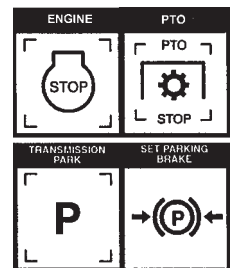

SAFETY

DANGER!



Never allow children or other persons to ride on the Tractor or Implement. Falling off can result in serious injury or death.

(SG-10)



DANGER!



Never allow children to operate or ride on the Tractor or Implement.

(SG-11)



WARNING!



Do not mount the tractor while the tractor is moving. Mount the tractor only when the tractor and all moving parts are completely stopped.

(SG-12)



DANGER!



Start tractor only when properly seated in the tractor seat. Starting a tractor in gear can result in injury or death. Read the tractor operators manual for proper starting instructions. (SG-13)



DANGER!



Never work under the Implement, the framework, or any lifted component unless the Implement is securely supported or blocked up to prevent sudden or inadvertent falling which could cause serious injury or even death. (SG-14)



DANGER!



Do not operate this Equipment with hydraulic oil leaking. Oil is expensive and its presence could present a hazard. Do not check for leaks with your hand! Use a piece of heavy paper or cardboard. High-pressure oil streams from breaks in the line could penetrate the skin and cause tissue damage including gangrene. If oil does penetrate the skin, have the injury treated immediately by a physician knowledgeable and skilled in this procedure. (SG-15)




SAFETY

WARNING!



The operator and all support personnel should wear hard hats, safety shoes, safety glasses, and proper hearing protection at all times for protection from injury including injury from items thrown by the equipment. (SG-16)

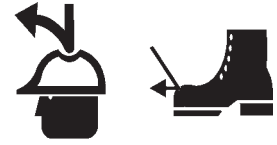

CAUTION!



PROLONGED EXPOSURE TO LOUD NOISE MAY CAUSE PERMANENT HEARING LOSS! Tractors with or without an Implement attached can often be noisy enough to cause permanent hearing loss. We recommend that you always wear hearing protection if the noise in the operator's position exceeds 80db. Noise over 85db over an extended period of time will cause severe hearing loss. Noise over 90db adjacent to the operator over an extended period of time will cause permanent or total hearing loss. *Note:* Hearing loss from loud noise [from tractors, chain saws, radios, and other such sources close to the ear] is cumulative over a lifetime without hope of natural recovery. (SG-17)




WARNING!



Transport only at safe speeds. Serious accidents and injuries can result from operating this equipment at unsafe speeds. Understand the Tractor and Implement and how it handles before transporting on streets and highways. Make sure the Tractor steering and brakes are in good condition and operate properly

Before transporting the Tractor and Implement, determine the safe transport speeds for you and the equipment. Make sure you abide by the following rules:

1. Test the tractor at a slow speed and increase the speed slowly. Apply the brakes smoothly to determine the stopping characteristics of the Tractor and Implement. As you increase the speed of the Tractor the stopping distance increases. Determine the maximum safe transport speed for you and this equipment.
2. Test the equipment at a slow speed in turns. Increase the speed through the turn only after you determine that it is safe to operate at a higher speed. Use extreme care and reduce your speed when turning sharply to prevent the tractor and implement from turning over. Determine the maximum safe turning speed for you and this equipment before operating on roads or uneven ground.
3. Only transport the Tractor and Implement at the speeds that you have determined are safe and which allow you to properly control the equipment.

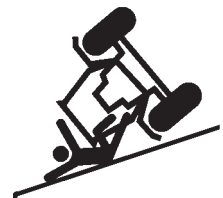

Be aware of the operating conditions. Do not operate the Tractor with weak or faulty brakes. When operating down a hill or on wet or rain slick roads, the braking distance increases: use extreme care and reduce your speed. When operating in traffic always use the Tractor's flashing warning lights and reduce your speed. Be aware of traffic around you and watch out for the other guy. (SG-19)


SAFETY

WARNING!



Never attempt to lubricate, adjust, or remove material from the Implement while it is in motion or while tractor engine is running. Make sure the tractor engine is **OFF** before working on the Implement.

(SG-20)

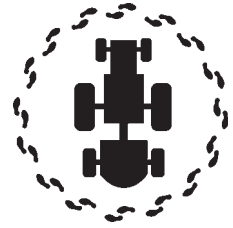

WARNING!



Periodically inspect all moving parts for wear and replace when necessary with authorized service parts. Look for loose fasteners, worn or broken parts, and leaky or loose fittings. Make sure all pins are properly secured. Serious injury may occur from not maintaining this machine in good working order.

(SG-21)



WARNING!



Always read carefully and comply fully with the manufacturers instructions when handling oil, solvents, cleansers, and any other chemical agent.

(SG-22)



DANGER!



Never run the tractor engine in a closed building or without adequate ventilation. The exhaust fumes can be hazardous to your health.

(SG-23)

DANGER!



KEEP AWAY FROM ROTATING ELEMENTS to prevent entanglement and possible serious injury or death.

(SG-24)



DANGER!



Never allow children to play on or around Tractor or Implement. Children can slip or fall off the Equipment and be injured or killed. Children can cause the Implement to shift or fall crushing themselves or others.

(SG-25)

SAFETY

DANGER!



NEVER use drugs or alcohol immediately before or while operating the Tractor and Implement. Drugs and alcohol will affect an operator's alertness and coordination and therefore affect the operator's ability to operate the equipment safely. Before operating the Tractor or Implement, an operator on prescription or over-the-counter medication must consult a medical professional regarding any side effects of the medication that would hinder their ability to operate the Equipment safely. **NEVER** knowingly allow anyone to operate this equipment when their alertness or coordination is impaired. Serious injury or death to the operator or others could result if the operator is under the influence of drugs or alcohol. (SG-27)



DANGER!



Operate the Tractor and/or Implement controls only while properly seated in the Tractor seat with the seat belt securely fastened around you. Inadvertent movement of the Tractor or Implement may cause serious injury or death. (SG-29)

WARNING!



Mow only in conditions where you have clear visibility in daylight or with adequate artificial lighting. Never mow in darkness or foggy conditions where you cannot clearly see at least 100 yards in front and to the sides of the tractor and mower. Make sure that you can clearly see and identify passersby, steep slopes, ditches, drop-offs, overhead obstructions, power lines, debris and foreign objects. If you are unable to clearly see this type of items discontinue mowing. (SGM-1)

DANGER!




There are obvious and hidden potential hazards in the operation of this Mower. **REMEMBER!** This machine is often operated in heavy brush and in heavy weeds. The Blades of this Mower can throw objects if shields are not properly installed and maintained. Serious injury or even death may occur unless care is taken to insure the safety of the operator, bystanders, or passersby in the area. Do not operate this machine with anyone in the immediate area. Stop mowing if anyone is within 100 yards of mower. (SGM-2)



DANGER!



All Safety Shields, Guards and Safety devices including (but not limited to) - the Deflectors, Chain Guards, Steel Guards, Gearbox Shields, PTO integral shields, and Retractable Door Shields should be used and maintained in good working condition. All safety devices should be inspected carefully at least daily for missing or broken components. Missing, broken, or worn items must be replaced at once to reduce the possibility of injury or death from thrown objects, entanglement, or blade contact. (SGM-3)

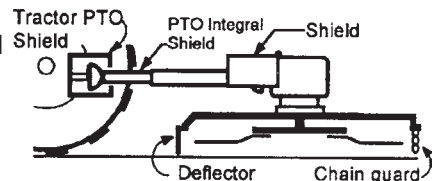

SAFETY

DANGER!



The rotating parts of this machine have been designed and tested for rugged use. However, the blades could fail upon impact with heavy, solid objects such as metal guard rails and concrete structures. Such impact could cause the broken objects to be thrown outward at very high velocities. To reduce the possibility of property damage, serious injury, or even death, never allow the cutting blades to contact such obstacles. (SGM-4)

WARNING!



Extreme care should be taken when operating near loose objects such as gravel, rocks, wire, and other debris. Inspect the area before mowing. Foreign objects should be removed from the site to prevent machine damage and/or bodily injury or even death. Any objects that cannot be removed must be clearly marked and carefully avoided by the operator. Stop mowing immediately if blades strike a foreign object. Repair all damage and make certain rotor or blade carrier is balanced before resuming mowing. (SGM-5)



WARNING!



Many varied objects, such as wire, cable, rope, or chains, can become entangled in the operating parts of the mower head. These items could then swing outside the housing at greater velocities than the blades. Such a situation is extremely hazardous and could result in serious injury or even death. Inspect the cutting area for such objects before mowing. Remove any like object from the site. Never allow the cutting blades to contact such items. (SGM-6)

WARNING!



Mow at the speed that you can safely operate and control the tractor and mower. Safe mowing speed depends on terrain condition and grass type, density, and height of cut. Normal ground speed range is from 0 to 5 mph. Use slow mowing speeds when operating on or near steep slopes, ditches, drop-offs, overhead obstructions, power lines, or when debris and foreign objects are to be avoided. (SGM-7)

WARNING!




Avoid mowing in reverse direction when possible. Check to make sure there are no persons behind the mower and use extreme care when mowing in reverse. Mow only at a slow ground speed where you can safely operate and control the tractor and mower. Never mow an area that you have not inspected and removed debris or foreign material. (SGM-8)



WARNING!



Do not put hands or feet under mower decks. Blade Contact can result serious injury or even death. Stay away until all motion has stopped and the decks are securely blocked up. (SGM-9)

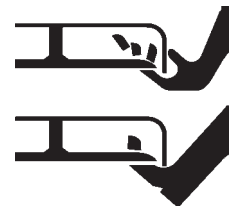

DANGER!



Replace bent or broken blade with new blades. NEVER ATTEMPT TO STRAIGHTEN OR WELD ON BLADES SINCE THIS WILL LIKELY CRACK OR OTHERWISE DAMAGE THE BLADE WITH SUBSEQUENT FAILURE AND POSSIBLE SERIOUS INJURY FROM THROWN BLADES. (SGM-10)

SAFETY

WARNING!



Do not mow with two machines in the same area except with Cab tractors with the windows closed. (SGM-11)

DANGER!



Rotary and Flail Mowers are capable under adverse conditions of throwing objects for great distances (100 yards or more) and causing serious injury or death. Follow safety messages carefully.

STOP MOWING IF PASSERSBY ARE WITHIN 100 YARDS UNLESS:

- Front and Rear Deflectors are installed and in good, working condition;
- Mower Head is running close to and parallel to the ground without exposed Blades;
- Passersby are outside the existing thrown-object zone;
- All areas have been thoroughly inspected and all foreign material such as rocks, cans, glass, and general debris has been removed.



NOTE: Where there are grass and weeds high enough to hide debris that could be struck by the blades, the area should be: inspected and large debris removed, mowed at an intermediate height, inspected closely with any remaining debris being removed, and mowed again at desired final height.(SBM-1)



DANGER!



Use extreme caution when raising the Mower head. Stop the Blades from turning when the Mower Head is raised and passersby are within 100 yards. Raising the Mower head exposes the Cutting Blades which creates a potentially serious hazard and can cause serious injury by objects thrown from the Blades or by contact with the Blades.

(SBM-2)

DANGER!



Be particularly careful in transport. The Mower has raised the center of gravity for the tractor and has increased the possibility of overturn. Turn curves or go up slopes only at low speed and using a gradual turning angle. Slow down on rough or uneven surfaces.(SBM-3)



WARNING!



Never Leave the mower unattended while the head is in the raised position. The mower could fall causing serious injury to anyone who might inadvertently be under the mower

(SBM-4)



WARNING!



The rotating parts of this machine continue to rotate even after the Tractor has been turned off. The operator should remain in his seat for 60 seconds after the brake has been set, the PTO disengaged, the tractor turned off, and all evidence of rotation has ceased. (SBM-5)

“Wait a minute...Save a life!”

SAFETY




Relieve hydraulic pressure prior to doing any maintenance or repair work on the Implement. Place the Mower Head on the ground or securely supported on blocks or stands, disengage the PTO, and turn off the engine. Push and pull the control Levers or Joystick several times to relieve pressure prior to starting any maintenance or repair work. (SBM-6)

DANGER!




Always keep a careful lookout and use extreme care when working around overhead obstructions. Never allow the Mower head or boom within 10 feet of any power line. When working close to overhead power lines consult your electric company for a safe code of operation. (SBM-7)

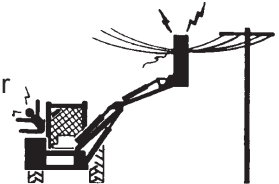

DANGER!




When transporting Boom Mower on a truck or trailer, the height or width may exceed legal limits when the boom is in the transport position. Contact with side or overhead structures or power lines can cause property damage or serious injury or death. If necessary lower boom to reduce height and/or remove mowing head to reduce width to the legal limits. (SBM-8)

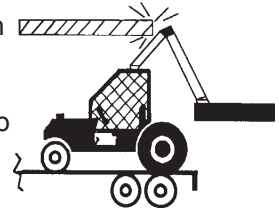

DANGER!



Never operate the Tractor and Mower Unit without an OPS (Operators Protective Structure) or Cab to prevent injury from objects thrown from ground or from overhead trimming. Stop mowing if workers or passersby are within 100 yards. (SBM-9)

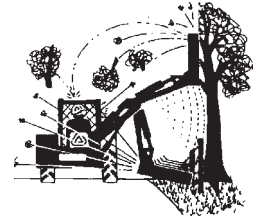

DANGER!




Left Rear Wheel must have a minimum of 1500 pound contact with the surface to prevent lateral instability and possible tip-over which could result in serious bodily injury or even death. Widen the wheel tread and add weights if needed. Refer to the mounting instructions or call Customer Service if you need assistance with Counterweight Procedure. (SBM-11)



DANGER!



Always disconnect the wire leads from the mower pump solenoid before performing service on the Tractor or Mower. Use caution when working on the Tractor or Mower. Tractor engine must be stopped before working on Mower or Tractor. The Mower Blades could inadvertently be turned on without warning and cause immediate dismemberment, injury or death. (SBM-12a)

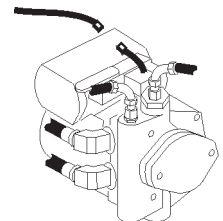

DANGER!



The flail cutter shaft is designed for standard rotation (same rotation as the tractor wheels during forward travel) **Never operate the cutter shaft in the reverse rotation.** Operating this mower in reverse rotation may cause objects to be thrown out the front of the mower head.



SAFETY

WARNING!



Engine Exhaust, some of its constituents, and certain components contain or emit chemicals known to the state of California to cause cancer and birth or other reproductive harm.

WARNING!



Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the state of California to cause cancer and birth or other reproductive harm. **Wash hands after handling!**

Tiger mowers use balanced and matched system components for blade carriers, blades, cutter-shafts, knives, knife hangers, rollers, drive-train components and bearings. These parts are made and tested to Tiger specifications. Non-genuine “will fit” parts do not consistently meet these specifications. The use of “will fit” parts may reduce mower performance, void mower warranties and present a safety hazard. Use genuine Tiger mower parts for economy and safety.

SEE YOUR  DEALER

In addition to the design and configuration of this Implement, including Safety Signs and Safety Equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence, and proper training of personnel involved in the operation, transport, maintenance, and storage of the machine. Refer also to Safety Messages and operation instruction in each of the appropriate sections of the T ractor and Equipment Manuals. Pay close attention to the Safety Signs affixed to the T ractor and Equipment. (SG-18)

SAFETY

DANGER

FAILING TO FOLLOW SAFETY MESSAGES AND OPERATING INSTRUCTIONS CAN CAUSE SERIOUS BODILY INJURY OR EVEN DEATH TO OPERATOR AND OTHERS IN THE AREA.

1. 	2. NO RIDERS, NO CHILDREN OPERATORS 	3. USE SAFETY SHOES, HARD HAT, SAFETY GLASSES, SEAT BELTS, & ROPS 	4. BLOCK UP SECURELY BEFORE WORKING UNDER.
---------------	------------------------------------------------	----------------------------------------------------------------------------------	-------------------------------------------------------

1 Study and understand Operator's Manuals, Safety Signs, and Instructional Decals for tractor & flail mower to prevent misuse, abuse, & accidents. Practice before operating mower in a confined area or near passersby.

- Learn how to stop engine suddenly in an emergency. Be alert for passersby and especially children.

2 Allow no children on or near implement or tractor. Allow no riders on tractor or implement. Falling off can cause serious injury or death from being runover by tractor or mower or contact with Flail Mower Blades.

3 Operate only with tractor having Roll-Over Protective Structure (ROPS) and with seatbelt fastened securely and snugly to prevent injury and possible death from falling off or tractor overturn. Personal Protective Equipment such as Hard Hat, Safety Glasses, Safety Shoes, and Ear Plugs are recommended.

4 Block up or support raised machine and all lifted components securely before putting hands or feet under or working underneath any lifted component to prevent crushing injury or death from sudden dropping or inadvertent operation of controls. Make certain that area is clear before lowering or folding.

5 Before transporting, put Lift Lever in detent or full-lift position. Install Transport Safety Devices securely on folding implements. Slow down when turning and on hillsides.

- Install **Restrictor in folding circuit to slow down lowering and unfolding if action is faster than is desirable.

6 Make certain that SMV sign, Warning Lights, and Reflectors are clearly visible. Follow local traffic codes.

7 Never operate with Flail Mower or Folding Section raised if passersby, bystanders or traffic are in the area to reduce possibility of injury or death from objects thrown by Blades under Shields or implement structure.

8 Before dismounting, secure flail mower in transport position or lower to ground.

- Put tractor in park or set brake, disengage PTO, stop engine, remove key, and wait until noise of rotation has ceased to prevent entanglement in rotating parts which may cause injury or death.
- Never mount or dismount a moving vehicle. Crushing from runover may cause injury or death.

5. TRANSPORT SAFELY, LOCK UP. 	6. USE SMV, LIGHTS, & REFLECTORS. 	7. DO NOT OPERATE WITH MOWER OR WING RAISED. 	8. DO NOT MOUNT OR DISMOUNT WHILE MOVING.
------------------------------------------	--------------------------------------------------	---------------------------------------------------------	------------------------------------------------------

PART NO.
LOCATION

002369
HYDRAULIC TANK

PELIGRO

Si No Lee Ingles, Pida Ayuda a Alguien Que Si Lo Lea. Para Que le Traduzca las Medidas de Seguridad.

LEA EL INSTRUCTIVO

002369

00725746
INSIDE OF CAB

DANGER

THROWN OBJECTS

CUTTING BLADES

KEEP AWAY - ROTATING BLADES

BEING HIT BY THROWN OBJECTS OR CONTACTING ROTATING BLADES CAN CAUSE INJURY OR DEATH.

- Stop mowing if passersby enter the area of thrown objects (See Operator's Manual).
- Use special care if Mower Head or Wing is raised off the ground. (See Manual).
- Operate only if all Guards-Deflectors are in place and in good condition.

00769737

00769737
MOWER DECK

SAFETY



PART NO.
LOCATION

00758194
MOWER DECK



02962764
MAIN BOOM, SECONDARY BOOM, MAIN FRAME



02962765
MAIN FRAME

WARNING!

1.

2.

3.

DO NOT OPERATE EQUIPMENT WITH OIL LEAKS

1. High pressure fluid can be invisible and can be injected into the body through the skin. Serious injury or even death can result. A doctor familiar with this type of injury must surgically remove the injected fluid immediately.
2. You should visually inspect for hydraulic fluid leaks before using the equipment. Never use your hand to check for leaks. Wear oil impenetrable gloves, safety glasses, and use a piece of wood or cardboard to check for evidence of leaks. If you suspect a leak, Remove the hose and have it tested at a Dealer.
3. Inspect hoses regularly. Frayed, torn, or crimped hoses may rupture suddenly and violently resulting in serious bodily injury from a flying hose end or from scalding, burn injuries, or oil penetration. Oil sprayed on hot equipment or components can result in fire. Repair or replace hoses as indicated to prevent unexpected failure and possible serious injury to operator or bystanders.

KEEP SHIELDS OVER HYDRAULIC COMPONENTS IN PLACE

02965262

02965262
HYDRAULIC TANK

SAFETY

DANGER

CUTTING BLADES



THROWN OBJECTS



PART NO.
LOCATION

02967668
MOWER DECK

KEEP AWAY - ROTATING BLADES

BEING HIT BY THROWN OBJECTS OR CONTACTING ROTATING BLADES CAN CAUSE INJURY OR DEATH

- Stop mowing if passersby enter the area of thrown objects. (See Operator's Manual)
- Use special care when Flail or Wing is raised off the ground. (See Oper. Manual)
- Operate only if all Guards-Deflectors are in place and in good condition.

WARNING: PRESSURIZED TANK

- **ATTENTION:** Oil Filler Cap is also the PRESSURE RELIEF CAP.
- Remove Cap slowly to relieve pressure before removing Cap completely.
- Stay clear to prevent being scalded with hot oil that may spray out of tank that is still pressurized and may cause serious injury to eyes, face, and exposed skin.

02971123
HYDRAULICTANK



CAUTION
WATCH YOUR
STEP

03200285

03200285
OUTSIDE OF CAB

POLYCARBONATE
WINDOW

REFER TO OPERATORS MANUAL
FOR CLEANING INSTRUCTIONS

22645
INSIDE OF CAB

DO NOT LUBRICATE WITH AUTOMATIC
GREASE GUN. GREASE WITH HAND
GREASE GUN ONLY.

P/N22839

22839
MOWER DECK

SAFETY



PART NO.
LOCATION

22840
INSIDE OF CAB



24028
MOWER DECK



25387
INSIDE OF CAB



10" x 5.5" 31522
MOWER DECK, MAIN BOOM
18.25" x 10" 31523
HYDRAULIC TANK

SAFETY

PART NO.
LOCATION



32428
MAIN BOOM



32449
HYDRAULICTANK

SAFETY

DANGER

1. EACH REAR WHEEL MUST HAVE A MINIMUM OF 1500 POUNDS CONTACT WITH THE SURFACE TO PREVENT LATERAL INSTABILITY AND POSSIBLE TIP-OVER WITH **BODILY INJURY**. WIDEN WHEEL TREAD AND ADD WEIGHTS IF NEEDED. SEE MANUAL OR CALL TIGER CUSTOMER SERVICE FOR COUNTERWEIGHT PROCEDURE.

2. **TRANSPORT CAREFULLY!** SLOW DOWN EVEN MORE ON SLOPES AND WHEN TURNING; NEVER TURN UP A SLOPE SHARPLY OR AT HIGH SPEED; AND USE EXTRA CARE IN ROUGH OR BUMPY AREAS TO PREVENT OVERTURN AND POSSIBLE CRUSHING INJURY OR DEATH. IF YOUR VIEW TO THE REAR IS BLOCKED, IT IS YOUR RESPONSIBILITY TO **INSTALL MIRRORS** THAT PROVIDE A REAR VIEW TO PREVENT ACCIDENTS FROM BLIND SPOTS.




3. REAR-MOUNTED BOOM MOWERS MOVE CENTER OF GRAVITY TO THE REAR AND REMOVE WEIGHT FROM FRONT WHEELS. ADD FRONT BALLAST UNTIL AT LEAST 20% OF TRACTOR'S WEIGHT IS ON FRONT WHEELS TO PREVENT REARING UP, LOSS OF STEERING CONTROL, AND POSSIBLE INJURY.

4. NEVER OPERATE UNIT WITHOUT AN OPS (OPERATOR PROTECTIVE STRUCTURE) OR CAB TO PREVENT INJURY FROM OBJECTS THROWN FROM GROUND AND OVERHEAD TRIMMING. STOP CUTTING IF ANYONE IS WITHIN 100 YARDS.

5. KEEP THE BOOM AND CUTTERHEAD AT LEAST 10 FEET FROM ELECTRIC LINES AND PIPE LINES TO PREVENT ACCIDENTAL CONTACT AND POSSIBLE SERIOUS INJURY OR EVEN DEATH.

6. WHEN TRANSPORTING BOOM MOWERS ON A TRUCK OR TRAILER, THE HEIGHT OR WIDTH MAY EXCEED LEGAL LIMITS. CONTACT WITH SIDE OR OVERHEAD STRUCTURES OR POWER LINES CAN CAUSE SERIOUS INJURY OR DEATH.

LOWER BOOM TO REDUCE HEIGHT AND/OR REMOVE MOWING HEAD TO REDUCE WIDTH TO THE LEGAL LIMITS, IF NEEDED. 32707

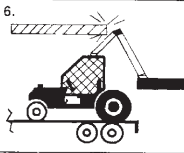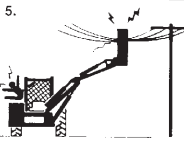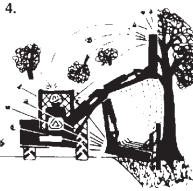

PART NO.
LOCATION

32707
HYDRAULICTANK

ATTENTION

**SERVICE HYDRAULIC SYSTEM
WITH UNIVERSAL TRACTOR
HYDRAULIC OIL.**

32708

32708
HYDRAULICTANK

CAUTION

For your safety and to guarantee optimum product reliability, always use genuine TIGER replacement parts. The use of inferior "will-fit" parts will void warranty of your TIGER implement and may cause premature or catastrophic failure which can result in serious injury or death. If you have any questions concerning the repair parts you are using, contact TIGER, 3301 N. LOUISE AVE., SIOUX FALLS, SD 57107

32709

32709
INSIDE OF CAB

SAFETY

PART NO.
LOCATION


⚠ DANGER

SAFETY SHIELD OPERATION


- Failure to close Safety Shield may allow objects to be thrown outward with great force which can cause property damage, bodily injury, or death.
1. Keep Safety Shield fully closed when cutting grass and weeds to reduce possibility of objects being thrown outward by the Blades and to prevent contact with the Blades if persons are in the area.
 2. Before cutting brush, trimming limbs, or other such operations, raise Safety Shield fully to allow the blades to contact the material if area is clear of passersby. Operator must stop cutting and close shield if passerby enters the thrown objects area or blade contact area.
 3. Repair or replace Safety Shield as needed.
 4. Always transport with Safety Shield closed.

33224

33224
MOWER DECK

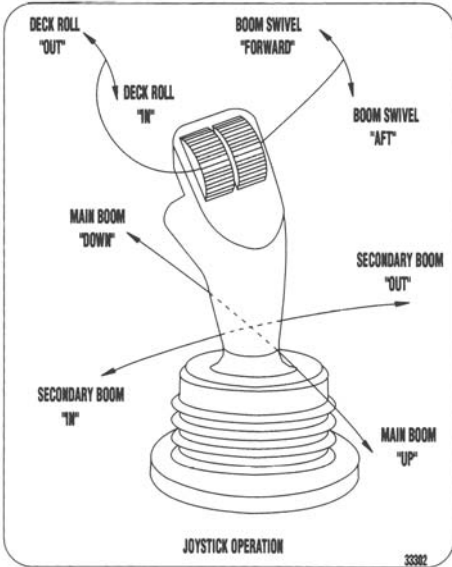

33302
INSIDE OF CAB

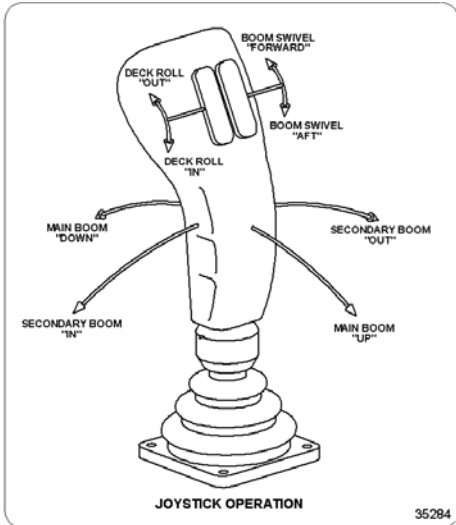

35284
INSIDE OF CAB

Tiger™


33438
MAIN BOOM

SAFETY

PART NO.
LOCATION



33512
INSIDE OF CAB

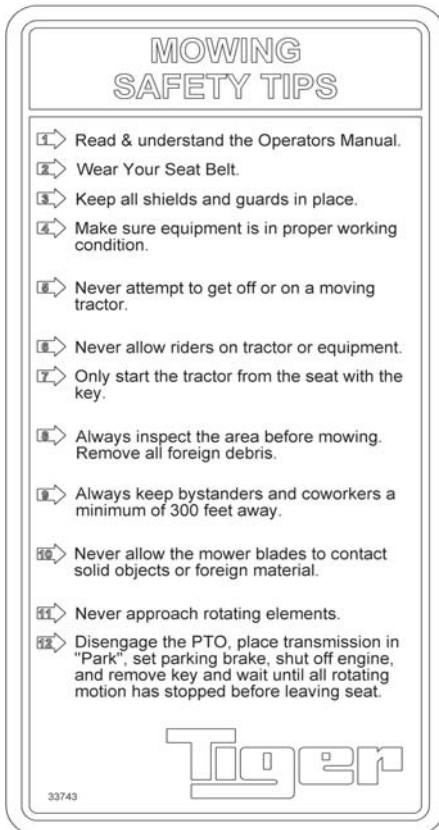

33743
INSIDE OF CAB




42350
MOWER DECK

SAFETY



PART NO. LOCATION
RED 42399
REFLECTIVE TAPE
MOWER DECK

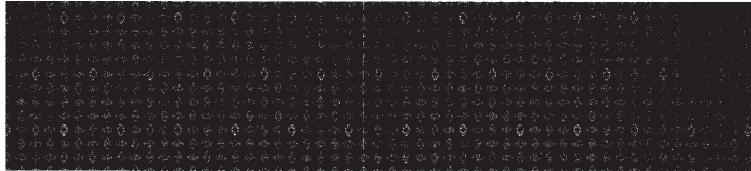


AMBER 42400
REFLECTIVE TAPE
MOWER DECK



6T3217
MOWER DECK




6T3219
INSIDE OF CAB

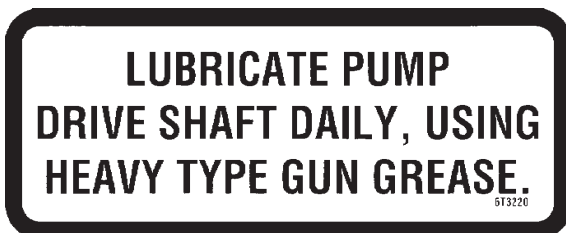

6T3220
FRONT PUMP MOUNT

SAFETY

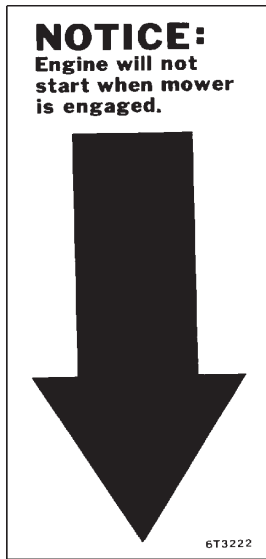


PART NO.
LOCATION


6T3222
INSIDE OF CAB



6T3224
MOWER DECK

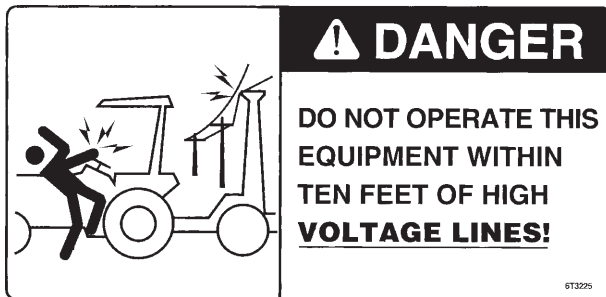

6T3225
INSIDE OF CAB

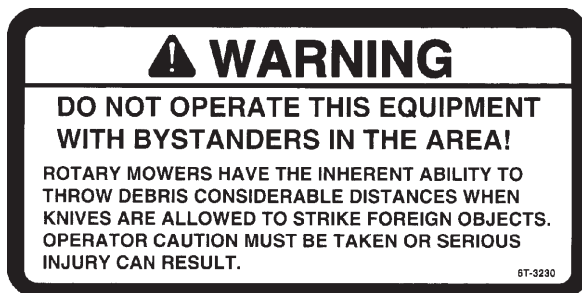

6T3230
INSIDE OF CAB

SAFETY



PART NO.
LOCATION

6T3233
HYDRAULICTANK



6T3234
INSIDE OF CAB



6T3236
MOWER DECK



6T3243
INSIDE OF CAB



6T3249A
MOWER DECK

SAFETY

GREASING INSTRUCTIONS

GROUND ROLLER BEARING

GREASE EVERY 8 HRS. OR DAILY

NOTE: If unusual environmental conditions exist-extreme temperatures, moisture, or contaminants-more frequent lubrication is required.

973261

PART NO.
LOCATION

6T3261
MOWER DECK

WARNING

**DO NOT OPERATE MOWER
WITH SAFETY SHIELD REMOVED.**

TB1011

TB1011
MOWER DECK



Tiger Corporation

800-843-6849

www.tiger-mowers.com


Description	Application	General Specification	Recommended Lubricant
Tractor Hydraulics	Reservoir	JD-20C	Mobilfluid® 424
Mower Hydraulics Cold Temperatures 0°F Start-up Normal Temperatures 10°F Start-up Normal Temperatures 15°F Start-up High Operating Temperatures Above 90°F Ambient	Reservoir	ISO 46 Anti-Wear/ Low Temp JD-20C ISO 46 Anti-Wear ISO 100 Anti-Wear	Mobil DTE® 15M Mobilfluid® 424 Mobil DTE® 25 Mobil DTE® 18M
Flail Rear Gearbox	Reservoir	PAO Synthetic Extreme Pressure Gear Lube	Mobilube SHC® 75W-90, Mobil 1 Synthetic Gear Lubricant
Cutter Shaft and Ground Roller Shaft (Flail)	Grease Gun	Lithium Complex, NLGI 2 ISO 320	Mobilgrease® CM-S
Drive Shaft Coupler (Rotary and Flail)	Grease Gun	Lithium Complex, NLGI 2 ISO 320	Mobilgrease® CM-S
Boom Swivel, Boom Cylinder Pivots (Rotary and Flail Boom Type)	Grease Gun	Lithium Complex, NLGI 2 ISO 320	Mobilgrease® CM-S
Deck Boom Pivot & Deck Stop Adjustment (Rotary and Flail)	Grease Gun	Lithium Complex, NLGI 2 ISO 320	Mobilgrease® CM-S
Deck Spindle (Rotary)	Grease Gun	Tiger Spindle Lubricant	Mobilith SHC 220

For Mobil product information, availability, or technical information, call 1-800-662-4525.

Tiger PN 34852

34852
HYDRAULIC TANK

SAFETY

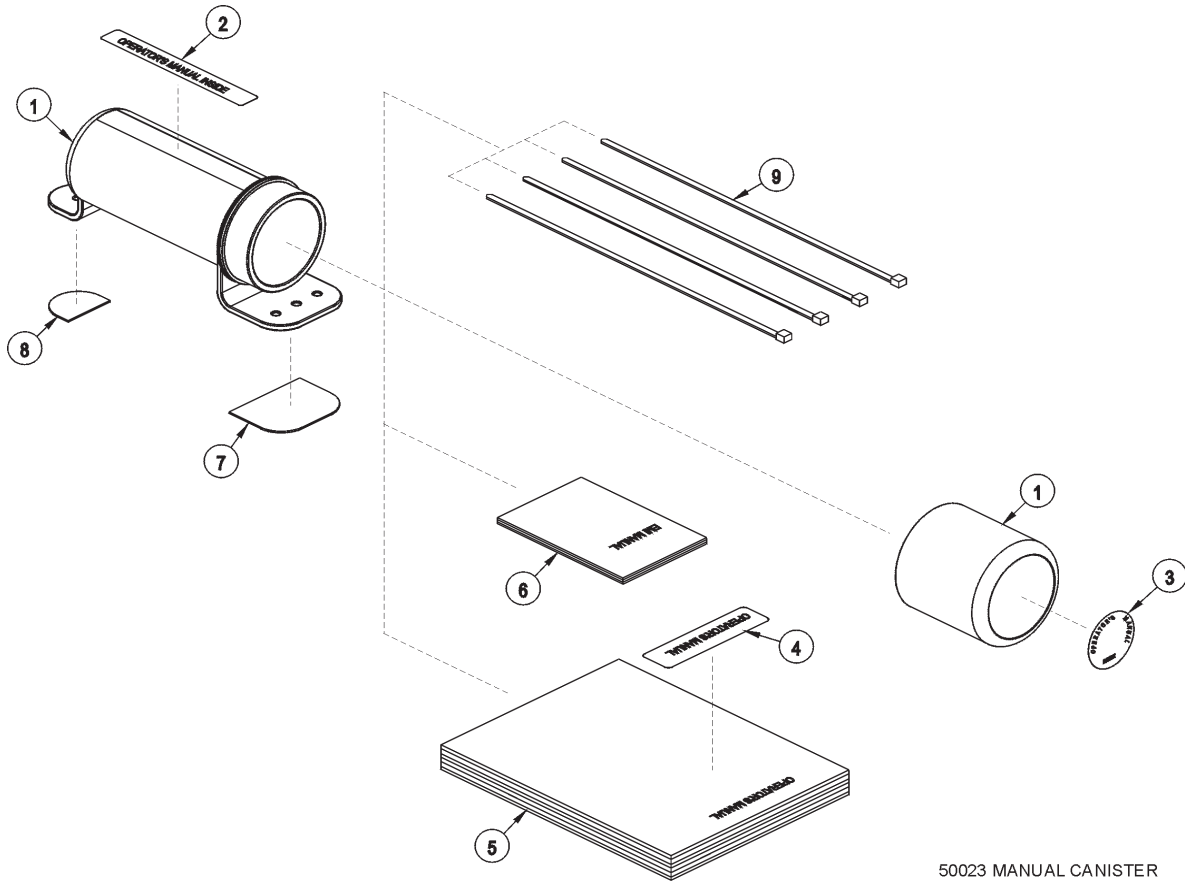

ITEM	PART NO.	QTY.	DESCRIPTION
	50023	AVAIL	MANUAL CANISTER COMPLETE
1	00776031	1	ROUND MANUAL CANISTER
	33997	1	DECAL, SHEET, MANUAL CANISTER
2		*	DECAL
3		*	DECAL
4		*	DECAL
5	*	AVAIL	SPECIFIC PRODUCT MANUAL
6	33753	1	E M I SAFETY MANUAL
7	34296	1	FRONT ADHESIVE PAD
8	34297	1	REAR ADHESIVE PAD
9	6T1823	4	ZIPTIE 14" LONG

NOTE:

The manual canister can be bolted, zip tied or adhered to a variety of surfaces. Locate a protected area within the view of the operator Then select an installation method and attach the canister. **CAUTION - AVOID DRILLING HOLES INTO UNKNOWN AREAS**,wires and other parts may be located behind these areas. When adhering the canister to a surface, thoroughly clean that surface before insalling the canister.

SAFETY

FEDERAL LAWS AND REGULATIONS

This section is intended to explain in broad terms the concept and effect of federal laws and regulations concerning employer and employee equipment operators. This section is not intended as a legal interpretation of the law and should not be considered as such.

Employer-Employee Operator Regulations

U.S. Public Law 91-596 (The Williams-Steiger Occupational and Health Act of 1970) OSHA

This Act Seeks:

“...to assure so far as possible every working man and woman in the nation safe and healthful working conditions and to preserve our human resources...”

DUTIES

Sec. 5 (a) Each employer-

(1) shall furnish to each of his employees employment and a place of employment which are free from recognized hazards that are causing or are likely to cause death or serious physical harm to his employees;

(2) shall comply with occupational safety and health standards promulgated under this Act.

(b) Each employee shall comply with occupational safety and health standards and all rules, regulations and orders issued pursuant to this Act which are applicable to his own actions and conduct.

OSHA Regulations

OSHA regulations state in part: “At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee in the safe operation and servicing of all equipment with which the employee is, or will be involved.”

Employer Responsibilities:

To ensure employee safety during Tractor and Implement operation, it is the employer's responsibility to:

1. Train the employee in the proper and safe operation of the Tractor and Implement.
2. Require that the employee read and fully understand the Tractor and Implement Operator's manual.
3. Permit only qualified and properly trained employees to operate the Tractor and Implement.
4. Maintain the Tractor and Implement in a safe operational condition and maintain all shields and guards on the equipment.
5. Ensure the Tractor is equipped with a functional ROPS and seat belt and require that the employee operator securely fasten the safety belt and operate with the ROPS in the raised position at all times.
6. Forbid the employee operator to carry additional riders on the Tractor or Implement.
7. Provide the required tools to maintain the Tractor and Implement in a good safe working condition and provide the necessary support devices to secure the equipment safely while performing repairs and service.

Child Labor Under 16 Years of Age

Some regulations specify that no one under the age of 16 may operate power machinery. It is your responsibility to know what these regulations are in your own area or situation. (Refer to U.S. Dept. of Labor, Employment Standard Administration, Wage & Home Division, Child Labor Bulletin #102.)

SAFETY

ASSEMBLY SECTION

ASSEMBLY

Before attempting to mount or service your Tiger mower, it is important to read and understand all of the information in the Safety section of this manual.

Check complete shipment list against the packing list to make sure there are no shortages. Make certain the tractor model is the appropriate one for the mower received!

CAUTION!



Use a floor jack, hoist or fork lift to lift or raise heavy parts whenever possible whether mentioned or not.

Read and understand the entire assembly section instructions before attempting to mount your Tiger mower. Refer to the parts section of this manual for detailed illustrations to locate all parts.

TRACTOR PREPARATION

- A: Remove right and left hand steps.
- B: Disconnect battery cables from both batteries.
- C: Remove engine side panels, or raise hood to access front pulley.
- D: Remove plugs from tractor casting where main frame and pump mount will be attached.
- E: Remove any front weights and weight supports.

CRANKSHAFT ADAPTER

If necessary remove the four cap-screws from the crankshaft pulley. Then install the crankshaft adapter plate to the pulley with cap-screws and lock-washers as shown in the parts section.




ASSEMBLY

DRIVESHAFT & FRONT PUMP MOUNTING

Install spacer plate on tractor engine using bolts and lockwashers as shown in parts section. Grease sleeve section of the driveshaft and install from the side of the engine compartment. Once you have the sleeve section in place, bolt to spacer plate using bolts and lockwashers as shown in parts section. Install shaft end of driveshaft through opening and into driveshaft sleeve. Shaft and sleeve yokes should be aligned, if shaft does not insert easily in sleeve, turn shaft 180°, and then install. Align the notches on the shaft and yoke tube as shown in picture below. **Shaft end must be installed in correct orientation, failure to do so may result in damage to tractor and/or driveshaft.** After installation of shaft end, install pump mount. Next, install pump. After pump is secured, install driveshaft in to pump shaft. The end of driveshaft should be no more than 1/2" away from contact with pump housing. Tighten crimping bolt on driveshaft. Lube driveshaft & check all hoses, flanges, the pump, pump mount, driveshaft and mounting plate to ensure all fasteners are tightened before operation.

CAUTION: DO NOT START THE TRACTOR UNTIL ALL HOSES ARE ATTACHED, TANK IS FILLED WITH PROPER OIL AND BALL VALVES ARE OPEN! STARTING AT THIS TIME WILL CAUSE SERIOUS DAMAGE TO THE PUMP.

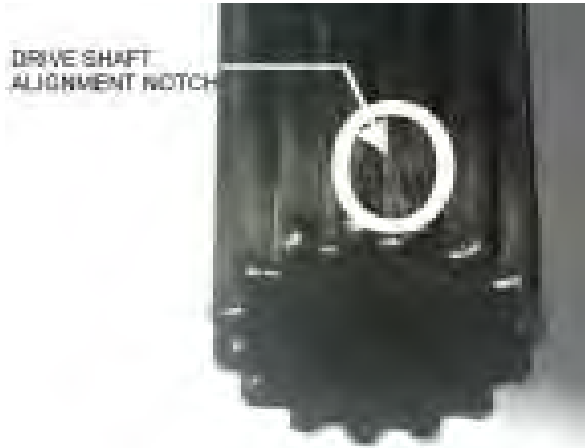

ADJUSTING REAR WHEELS


Raise rear of tractor onto jack-stands. **Follow the instructions in the tractor owners manual for adjusting tires and rims.** The back wheels **MUST** be adjusted to the widest setting. NOTE: This may require switching the wheels to opposite sides of tractor. Also take note of any width restrictions when transporting by trailer. (For ease of installation, it is best to leave the rear wheels removed during installation of the mower.)

ASSEMBLY

POLYCARBONATE SAFETY WINDOW (CURRENT)

NOTE: Installing a boom mower requires that all of the right side windows be replaced, or protected with a polycarbonate window. This should be done before mounting the main frame.

1. Disconnect gas shock at door. Remove the right side cab door/window glass from tractor cab by removing hinge pins. Also, remove rear right side window.
2. Remove the existing hardware and discard factory glass door and window.
3. Place small bead of adhesive seal in the bottom of the trim lock bubble bead.
4. Install trim lock bubble seal on polycarbonate starting at the center bottom horizontal portion.
5. Install existing hardware removed from glass door and window on the polycarbonate.
6. Install the polycarbonate assembly in the cab with existing and supplied hardware.
7. Place the retaining brackets on the upper front and lower front of the cab door/window with the 8mm capscrews.
8. Place the third bracket at the bottom of the door by the fender as shown in the illustration below. Hold the bracket in place and mark the door jam.
9. Drill $21/64$ " hole in the door jam for the $5/16$ " capscrew and mount the bracket.
10. Install the right rear poly window into place where factory window was removed.

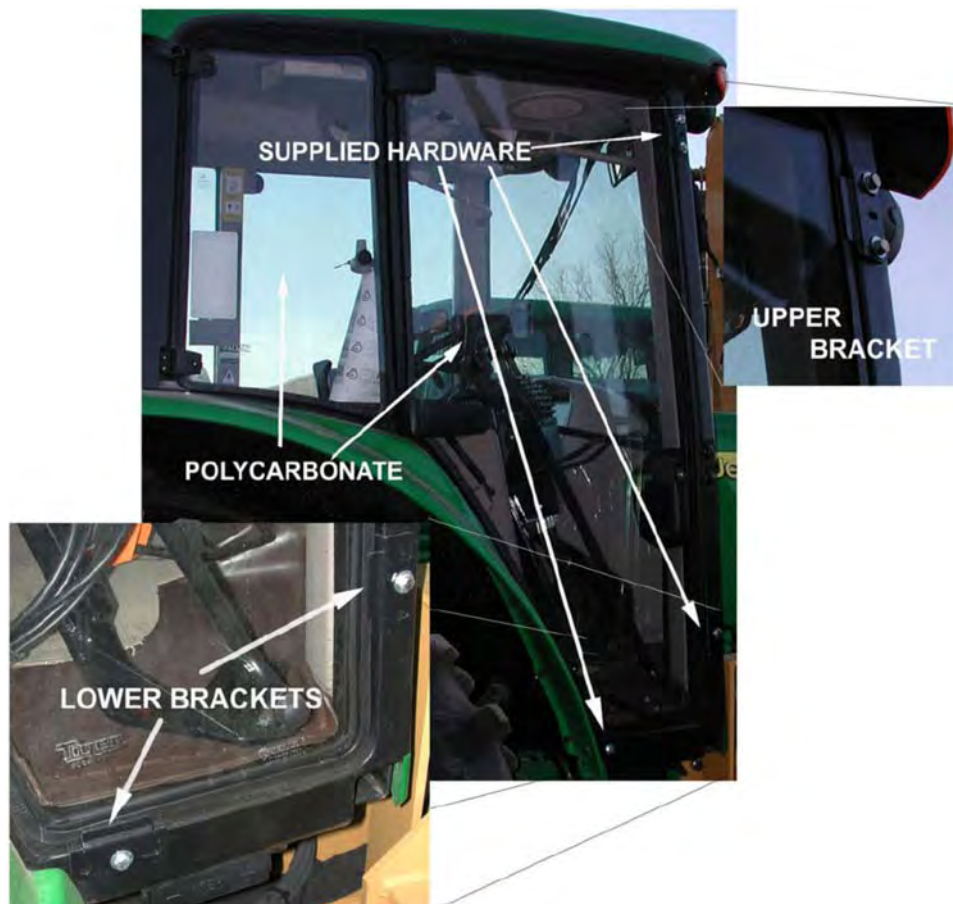

ASSEMBLY

SIDE MIRROR MOUNTING

Disassemble the right side mirror bracket. Cut the square rod and pipe (shown in picture below) 6-1/4". Assemble them together. Mount the right mirror bracket and hardware on upper right corner of tractor cab as shown in picture below. Refer the parts section-safety screen, cab for the hardware details.



MAIN FRAME MOUNTING

With an overhead hoist and / or jack-stands, raise one side of the frame up to the correctly matching mounting holes.


Install cap-screws and all other hardware as shown in main frame parts section to secure the sides of the main frame to the tractor casting, DO NOT tighten at this time.

Remove the cap-screws one at a time and apply a thread locking agent. Reinsert the cap-screws and tighten / torque to values noted in the torque chart located in the maintenance section of this manual.

ASSEMBLY

SWITCH BOX MOUNTING

Locate the 2 holes in the right front corner of the cab frame. These will be the mounting holes for the 2 mounting bolts of the switch box bracket. See picture below. Mount the bracket using the hardware supplied, as noted in the parts section.

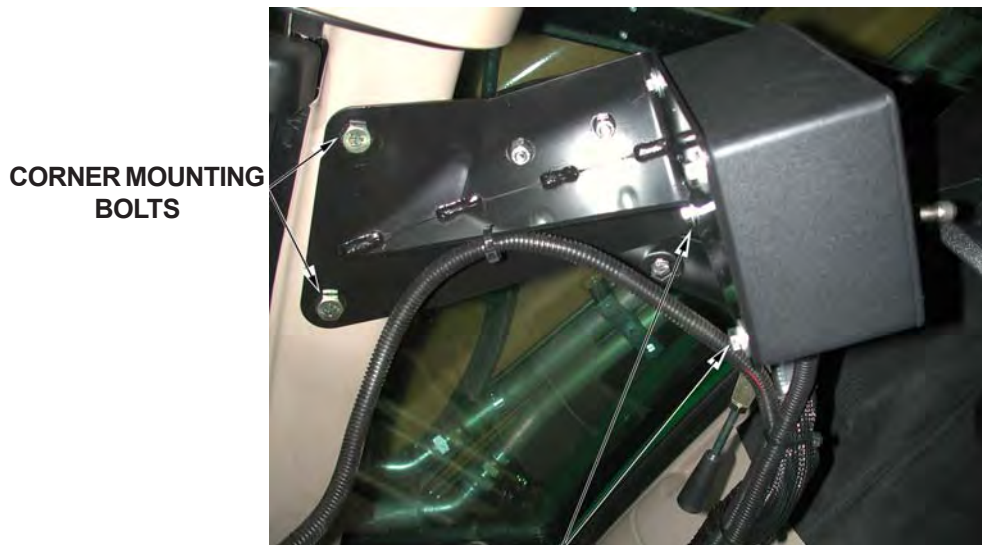

CORNER MOUNTING
BOLTS

SWITCH BOX
MOUNTING BOLTS

Cut slot in right side panel of steering column to run wires from switch box.
NOTE: When cutting or drilling hole, be sure not to damage existing wires running behind panels.



ASSEMBLY

SWITCH BOX WIRING

Refer to the parts section for wiring diagram to hook up the switch box. Cover the four wires (1-white / 2-green / 1-red) from the on / off terminal of the switch box with plastic wire wrap provided. Run these wires through the drilled hole in the right side panel of the steering column on previous page.

With the panel under the steering wheel removed to access the wires, locate the blue wire. **Using a test light or meter to verify** this wire is the neutral safety wire. Cut the blue wire and connect the green wires from the switch box as shown in the wiring diagram.

To run the white wire to the solenoid valve, you will need to Cut a 1 3/4" hole in front right corner of the cab floor. Insert a rubber grommet into the hole to protect the wire, and route the wire out of the cab floor. Route the wires from the switch box to the rubber grommet on the right front corner of floor cab. Route the wire out of the cab to the solenoid valve. The red wire from the on / off terminal is to be hooked to the tractor ignition switch or an available slot in the fuse box. **NOTE: +12 VOLTS ELECTRICAL POWER MUST BE TAKEN FROM A SOURCE LOCATION WHERE IT IS LIVE ONLY WHEN THE IGNITION SWITCH IS IN THE "ON" POSITION. THIS WIRE MUST BE FUSED AT THE SOURCE LOCATION**

Zip ties should be used to secure the wires to the tractor framework and boom hoses to eliminate vibration and rubbing. The black ground wire from the switch box can be attached to the switch box mounting bracket.

Cut a 1 3/4" hole in front right corner of the cab floor as shown in picture below. Insert a rubber grommet into the hole to protect the wire, and route the wire out of the cab floor. Route the wires from the switch box to the rubber grommet on the right front corner of floor cab. Connect the two ends of the connectors underneath of cab floor as shown in picture below. Route the wire out underneath of the cab floor to back of the valve. There should be approximately 18-20 inches of the wires left outside of the cab. These wires will be routed to the lift valve mounted on the valve mounting plate, and should all be covered with plastic hose wrap. Do not allow excess cable to hang unsecured on the outside of the cab.



ASSEMBLY



Refer to the parts section for wiring diagram to hook up the switch box. Cover the four wires from the on / off terminal of the switch box with plastic wire wrap provided. Cut a 1 3/4" hole in front right corner of the cab floor as shown in picture above. Insert a rubber grommet into the hole to protect the wire, and route the wire out of the cab floor. Route the wires from the switch box to the rubber grommet on the right front corner of floor cab. Route the wire out underneath of the floor cab to back of the valve. Remove the gauge panel under the steering wheel to access wires. Locate the brown wire. This is the neutral safety wire. Cut the brown wire and connect the green wires from the switch box as shown in the wiring diagram. To run the white wire to the solenoid valve, you will need to drill a hole in the front edge of the cab floor to the right of the front council. Insert a rubber grommet into the hole to protect the wire, and route the wire out of the cab.

The red wire from the on / off terminal is to be hooked to the tractor ignition switch or an available slot in the fuse box. **NOTE: Be certain that the power taken for the switch box is "HOT" only when the tractor ignition is "ON". Also double check that the line is fused.**

Zip ties should be used to secure the wires to the tractor

ASSEMBLY

JOYSTICK CONTROL MOUNTING

The joystick control will require that the right armrest be modified with a new armrest that will accommodate the joystick. In doing this, the armrest must be removed by sliding off the plastic cover and pressing the knob provided at the end of armrest. Place the joystick holder under the armrest, so that the indentation on the outside of the armrest is lined up with the hole in the joystick holder for the capscrew to pass through. Once the correct placement is achieved, then mark on the armrest where the hole passes through the joystick holder. At this point a 1/2" hole must be drill through the armrest so that the armrest can be secured to the armrest. After the hole is drilled, then on the inside of the armrest the 1/2" hole must be cut to a larger diameter up to the metal plate in the armrest so that a spacer and hex nut can be fastened to the capscrew that secures the joystick holder. Install the joystick holder on the armrest with the hardware as shown in the parts section.

Once the holder is installed on the armrest then reattach the armrest back to the seat using the existing hardware previously removed. Then install the joystick in the holder with the machine screws as shown in the parts section.




ASSEMBLY

IVT JOYSTICK CONTROL MOUNTING

Install the joystick mounting bracket to the side of the switch box bracket. Use the materials in the parts section and the pictures below to assemble the joystick assembly for the IVT.

After the joystick has been mounted final adjustment can be obtained by use of the knob on the mounting bracket. **Note the mounting components must be located so not to interfere with other controls.** Route the joystick cable from the control box to the joystick. Be sure to leave enough slack in the cable to allow for movement of the joystick. Secure the cable to the mounting bracket with cable ties.

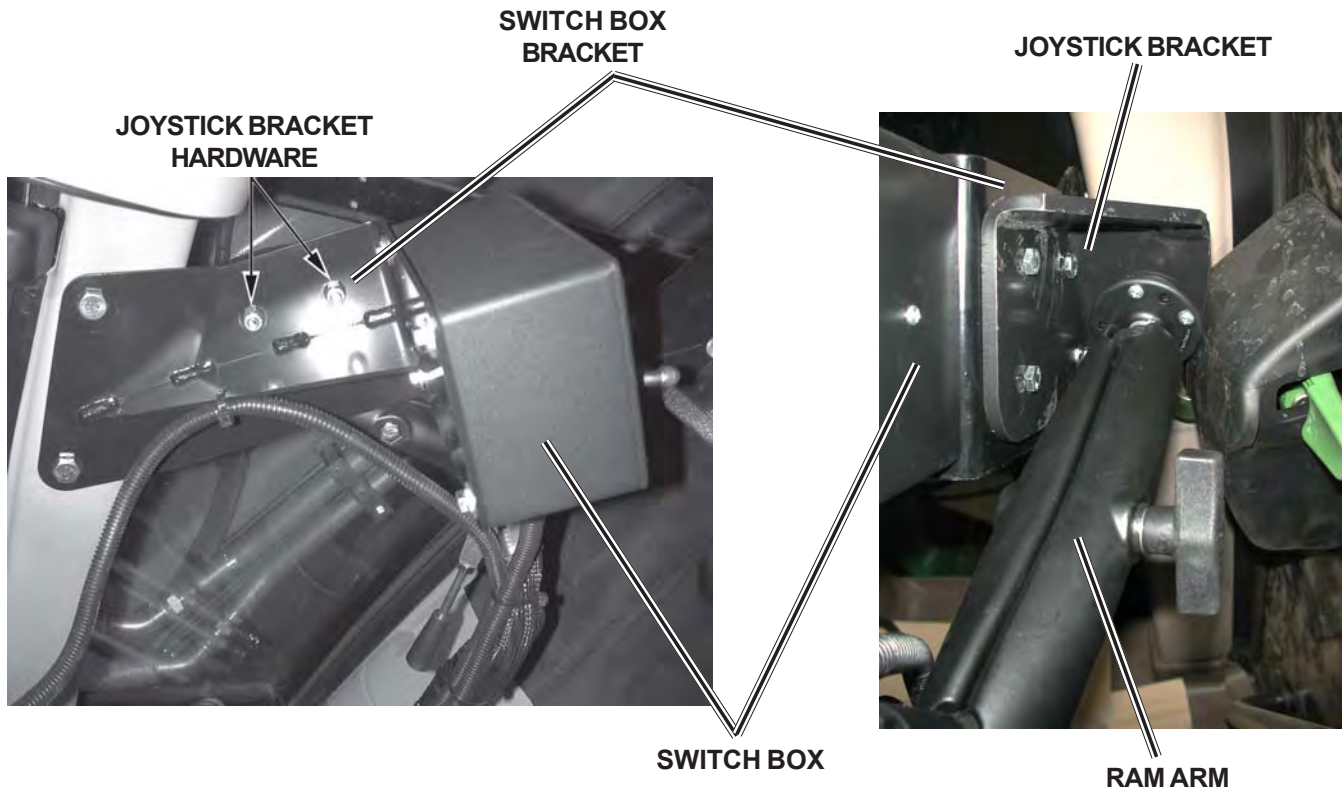

JOYSTICK AND SWITCHBOX

ASSEMBLY

DANFOSS HYDRAULIC LINE PLUMBING:

PRESSURE LINE INSTALLATION

The hydraulic pressure line will be plumbed into the rear of the tractor remote valve. Locate the pressure port on the rear remotes and remove the plug (refer to the illustration below and the Parts Section pages for position of the pressure port). After the plug is removed then install 22mm adapter. Next connect a 1/2" hose from the tractor remote valve to the Tiger valve.

RETURN LINE INSTALLATION

The return line will be plumbed next to the pressure line on the tractor remote valve. Locate the return port and remove the plug (refer to the illustration below and the Parts Section for the position of the return port). After the plug is removed then install 22mm adapter or elbow. Next connect a 1/2" hose from the tractor remote valve to the Tiger valve.


LOAD SENSE LINE INSTALLATION

The load sense line will be plumbed into the bottom of the tractor remote valve (shown in the picture below). Locate the plug on the tractor rear remotes for the load sense, and remove the plug. Install a 14mm adapter or elbow and run a 1/4" hose from the remotes to the Tiger valve. Refer to the Parts Section pages for an exploded diagram of the tractor remote valve hookup.

DANFOSS VALVE

PRESSURE
PORT

RETURN
PORT

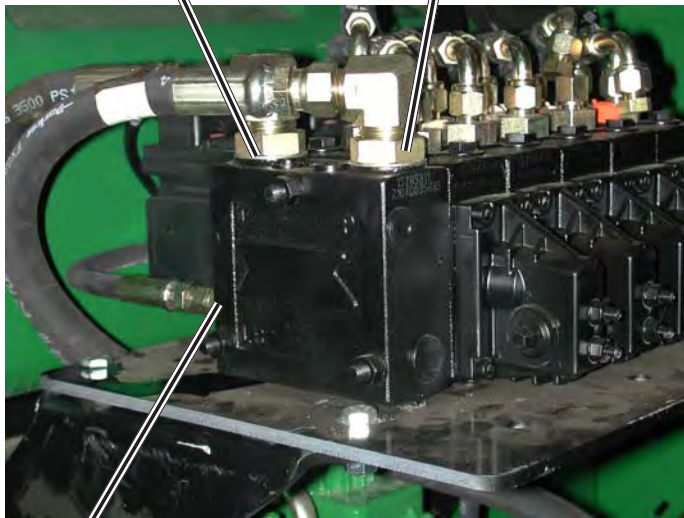

LOAD SENSE
PORT

END CAP



PRESSURE RETURN LOAD SENSE


ASSEMBLY

SABER HOSE ROUTING


WARNING NOTE: The sudden release of hydraulic pressure could cause the sudden movement of very heavy parts. Anyone in the way of these parts could be severely hurt or killed. DO NOT ALLOW these hydraulic hoses to BREAK or BURST in order to prevent hydraulic failure. Make sure the hoses do not pinch or stretch as boom moves. Measure TWICE, check TWICE then proceed with caution.

NEEDS TO BE MAINTAINED TO ENSURE
PROPER LENGTHS AND REACH


CONFIGURATION OF
CLAMP ON SWIVEL

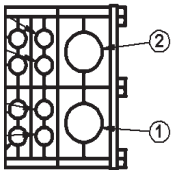

CONFIGURATION OF
CLAMP ON MAINFRAME

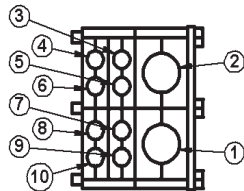


- 1 MOWER PRESSURE
- 2 MOWER RETURN
- 3 MAIN BOOM CYLINDER BUTT
- 4 MAIN BOOM CYLINDER GLAND
- 5 SECONDARY BOOM CYLINDER BUTT
- 6 SECONDARY BOOM CYLINDER GLAND
- 7 DECK ROLL CYLINDER BUTT
- 8 DECK ROLL CYLINDER GLAND
- 9 DECK SHIELD CYLINDER BUTT
- 10 DECK SHIELD CYLINDER GLAND

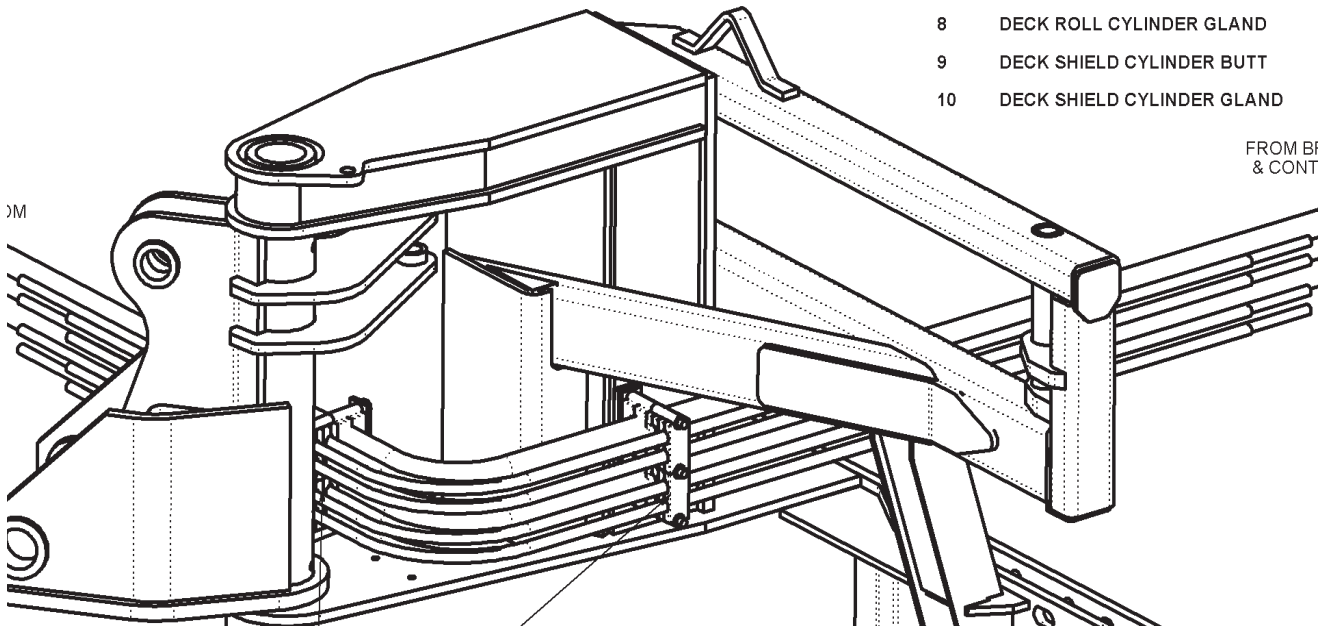

Connect the hoses to the preformed tubes and move the boom arm to the farthest forward position. Arrange the hoses in the clamp as shown in the illustration above, with the 1" motor hoses to the outside, and loosely connect to the swivel. Next, make sure there is enough slack for all hoses to pivot at the joint where the main boom arm bends in the swivel and tighten the hoses in the clamp.

ASSEMBLY

BEFORE TIGHTENING HOSES IN CLAMP, MAKE SURE HOSES CAN PASS THROUGH CENTER POINT OF BOOM PIN. THIS WILL ENSURE PROPER HOSE LENGTH FOR ALL BOOM POSITIONS.

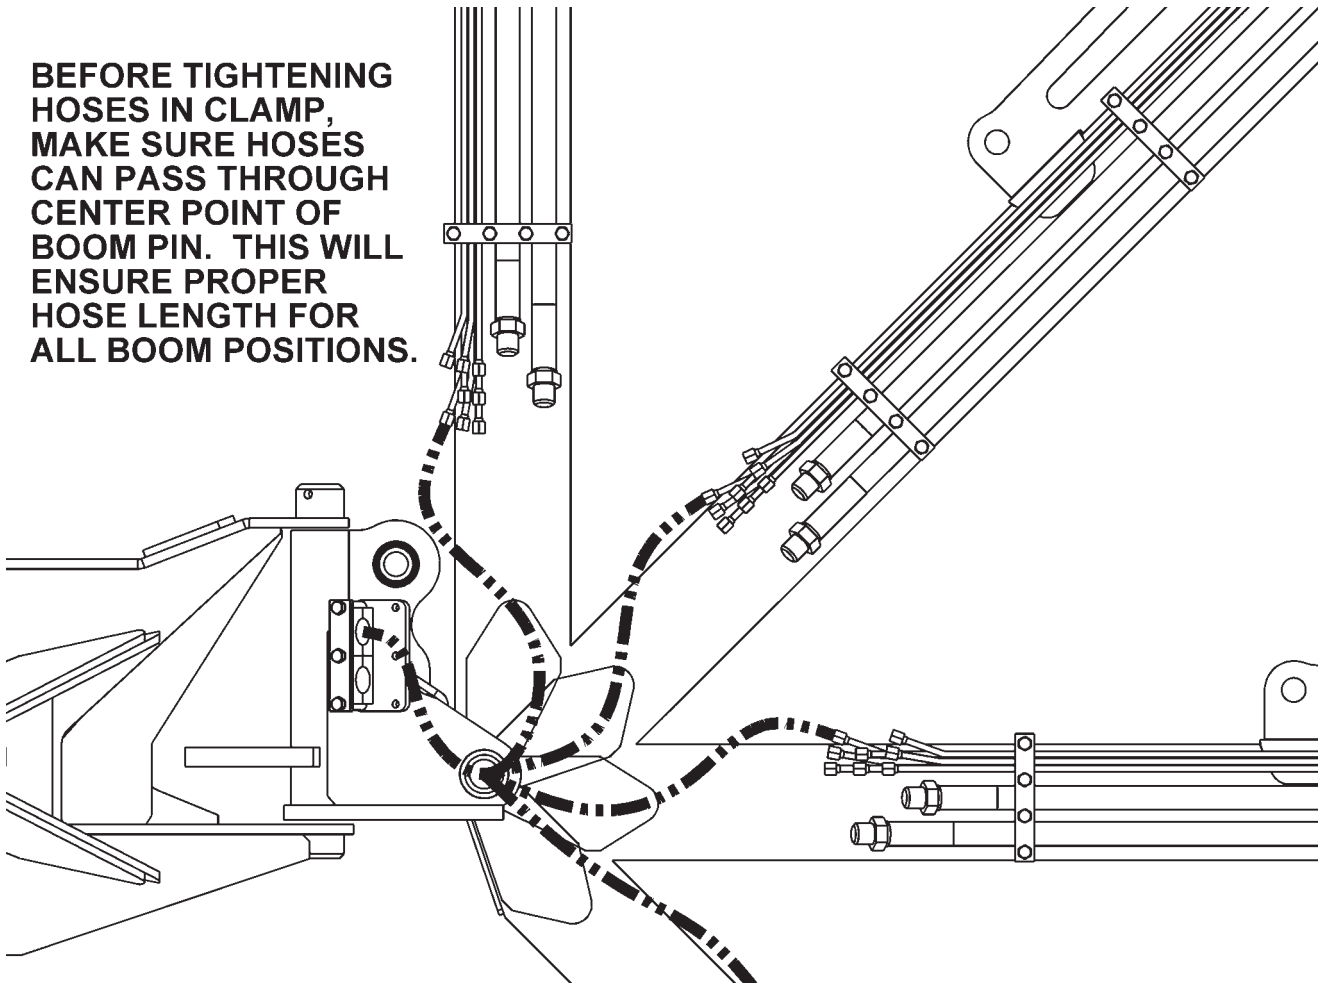


Arrange the hoses in the clamp that attaches to the main frame as shown above, with the 1" motor hoses closest to the main frame. Pull the hoses snug from the swivel to the main frame clamps, when main boom is fully forward, and tighten the hoses in the clamp.

Make sure the 1" motor hoses do not kink as the boom arm is moved into the stowing position. If this happens the motor hoses will have to be tightened, because there is too much hose between clamps.

ASSEMBLY

BOOM HYDRAULIC DIAGRAM

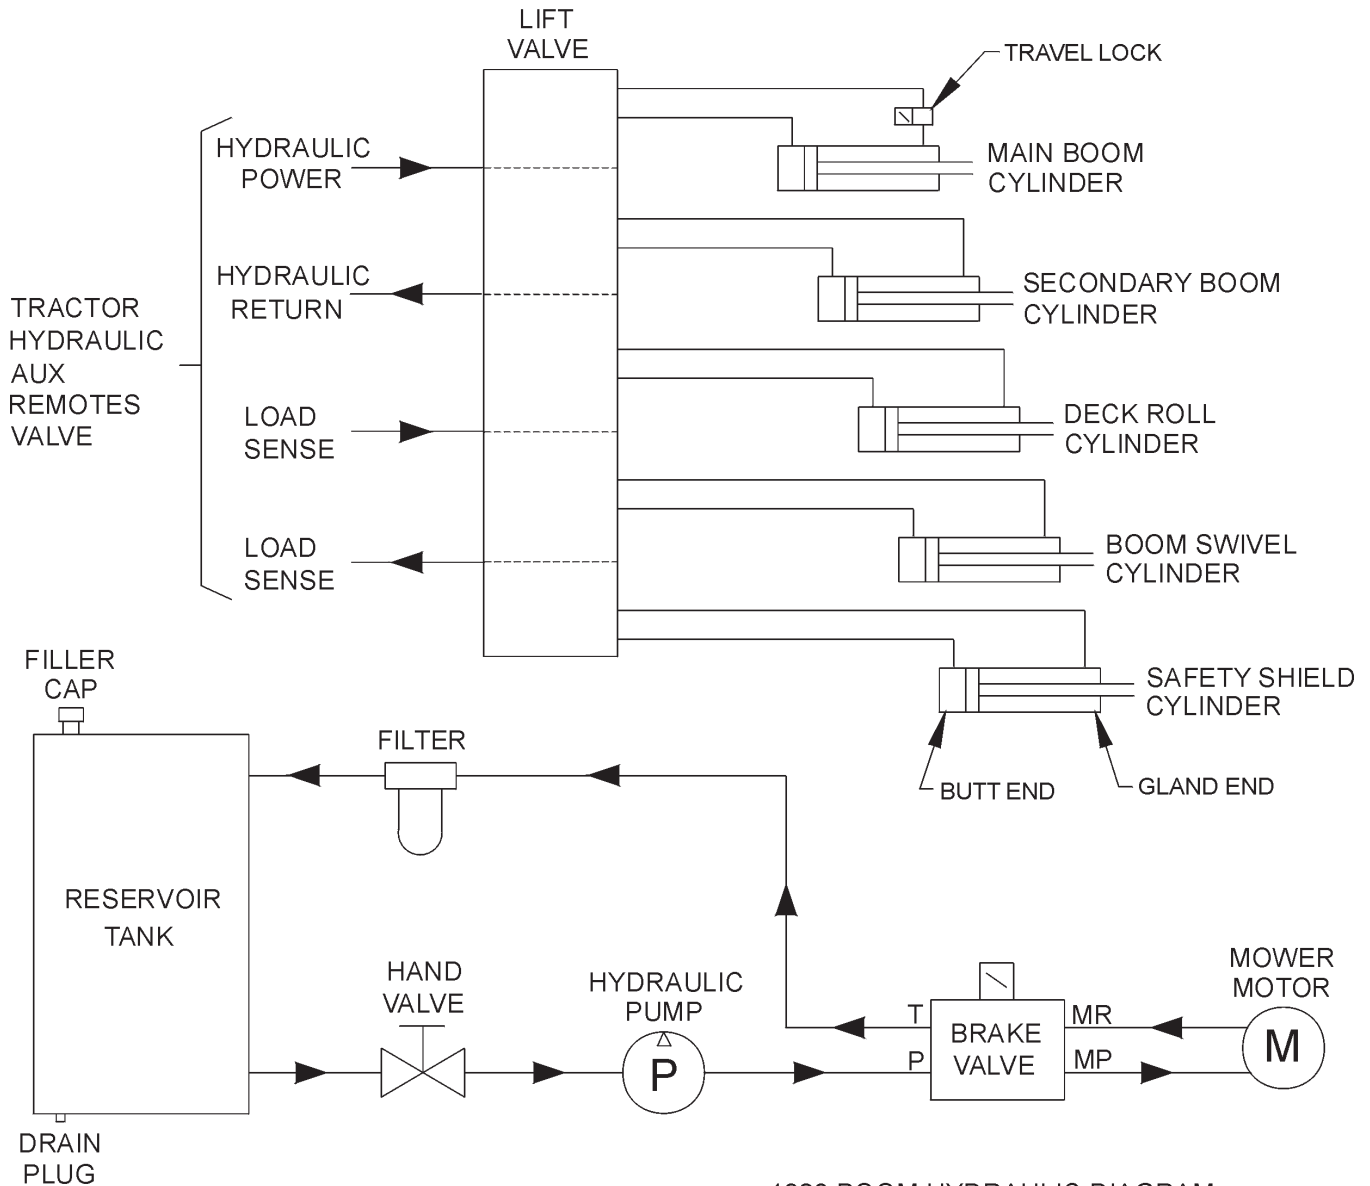

1320 BOOM HYDRAULIC DIAGRAM

BOOM REST MOUNTING

Carefully raise the lower brace into position underneath of the rear axle and install all attaching hardware as shown in the parts section loosely to allow alignment off lower brace. Now install all the main frame / axle brace onto the main frame and to the bottom of the boom rest. Carefully raise the boom rest into yje position on the top of the lower brace. Align and inst all the boom rest on the lower brace. Tighten / torque all hardware on the brace and the boom rest.

ASSEMBLY

CAB SUSPENSION MOUNTING

Install cab suspension cylinder using the existing hardware as shown in picture below. Attach the existing hardware to the boomrest bracket as shown in picture. Drill 3/8" hole to accumulator mounting bracket. Mount a U clamp to bracket and mount a accumulator. Attach the other hardware as shown in picture below . Refer the parts section for the details of the supplied hardware.



UPPER 3 POINT LINK MOUNT

Locate four mounting holes on the rear side of the tractor as shown in picture below. Mount the 3 point mounting bracket using the hardware supplied, as noted in the part section. Mount upper 3 point link arm to the bracket and boomrest as shown below . Refer the part section for details and hardware supplied.



ASSEMBLY

HYDRAULIC TANK INSTALLATION

Install all fittings and tubes into tank and tank filter as shown in parts section illustration. Insert tank sight glass into front side of the tank. Install the temperature sensor (optional) or pipe plug into the side of the tank.

Place the tank in the mounting bracket on the main frame as shown in the parts section. Secure the tank in the mounting bracket with the tank strap and nylock nuts.

Install the filter gauge into the filter housing so that it points to the rear of the tractor and is clearly visible to the operator. Locate the tank breather and reducer bushing (bushing may be already installed in the tank along with many of the for-mentioned parts). These will be installed after tank is filled.

WHEEL WEIGHT MOUNTING

For all machines using a Saber Boom mower, a triple wheel weight will be required for the left side wheel. It will be necessary to mount the large wheel weight in the wheel using the long cap-screws, lock-washers, flat-washers, hex nuts and spacers per diagram in the parts section. The smaller wheel weights will need to be used in addition to the large one. These will be installed as shown in the parts section also. Installation is most easily done with a small fork lift, inserting a fork in the center slot of the wheel weight. The head of the cap-screws is to be toward the OUTSIDE of the weight, with flat-washers on both inside and outside of the assembly. The left rear tire must also be filled with a mixture of water and calcium chloride at about five pound per gallon. Refer to maintenance section for rear tire air pressure.

TEMPERATURE GAUGE MOUNTING

(OPTIONAL)

Mount the temperature gauge where it is clearly visible to the operator. Attach the green (-) wire from the negative post on the gauge to a grounded bolt on the tractor frame. Remove paint if needed to make a good ground.

Remove the pipe plug from the side of the hydraulic reservoir, and install the temperature sensor using thread sealing tape.

Run the white wire from the (S) sensor post of the gauge to the temperature sensor on the hydraulic reservoir tank.

GENERAL HOSE INSTALLATION


Refer to the parts section for detailed information about hoses and fittings for this application.

For protection of hoses in contact with metal edges, wrap hoses with spit hose sections and fasten with hose clamps or zip ties as needed.

ASSEMBLY

INSTALLING O-RING FITTINGS

Installing straight, 45 degree and 90 degree O-ring fittings requires that the O-ring, washer and nut (A) be up against the swivel body (B). Insert the swivel and turn in until the swivel is pointed in the right direction and the O-ring contact is made. Hold swivel in set direction with a wrench and turn the O-ring nut away from the swivel body and carefully tighten.

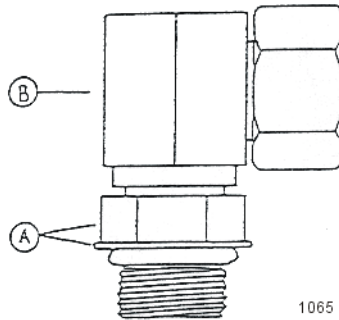

INSTALLING NATIONAL PIPE FITTINGS

Whenever installing a pipe fitting, wrap the threads clockwise (looking at the end) with teflon tape. In this way, the tape will be tightened when installed. NOTE: It is not necessary to tape O-ring fittings, or those installed in swivels.

ACCUMULATOR INSTALLATION / PLUMBING

Install the accumulator bracket on tab with holes provided on the right main frame with the capscrews and lockwashers shown. Install the accumulator in the bracket and secure with the hardware shown. Install fittings and hoses to the cylinder and control valve as shown in the parts section.

ASSEMBLY

MAIN BOOM INSTALLATION

Install the boom swivel into the main frame as shown in the parts section using a hoist. Line up holes in swivel and main frame for large swivel pin and insert pin. Secure with hardware as shown. Inspect the inner boom end, grease hole in bearing must align with boom grease zerks. Attach the inner end of the main boom to the swivel bracket with the cylinder anchors mounting upward, and at a right angle to the tractor. Secure it with the horizontal hinge pin. Secure the hinge pin in the boss with capscrews, etc. (see parts section).

Install the fittings and hose to the butt end of the large main boom cylinder. Install the travelock with the restrictor on the rod end of the main boom cylinder. These should be facing the butt end of the cylinder after installation.

NOTE: Be sure to use teflon tape on all pipe fittings (except O-rings).

Install main boom cylinder on the main boom with the fittings facing upwards. Attach the butt end to the cylinder to the swivel bracket anchor with the special "bracket head" cylinder pin and roll pin shown in parts section. Attach the cylinder rod end clevis to the main boom with the cylinder pin and two roll pins.

GREASE HINGE PIN ZERKS ON BOOM AFTER ASSEMBLY, ONCE UNDER LOAD WITH BOOM ELEVATED AND AGAIN AT REST WITH BOOM SUPPORTED

EXTENDING ZERK ON FLAIL HEAD

Due to the belt shield covering the cutter shaft bearing on the flail head a hose, elbow, & grease zerk have been added to the bearing. Remove the existing grease zerk from the bearing and discard. Attach the elbow to the bearing. Next, the hose is attached to the elbow and routed through the belt shield (shown below) and attached to the outside of the shield. The additional zerk is connected to the end of the hose for easier bearing maintenance.



ATTACH
HOSE
HERE

ASSEMBLY

CUTTERSHAFT BEARING ASSEMBLY

Tiger Part number 06520089

1. Belt drive end:
 - Mount non-expansion bearing on this end first per bearing instructions.
2. Opposite belt drive
 - Move snap ring to outer ring groove to create an expansion bearing. This allows bearing to move axially within housing.
 - Install bearing with snap ring set to outer ring groove.
 - Slide bearing axially toward aforementioned snap ring.
Tighten per bearing instructions. This allows bearing to move away from center of cutter shaft without creating a pre-load on the bearing.

DECK ATTACHMENT

Attach the head to the secondary boom using the pins and hardware shown in the parts section to attach linkages. Install the square tube on the top of the head into the head mount and secure using the mounting plate and hardware as shown. The mount should be positioned to the left side of the cutter head. Install the deck pivot cylinder using the pins and hardware also shown in the parts section.

Connect the fittings and hoses from the pivot cylinder to the small preformed tubes on the boom arm. Connect the fittings and hoses from the motor to the large preformed tubes on the boom arm.

Connect all remaining hoses from the control valve to the cylinders and / or preformed tubes on the boom arm. Refer to parts section for diagrams.


Before proceeding to the final preparation step double check the complete assembly from the main frame to the cutter head against the diagrams in the parts section for proper placement and assembly of all components.

HOSE COVERING

Secure hoses together with zip ties wherever loose. Wrap the hoses between the main boom and secondary boom with the hose cover , secure with string provided. Where hoses may contact the frame or other edges, wrap with split hose and secure with hose clamps or zip ties. On non cab units the pressure and return hoses from the control valve will also need to be routed inside the protective clear hose wrap. Cover the valve, valve fittings with the hose cover and secure with string provided.

ASSEMBLY

BOOM JOYSTICK CONTROL CALIBRATION

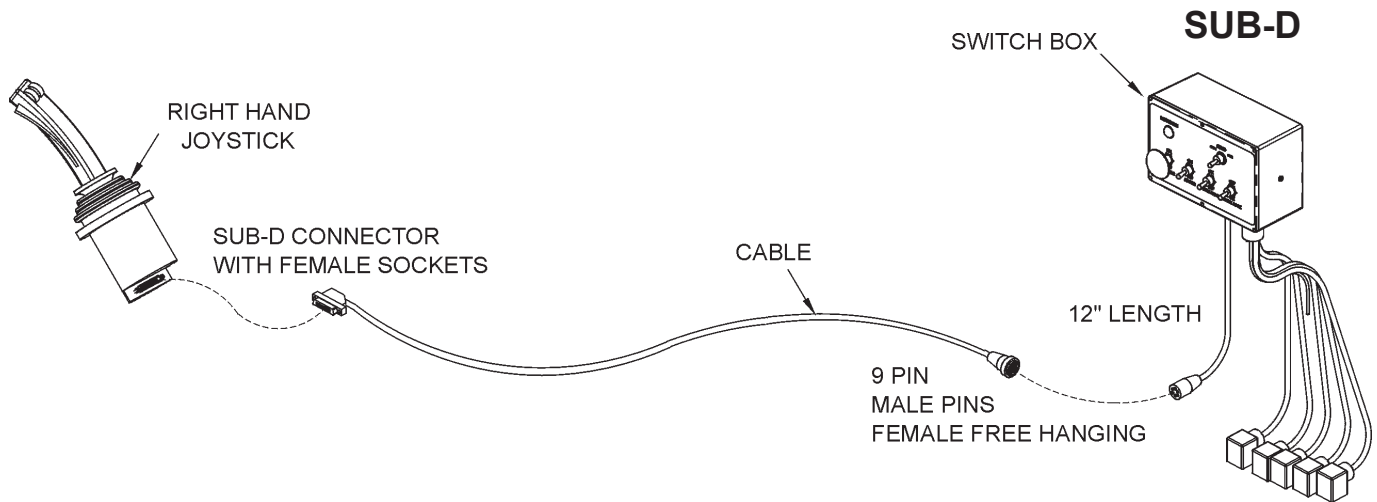

This Danfoss PVG32 control valve is now equipped with higher-resolution actuators on Main Boom, Secondary Boom, Deck Roll, and Swivel functions. These actuators have “active fault monitoring”. The Deck Shield section does not have “active fault monitoring”. The joystick is unchanged and provides a ratio-metric voltage signal. The neutral signal voltage is half or 50% of tractor supply voltage. A 25% signal voltage will shift the valve spool to full “A-Port”, and 75% signal voltage will shift the spool to full “B-Port” in the Main, Secondary, and Swivel valve sections. On the Deck Roll function a 34% signal voltage will shift the valve spool to full “A-Port” and a 68% signal voltage will shift the spool to full “B-port”. If an actuator with active fault monitoring receives a signal from the joystick that is less than 15% or greater than 85% of supply voltage the actuator will “fault out” and shut down. Also if there is an internal failure in the actuator or if the spool position is greater than that specified by the signal voltage from the joystick, the actuator will “fault out” and shut down. An “active fault” condition causes the actuator to drive the spool to neutral, shut down, and activate a “red” LED on the top of the actuator. The active fault can be canceled by simply cycling the Master Switch “OFF” and then “ON”, which resets the fault monitoring, and causes the LED on top of the actuator be “green” again.

CAUTION!



The joystick control is equipped with signal adaption potentiometers.

These provide the capability to individually adjust the oil flow to each boom function. It is important that the boom functions do not travel too fast. Excessive boom speed can reduce the stability of the unit and decrease operator control.

Note: Use a Phillips screw driver and be sure to adjust the screws carefully! DO NOT turn the potentiometers beyond their stopping point, potentiometers are very delicate! Turning the “A” or “B” port potentiometers clockwise increases the oil flow to increase the boom function speed, and turning them counterclockwise decreases the oil flow to decrease the boom function speed. See the graphic on the next few pages for help in adjusting.

ASSEMBLY

Run tractor at normal operating RPM to adjust the settings as follows.

Set the dead band compensation potentiometer first.

Set the dead band compensation potentiometer at 50%, or halfway between full clockwise and full counter-clockwise.

Setting Signal Adaptation Potentiometers:

Disconnect the Deutsch connectors from the actuators of the valve. Use a Volt/Ohm meter to measure signal voltage and adjust the signal adaptation potentiometers as needed. Pin #4 is tractor supply voltage. Pin #1 is signal voltage from the joystick, and pin #3 is ground. First measure supply voltage between pins 4 and 3. Then measure signal voltage between pins 1 and 3 while indexing the joystick function fully in both the "A" and "B" port direction. Divide the signal voltage by the supply voltage to get signal voltage as a % of supply voltage. This percentage should not be less than 25% or greater than 75% for the Main Boom, Secondary Boom, or Swivel function. This percentage should not be less than 30% or greater than 62% for the Deck Roll function. Note these initial settings for the Deck Roll function should prevent the spool from shifting into float. *After making this first adjustment to deck roll if the spool still goes into float, adjust the "B" port screw additionally counterclockwise.*

Reconnect Deutsch connectors on control cables to actuators on Danfoss valve. Run tractor until hydraulic system is at operating temperature. Now refine the adjustments of the signal adaptation potentiometers for both "A" and "B" ports for all proportional functions to achieve the following function times. Note: turning potentiometer clockwise increases the flow or the function speed, and turning them counter-clockwise decreases the flow or the function speed. Note, if during this procedure the trim potentiometer is set to full "counterclockwise" but the function is still too fast, use the mechanical stops at the manual actuator end of the valve section to further limit flow. Turn limit screw in or clockwise to limit flow. The upper limit screw limits flow to "B-port", and the lower limit screw limits flow to "A-port". However DO NOT adjust the limit screw on "B-port" of deck roll function. Limiting "B-port" will prevent "float" function.

ASSEMBLY

MAIN BOOM: “A” Port, Boom UP: 7-9 Seconds

(Note: Extend secondary boom completely; roll deck to be level with ground, and lower main boom until deck is on ground. Now index main boom “up” function and determine the time required for main boom to rise completely.)

“B” Port, Boom Down: 6-8 Seconds

(Note: Extend secondary boom completely, roll deck to be level with ground, and raise the main boom to “full up”. Then index the main boom “down” function to determine the amount of time required for the deck to contact the ground. CAUTION: Stop the boom just as the deck contacts the ground.)

SECONDARY

BOOM: “A” Port, Boom Out: 8-10 Seconds

(Position main boom full up, roll deck out until deck cylinder is fully retracted, and bring secondary boom in completely. Then index the secondary boom “out” function and determine the time required for boom to extend out completely.)

“B” Port, Boom In: 8-10 Seconds

(Position the main boom full up, roll deck out until deck cylinder is fully retracted, and extend secondary boom completely. Then index the secondary boom “in” function and determine the time required for boom to come in.)

DECK ROLL: “A” Port, Deck Out: 7-9 Seconds

(Raise main boom to vertical, extend secondary boom out slightly so that deck can be articulated without contacting the main boom, and roll deck in until deck cylinder is completely extended. Then index the deck roll “out” function and determine the time required for the deck to roll out.)

“B” Port, Deck In: Target 7-9 Seconds (but DO NOT use Limit

Screw)

(Raise main boom to vertical, extend secondary boom out slightly so that deck can be articulated without contacting the main boom, and roll deck out until deck cylinder is completely retracted. Then index the deck roll “in” function and determine the time required for the deck to roll in.)

BOOM



SWIVEL: “A” Port, Boom Aft: 11-13 Seconds

(Extend booms completely; rotate head to be level with ground, lower main boom until deck is just above ground, and swivel boom full forward. Then index the boom swivel “aft” function and determine the time required for the boom to swivel aft. Use caution when doing this, stop boom before main boom contacts tire.)


“B” Port, Boom Forward: 11-13 Seconds

(Extend booms completely, rotate head to be level with ground, lower main boom until deck is just above ground, and swivel boom aft and until near tire. Then index the boom swivel “forward” function and determine the time required for the boom to swivel full forward.)

ASSEMBLY

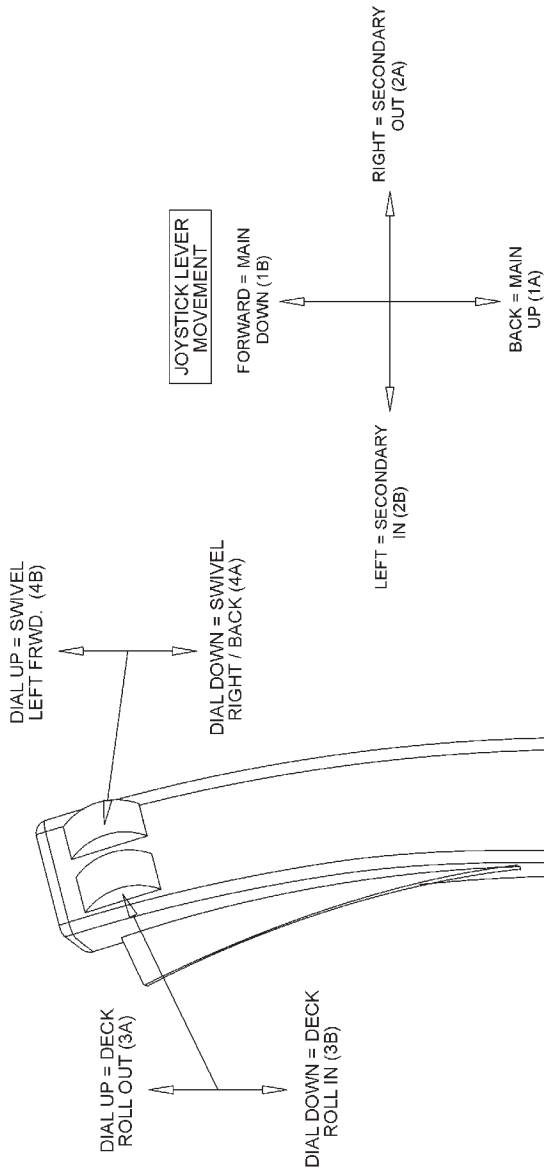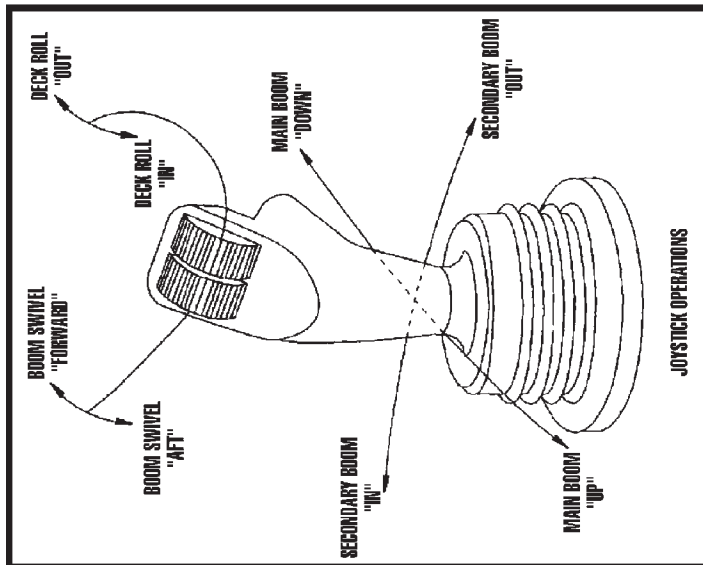



SIGNAL ADAPTION POTENTIOMETERS

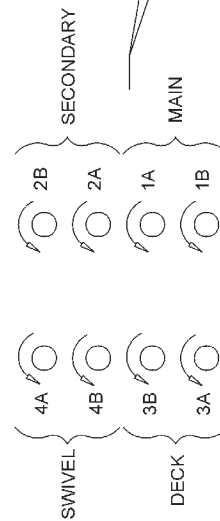

○ — DEAD BAND COMPENSATION
 NOTE: FULL C-CLOCKWISE RESULTS IN MAXIMUM "DEAD BAND"

ARROW DIRECTION () DENOTES DIRECTION TO DECREASE OIL FLOW (SLOW BOOM FUNCTIONS)

SIGNAL INVERSION SWITCHES

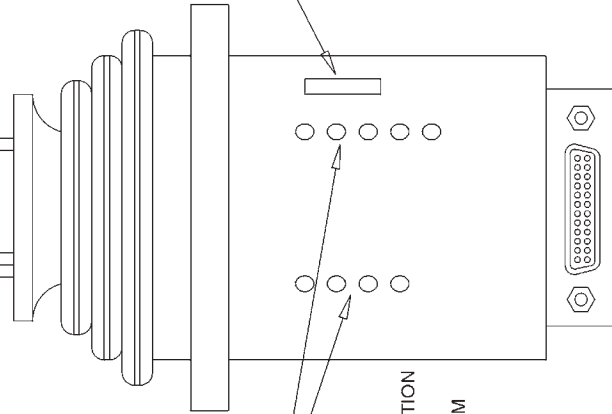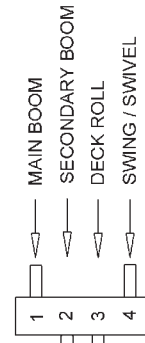

RH SUB-D

ASSEMBLY

FINAL PREPARATION FOR OPERATION

Place operators safety and operation decals on the steering column and side counsel where they are clearly visible to the operator. These decals should be understood by each operator of the machine in conjunction with the safety and operation section of this book. The decals are to remain in good condition as a reminder to the operator, and should be replaced if damaged.

Finally, all bosses, pins and pivot points will need to be greased as instructed in the maintenance section of this manual. The hydraulic reservoir can also be filled with the recommended fluid (see maintenance section) and the filter installed in the top of the tank. Double check all fittings and fasteners BEFORE starting tractor. Also secure any loose hoses together with zip ties and wrap with split hoses where friction may occur on the hoses.

WARNING!



BEFORE starting or operating the tractor you must read and understand the safety and operation sections of this manual completely.

BE SURE THE BALL VALVES ARE OPEN! Start tractor and allow instruments to stabilize. Using a piece of paper or cardboard as noted in the safety and maintenance sections, check all fittings and connections for hydraulic leaks.

If a leak is found, you must shut down the tractor, set the cutter on the ground. Before attempting to fix the leak, you must actuate the lift valve handles several times to relieve any pressure in the lines.

Before operating the mower, the cutter head and boom should be slowly moved throughout the full range of motion. Watch for any condition that would cause pinching or excess stress on the hoses. The steering and front axle travel should also be carefully moved through their full range of motion. If any condition occurs in which the hoses contact the tires, the steering and / or front axle travel may need to be limited as described in the tractor operators manual. This should also be done if the tires rub, or are extremely close to any other part of the mower such as the hydraulic tank or draft beam. This may include adding shims, or adjusting stop bolts in the tractor front to solve the problem. While checking motion, you should also check that the control circuits are connected according to the operators decal for the valve handles.

MOWER TESTING

Take the tractor to a place free of loose objects on the ground. Operate the cylinders through their full range of motion again, to clear the lines of air. Follow the instructions in the operation section to operate the mower. Vibration of the mower should be minimal at all times. After a 5 minute test run, the knife bolts should be retorqued and once again after the first few hours of operation.

If any parts of this assembly section, or any other section of this manual are not clearly understood you must contact your dealer or the address on the front of this manual for assistance!

OPERATION

OPERATION SECTION

OPERATION

Safety is of primary importance to the owner / operator and to the manufacturer. The first section of this manual includes a list of **Safety Messages**, that, if followed, will help protect the operator and bystanders from injury or death. Many of the messages will be repeated throughout the manual. **The owner / operator / dealer should know these Safety Messages before assembly , use, and maintenance of this equipment.**

The **Safety Alert Symbol** combined with a signal word, as seen below, is intended to warn the owner / operator of impending hazards and the degree of injury possible during operation.

DANGER!



Indicates an imminently hazardous situation that, if not avoided, WILL result in DEATH OR VERY SERIOUS INJURY.

WARNING!



Indicates an imminently hazardous situation that, if not avoided, COULD result in DEATH OR SERIOUS INJURY.

CAUTION!



Indicates an imminently hazardous situation that, if not avoided, MAY result in MINOR INJURY.

IMPORTANT!

Identifies special instructions or procedures that, if not strictly observed, could result in damage to, or destruction of the machine, attachments or the environment.

NOTE: *Identifies points of particular interest for more efficient or convenient operation or repair.* (SG-1)

CAUTION!



Before any operation of tractor and mower, the user should read and understand the safety and operating instructions for both the tractor and the mower. The user should also be familiar with the location and functions of the units instruments and controls. Being familiar with the machine and its controls will increase efficiency and reduce possibility of serious injury or damage to the unit. The operator should work slowly and carefully until he feels comfortable with the machine. Speed and skill will be attained much easier if the necessary time is spent to familiarize yourself with the machine and its operations.

Since tractor makes and models vary, we recommend reading and following the operators manual provided by the manufacturer pertaining to the safe operation of your particular unit.

OPERATION



STARTING TRACTOR AND MOWER



Check the operators manual received from the tractor manufacturer, for their recommendation and procedures pertaining to your particular make and model.

WARNING!



When rotating parts are in motion, serious injury may occur if caution is not used or danger is not recognized. Never allow bystanders within **100 yards** of the machine when mower is in operation.



Be sure the ball valves on the mower hydraulic tank are **OPEN** before starting the tractor. Serious damage to the hydraulic system can occur if the valves are not open.

WARNING!




Check to make sure mower switch is in the "**OFF**" position. The unit is designed not to start if the switch is in the "on" position. If tractor starts with switch on, turn off tractor and contact your local Tiger dealership for assistance.

Start the tractor and allow the instruments to stabilize. Without starting the mower, practice positioning the boom and deck. Remember, speed and skill will be attained easier if the necessary time is spent familiarizing yourself with the machine and its operations. When you feel comfortable at controlling the position of the mower, return the mower to the travel position, and transport the mower to the desired mowing location.

If mowing for the first time with a Tiger Boom Mower, we recommend choosing a ditch or area relatively flat with a minimum of sign posts, guard rails, etc. As always, you should inspect the area for other objects that can cause potential hazards.

MAIN CONTROL SWITCH BOX

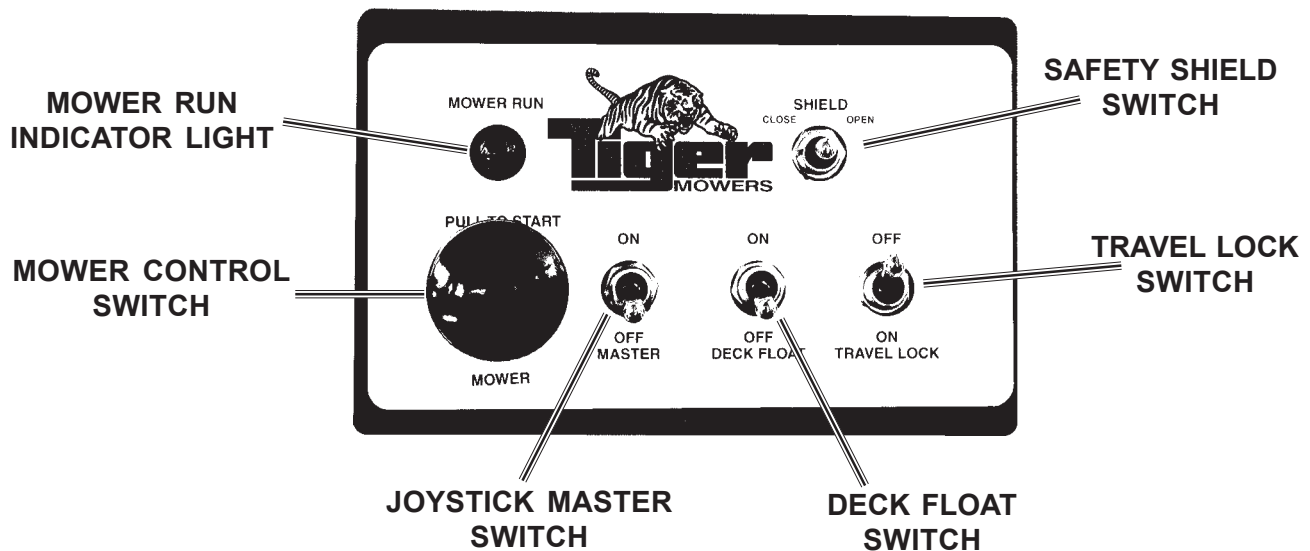

OPERATION

The Mower Control switch turns the mower “ON” and “OFF”. This switch is to be in the “OFF” position to start the tractor. If the switch is “ON” and the tractor ignition switch is turned to “ON” the red “mower run” indicator light will come on. However, the tractor will not start with the Mower Control switch in the “ON” position. Upon starting tractor the “mower run” indicator light may flash briefly, and may flash briefly again when tractor is shut down.

WARNING!



WARNING!



If tractor starts with switch on, turn off tractor and contact your local Tiger dealership for assistance.

NOTE: DO NOT operate mower head while boom mower is in the boom rest! Red “Mower Run” light indicates mower is “ON” when tractor engine is running.

The boom functions are controlled by an electronic joystick. The Joystick Master Switch enables the joystick control for controlling the boom motion functions. This switch is to be in the “OFF” position when starting the tractor and when boom is stowed for transporting the machine.

CAUTION!




If the joystick control is not operating properly, turn the master switch to the “OFF” position. Install the manual valve handle onto valve and operate the functions individually to stow boom. After boom is stowed in rest, transport the unit to the maintenance facility and contact your Tiger dealer for assistance.

CAUTION!



DO NOT attempt to operate the valve manually for mowing operations!

Note: Pushing manual valve handles “out” or “away” from the tractor cab will bring the main boom “up”, secondary boom “out”, roll deck “out”, and swivel boom “aft”. Pulling manual handles toward cab will let main boom “down”, bring secondary boom “in”, roll deck “in”, swivel boom “forward”, and “close” the safety shield.

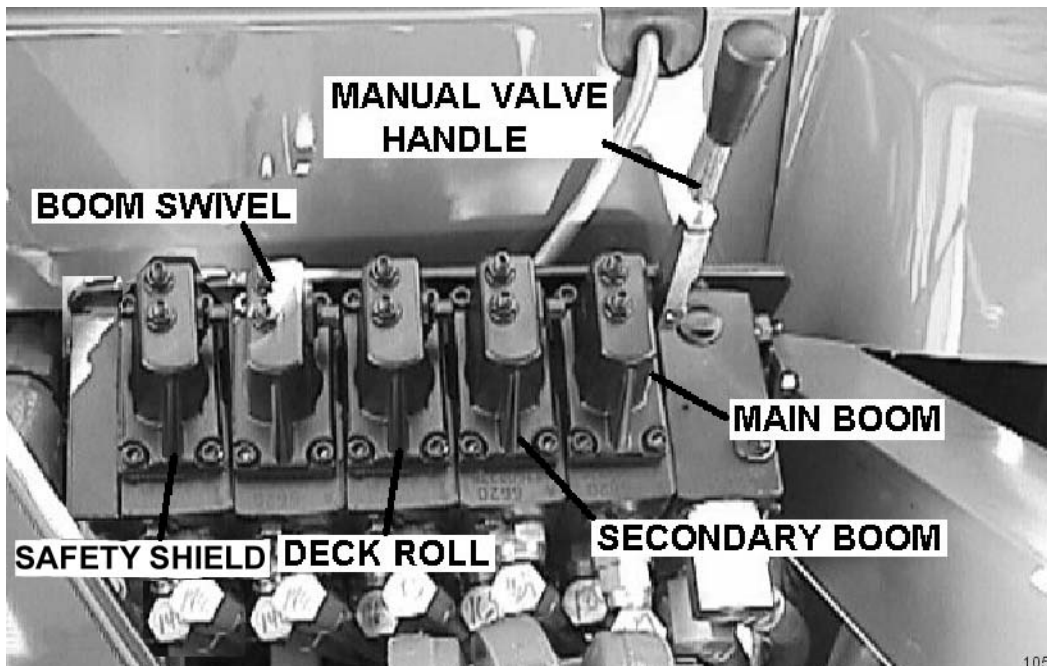

OPERATION

The Master Switch also provides power to the “Deck Float”, “Shield” and “Travel Lock” Functions of the mower deck.

The Deck Float function allows the ground roller of the flail mower head to follow the contour of the ground. To operate the deck float function, the Master switch must be in the “ON” position and the Travel Lock switch must be in the “OFF” position.

Lower the mower head to just touch the ground, then turn the deck float switch “ON”.

CAUTION!



The Deck Float is to be used **ONLY** when the flail mower head is on the ground. The mower head **CAN NOT** be controlled with the joystick when Deck Float is “ON”.

CAUTION!



The deck float is to be used only when mowing with a flail head, using the deck float with a rotary head may damage the mower.

The Safety Shield switch opens and closes the shield located on the front of the cutter head. When mowing at or near the ground, always have the shield in the closed position. When mowing in brush or in trees above ground level the shield may be opened for easier cutting. Read and follow the warnings on the decal shown below.



• **Failure to close Safety Shield may allow objects to be thrown outward with great force which can cause property damage, bodily injury, or death.**

1. Keep Safety Shield fully closed when cutting grass and weeds to reduce possibility of objects being thrown outward by the Blades and to prevent contact with the Blades if persons are in the area.
2. Before cutting brush, trimming limbs, or other such operations, raise Safety Shield fully to allow the blades to contact the material if area is clear of passersby. Operator must stop cutting and close shield if passerby enters the thrown objects area or blade contact area.
3. Repair or replace Safety Shield as needed.
4. Always transport with Safety Shield closed.

CAUTION!




The Travel Lock function locks the mower head in the up-right position for road travel. Prepare unit for travel by rolling deck completely out (mower deck rolled back adjacent to secondary boom). Then place main and secondary booms in boom rest. The Travel Lock switch can now be engaged.

NOTE: The tractor ignition switch and the Master Switch must be “ON” and the Travel Lock must be “OFF” to allow articulation of the mower deck.

OPERATION

JOYSTICK CONTROL


The diagrams below and on page 3-7 show the functions that are performed through the use of the joystick controller.

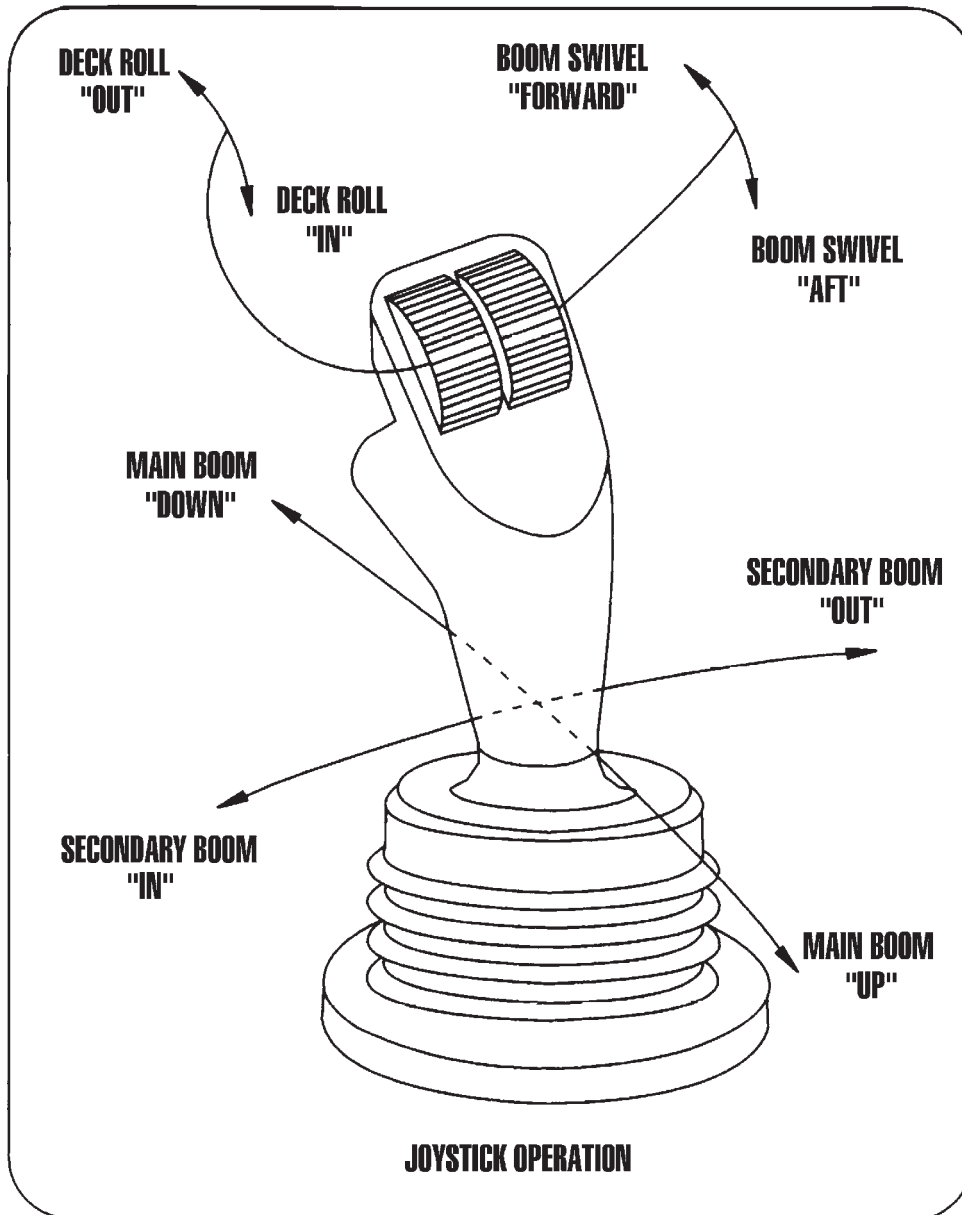


1057

OPERATION


**JOYSTICK FWD / BACK
MOVES MAIN BOOM**

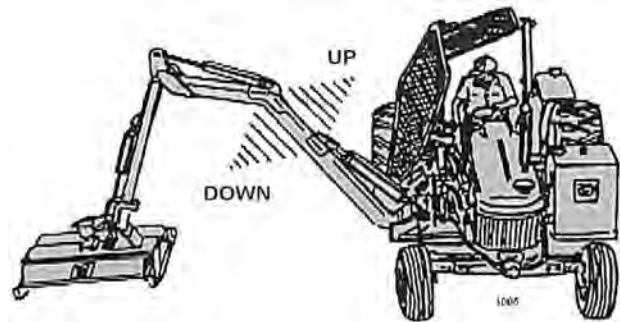


**JOYSTICK LEFT / RIGHT
MOVES SECONDARY BOOM**

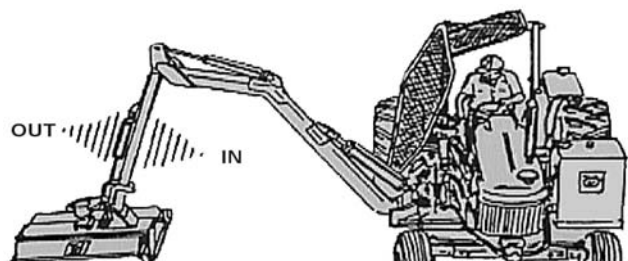


**LEFT JOYSTICK ROLLER
MOVES DECK ROLL**

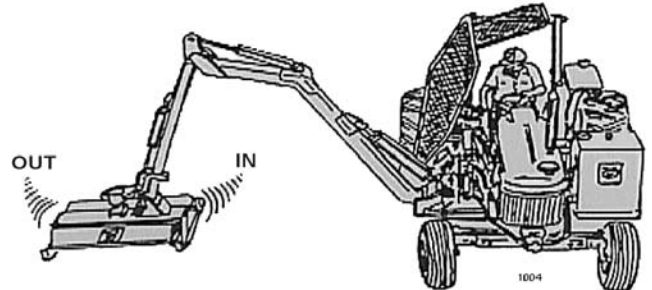

**RIGHT JOYSTICK ROLLER
MOVES BOOM SWIVEL**

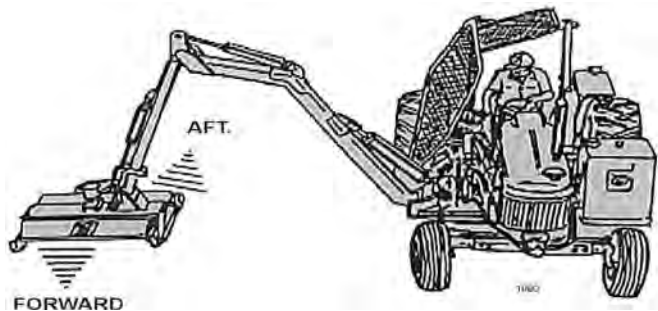

**SHIELD SWITCH
(ON SWITCH BOX)
OPERATES SAFETY
SHIELD**

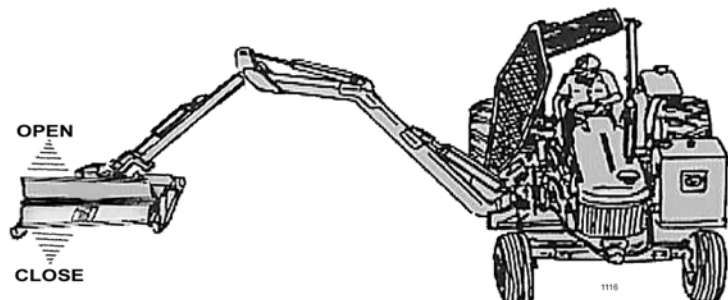

OPERATION

UNSTOWING BOOM

To un-stow the boom from the boom rest, proceed as follows. Extend secondary boom “OUT”, and move main boom “UP” off of horizontal support. Swivel boom “FORWARD” perpendicular to tractor and switch travel lock to “OFF”(ONLY FOR DANFOSS SWITCH). The head and booms are now ready for full operation.

SABER FLAIL

The Saber flail mower was designed for cutting brush and foliage up to 4 inches in diameter or multiple branches that have a total cross section area equivalent to one 4 inch branch. Cutting multiple limbs at the same time may overload the mower causing it to slow down or stall completely. Regardless of the size of material being cut, the cutter shaft speed must be maintained. To ensure that the cutter shaft is running at maximum speed, run the tractor at full throttle during mowing operations. If the cutter shaft slows to the point that the knives are folding back against the cutter shaft move the mower head away from the foliage and allow the cutter shaft to regain full speed.

WARNING!



Operating the mower in a manner that allows the cutting knives to contact the drum will cause permanent damage to the cutter shaft drum, knives, and knife attachment parts.

WARNING!



The Saber flail cutter shaft is designed for standard rotation (same rotation as the tractor wheels during forward travel). **Never operate the cutter shaft in the reverse rotation.** Operating this mower in reverse rotation may cause objects to be thrown out the front of the mower head.

SABER ROTARY

The Saber Rotary mower was designed for cutting brush and foliage up to 8 inches in diameter or multiple branches that have a total cross section area equivalent to one 8 inch branch. Cutting multiple limbs at the same time may overload the mower causing it to slow down or stall completely. Regardless of the size of material being cut, the speed of the cutter head must be maintained. To ensure that the cutter head is running at maximum speed, run the tractor at full throttle during mowing operations. If the cutter head slows to the point that the knives are folding back, move the mower head away from the foliage and allow the cutter head to regain full speed.

WARNING!



Operating the mower in a manner that allows the cutting knives to continually fold back will cause permanent damage to the knives, rotary disk, and spindle assembly.

WARNING!



The Saber Rotary cutter head is designed for clockwise rotation (clockwise as seen from the top or the cutter head). **Never operate the cutter head in the counterclockwise rotation.** Operating this mower in counterclockwise rotation may cause objects to be thrown towards the tractor.

OPERATION

MOWER OPERATION

CAUTION!



When rotating parts are in motion, serious injury may occur if caution is not used or danger is not recognized. Never allow bystanders within **300 feet** of the machine when in operation. Extreme care should be taken when operating near loose objects – such as gravel, rocks and debris. These conditions should be avoided.

The rotating parts in this machine have been designed and tested for rugged use. However, they could fail upon impact with heavy solid objects – such as steel guard rails, concrete abutments, etc., causing them to be thrown at a very high velocity. Never allow cutter head to contact such objects. Inspecting the cutting area for such objects prior to mowing can help eliminate these potential hazards.

Once on location, lower the mower deck slightly above the foliage to be cut, so the mower does not have to start under a load. With the tractor at an idle, engage mower. Bring tractor R.P.M. up to 1900 – 2200 R.P.M. and **slowly** lower deck to ground level.

A flail mower deck should be carried so that part of the deck weight is carried by the boom and part carried by the ground roller, when mowing on the ground. When the flail mower is carried this way, the ground roller follows the contour of the ground more easily during mowing operations.

CAUTION!



When using the rotary cutting head for trimming trees and shrubs, let the mower saw into them. Do not lower the mower head down directly onto a tree or stump. The mower blades are designed to cut with the end, and misuse can cause damage to the blade and a hazardous situation for the operator.

CAUTION!



Powering the boom down, forcing mower deck onto ground may damage mower deck and it's attachment to the boom, creating a potentially hazardous situation.

To ensure a clean cut, engine speed should be maintained at approximately 1900 – 2200 R.P.M. If the tractor slows to less than 1800 R.P.M., shift to the next lower gear. **DO NOT** ride the clutch, this will cause premature clutch failure. **The engine should not be operated at any time at more than 2400 R.P.M. on the tractor tachometer.**

For cutting brush it is usually best to stop the tractor and swivel the boom and mower into foliage. The horizontal positioning action of the boom is designed to position the cutting head and provide a limited pressure relief when excessive pressure is applied to the boom.

CAUTION!



DO NOT use excessive force when positioning cutting head into heavy branches or stumps. Damage to the unit may result. It is best to let the cutter head “eat away” slowly at heavy cutting jobs.

OPERATION

CAUTION!



If cut debris falls on top of mower deck causing tractor to become unstable, push the joystick control “Forward” and to the “Right” to relieve tipping of the tractor. Lower mower deck to ground and shut down unit. After all motion stops, remove debris from mower deck.

The mower will operate more efficiently in tougher conditions and with less power if the knives are kept sharp. If the mower begins to vibrate, stop the tractor, check for wire wrapped in the spindle or damaged knives. When replacing knives, replace all knives with new knives to ensure proper balance so the mower will not vibrate. Severe vibration will result, if knives with unequal wear are used.

Begin a pass at the top side of the trees and work down with each consecutive pass. When cutting trees and shrubs, use a lower speed to allow the knives time to cut as well as mulch the foliage.

WARNING!



If bystanders approach within 300 feet while mower is in operation turn mower switch “OFF” immediately! After shutdown, never leave the tractor or allow bystanders to approach within **300 FEET** of the unit until all motion stops completely.

If cutter shaft jams and stops, turn mower switch to “OFF”, and swivel boom “AFT”. Normally this action will clear the cutter head. If not, roll mower deck until adjacent to the secondary boom, then lower boom to rest mower deck on ground. Shut off the tractor, set parking brake, allow all motion to cease. At that point it is safe to leave the tractor and clear the cutter heads manually.

After the first day of operation, all bolts should be checked and tightened securely. This should be done periodically to ensure the bolts do not become loose and cause damage to the tractor or mower, or injury to the operator.

TRANSPORTING MOWER

Transporting under the units own power:

When transporting between job sites, the following procedure should be followed: Shut off the power to the cutting head and allow all motion to come to a complete stop. Roll the mower deck all the way back until it is adjacent to the secondary boom. Extend the secondary boom out to clear the boom rest. Next, swivel the boom until close to the boom rest, then position the main boom just above the horizontal boom support of the boom rest. Slowly and carefully swivel the boom “AFT” until the main boom contacts the vertical pad. Lower the main boom until it contacts the upper pad, now the secondary boom can be lowered to contact the pad on the boom rest. Lastly, place the “Travel Lock” switch on the main control switch box to the “ON” position. The unit is now ready for self transportation. (See picture of stowed boom on next page).

OPERATION



Transporting unit by flatbed trailer:

Park flatbed on level area. Drive tractor onto center of flatbed to avoid uneven distribution of weight and staying within local width restrictions. If boom is over local height restrictions, you will need to extend booms outward enough to clear front of tractor when boom is pivoted forward. Pivot mower deck into a horizontal position, and lower the boom until deck is slightly above trailer bed. Remove cylinder pin from outer end of the boom swivel cylinder.

CAUTION!



CAUTION: If trailer is not perfectly level, the boom will tend to swing towards the lower side. Have other personnel ready to control its swinging motion when cylinder pin is removed.

Retract swivel cylinder and secure to main frame. Pivot boom forward to the center of flat bed. Lower deck onto the trailer bed, and shut of the tractor. The tractor and the mower head should now be chained down securely to the trailer bed.

CAUTION!



If any part of this operating section, or any other section of this manual is not completely understood, contact your Tiger dealer or the address on the cover of this manual for assistance!

The front axle stabilizer deploys automatically when extending the main boom. After stowing the main boom, hold the main boom “down” control briefly, and the stabilizer cylinder will retract completely for transport.

OPERATION

INSPECTION SHEETS

OPERATION

BOOM MOWER PRE-OPERATION Inspection



Mower ID# _____ Make _____

Date: _____ Shift _____

WARNING!



Before conducting the inspection, make sure the Tractor engine is off, all rotation has stop and the tractor is in the Park with the parking brake engaged. The Mower head is resting on the ground (or is securely blocked up and supported) and all hydraulic pressure has been relieved.

Item	Condition at Start of Shift	Specific Comments if not O.K.
The Operator's Manual is in the Canister on the mower		
All Safety Decals are in place and legible		
The Mounting frame bolts are in place and tight		
The Boom connection bolts & pins are tight		
There are no cracks in boom		
The Hydraulic Cylinders pins are tight		
The Hydraulic Pump hose connections are tight		
The Hydraulic Valve hose connections are tight		
The Hydraulic Valve controls function properly		
There are no leaking or damaged hoses		
The Hydraulic Oil level is full		
There is no evidence of Hydraulic leaks		
The Blades are not chipped, cracked or bent		
The Blade bolts are tight		
The Deflectors are in place and in good condition		
The Mower shields are in place and in good condition		
The Skid shoes are in good condition & tight		
There are no cracks or holes in mower deck		
The Hydraulic motor mounting bolts are tight		
The mower head spindle housing is tight and lubricated		

Operators Signature: _____

DO NOT OPERATE an UNSAFE TRACTOR or MOWER

OPERATION

TRACTOR PRE-OPERATION Inspection



Tractor ID# _____ Make _____

Date: _____ Shift _____

WARNING!



Before conducting the inspection, make sure the Tractor engine is off, all rotation has stop and the tractor is in the Park with the parking brake engaged. The Mower head is resting on the ground (or is securely blocked up and supported) and all hydraulic pressure has been relieved.

Item	Condition at Start of Shift	Specific Comments if not O.K.
The Flashing lights function properly		
The SMV Sign is clean and visible		
The Tires are in good condition with proper pressure		
The Wheel Lug bolts are tight		
The tractor Brakes are in good condition		
The Steering linkage is in good condition		
There are no visible Oil Leaks		
The Hydraulic controls function properly		
The ROPS or ROPS Cab is in good condition		
The Seatbelt is in place and in good condition		
The 3-Point Hitch is in good condition		
The Drawbar pins are securely in place		
The PTO Master Shield is in place		
The Engine Oil level is full		
The Brake Fluid level is full		
The Power Steering Fluid Level is full		
The Fuel level is adequate		
The Engine Coolant Fluid level is full		
The Radiator is free of debris		
The Air filter is in good condition		

Operators Signature: _____

DO NOT OPERATE an UNSAFE TRACTOR or MOWER

OPERATION

FRONT END LOADER PRE-OPERATION Inspection



Mower ID# _____ Make _____

Date: _____ Shift _____

WARNING!



Before conducting the inspection, make sure the Tractor engine is off, all rotation has stop and the tractor is in the Park with the parking brake engaged. The Loader is resting on the ground (or is securely blocked up and supported) and all hydraulic pressure has been relieved.

Item	Condition at Start of Shift	Specific Comments if not O.K.
The Operator's Manual is in the Canister on the mower		
All Safety Decals are in place and legible		
The Mounting frame bolts are in place and tight		
There are no cracks in Draftbeam or Yolk		
The Draftbeam/Yolk connection bolts & pins are tight		
There are no cracks or holes in mower deck		
The Hydraulic motor mounting bolts are tight		
The mower head spindle housing is tight and lubricated		
There mower deck is clear of cut grass and debris		
The Skid shoes are in good condition & tight		
Chain Guards/Deflectors are in place & in good condition		
Blade carrier retaining nut is tight		
Blades are not chipped, cracked or bent		
Blade bolts are tight		
Transport locks are in good condition		
There are no leaking or damaged hoses		
There is no evidence of Hydraulic leaks		
The Hydraulic Oil level is full		
The Hydraulic Cylinders pins are tight		
The Hydraulic Pump hose connections are tight		
The Hydraulic Valve hose connections are tight		
The Hydraulic Valve controls function properly		
Wheel lug nuts are tight		

Operators Signature: _____

DO NOT OPERATE an UNSAFE TRACTOR or FRONT END LOADER

OPERATION

TRACTOR PRE-OPERATION Inspection



Tractor ID# _____ Make _____

Date: _____ Shift _____

WARNING!



Before conducting the inspection, make sure the Tractor engine is off, all rotation has stop and the tractor is in the Park with the parking brake engaged. The Loader is resting on the ground (or is securely blocked up and supported) and all hydraulic pressure has been relieved.

Item	Condition at Start of Shift	Specific Comments if not O.K.
The Flashing lights function properly		
The SMV Sign is clean and visible		
The Tires are in good condition with proper pressure		
The Wheel Lug bolts are tight		
The Tractor Brakes are in good condition		
The Steering linkage is in good condition		
There are no visible Oil Leaks		
The Hydraulic controls function properly		
The ROPS or ROPS Cab is in good condition		
The Seatbelt is in place and in good condition		
The PTO Master Shield is in place		
The Engine Oil level is full		
The Brake Fluid level is full		
The Power Steering Fluid Level is full		
The Fuel level is adequate		
The Engine Coolant Fluid level is full		
The Radiator is free of debris		
The Air filter is in good condition		

Operators Signature: _____

**DO NOT OPERATE an UNSAFE TRACTOR or FRONT END
LOADER**

MAINTENANCE SECTION

MAINTENANCE

Tiger Mowers are designed for high performance and rugged durability yet with simplified maintenance. The purpose of this section of the manual is to help the operator in the regular servicing of the mower. Regular maintenance at the intervals mentioned will result in the maximum efficiency and long life of the Tiger Mower.

When you purchase a Tiger Mower you also acquire another valuable asset, Tiger's parts organization. Our rapid and efficient service has guaranteed the customer satisfaction for many years. Tiger parts keep up with the demands for efficiency, safety and endurance expected of the Tiger Mower.

MAINTENANCE PRECAUTIONS

Be sure end of grease gun and zerks are clean before using. Debris injected into bearings, etc. with grease will cause immediate damage.

- DO NOT use a power grease gun to lubricate bearings. These require very small and exact amounts of lubrication. Refer to the detailed maintenance section for specific lubrication instructions. **Do Not over-grease bearings.**
- Lexan windows should be washed with mild soap or detergent and luke warm water, using a soft clean sponge or **soft cloth**. DO NOT use abrasive or alkaline cleaners or metal scrapers on lexan windows!
- Be alert to maintenance indicators such as the in-tank filter pressure gauge, hydraulic reservoir sight gauge, etc. Take the required action to correct any problems immediately.
- Release of energy from pressurized systems may cause inadvertent actuation of cylinders, or sudden release of compressed springs. Before disconnecting any hoses relieve pressure by shutting tractor off, setting cutter on ground and actuating lift valve handles.

WARNING!



DO NOT use hands to check for suspected leaks in hydraulic hoses! Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin and cause serious injury. If fluid is injected into skin, it must be surgically removed within a few hours or gangrene may result. Use a small piece of wood or cardboard, not hands, to search for pin hole leaks. Be sure all pressure is relieved whenever disconnecting lines. Be sure all connections are tight and hoses and lines are not damaged before applying pressure.

BREAK IN PERIOD

In addition to following the break in instructions for your particular tractor, the in-tank hydraulic fluid filter should be replaced after the first 50 hours of service. Thereafter the filter should be replaced every 500 hours, or yearly, which ever comes first.

Re-torque wheel lugs after first five hours of operation and periodically thereafter. See torque specifications listed in the tractor's service manual for your particular model. **Wheel lugs must always be re-torqued whenever a wheel is removed and reinstalled.**

MAINTENANCE

REGULAR MAINTENANCE

The intervals at which regular servicing should be done are based on hours of operation. Use the tractor's hour meter to determine when regular servicing is required.



This symbol indicates a point that needs to be greased at an interval noted in the section below. Refer to the Detailed Maintenance section for further instructions on greasing. Copy and use the Daily Maintenance sheet located at the end of this section.

DAILY OR EVERY 8 HOURS

ITEM	SERVICE	COMMENTS
Drive Shaft Yoke, U-Joint section	Grease & Stub Shaft	Grease as instructed in detailed maint.
Pump Drive Shaft Coupler	Check and Lube	Insure drive shaft end play
Crankshaft Adapter	Check rubber grommets	Replace grommets if damaged or missing.
Pivot Points	Lubricate	Inject grease until it appears at ends
Hydraulic Fittings	Check for leaks	Tighten when needed. Do Not use hands to check for leaks, see maint. Precautions
Knives	Check	Inspect for missing or damaged knives, change as needed.
Knife mounting bolts (knife to disk)	Check	Re - torque to 2,000 ft. lbs.
Spindle mounting bolts (spindle to deck)	Check	Re - torque to 315 ft. lbs. lubricated Re - torque to 357 ft. lbs. dry
Blade bar to Spindle	Check	Re - torque to 369 ft. lbs. lubricated Re - torque to 418 ft. lbs. dry
Belts	Check / Adjust	Check if broken, tighten as required
Main Frame and Deck	Check	Re - torque bolts to torque specifications in this section
Hydraulic Fluid Level	Check	Add if required per fluid recommendations
Rear Flail Drive (if applicable) section Bearing Flange and Shaft Coupler	Lubricate	Grease as instructed in detailed maint.
Cutter Shaft and Ground Roller	Lubricate	Grease as instructed in detailed maint. section.
Ground Roller Bearings	Lubricate	Severe conditions may require every 150 hrs.
Cutter Shaft Bearings (Flail)	Lubricate	Approx. every 300 hrs. except severely dirty conditions

MAINTENANCE

WEEKLY OR EVERY 50 HOURS

ITEM	SERVICE	COMMENTS
In Tank Hyd. Fluid Filter (10 micron filter)	Change	Change after the first 50 hours only, then every 500 hours, yearly or if indicated by the restriction indicator.
In-Line High Pressure Filter (10 micron filter)	Change	Change after the first 50 hours only, then every 500 hours, yearly or if indicated by the restriction indicator.
Chain Coupling	Check	

MONTHLY OR EVERY 150 HOURS

Hydraulic Fluid Level	Check	Add as needed
Hyd. Tank Breather	Clean / Check / Replace	Clean or replace element as required

YEARLY OR EVERY 500 HOURS

Spindle Grease	Change	
Hyd. Tank Fluid	Change	
In Tank Hyd. Fluid Filter (10 micron filter)	Change	
In-Line HP Filter (10 micron filter)	Change or	Change when indicated by restriction indicator.
Hyd. Tank Breather	Change	

TROUBLESHOOTING

SYMPTOMS	CAUSE	REMEDY
Vibration	<ol style="list-style-type: none"> Loose bolts Cutter assembly Unbalanced 	<ol style="list-style-type: none"> Check all bolts and tighten to recommended torque specs. 2a. Check for damaged blades, disc. or cutter shaft. Replace if needed. 2b. Check for wire, rope, etc. entangled in cutter assembly
Mower will not lift	<ol style="list-style-type: none"> Hyd. Fluid low Leaks in line Faulty relief valve Kinked or blocked Faulty cylinder 	<ol style="list-style-type: none"> Check and refill Hyd Fluid Tighten replace fittings and hoses Check pressure in line. Line pressure in Control Valve should be at least 2500 P.S.I. Clean or replace lines Inspect, repair or replace cylinder
Mower will not start or run	<ol style="list-style-type: none"> Blown fuse Ball valves closed Low oil level Line leak 	<ol style="list-style-type: none"> Check fuse between mower switch and ignition / replace Make sure valves are open Check Hyd. tank and fill Check all fittings and lines, re-tighten or replace

MAINTENANCE

SYMPTOMS	CAUSE	REMEDY
Mower will not start or run	1. Electronic solenoid faulty	1a. Without the tractor running, turn the mower switch to on. A low audible click should be heard if the solenoid is engaging the solenoid spool. If click is not heard, leave switch in on position and with a screwdriver or other steel object, touch the small nut on the end of the solenoid. If the metallic object is not attracted to the nut, check the fuse and wiring for an open circuit. If the object is attracted but no "click" is heard, replace the solenoid. 1b. Remove the four bolts holding the small block to the main block. Lift and remove small block being careful not to damage O-rings / filter. Clean filter and re-install. 1c. Remove large nut on side of large valve block. Remove spring, and use needle nose vise grip to pull spool from block. Check block and spool for contaminates and scratches. Clean parts or replace if scratched.
Motor runs but will not cut.	1. Belts 2. Tensioner	1. Inspect belts and pulleys. Replace belts and repair as needed. 2. Adjust tensioner nut until flat washer is flush with top of guide.
Motor turns slowly or not at all.	1. Contaminants restricting spool movement in valve body. 2. Suction lines obstructed 3. Low oil level	1. Remove large nut on side of large valve block. Remove spring, and use needle nose vise grip to pull spool from block. Check block and spool for contaminates and scratches. Clean parts or replace if scratched. 2. Check for kinkes or obstruction in suction hose. 3. Check Hyd. tank level and fill.
Pump will not work	1. Excessive wear on internal parts	1. Disassemble and repair.
Motor will not work	1. Excessive wear on internal parts	1. Disassemble and repair.

NOTE: If flow meter is available, check pressure and flow volume for all suspected hydraulic problems.

If the solution to your problem cannot be found in this section, call the Technical Service representative at the number shown on the front cover of this manual.

MAINTENANCE

TORQUE SPECIFICATIONS

Torque for Standard Fasteners

Nominal Dia. (in.)	threads per inch	Grade 2			Grade 5			Grade 8			Grade 9		
		Tightening Torque			Tightening Torque			Tightening Torque			Tightening Torque		
		Lubed K = 0.15	Dry Plated K = 0.17	Dry plain K = 0.20	Lubed K = 0.15	Dry Plated K = 0.17	Dry plain K = 0.20	Lubed K = 0.15	Dry Plated K = 0.17	Dry plain K = 0.20	Lubed K = 0.15	Dry Plated K = 0.17	Dry plain K = 0.20

Unified Coarse Thread Series

Nominal Dia. (in.)	Threads per inch	49 in-lbs	59 in-lbs	66 in-lbs	76 in-lbs	86 in-lbs	101 in-lbs	107 in-lbs	122 in-lbs	143 in-lbs	126 in-lbs	143 in-lbs	168 in-lbs
1/4	20	49	59	66	76	86	101	107	122	143	126	143	168
5/16	18	101	122	135	157	178	209	221	251	295	259	294	346
3/8	16	15 ft-lbs	18 ft-lbs	20 ft-lbs	23 ft-lbs	26 ft-lbs	31 ft-lbs	33 ft-lbs	37 ft-lbs	44 ft-lbs	38 ft-lbs	43 ft-lbs	51 ft-lbs
7/16	14	24	29	32	37	42	49	52	59	70	61	70	82
1/2	13	37	44	49	57	64	75	80	90	106	94	106	125
9/16	12	53	63	70	82	92	109	115	130	154	135	153	180
5/8	11	73	87	97	113	128	150	159	180	212	186	211	248
3/4	10	129	155	172	200	227	267	282	320	376	331	375	441
7/8	9	125	150	167	322	365	429	455	515	606	533	604	710
1	8	187	225	250	483	547	644	681	772	909	799	905	1065
1 1/8	7	266	319	354	596	675	794	836	955	1128	995	1132	1331
1 1/4	7	375	450	500	840	952	1121	1173	1363	1545	1363	1545	1817
1 1/2	6	652	783	869	1462	1657	1950	2037	2371	2688	2371	2688	3150

Fine Thread Series

Nominal Dia. (in.)	Threads per inch	56 in-lbs	68 in-lbs	75 in-lbs	87 in-lbs	99 in-lbs	116 in-lbs	123 in-lbs	139 in-lbs	164 in-lbs	144 in-lbs	163 in-lbs	192 in-lbs
1/4	28	56	68	75	87	99	116	123	139	164	144	163	192
5/16	24	112	135	150	174	197	231	245	278	327	287	325	383
3/8	24	17 ft-lbs	20 ft-lbs	23 ft-lbs	26 ft-lbs	30 ft-lbs	35 ft-lbs	37 ft-lbs	42 ft-lbs	49 ft-lbs	43 ft-lbs	49 ft-lbs	58 ft-lbs
7/16	20	27	32	36	41	47	55	58	66	78	68	78	91
1/2	20	41	49	55	64	72	85	90	102	120	105	120	141
9/16	18	59	71	78	91	103	121	128	146	171	151	171	201
5/8	18	82	99	110	127	144	170	180	204	240	211	239	281
3/4	16	144	173	192	223	253	297	315	357	420	369	418	492
7/8	14	138	165	184	355	403	474	502	568	669	588	666	784
1	14	210	252	280	542	614	722	765	867	1020	896	1016	1195
1 1/8	12	298	357	397	668	757	890	1083	1227	1444	1269	1439	1693
1 1/4	12	415	498	553	930	1055	1241	1509	1710	2012	1768	2004	2358
1 1/2	12	734	880	978	1645	1865	2194	2668	3024	3557	3127	3544	4169

Torque values for 1/4 and 5/16-in series are in inch-pounds. All other torque values are in foot-pounds.
 Torque values calculated from formula T=KDF, where
 K = 0.15 for "lubricated" conditions
 K = 0.17 for zinc plated and dry conditions
 K = 0.20 for plain and dry conditions
 D = Nominal Diameter
 F = Clamp Load

Torque-Tension Relationship for Metric Fasteners

Nominal Dia. (mm)	Pitch	Class 4.6			Class 8.8			Class 10.9			Class 12.9	
		Tightening Torque			Tightening Torque			Tightening Torque			Tightening Torque	
		Lubed K = 0.15 (ft-lbs)	Dry Plated K = 0.17 (ft-lbs)	Dry plain K = 0.20 (ft-lbs)	Lubed K = 0.15 (ft-lbs)	Dry Plated K = 0.17 (ft-lbs)	Dry plain K = 0.20 (ft-lbs)	Lubed K = 0.15 (ft-lbs)	Dry Plated K = 0.17 (ft-lbs)	Dry plain K = 0.20 (ft-lbs)	Lubed K = 0.15 (ft-lbs)	Dry plain K = 0.20 (ft-lbs)
3	0.5	0.28	0.32	0.38	0.73	0.82	0.97	1.0	1.2	1.4	1.2	1.6
3.5	0.6	0.44	0.50	0.59	1.1	1.3	1.5	1.6	1.9	2.2	1.9	2.5
4	0.7	0.66	0.74	0.87	1.7	1.9	2.3	2.4	2.7	3.2	2.8	3.8
5	0.8	1.3	1.5	1.8	3.4	3.9	4.5	4.9	5.5	6.5	5.7	7.6
6	1	2.3	2.6	3.0	5.8	6.6	7.7	8.3	9.4	11	9.7	13
6	1.25	2.1	2.3	2.7	5.3	6.0	7.0	7.6	8.6	10	8.8	12
7	1	3.8	4.3	5.0	9.7	11	13	14	16	19	16	22
8	1	5.9	6.6	7.8	15	17	20	22	24	29	25	34
8	1.25	5.5	6.2	7.3	14	16	19	20	23	27	24	31
10	1.25	11	13	15	29	33	39	42	48	56	49	66
10	1.5	11	12	14	28	32	37	40	45	53	47	62
12	1.25	21	23	28	53	60	71	76	86	101	89	119
12	1.5	20	22	26	51	58	68	73	82	97	85	113
12	1.75	19	21	25	49	55	65	70	79	93	81	108
14	1.25	26	29	34	66	75	89	95	108	127	111	148
14	1.5	28	32	37	72	82	96	103	117	138	121	161
14	2	30	34	40	76	88	104	111	126	148	130	173
16	1.5	50	57	67	129	146	171	184	208	245	215	287
16	2	47	53	62	121	137	161	173	196	230	202	269
18	1.5	73	82	97	187	212	249	268	303	357	313	417
18	2.5	65	73	86	167	189	222	239	270	318	279	372
20	2.5	91	104	122	236	267	314	337	382	449	394	525

Clamp load calculated as 75% of the proof load for specified bolts. K = 0.15 for "lubricated" conditions.
 All torque values are listed in foot-pounds. K = 0.17 for zinc plated, dry conditions.
 Torque values calculated from formula T=KDF, where K = 0.20 for plain and dry conditions.
 D = Nominal Diameter
 F = Clamp Load

* These are intended to be general specifications. See tractor operators or service manual for exact specifications for your unit.

MAINTENANCE

LUBRICATION RECOMMENDATIONS

Description	Application	General Specification	Recommended Mobil Lubricant
Tractor Hydraulics	Reservoir	JD-20C MF M1135,M1141 FNHM2C134D (FNH201)	Mobilfluid 424
Mower Hydraulics	Reservoir		
Cold Temperatures 0 F Start-Up		ISO 46 Anti-Wear - Low Temp	Mobil DTE 15M
Normal Temperatures 10 F Start-Up		JD-20C MF M1135,M1141 FNH M2C134D (FNH201)	Mobilfluid 424
Normal Temperatures 15 F Start-Up		ISO 46 Anti-Wear	Mobil DTE 25
High Operating Temp. Above 90 F		ISO 100 Anti-Wear	Mobil DTE 18M
Flail Rear Gearbox	Grease	PAO Synthetic Extreme Pressure Gear Lube	Mobil SHC 75W-90 Mobil 1 Synthetic Gear
Cutter Shaft & Ground	Grease	Lithium-Complex	Mobilgrease CM-S
Roller Shaft (Flail)	Gun	Extreme Pressure NLGI 2 - ISO 320	
Drive Shaft Coupler (Flail and Rotary)	Grease Gun	Lithium-Complex Extreme Pressure NLGI2 - ISO 320	Mobilgrease CM-S
Drive Shaft Yoke, U-Joint & Sub Shaft	Grease Gun	Lithium-Complex Extreme Pressure NLGI 2 - ISO 320	Mobilgrease CM-S
Boom Swivel	Grease	Lithium-Complex	Mobilgrease CM-S
Boom Cylinder Pivots (Rotary & Flail Boom)	Gun	Extreme pressure NLGI2 - ISO 320	
Deck Boom Pivot & Deck Stop Adjustment (Rotary & Flail)	Grease Gun	Lithium-Complex Extreme pressure NLGI 2 - ISO 320	Mobilgrease CM-S
Deck Spindle (Rotary)	Grease Gun	Tiger Spindle Lubricant part number 06540000	Mobilith SHC 220

MAINTENANCE

POLYCARBONATE CARE & MAINTENANCE

The proprietary UV and Abrasion Resistant surface coating on SHIELDS® SUPERCOATED™ polycarbonate significantly improves performance. Periodic cleaning using proper procedures and compatible cleaners are recommended to prolong service life. Tiger Corp. polycarbonate is SUPERCOATED™ on both sides.

CLEANING THE SUPERCOAT™ HARD-COAT

1. Wash with a mild solution of soap or detergent and lukewarm water
2. Using a soft cloth or sponge, gently wash the sheet to loosen dirt and grime and rinse well with clean water.
3. To prevent water spotting, thoroughly dry with chamois or cellulose sponge.
4. Avoid the use of abrasive cleaners, squeegees and/or other cleaning implements that may mar or gouge the coating.

CLEANING AGENTS WHICH HAVE BEEN FOUND TO BE COMPATIBLE UNDER LABORATORY CONDITIONS:

- Aqueous Solutions of Soaps and Detergents
Windex¹ Top Job² Joy² Mr. Clean²
Fantastik³ Formula 409⁴ Sumalight D12 Brucodecid
- Organic Solvents
Butyl Cellosolve Kerosene Hexel, F.O. 554 Naphtha (VM&P grade)
Neleco-Placer Turco 5042
- Alcohols
Methanol Isopropyl

All residual organic solvents should be removed with a secondary rinse.

GRAFFITI REMOVAL

Butyl cellosolve (for removal of paints, marking pen inks, lipstick, etc.). The use of masking tape, adhesive tape or lint removal tools works well for lifting off old weathered paints.

To remove labels, stickers, etc., the use of kerosene or VM&Pnaphtha are generally effective. When the solvent will not penetrate sticker material, apply heat (hair dryer) to soften the adhesive and promote removal.


IMPORTANT: If a material is found to be incompatible in a short-term test, it will usually be found to be incompatible in the field. The converse, however, is not always true. Favorable performance is no guarantee that actual end-use conditions have been duplicated. Therefore, these results should be used as a guide only and it is recommended that the user test the products under actual end-use conditions.

MAINTENANCE

RECOMMENDED FILLING INSTRUCTIONS FOR HYDRAULIC RESERVOIRS

When filling or checking the oil level, the unit should be parked on a level surface, shut “OFF”, and allowed sufficient time to cool to ambient temperature. Use caution when removing the pressurized breather . Do not place face over opening when removing the breather .


The reservoir should be filled to the top of the lower sight glass on the side of the tank. Do not over-fill. The reservoir has been over-filled when oil is visible in the upper sight glass. If tank has too much oil, the excess may be expelled through the pressurized breather.

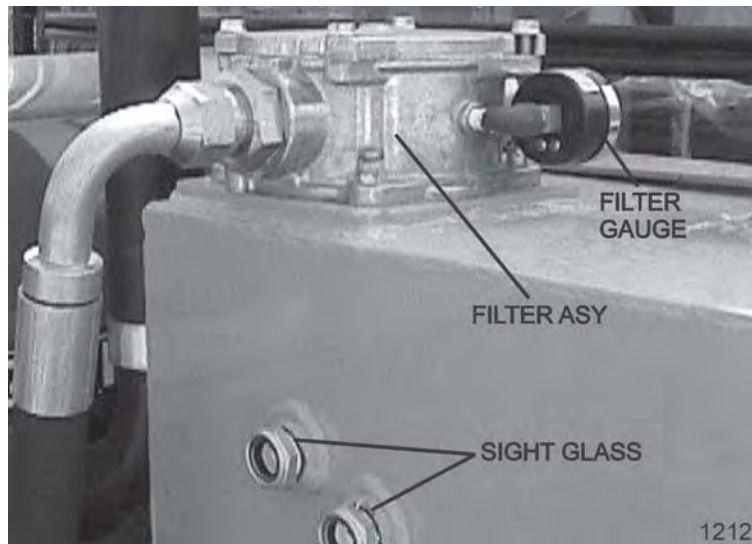

DETAILED MAINTENANCE

REPLACING IN-TANK HYDRAULIC FILTER:


Loosen the four bolts on the top cover of the filter housing. Turn cover counter-clockwise until cover is free. Remove and replace filter . Replace top cover and cover bolts in opposite order as removed.

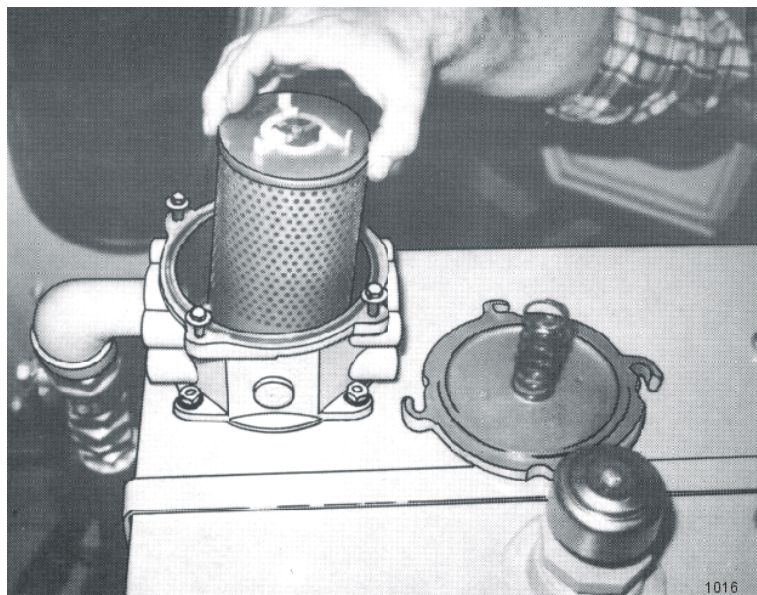

MAINTENANCE

GREASING CUTTER SHAFT - FLAIL MOWERS

Locate grease zerks on each end of cutter shaft(s), these are located on the bearing cover. Normal conditions require one pump in each bearing, using Lithium-Complex Extreme Pressure grease conforming to NLGI2-ISO 320 specifications. This is to be done with a standard grease gun daily or at **8 hour intervals**. **CAUTION: Over greasing may cause premature seal failure.**

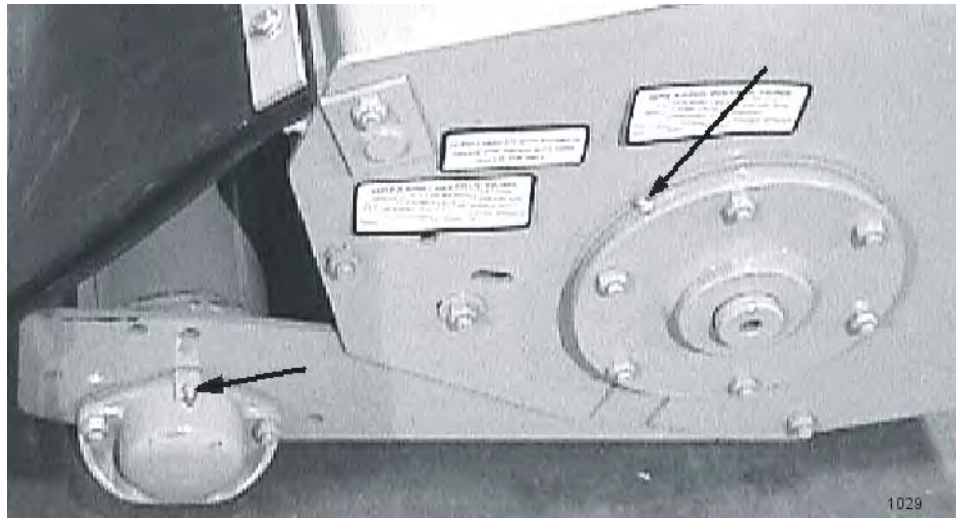

GREASING GROUND ROLLER SHAFT - FLAIL


Locate grease zerks on each end of roller tube at lower rear of head. Normal conditions require one or two pumps in each bearing, using Lithium-Complex Extreme Pressure grease conforming to NLGI2-ISO 320 specifications. This is to be done with a manual grease gun daily or at **8 hour intervals**. **CAUTION: Over greasing may cause premature seal failure.**



MAINTENANCE


GREASING PIVOT POINTS - BOOM AND SWIVEL

Locate grease zerks (8) on deck pivot assembly, (2) on deck end of secondary boom, (2) at main / secondary boom joint, and (2) at swivel end of main boom. Inject Lithium-Complex Extreme Pressure grease conforming to NLGI2-ISO 320 specifications until grease begins to protrude from ends every 8 hours or daily .

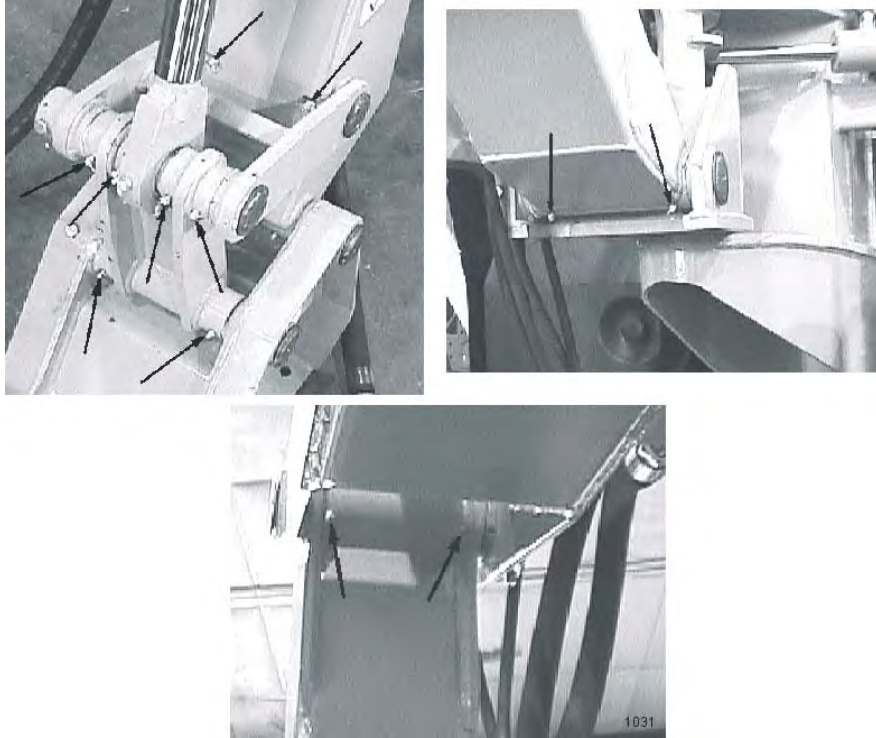

GREASING PUMP DRIVE SHAFT COUPLER



With engine stopped, ensure drive shaft alignment by grasping coupler and sliding back and forth. Coupler should slide freely with approximately 1/8" of end play. If coupler does not slide freely , inspect for loose pump mount bolts, or damaged or loose crank shaft adapter. Inject Lithium-Complex Extreme Pressure grease conforming to NLGI2-ISO 320 specifications into coupler until grease begins to protrude from ends. Grease daily or every 10 hours. Do not over grease.

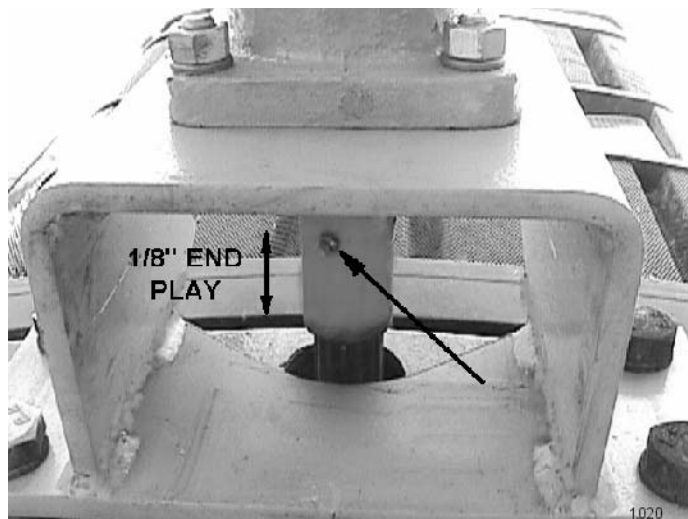

MAINTENANCE

DRIVE SHAFT YOKE, U-JOINT & STUB SHAFT

With engine stopped, inject Lithium-Complex extreme pressure grease conforming to NLGI2-ISO 320 specifications into universal joints and slip yoke until grease appears at the seal. Grease daily or every 10 hours.

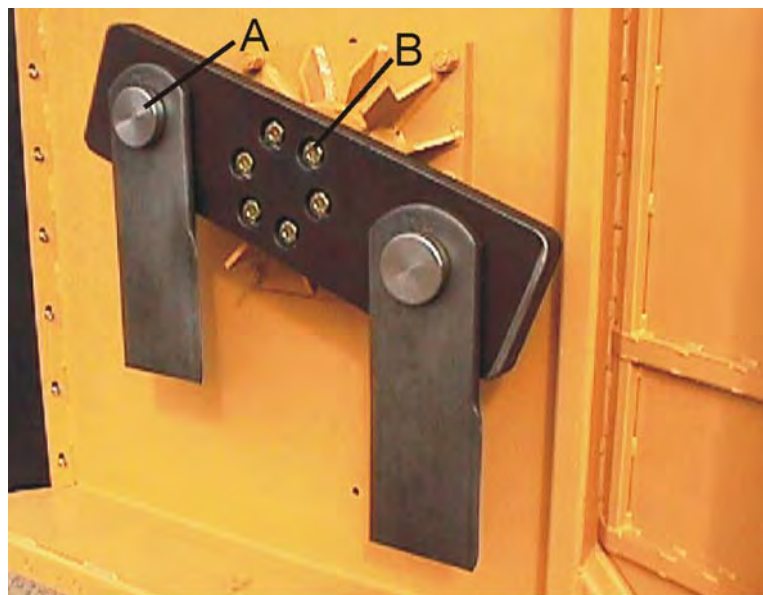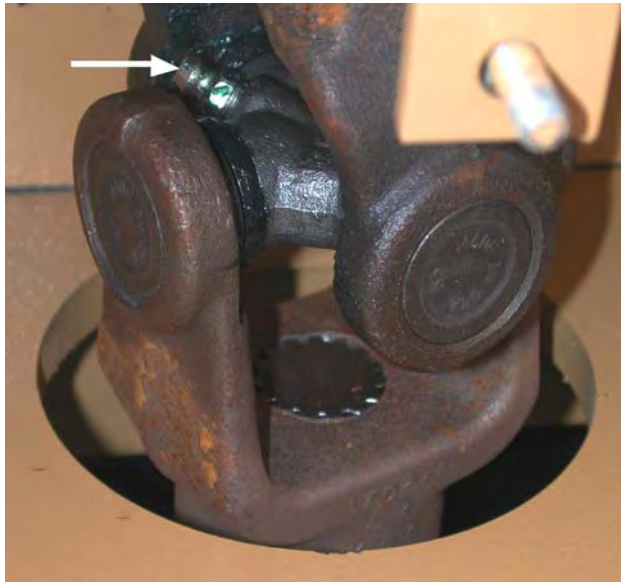

1300

TIGHTENING KNIFE AND BAR BOLTS - ROTARY MOWERS

Knife mounting bolts (A):

Torque to 2000 Ft. Lbs., recheck daily.

Blade bar mounting bolts (B):

Torque to 369 Ft. Lbs. lubricated (Loctite 271), recheck daily.

Torque to 418 Ft. Lbs. dry, recheck daily.


MAINTENANCE

TIGHTENING SPINDLE HOUSING BOLTS

Torque Spindle mounting bolts (6):


315 Ft. Lbs. lubricated (loctite 271), recheck daily.

357 Ft. Lbs. dry, recheck daily.

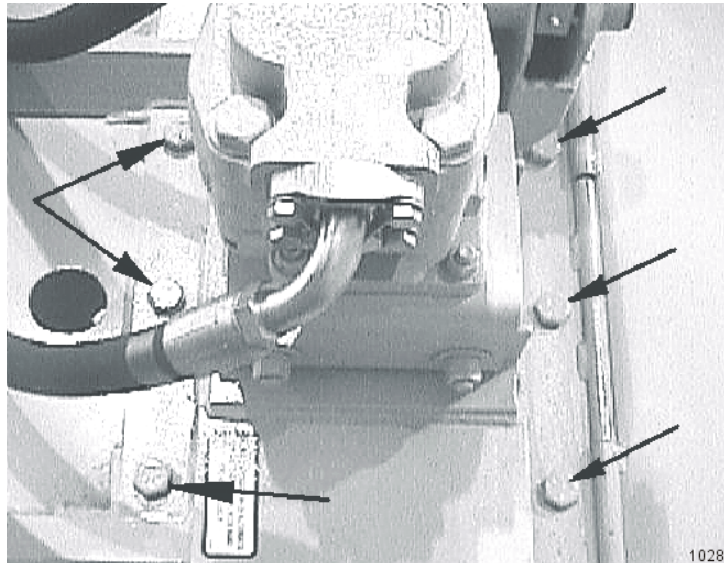

GREASING SPINDLE


Locate grease fitting on inside of deck housing. Inject Tiger Spindle Lubricant, part number 06540000 into spindle housing. Fill with lubricant until lubricant weeps out of the top spindle seal. Lubricate spindle weekly or every 40 hours of use.

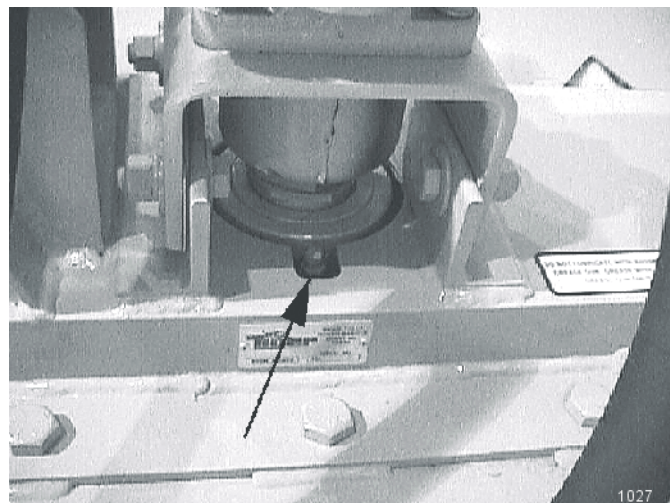

MAINTENANCE



ADJUSTING / CHECKING BELT TENSION

To adjust belt tension or replace belts on flail cutter head, remove four bolts that secure belt cover and remove cover. Loosen the two bolts on the motor mounting plate. Adjust the motor assy. up and down to proper tension and retighten mounting plate bolts. (NOTE: Location of adjustment nuts may vary on flail cutter heads.)
Be sure to replace the belt cover BEFORE operating mower!

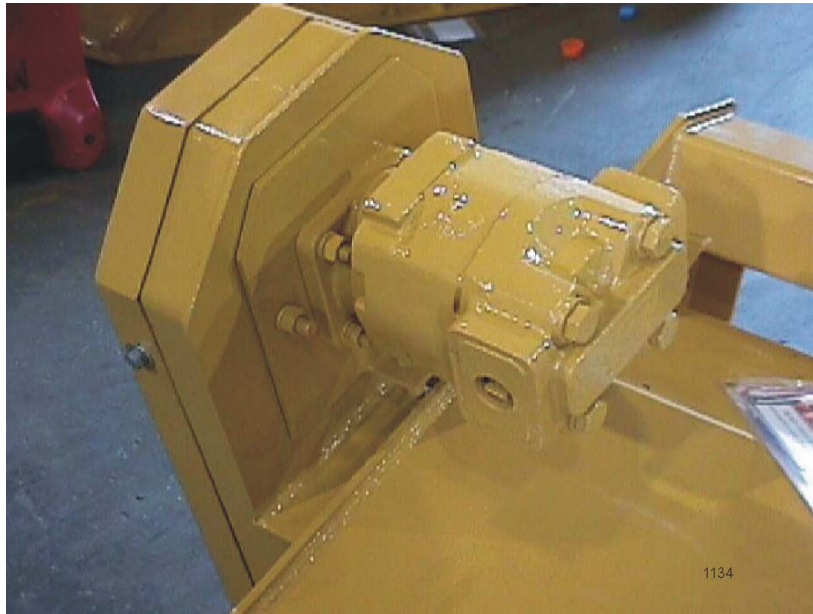

GREASING THE BOOM SWIVEL


Locate the zerks on the main swivel boss (2), main boom pivot boss (2) and on both ends of the boom swivel cylinder. Inject Lithium-Complex Extreme Pressure grease conforming to NLGI2-ISO 320 specifications until grease begins to protrude from ends.

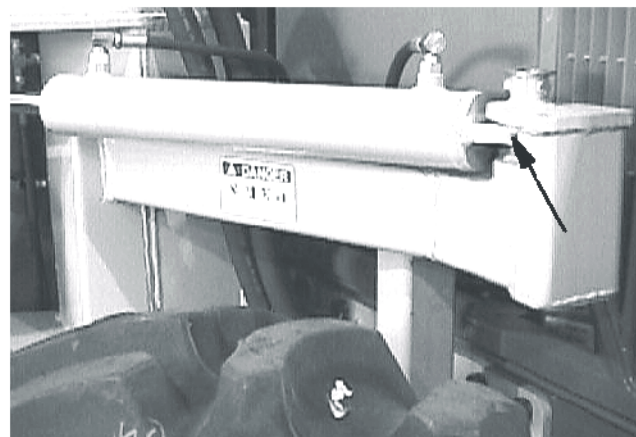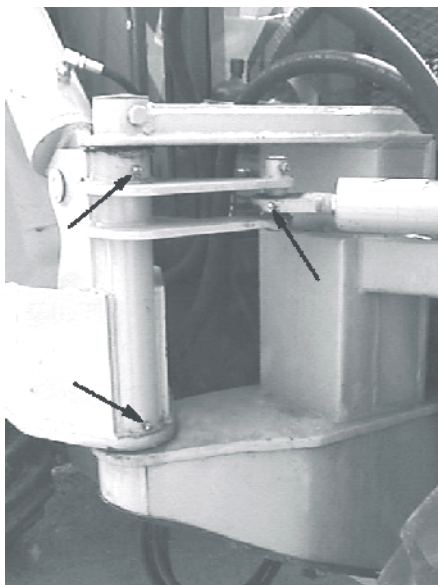

MAINTENANCE


GREASING BOOM CYLINDER(S) PIVOT POINTS

Locate the zerk on the butt end tang of cylinder and on rod end tang. Inject Lithium-Complex Extreme Pressure grease conforming to NLGI2-ISO 320 specifications until grease begins to protrude from ends. This procedure is to be used on the main boom cylinder, secondary boom cylinder, deck pivot, and swivel cylinders daily or at 8 hour intervals.

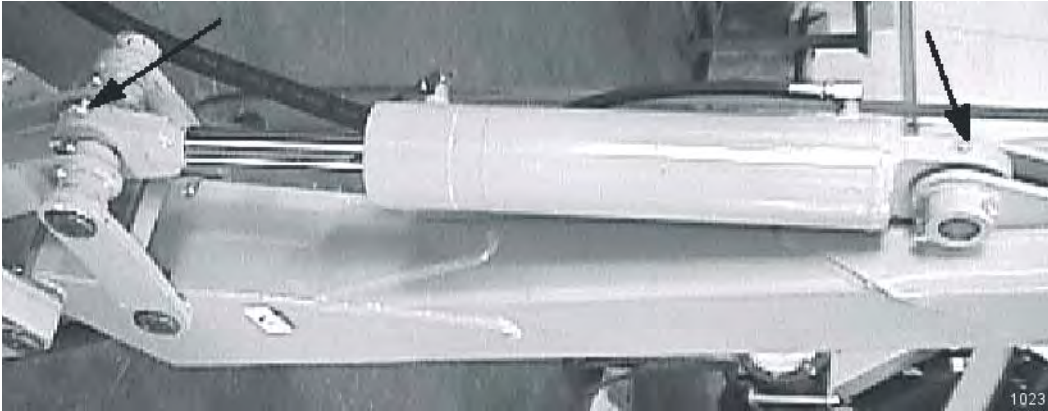

BALL VALVES

The ball valve at the hydraulic reservoir may need to be closed during certain maintenance or repair procedures. **THE BALL VALVES MUST BE OPEN (handle parallel with valve) WHEN TRACT OR IS RESTARTED OR PUMP IS COUPLED TO MOTOR OR P.T.O. !** Failure to do so may result in component failure!

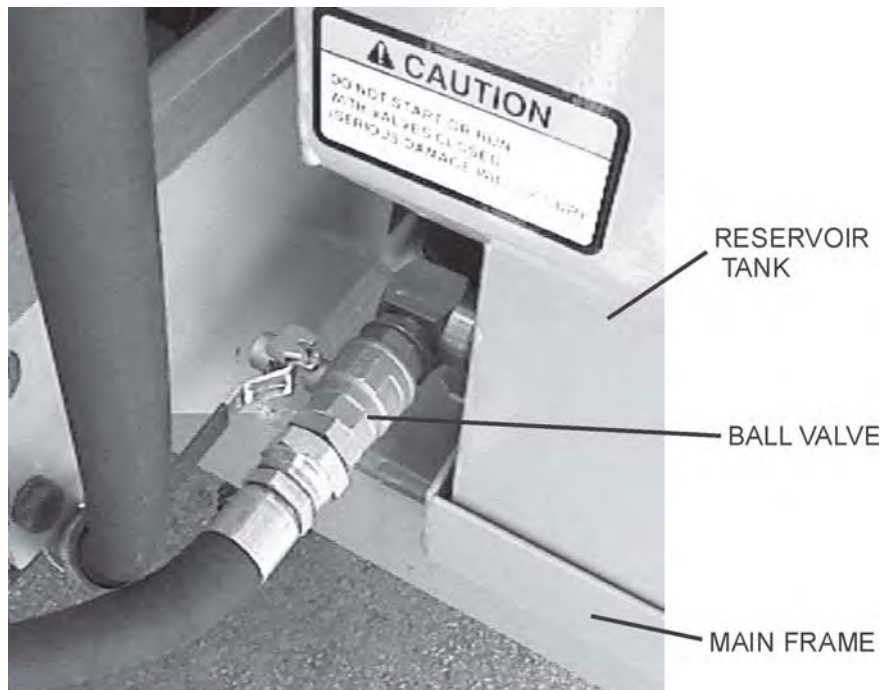

MAINTENANCE

REPLACING HAMMER KNIVES

If knives are damaged or badly worn, they will need to be replaced as a set. Replacing a single knife can cause severe vibration and possible damage to the mower. The knives should not be welded on for any reason. When replacing knives, replace bushings, bolts and locknuts.

Apply Loctite "271" to threads and install the locking hex nuts so that the flat face of the nut is towards the knife. Torque the hex nut to 159 Ft. Lbs.

CAUTION!



DO NOT re-use the locking hex nuts for mounting the knives. If hex nut becomes loose, or requires removal for knife replacement or any other reason, they must be discarded and replaced with new units.

MAINTENANCE

DAILY MAINTENANCE SCHEDULE

The following services should be performed **daily** or every **8 hours** of service, following the detailed maintenance instructions in the operators manual.

_____ Pump Drive Shaft: If required with drive shaft / coupler check for end play and lubricate at zerks.

_____ Crankshaft adapter: If equipped with rubber grommets check condition, replace if missing or damaged.

_____ Pivot points: Inject grease until it appears at ends.

_____ Hydraulic fittings: Check for leaks with paper or cardboard. Tighten fittings or replace hoses immediately.

_____ Knives: Inspect for missing or damaged knives, change (only complete sets) as needed.

_____ Knife Bolts: Check / Torque to 2,000 Ft Lb.

_____ Blade Bar / Spindle Bolts: Check / Torque to 418 ft. lbs. dry.

_____ Spindle housing to deck: Check / Torque to 357 ft. lbs. dry.

_____ Belts: Check / Tighten / Replace belts as needed.

_____ Main Frame / Deck: Unless otherwise specified retorque bolts according to torque specifications in this section.

_____ Hydraulic Fluid Level: Add, if required, per fluid recommendations.

_____ Rear Flail Drive, Bearing Flange and Shaft Couplers:
Grease as instructed in the detailed (if applicable) maintenance section.

_____ Cutter Shaft and Ground Roller: Grease as instructed in the detailed maintenance section.

Service performed by: _____ Date: ____ / ____ / ____ Hour Meter: _____

Maintenance Section

** This page may be copied and used as part of the daily maintenance routine.

MAINTENANCE

JD 72-7520 - SABER BOOM MOWER

PARTS SECTION

PARTS ORDERING GUIDE

The following instructions are offered to help eliminate needless delay and error in processing purchase orders for the equipment in this manual.

1. The Parts Section is prepared in logical sequence and grouping of parts that belong to the basic machine featured in this manual. Part Numbers and Descriptions are given to help locate the parts and quantities required.

2. The Purchase Order must indicate the **Name and Address** of the person or organization ordering the parts, **who should be charged**, and if possible, the **serial number of the machine** for which the parts are being ordered.

3. The purchase order must clearly list the **quantity of each part**, the complete and correct **part number**, and the basic **name of the part**.

4. The manufacturer reserves the right to substitute parts where applicable.

5. Some parts may be unlisted items which are special production items not normally stocked and are subject to special handling. Request a quotation for such parts before sending a purchase order.

6. The manufacturer reserves the right to change prices without prior notice.

NOTE: When ordering replacement decals, refer to the part numbers and descriptions listed in the safety section in the front of this manual.



1000

For maximum safety and to guarantee optimum product reliability, always use genuine **Tiger** replacement parts. The use of inferior replacement parts may cause premature or catastrophic failure which could result in serious injury or death.


Direct any questions regarding parts to:

Tiger Corporation
3301 N. Louise Ave.
Sioux Falls, SD 57107
1-800-843-6849
1-605-336-7900

PARTS SECTION TABLE OF CONTENTS

SECTION	PAGE
TRACTOR SPECIFIC PARTS:	
TRACTOR MOUNT KIT – MAIN FRAME	5-4
TRACTOR MOUNT KIT – BOOM REST	5-6
SABER MB BOOM REST	5-8
SABER XB BOOM REST	5-10
TRACTOR MOUNT KIT - BRAKE VALVE HYD.	5-12
TRACTOR MOUNT KIT – BOOM SWIVEL	5-14
LIFT VALVE MOUNTING	5-16
JOYSTICK & SWITCHBOX MOUNTING	5-18
PUMP DRIVESHAFT ASSEMBLY (34999)	5-20
SOLENOID BRAKE VALVE	5-21
END COVER	5-23
WHEEL WEIGHT	5-24
LEXAN WINDOW	5-25
POLYCARBONATE SAFETY WINDOW	5-26
SAFETY LIGHT ASSEMBLY	5-27

TRACTOR MOUNT KIT - MAIN FRAME

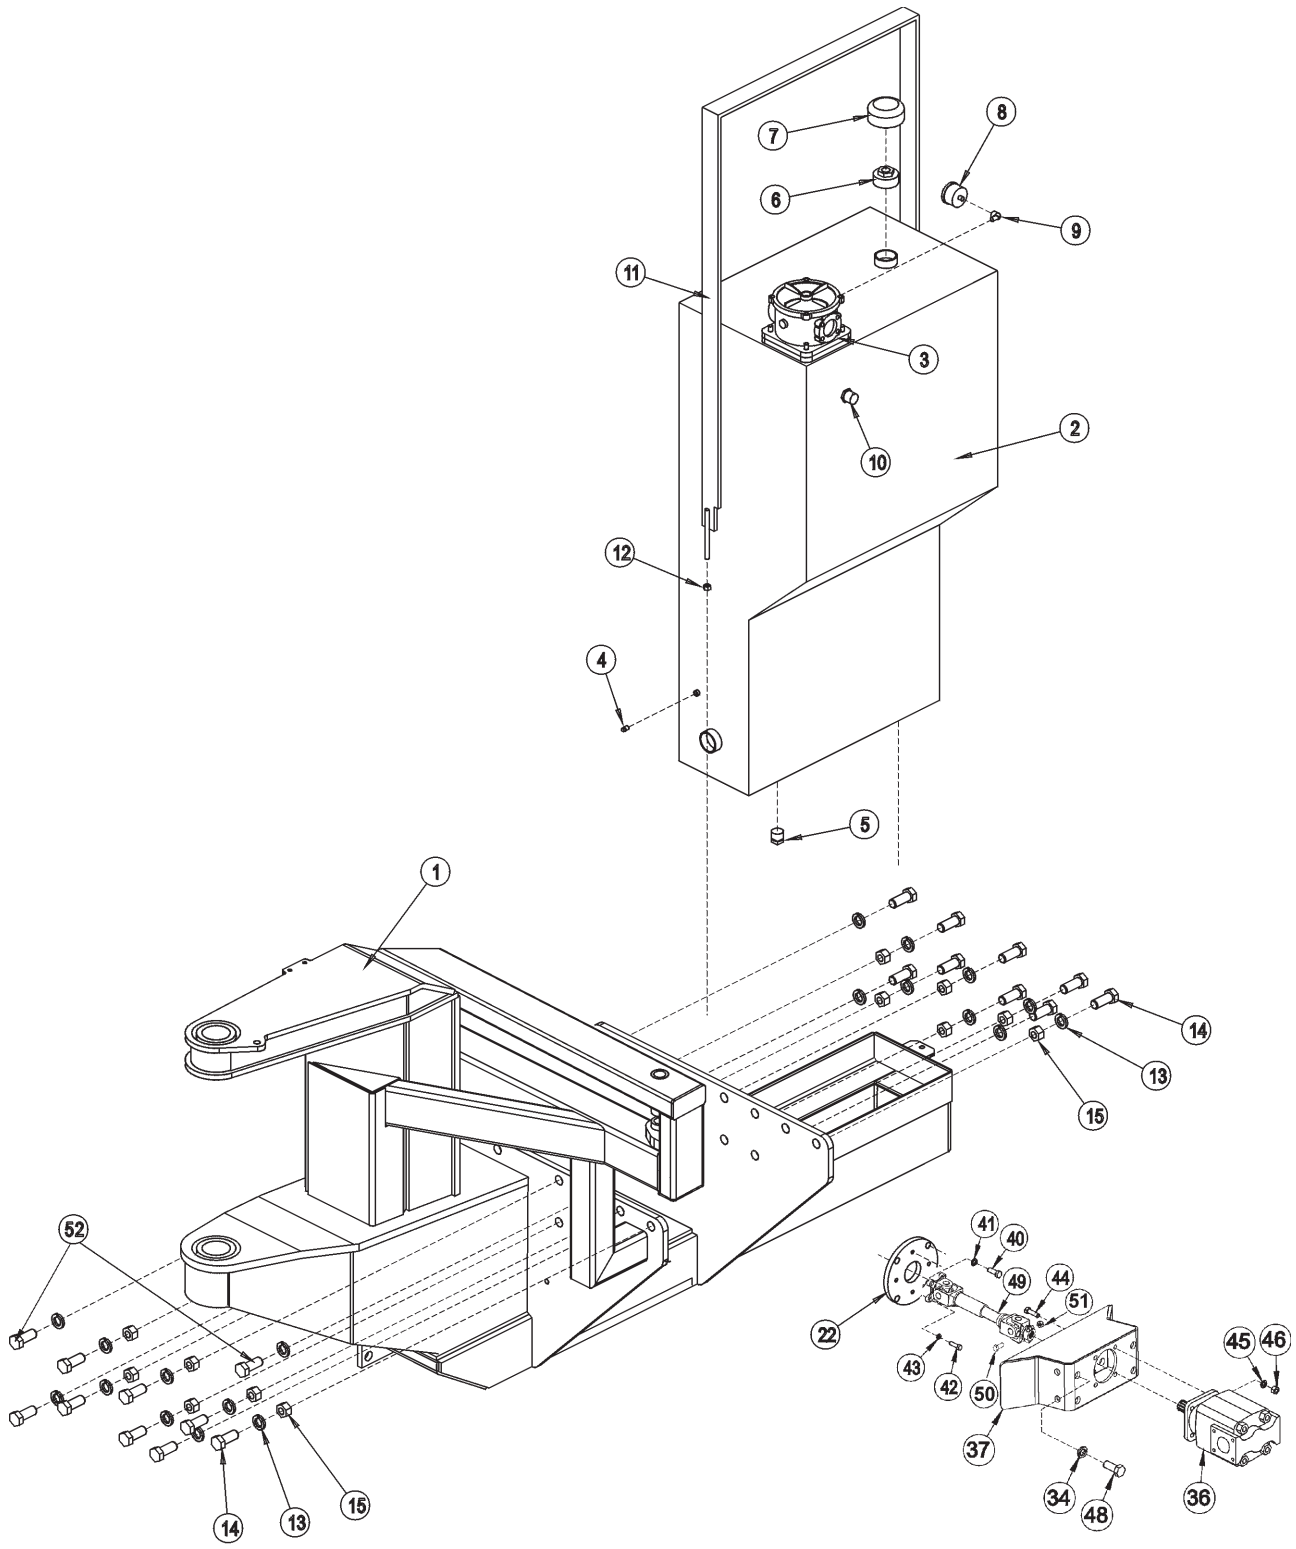


06100912 MAIN FRAME

TRACTOR MOUNT KIT - MAIN FRAME

ITEM	PART NO.	QTY.	DESCRIPTION
1	34804 28193	1 AVAIL.	MAIN FRAME RESERVOIR TANK ASSY.
2	34169	1	RESERVOIR TANK
3	34066	1	IN-TANK FILTER ASSY.
4	6T4197	1	PIPE PLUG
5	6T4200	1	PIPE PLUG
6	33700	1	REDUCER BUSHING
7	31004	1	TANK BREATHER
8	6T0649	1	OIL PRESSURE GAUGE
9	TF4888	1	STREET ELBOW
10	6T1209	2	TANK SIGHT GLASS
11	28191B	1	TANK STRAP
12	21677	2	NYLOCK NUT - 3/8"
13	24881	43	LOCKWASHER - 20MM
14	31731	21	CAPSCREW - 20MM X 50MM
15	31722	22	HEX NUT - 20MM
22	34998	1	CRANKSHAFT ADAPTER SPACER
36	23152	1	HYDRAULIC PUMP
37	34993	1	PUMP MOUNTING BRACKET
40	23113	4	CAPSCREW - 10MM X 30MM
41	32691	4	LOCKWASHER - 10MM
42	21680	4	CAPSCREW - 7/16" X 1 1/4" NC
43	21989	4	LOCKWASHER - 7/16"
44	21732	4	CAPSCREW - 1/2" X 1-3/4" NC
45	21990	4	LOCKWASHER - 1/2"
46	21725	4	HEX NUT - 1/2"
48	24860	4	CAPSCREW - 20MM X 40MM
49	34999	1	DRIVE SHAFT
50	21658	1	CAPSCREW 7/16" X 2"
51	34848	1	NYLOCK NUT 7/16" NF
52	27281	2	CAPSCREW - 20MM X 60MM


BOOM REST - SABER

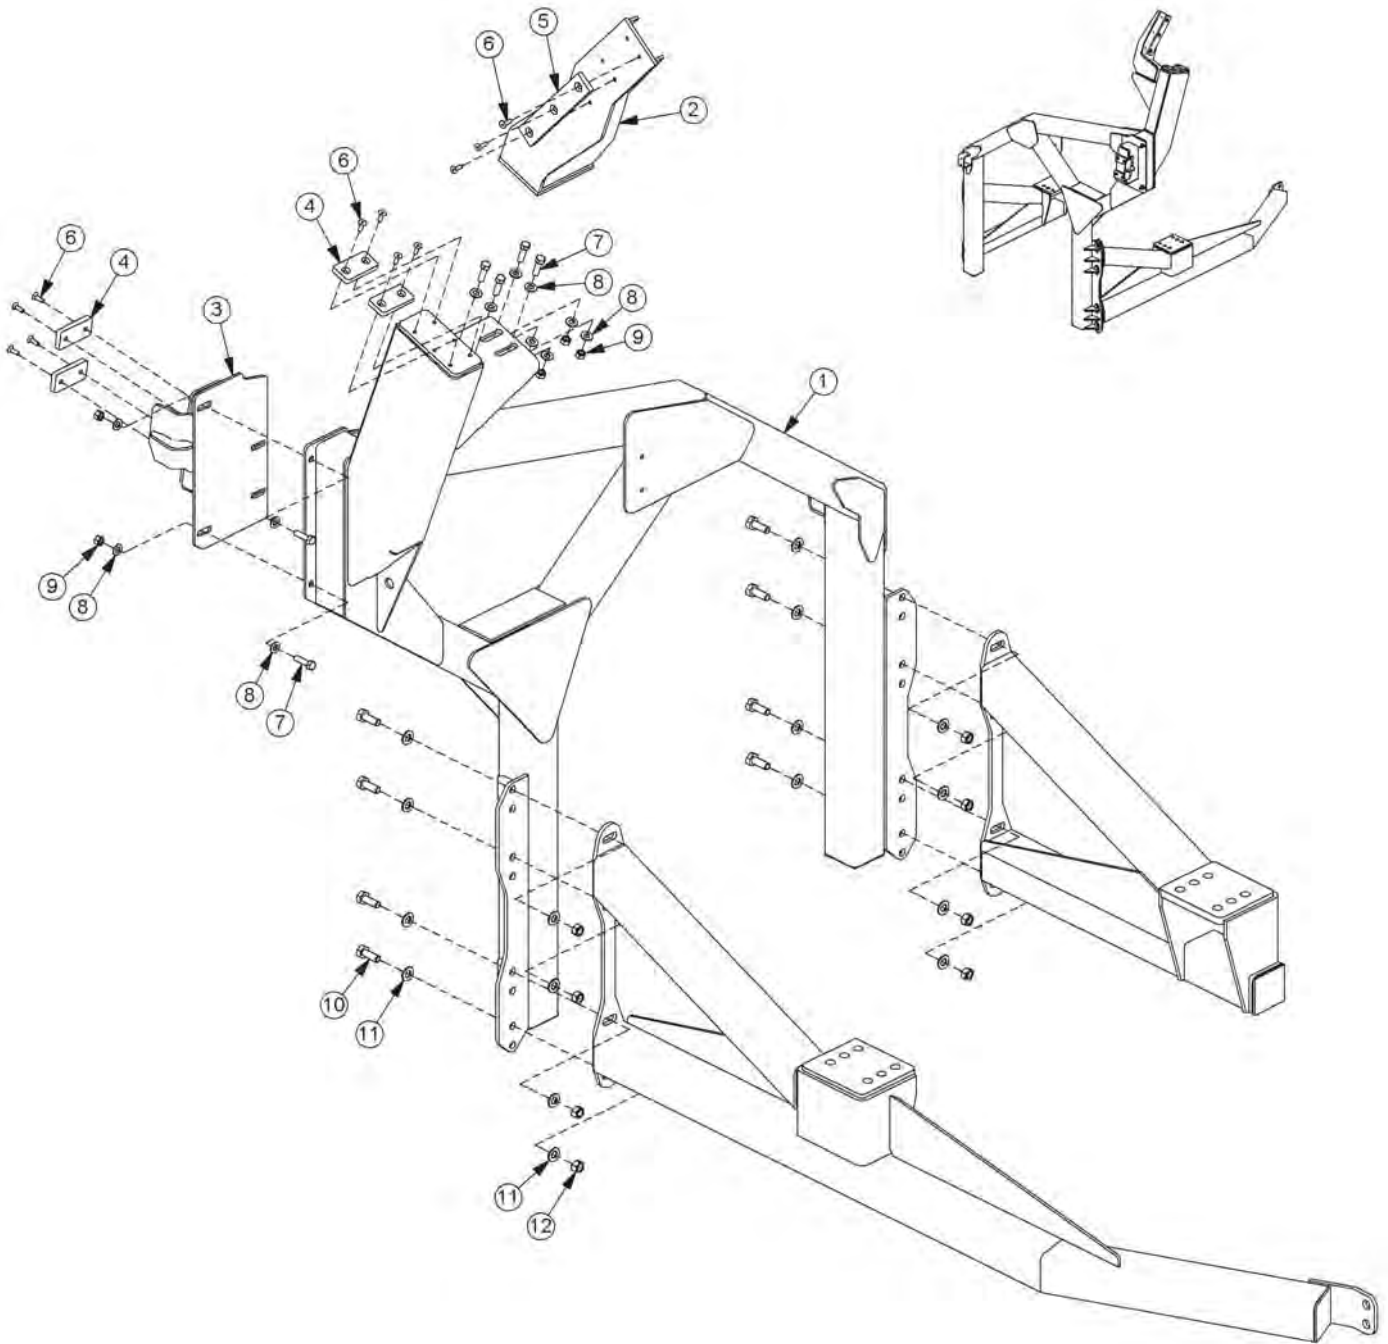

BOOM REST - SABER

ITEM	PART NO.	QTY.	DESCRIPTION
1	06310071	1	BOOMREST,JD,SBR
2	06310072	1	STOP,UPPER
3	06310073	1	ADAPTER,LWR,JD,SBR
4	06520078	4	WEARPAD,SHORT,BOOMREST
5	32686	1	WEARPAD,LONG,BOOMREST
6	28734	11	CAPSCREW,FLT/SKT HD,3/8X1NC
7	6T1027	8	CAPSCREW,1/2 x 1-3/4,NC,GR 8
8	06533004	16	FLATWASHER,1/2,SAE,GR 8
9	31580	8	HEX NUT,1/2,NC,GR 8
10	21782	8	CAPSCREW,5/8 x 1-3/4,NC
11	33764	16	FLATWASHER,5/8,SAE,GR 8
12	21777	8	NYLOCK NUT,5/8,NC


BOOM REST - SABER MB

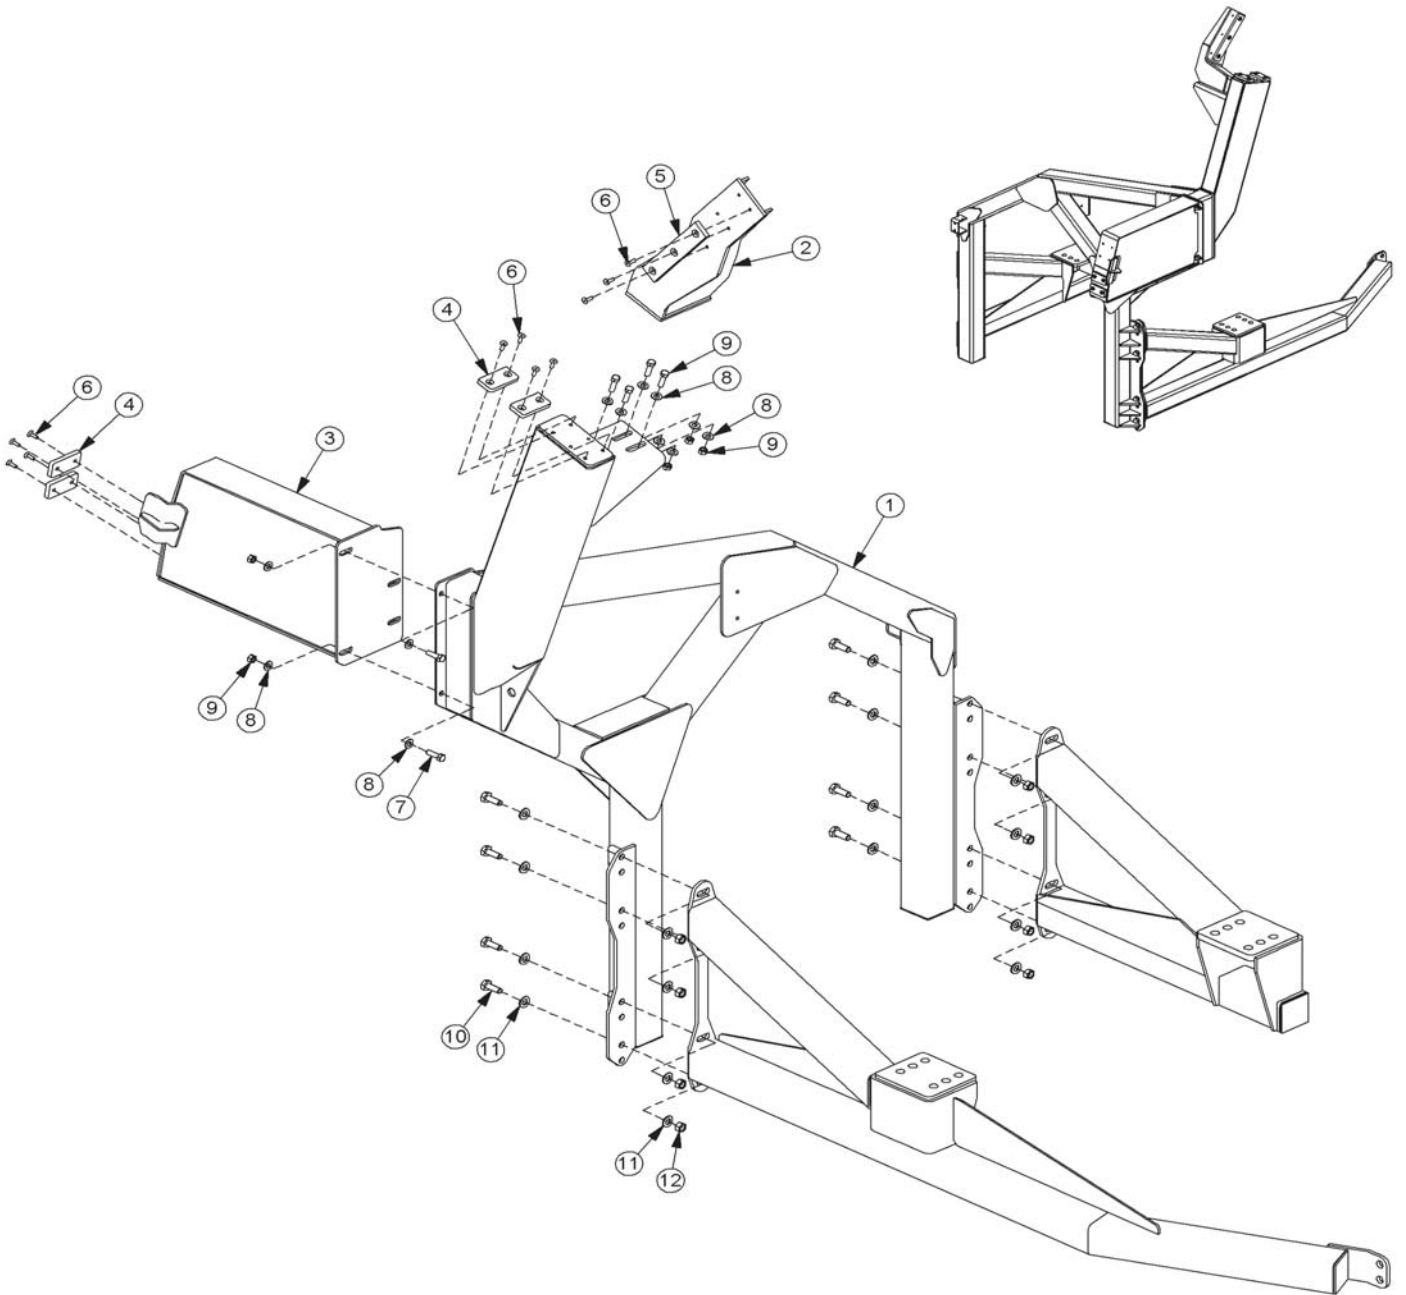

BOOM REST - SABER MB

ITEM	PART NO.	QTY.	DESCRIPTION
1	06310092	1	BOOMREST,JD,SBR MB
2	06310072	1	STOP,UPPER
3	06310060	1	ADAPTER,LWR,JD,SBR
4	06520078	4	WEARPAD,SHORT,BOOMREST
5	32686	1	WEARPAD,LONG,BOOMREST
6	28734	11	CAPSCREW,FLT/SKT HD,3/8X1NC
7	6T1027	8	CAPSCREW,1/2 x 1-3/4,NC,GR 8
8	06533004	16	FLATWASHER,1/2,SAE,GR 8
9	31580	8	HEX NUT,1/2,NC,GR 8
10	21782	8	CAPSCREW,5/8 x 1-3/4,NC
11	33764	16	FLATWASHER,5/8,SAE,GR 8
12	21777	8	NYLOCK NUT,5/8,NC


BOOM REST - SABER XB

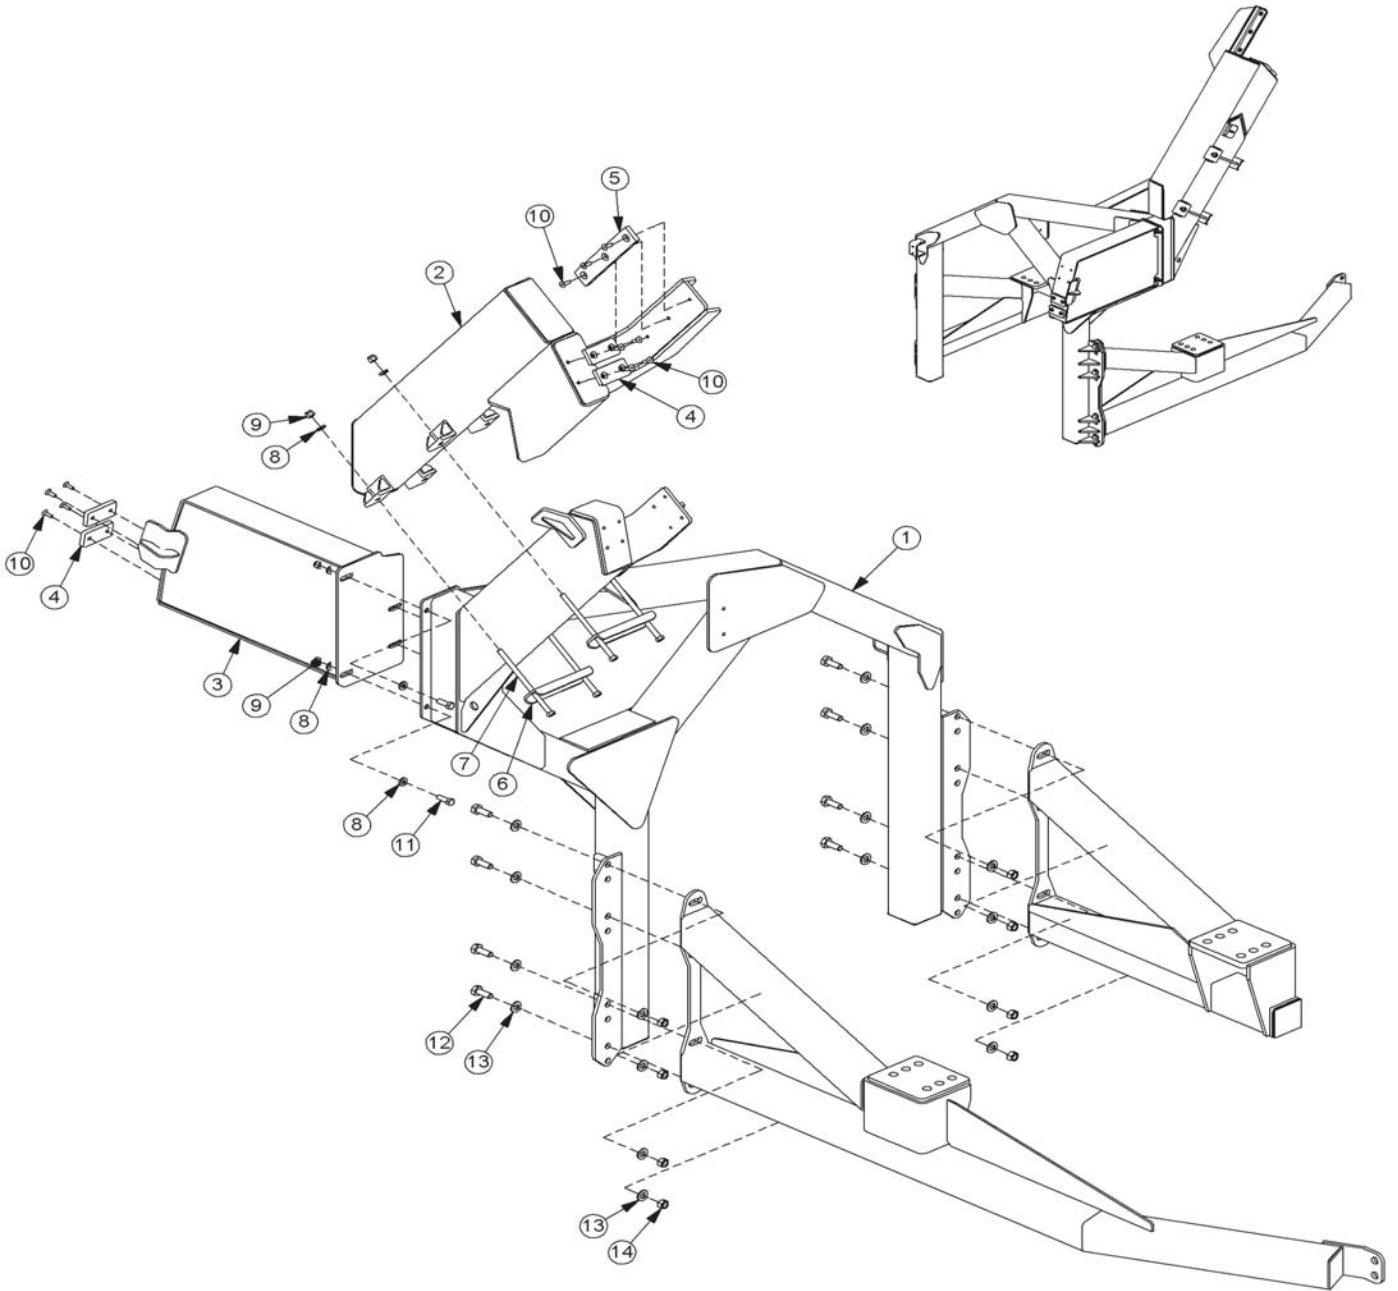

BOOM REST - SABER XB

ITEM	PART NO.	QTY.	DESCRIPTION
1	06310035	1	BOOMREST,BASE
2	06310059	1	BOOMREST,UPPER
3	06310060	1	BOOMREST,LOWER
4	06520078	4	WEARPAD,SHORT,BOOMREST
5	32686	1	WEARPAD,LONG,BOOMREST
6	06410587	2	CHANNEL,TIE DOWN
7	21747	4	CAPSCREW, 1/2 x 9,NC
8	22004	12	FLATWASHER,1/2,NARROW
9	21727	8	NYLOCK NUT,1/2
10	28734	11	CAPSCREW,FLT/SKT HD,3/8 x 1,NC
11	21731	4	CAPSCREW,1/2 x 1-1/2,NC
12	21782	8	CAPSCREW,5/8 x 1-3/4,NC
13	33764	16	FLATWASHER,5/8,SAE,GR 8
14	21777	8	NYLOCK NUT,5/8,NC

TRACTOR MOUNT KIT - BRAKE VALVE HYDRAULICS

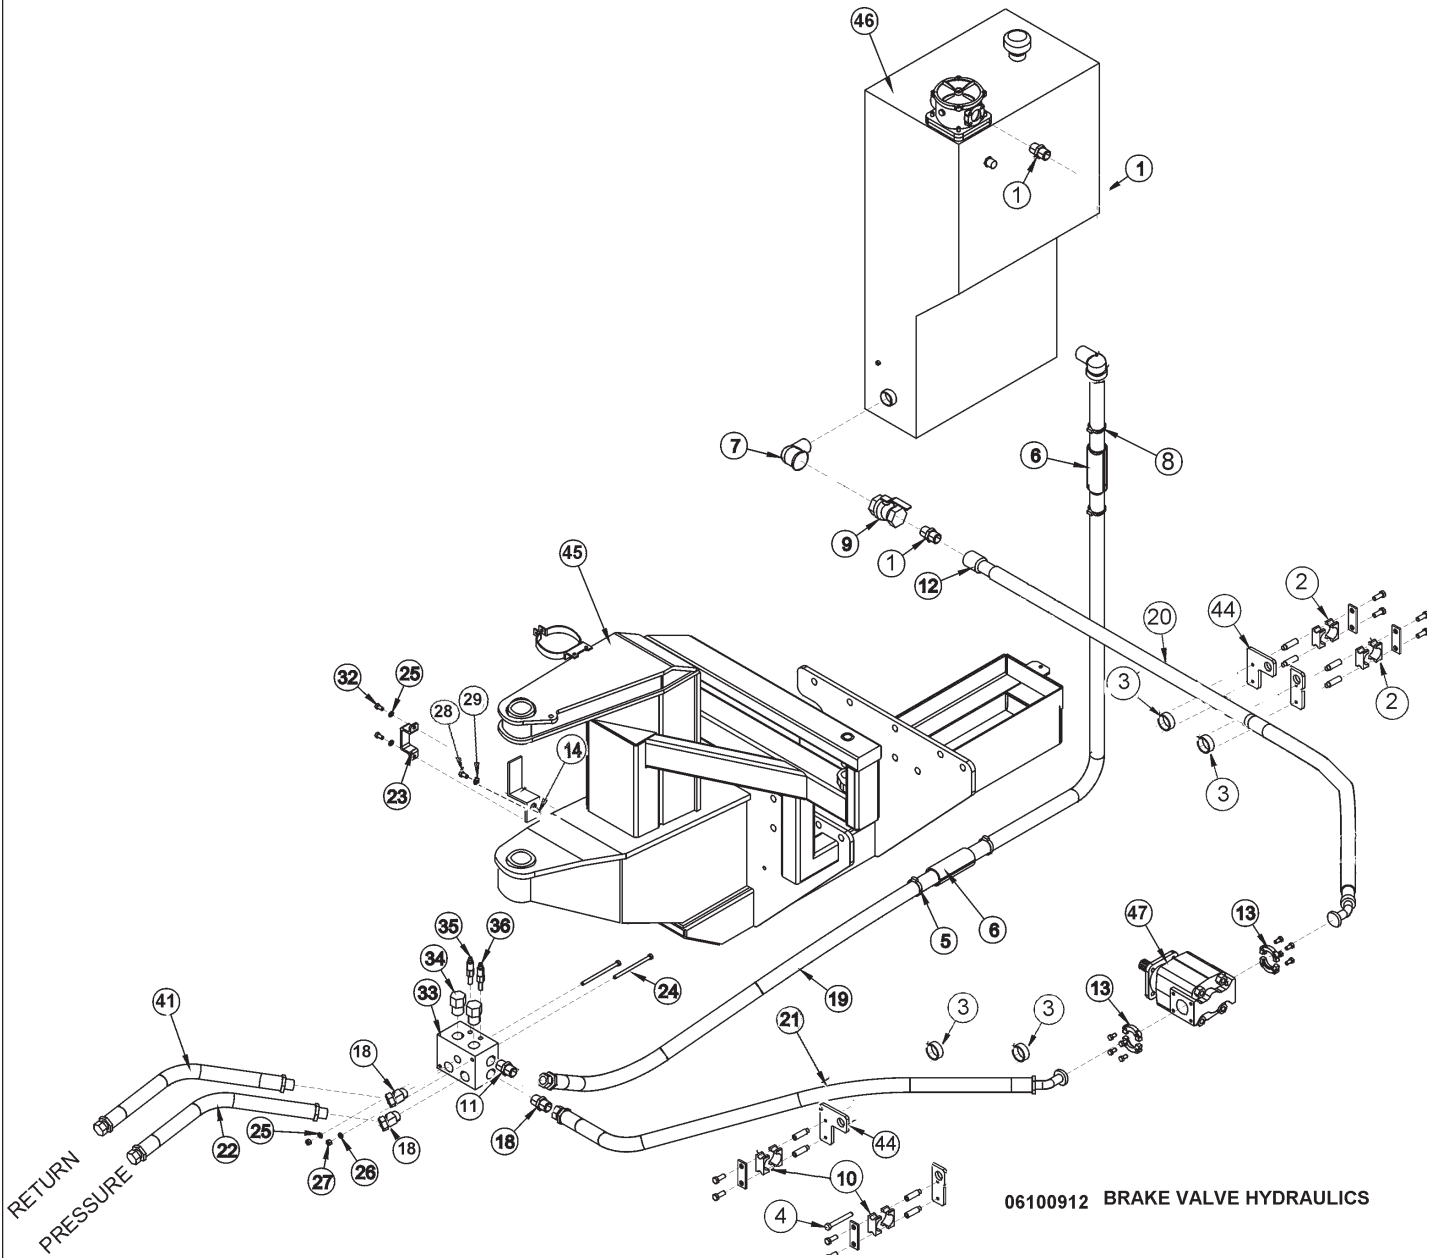


06100912 BRAKE VALVE HYDRAULICS

TRACTOR MOUNT KIT - BRAKE VALVE HYDRAULICS

ITEM	PART NO.	QTY.	DESCRIPTION
1	34067	2	NIPPLE 1-1/4 X 1-1/4"
2	34075	2	CLAMP KIT 1-1/4"
3	24849	4	SPACER 7/8 X 1-1/4"
4	30708	2	CAPSCREW 20 X 90 MM
5	6T1822	36	ZIP TIE 8"
6	6T3200	2	SPLIT HOSE SECURE WITH ZIP TIES
7	34068	1	STREET ELBOW
9	34069	1	BALL VALVE
8	6T4236	2	CLAMPHOSE # 32
10	34076	2	CLAMPS KIT 1"
11	06503000	1	ADAPTER 10RB X 1-1/4 MJ
12	6T3800	1	NIPPLE
13	TF4852	2	FLANGE KIT
14	32382	1	HOSE BRACKET - MOUNTED TO TRACTOR CASTING
18	33555	3	ADAPTER 1" MORB X 1" MJIC
19	06500008	1	HOSE, 1-1/4" X 75"
20	06506001	1	HOSE 1 1/4" X 71" SUCTION
21	06506002	1	HOSE 1" X 66"
22	06500009	1	HOSE 1" X 107"
23	32704	1	HOSE BRACKET - MOUNT TO SIDE OF MAIN FRAME
24	6T2131	2	CAPSCREW - 3/8" X 5-1/2 NC
25	21988	3	LOCKWASHER - 3/8"
26	6T2665	1	LOCKWASHER - 3/8" STAR
27	21625	2	HEX NUT - 3/8"
28	22423	1	CAPSCREW - 16MM X 50MM
29	6T2625	1	LOCKWASHER - 16MM
32	21629	2	CAPSCREW - 3/8" X 3/4"
	34116	1	BRAKE VALVE, 3500 PSI RELIEF
33	34092	1	VALVE BLOCK
34	34094	1	LOGIC ELEMENT
35	34091	1	RELIEF, 2600 PSI
36	34090	1	RELIEF, 3500 PSI
38	34096	2	RELIEF SEAL KIT (NOT SHOWN)
39	34097	1	SOLENOID SEAL KIT (NOT SHOWN)
40	34098	2	ELEMENT SEAL KIT (NOT SHOWN)
41	06500010	1	HOSE 1 X 101"
42	6T1823	24	ZIP TIE 14" (NOT SHOWN)
43	24849	4	SPACER , 7/8 ID X 1-1/4 OD X 5/8"
44	34626	2	BRACKET, TUBE CLAMP
45	*	REF.	MAIN FRAME - REFER TO MAIN FRAME PARTS
46	*	REF.	RESERVOIR TANK - REFER TO MAIN FRAME PARTS

TRACTOR MOUNT KIT - BOOM SWIVEL

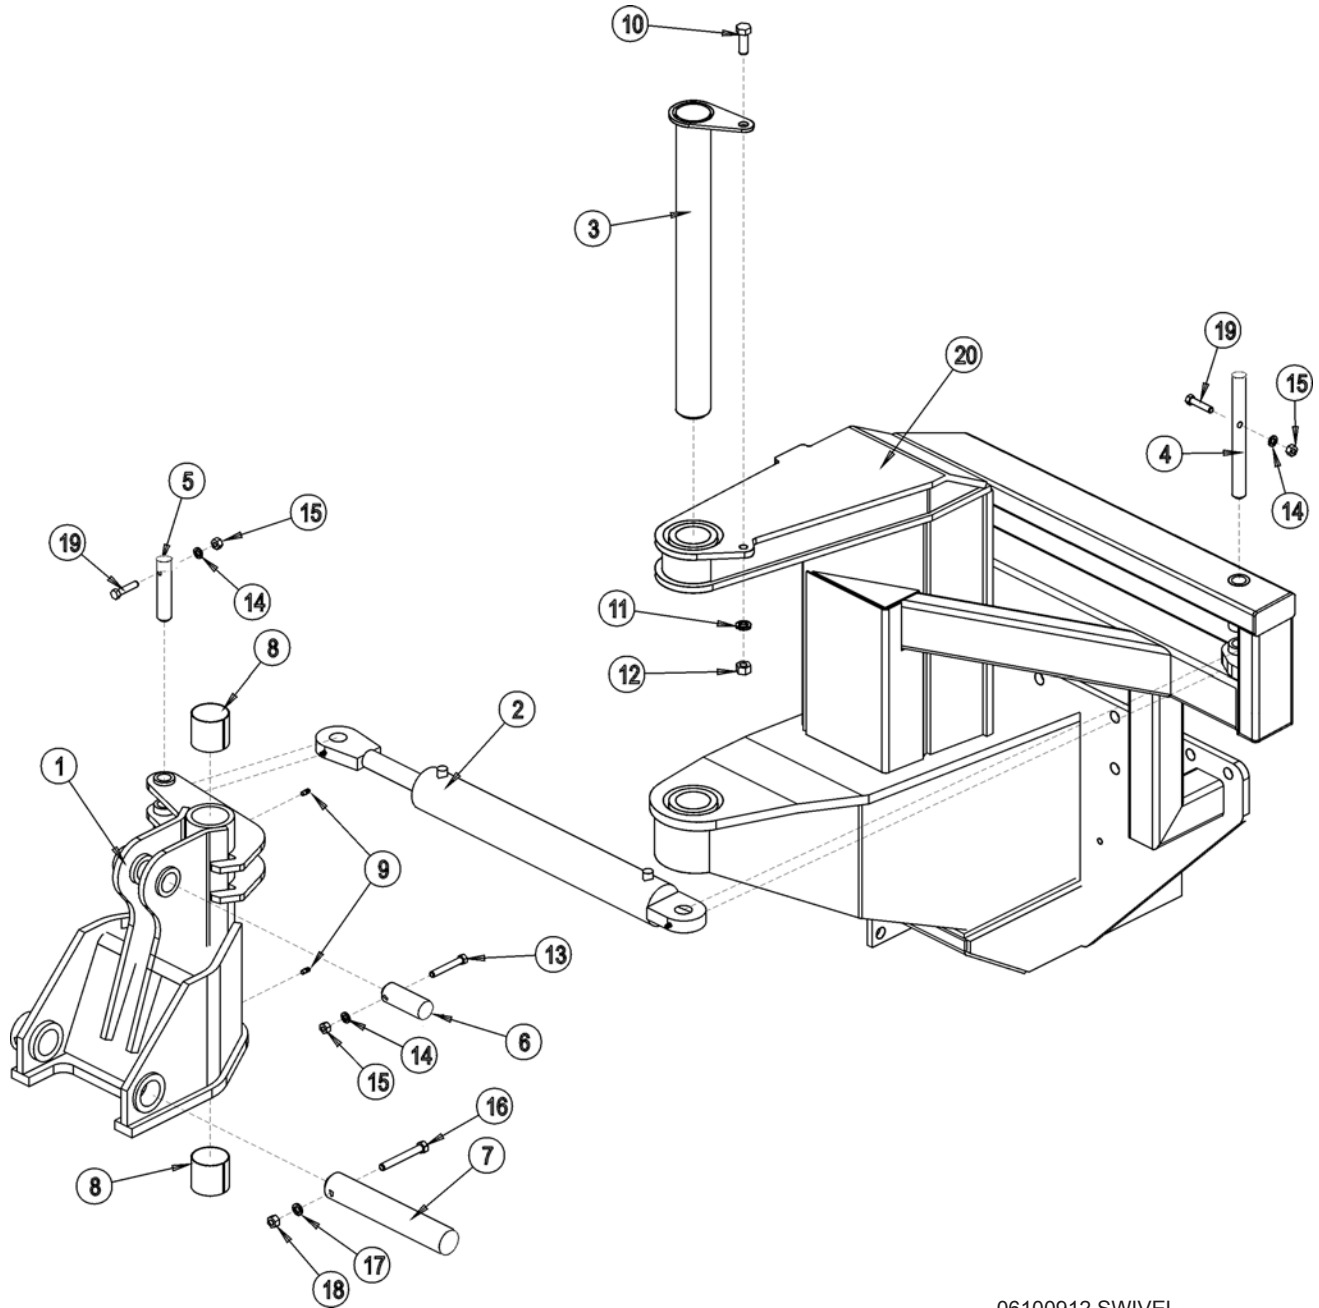


06100912 SWIVEL

TRACTOR MOUNT KIT - BOOM SWIVEL

ITEM	PART NO.	QTY.	DESCRIPTION
1	32742	1	BOOM SWIVEL W/BUSHINGS
2	06501001	1	CYLINDER
3	32381	1	PIN
4	33710	1	PIN
5	32380	1	PIN
6	32372	1	PIN
7	32378	1	PIN
8	32322	2	BEARING
9	6T3211	2	GREASE ZERK
10	21782	1	CAPSCREW - 5/8" x 1 3/4"
11	21992	1	LOCKWASHER - 5/8"
12	21775	1	HEX NUT - 5/8"
13	21687	1	CAPSCREW - 7/16" X 3"
14	21989	3	LOCKWASHER - 7/16"
15	21675	3	HEX NUT - 7/16"
16	21741	1	CAPSCREW - 1/2" X 4"
17	21990	1	LOCKWASHER - 1/2"
18	21725	1	HEX NUT - 1/2"
19	21683	2	CAPSCREW - 7/16" X 2"
20	*	REF.	MAIN FRAME - REFER TO MAIN FRAME PARTS


LIFT VALVE 5-SP DANFOSS SABER

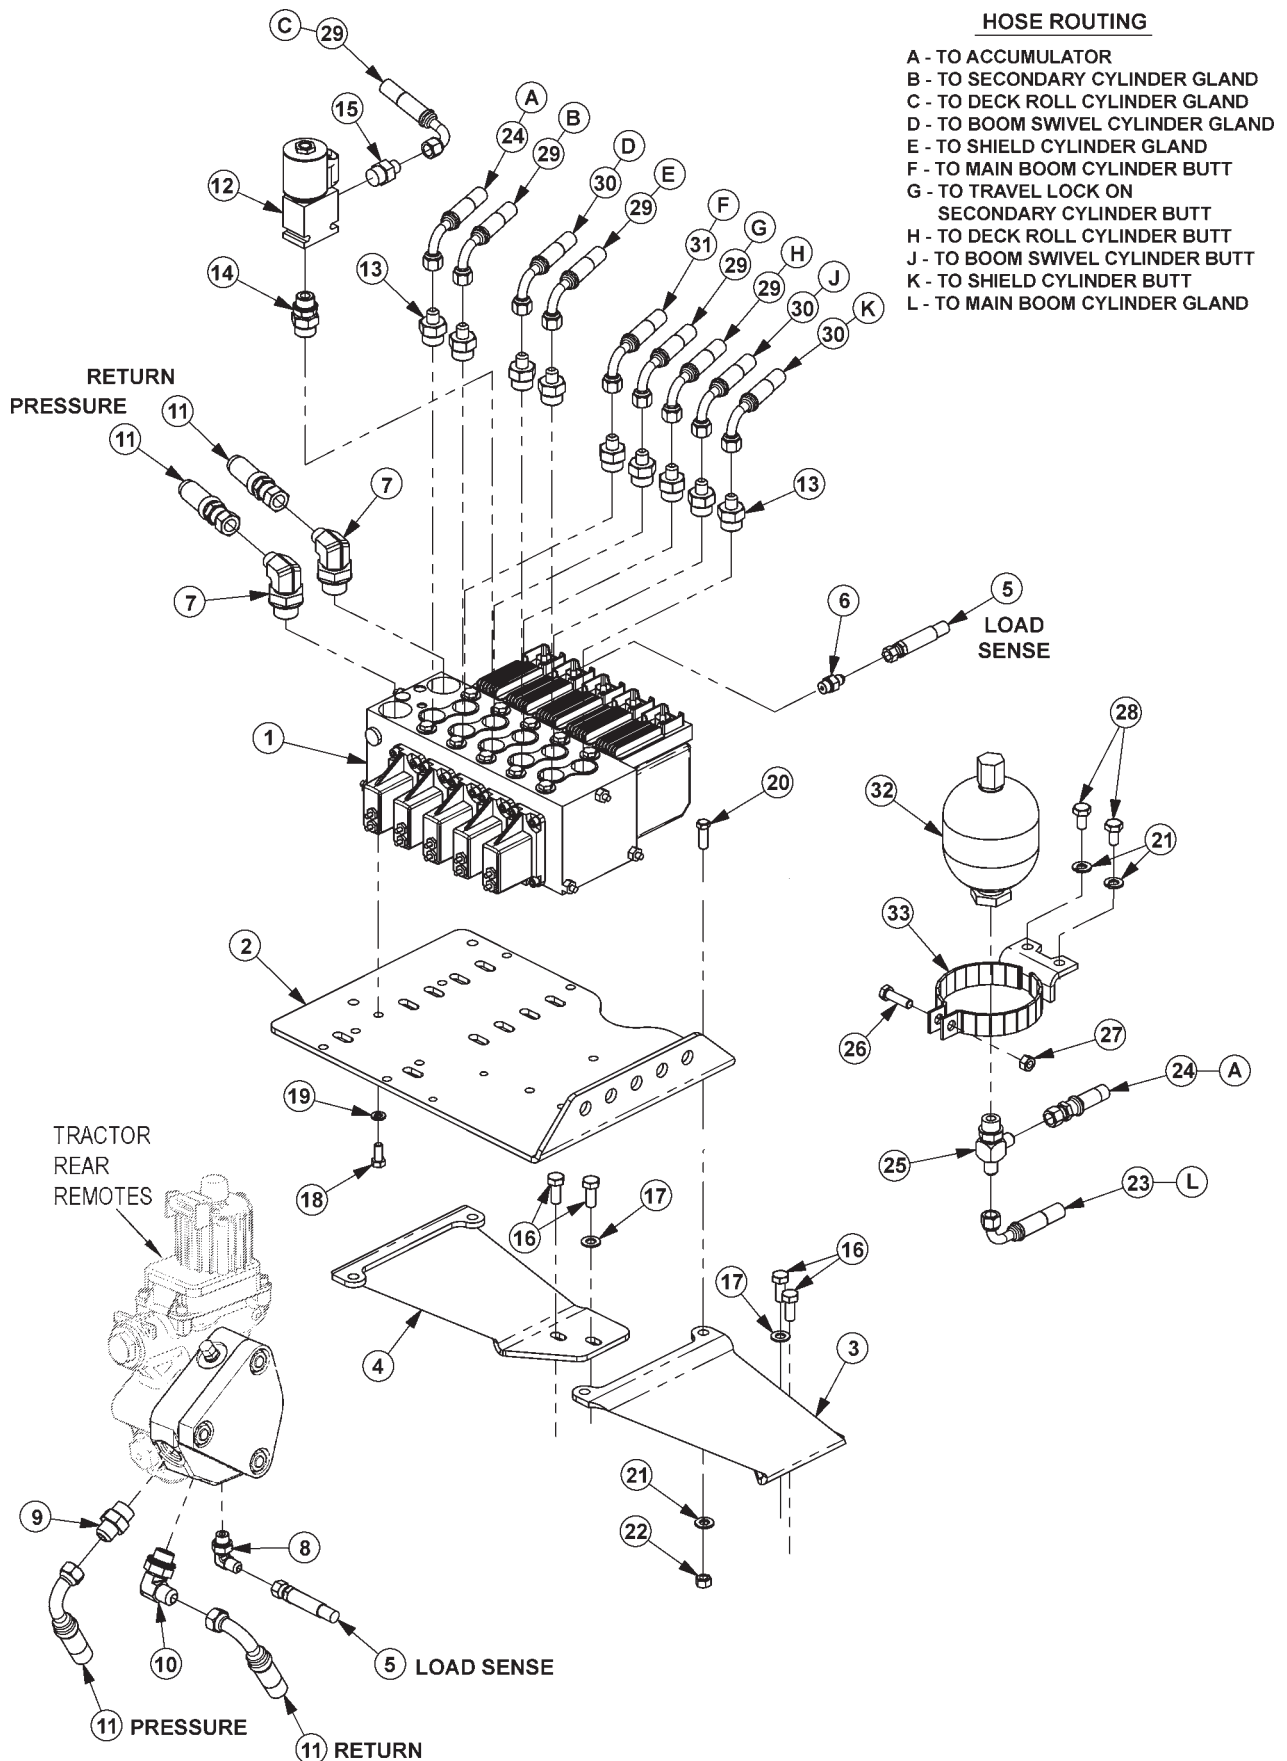

LIFT VALVE 5-SP DANFOSS SABER

ITEM	PART NO.	QTY.	DESCRIPTION
1	06502096	1	VALVE,5SP
2	34622	1	PLATE,VALVE,REAR MNT
3	34620	1	BRKT,VALVE MNT,LH
4	34621	1	BRKT,VALVE MNT,RH
5	33728	1	HOSE,1/4" X 34"(5/16FJX X 1/4FJX)
6	33419	1	ADAPTER,5/16MOR X 1/4MJ
7	33294	2	ELBOW,3/4MOR X 1/2MJIC 90
8	06503013	1	ELBOW,14mmORB X 1/2MJ
9	33463	1	ADAPTER,22mmORB X 1/2MJ
10	06503009	1	ELBOW,22MORB X 1/2MJ
11	34612	2	HOSE,1/2" X 34"(1/2FJX X 1/2FJX90)
12	31328	1	VALVE,TRV LCK
13	32807	9	ADAPTER,5/8MORB X 3/8MJ
14	31611	1	ADAPTER,5/8MORADJ X 1/2MOR
15	33271	1	ADAPTER,1/2MOR X 3/8MJ
16	27513	4	CAPSCREW,10MM X 25MM,1.5P
17	32724	2	FLATWASHER,10MM
18	21579	4	CAPSCREW,5/16 X 3/4,NC
19	21987	4	LOCKWASHER,5/16
20	21630	4	CAPSCREW,3/8 X 1,NC
21	21988	6	LOCKWASHER,3/8
22	21625	4	HEX NUT,3/8
23	06500007	1	HOSE,3/8" X 90"(3/8FJX90 X 3/8FJX90)
24	33263	1	HOSE,3/8" X 124"(FJX X FJX90)
25	06503029	1	TEE,RUN,1/2ORB X 3/8MJ X 3/8MJ
26	21631	1	CAPSCREW,3/8 X 1-1/4,NC
27	21627	1	NYLOCK NUT,3/8
28	21629	2	CAPSCREW,3/8 X 3/4,NC
29	33264	6	HOSE,3/8" X 158"(MJ X FJX90)
30	06500181	2	HOSE,3/8" X 160"(3/8FJX X 3/8FJX90)
31	06500180	1	HOSE,3/8" X 190"(3/8FJX X 3/8FJX90)
32	24300	1	ACCUMULATOR
33	23888	1	ACCUMULATOR MOUNTING BRACKET

LIFT VALVE - JOYSTICK AND SWITCH BOX

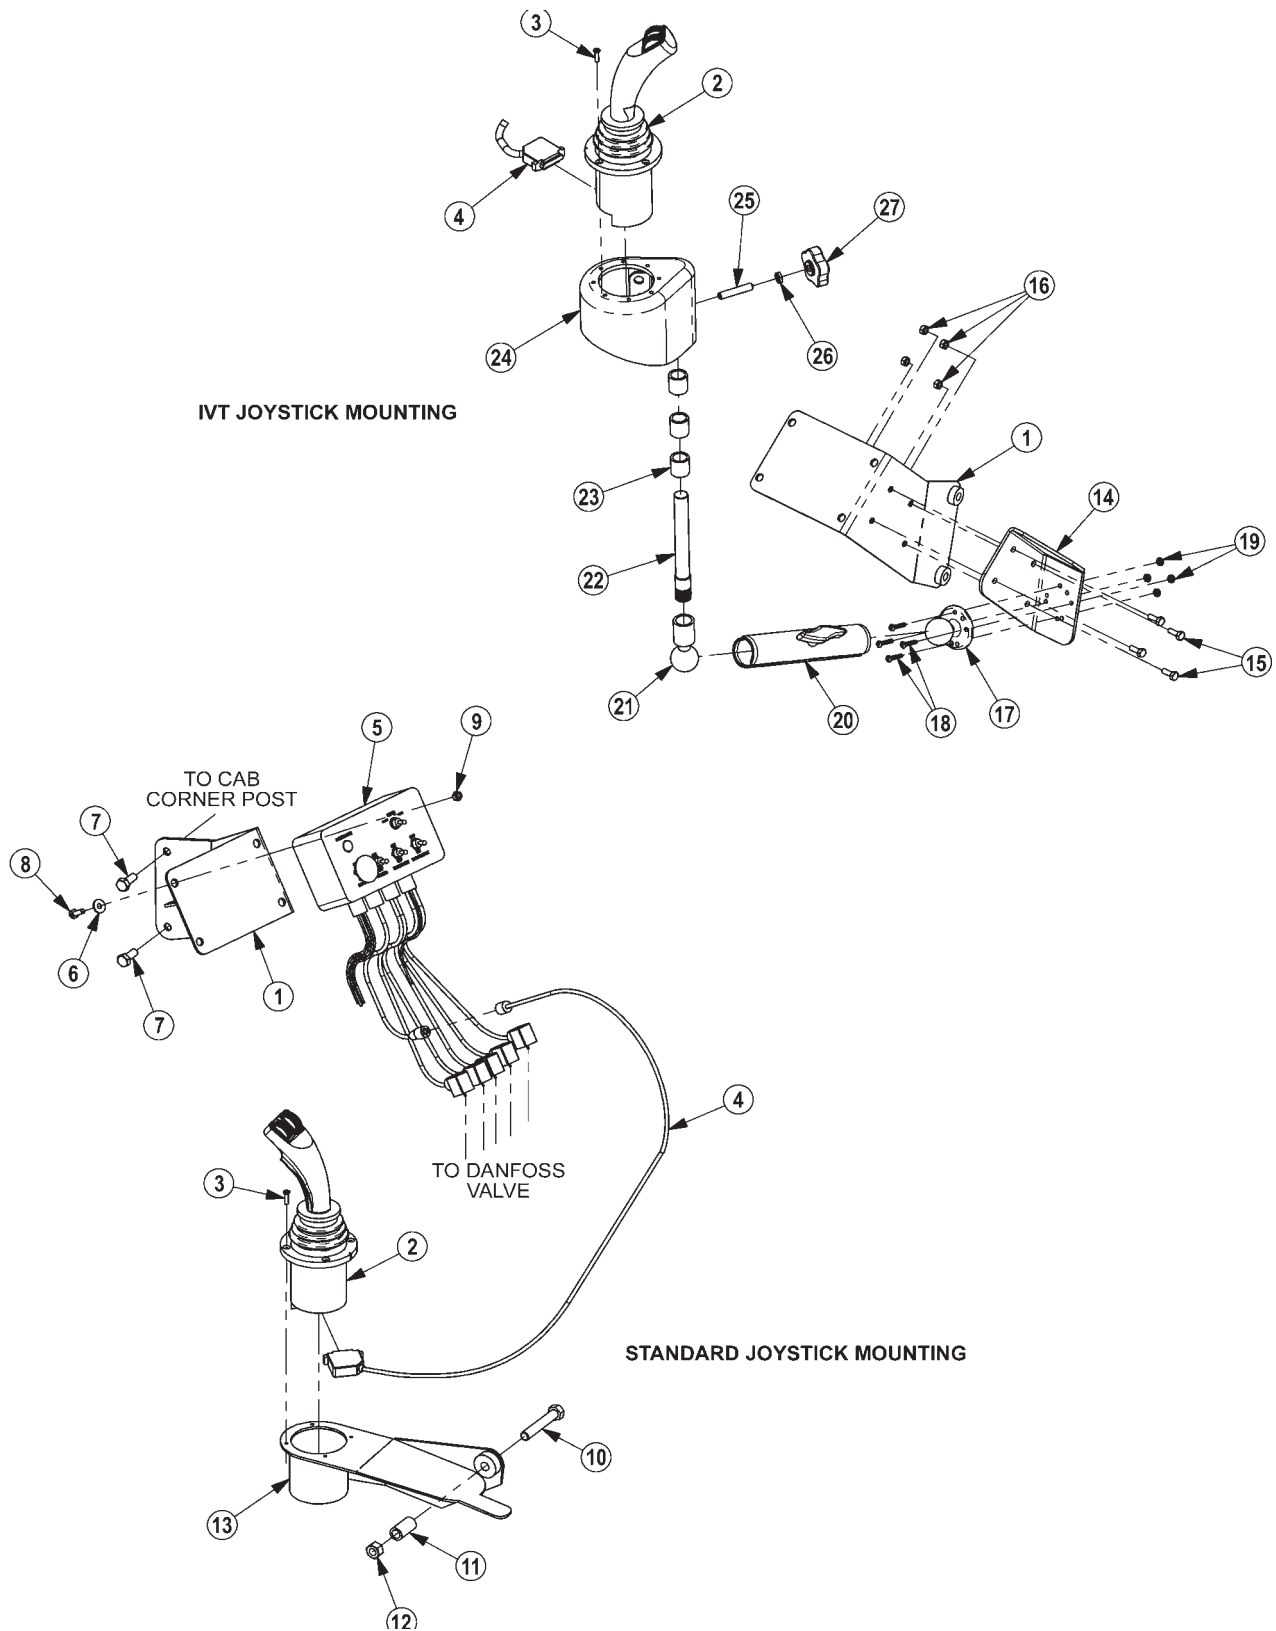

LIFT VALVE - JOYSTICK AND SWITCH BOX

ITEM	PART NO.	QTY	DESCRIPTION
1	33355	1	MNT,BRKT,SWITCH BOX
2	33691	1	JOYST,4AXIS,RH,DF,W/SUB-D CONN
3	32829	4	SCREW,MACHINE,10-32X3/4,FLATHD
4	33693	1	CBL,EXT,4FT,JOYST,W/SUB-D CONN
5	06510196	1	SWITCHBOX
6	22014	4	FLATWASHER,1/4
7	27513	2	CAPSCREW,10MMX25MM(1.5 PITCH)
8	21529	4	CAPSCREW,1/4 X 3/4 NC
9	21527	4	NYLOCK NUT,1/4 NC


PARTS FOR **STANDARD** TRACTORS ONLY

10	21737	1	CAPSCREW,1/2 X 3 NC
11	33359	1	TUBE,SPACER,JD6000 JSTICK
12	21727	1	NYLOCK NUT,1/2 NC
13	33356	1	ARMREST,JOYSTICK,JD62-6410

PARTS FOR **IVT** TRACTORS ONLY

14	06410275	1	MNT,BRKT,RAM,1 1/2
15	21529	4	CAPSCREW,1/4 X 3/4 NC
16	21525	4	HEX NUT,1/4 NC
17	06520019	1	MOUNT,RAM BALL,1 1/2",FLANGE
18	27260	4	SCREW,MACHINE,10-24X1(RD HEAD)
19	24890	4	HEX NUT,10-24 NYLOCK
20	06520021	1	MOUNT,RAM,ARM,1.50x7.88,LONG
21	06520041	1	MOUNT,RAM,BALL,1 1/2",NPT,2181
22	06340010	1	ROD,1/2NPTx7,JYSTK
23	35256	3	BUSHING,NYLON,1"OD,3/4"ID
24	35033	1	CAN,JYSTK,CPLT,DF
25	35205	1	SETSCREW,3/8 x 2 NC,KNURLED PT
26	35206	1	HEX NUT,JAMB,3/8 NC
27	35204	1	KNOB,3/8 NC,INSERT

PUMP DRIVESHAFT ASSEMBLY

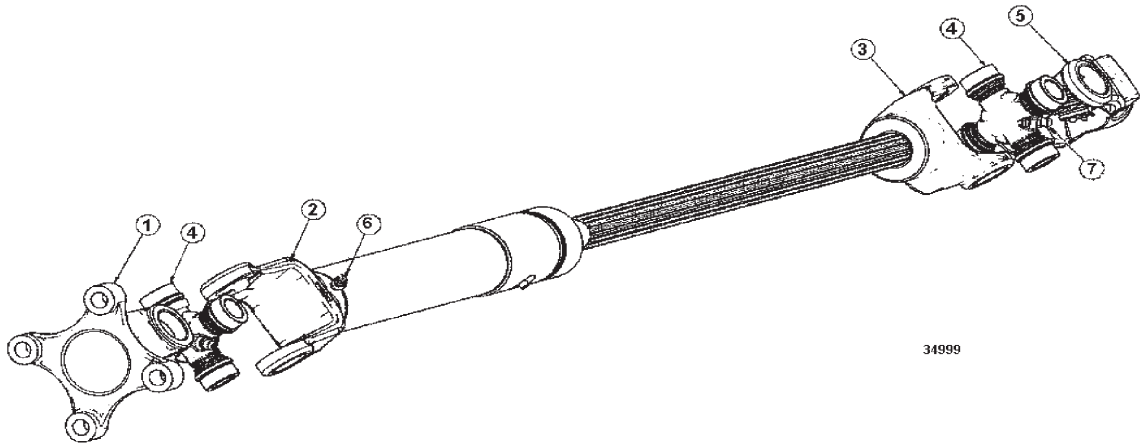


ITEM	PART NO.	QTY.	DESCRIPTION
*	34999	AVA	DRIVESHAFT,U-JOINT
1	06505004	1	YOKE PULLEY, 34999
2	06505005	1	SLEEVE, 34999
3	06505006	1	SHAFT, 34999
4	06505007	2	CROSS, 34999
5	06505008	1	YOKE DRIVE, 34999
6	6T3203	1	GREASE ZERK, 1/4 X 45
7	6T3207	3	GREASE ZERK, 1/4 X STR

SOLENOID BRAKE VALVE ASSEMBLY


NOTE:

CAUTION - TORQUE COIL NUT TO 5 Ft. Lbs. MAXIMUM.
DO NOT OVER TORQUE NUT, DAMAGE TO CARTRIDGE OR COIL WILL OCCUR.

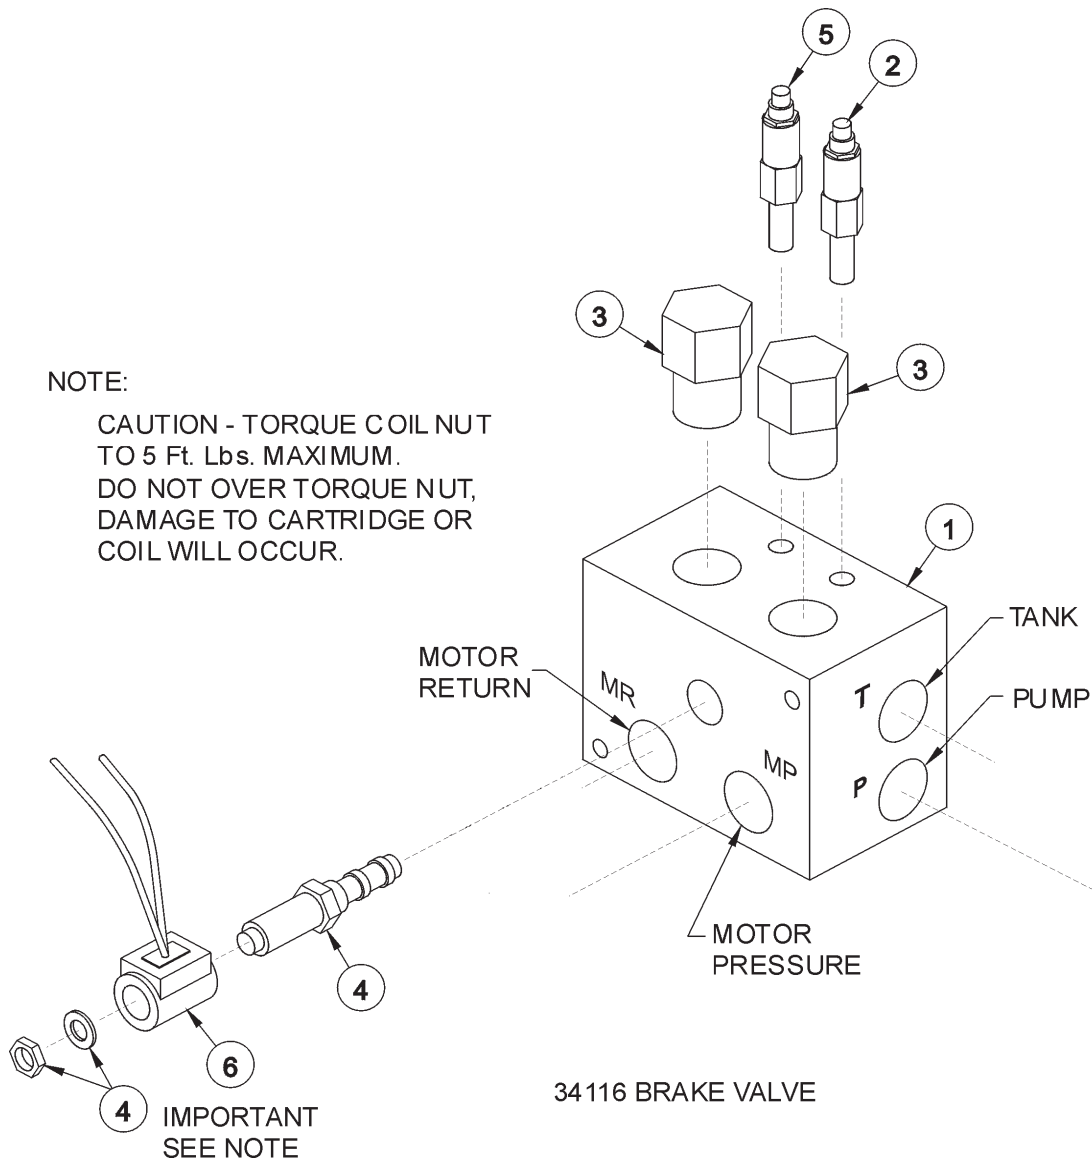

ITEM	PARTNO.	QTY.	DESCRIPTION
*	34116	AVAIL	SOLENOID BRAKE VALVE ASSY - HIGH PRESSURE
1	34092	1	BRAKE VALVE, BLANK
2	34090	1	RELIEF VALVE, 3500 PSI
3	34094	2	LOGICELEMENT
4	34093	1	CARTRIDGE, 2 POSITION, 3 WAY (WITH NUT & WASHER)
5	34091	1	RELIEF VALVE, 2600 PSI
6	34689	1	COIL, 12 VDC, BRAKE VALVE
**	34096	2	RELIEF SEAL KIT
**	34097	1	SOLENOID SEAL KIT
**	34098	2	ELEMENT SEAL KIT

SOLENOID BRAKE VALVE HYDRAULIC SCHEMATIC

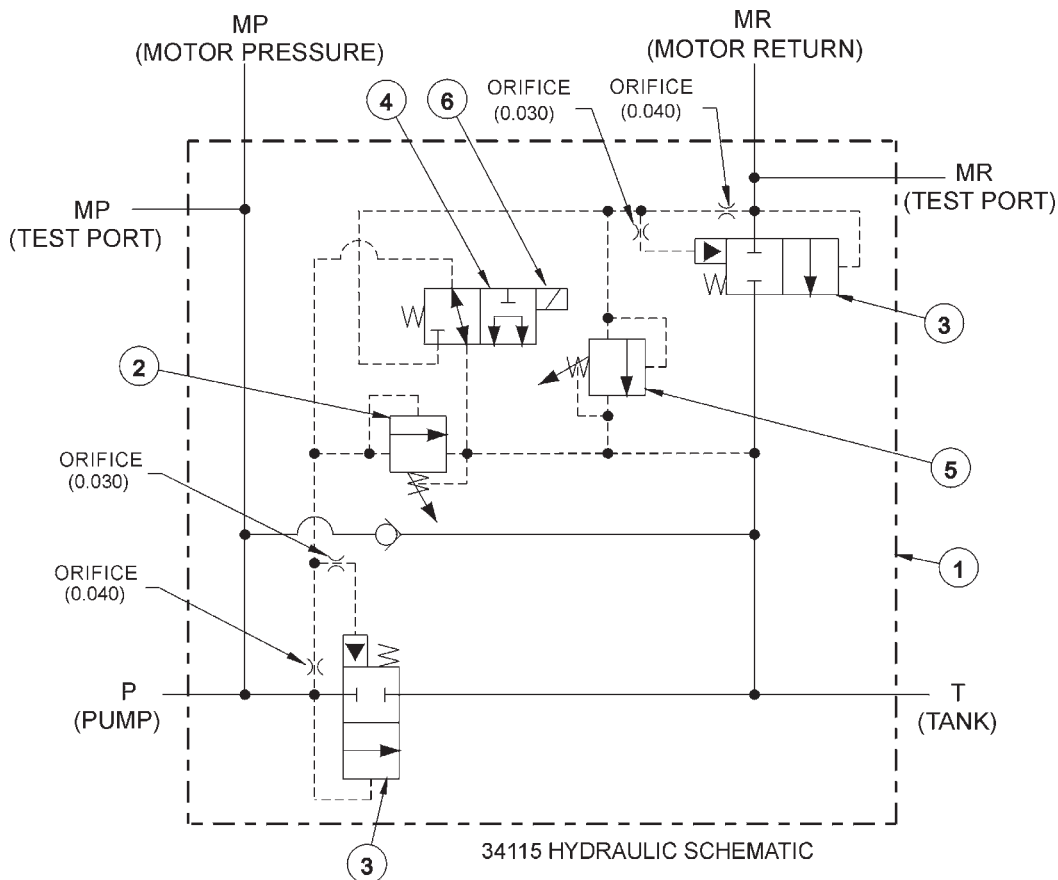

BRAKE VALVE TROUBLESHOOTING

FAILURE MODE:

- MOWER WILL NOT START - system pressure is low (engine not lugging).
- MOWER WILL NOT START - system pressure is high (engine lugging). "MR" port will be high pressure.
- MOWER WILL NOT ROTATE AT FULL SPEED - limited power.
- MOWER BLADE WILL NOT STOP - blade will not stop in proper time.

CHECK STEPS

- 1 thru 6
- 7
- 3 thru 5
- 7 thru 9


CORRECTIVE STEPS:

1. Check for voltage at solenoid (item 6), voltage must be between 10.2 volts and 13.8 volts.
2. Remove, inspect solenoid and cartridge (items 4, 6) for wear or contamination.
3. Remove, inspect logic elements near "P" port (item 3) for wear or contamination.
4. Remove, inspect 3500 psi relief valve (item 2) for wear or contamination.
5. Remove and inspect orifices near "P" port for contamination.
6. Remove "P" port hose and fitting, visually inspect for contamination, check ball for movement.
7. Remove and inspect orifices near "MR" port for contamination.
8. Remove, inspect 2600 psi relief valve (item 5) for wear or contamination.
9. Remove, inspect logic element near "MR" port (item 3) for wear or contamination.

END COVER (2004 UPDATE)

JD6000 SERIES SERIAL #'S WITH THIS CHANGE: 391333, 391640, 392239, 395891, 396190, 397161, 396515, 396572, 396560, 396777, 396754, 396764, 396981, 397327, 396983, 396987, 397165, 397159, 397211, 397773, 397450, 397354, 397341, 397498, 397527, 397520, 397360, 397475, 397538, 397569, 397554, 397545, 397585, 397506, 397570, 397587, 397575, AND MODEL #'S STARTING WITH #398797.


JD7000 SERIES SERIAL #'S WITH THIS CHANGE START AT: 12451

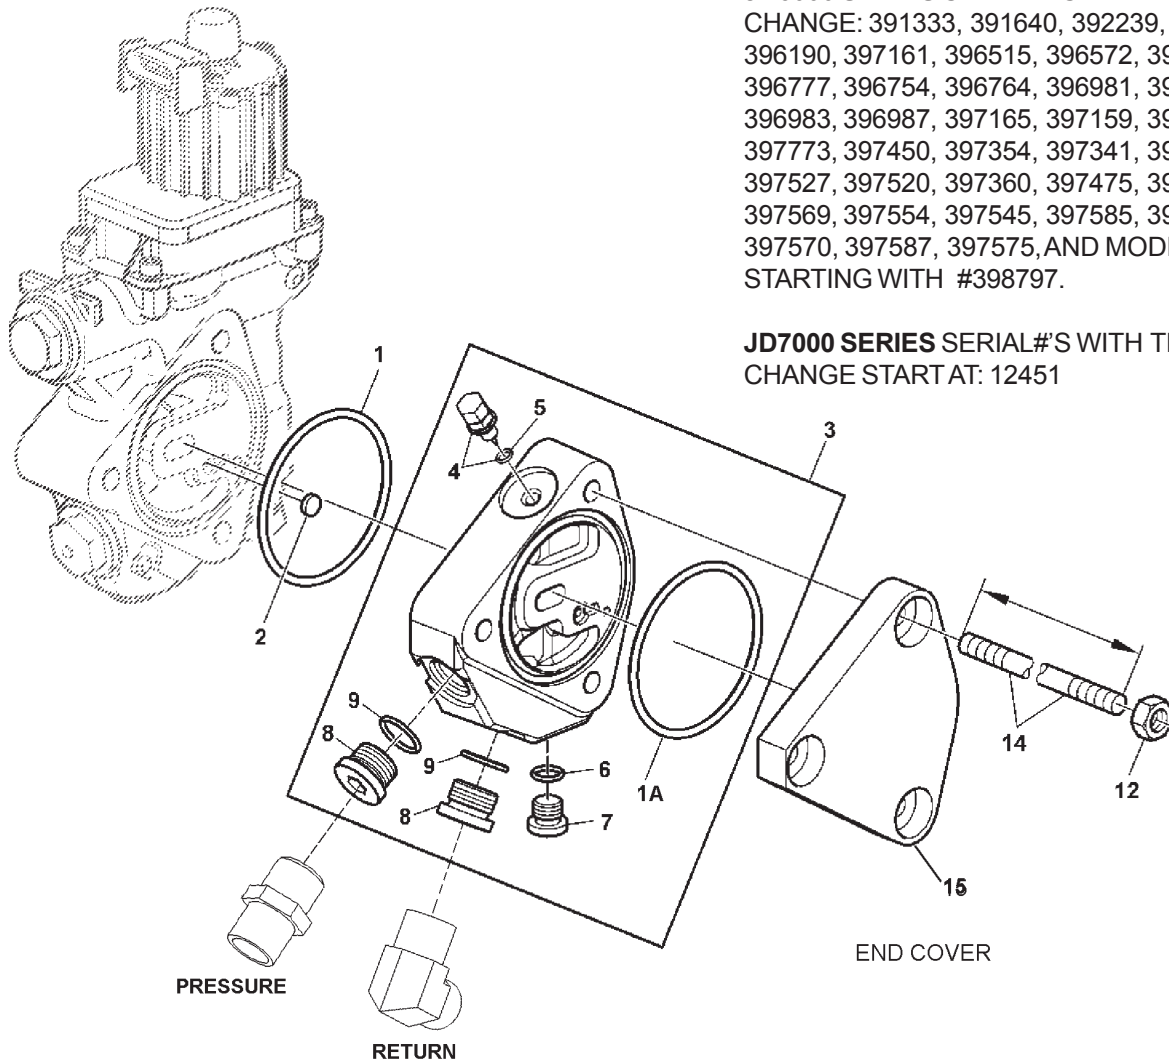

NOTE: ITEM # 1, 12 AND 15 ARE THE TRACTOR EXISTING HARDWARE.


ITEM	PART NO.	QTY.	DESCRIPTION
1	R95494	AVA	O-RING
2	R95493	AVA	DISK
3	AL161388	AVA	SPACER
4	AL117977	1	SCREW
5	51M7052	1	O-RING
6	51M7041	1	O-RING
7	15M7076	1	DRAIN PLUG
8	15M7077	2	DRAIN PLUG
9	51M7045	1	O-RING
12	14M7148	1	NUT
14	L169845	3	STUD

WHEEL WEIGHT

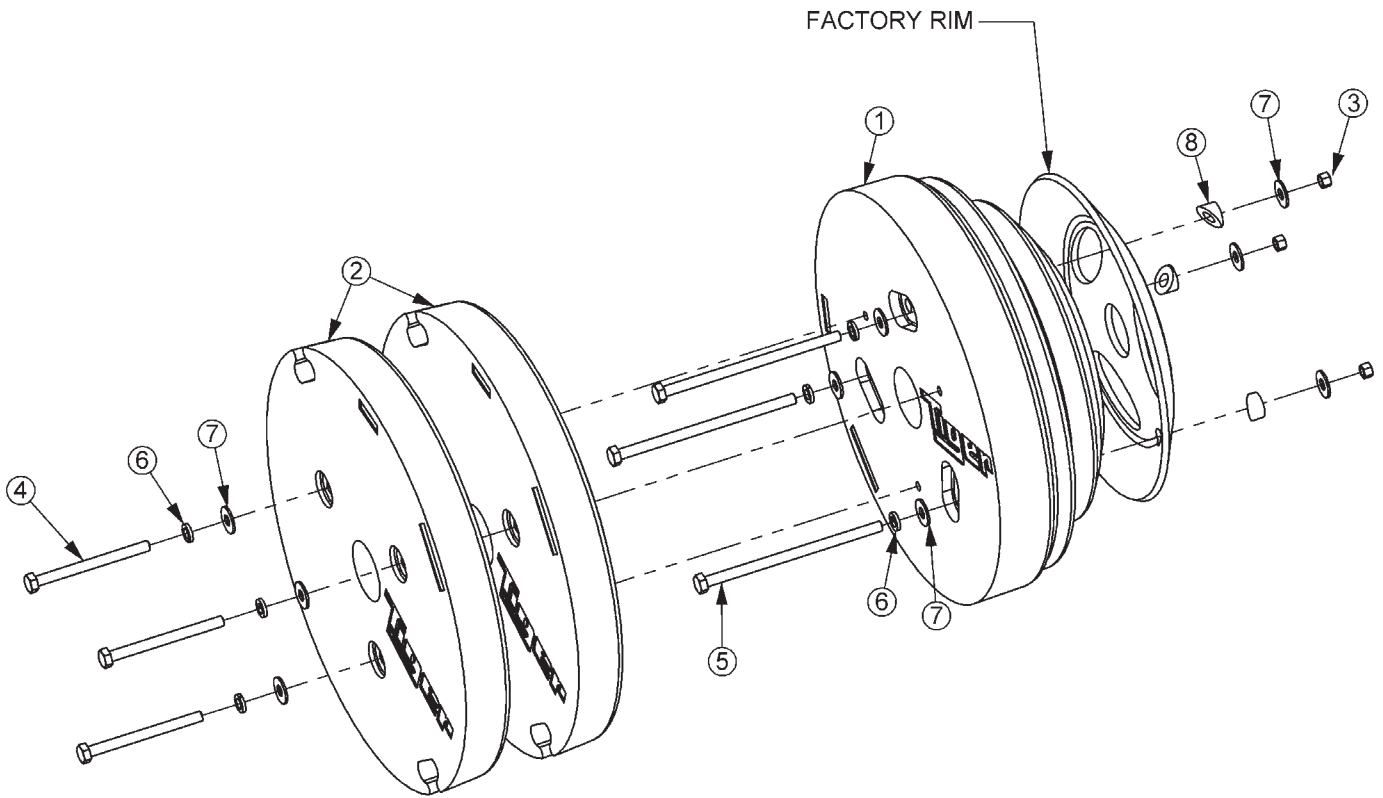

ITEM	PART NO.	QTY	DESCRIPTION
1	32615	1	WHL WT, INBOARD, 1700#
2	32518	2	WHL WT, OUTBOUND, 850#
4	21846	3	CAPSCREW, 3/4" X 9" NC
5	06530200	3	CAPSCREW, 7/8 x 14, NC, GR 8, 3" THRD
7	22021	3	FLATWASHER, 3/4"
8	31735	3	SPACER, BOLT, WHL WT, JD 7200
9	06533000	6	FLATWASHER, 7/8, GR 8
10	06531000	3	HEX NUT, 7/8 NC, GR 8


LEXAN SAFETY WINDOW

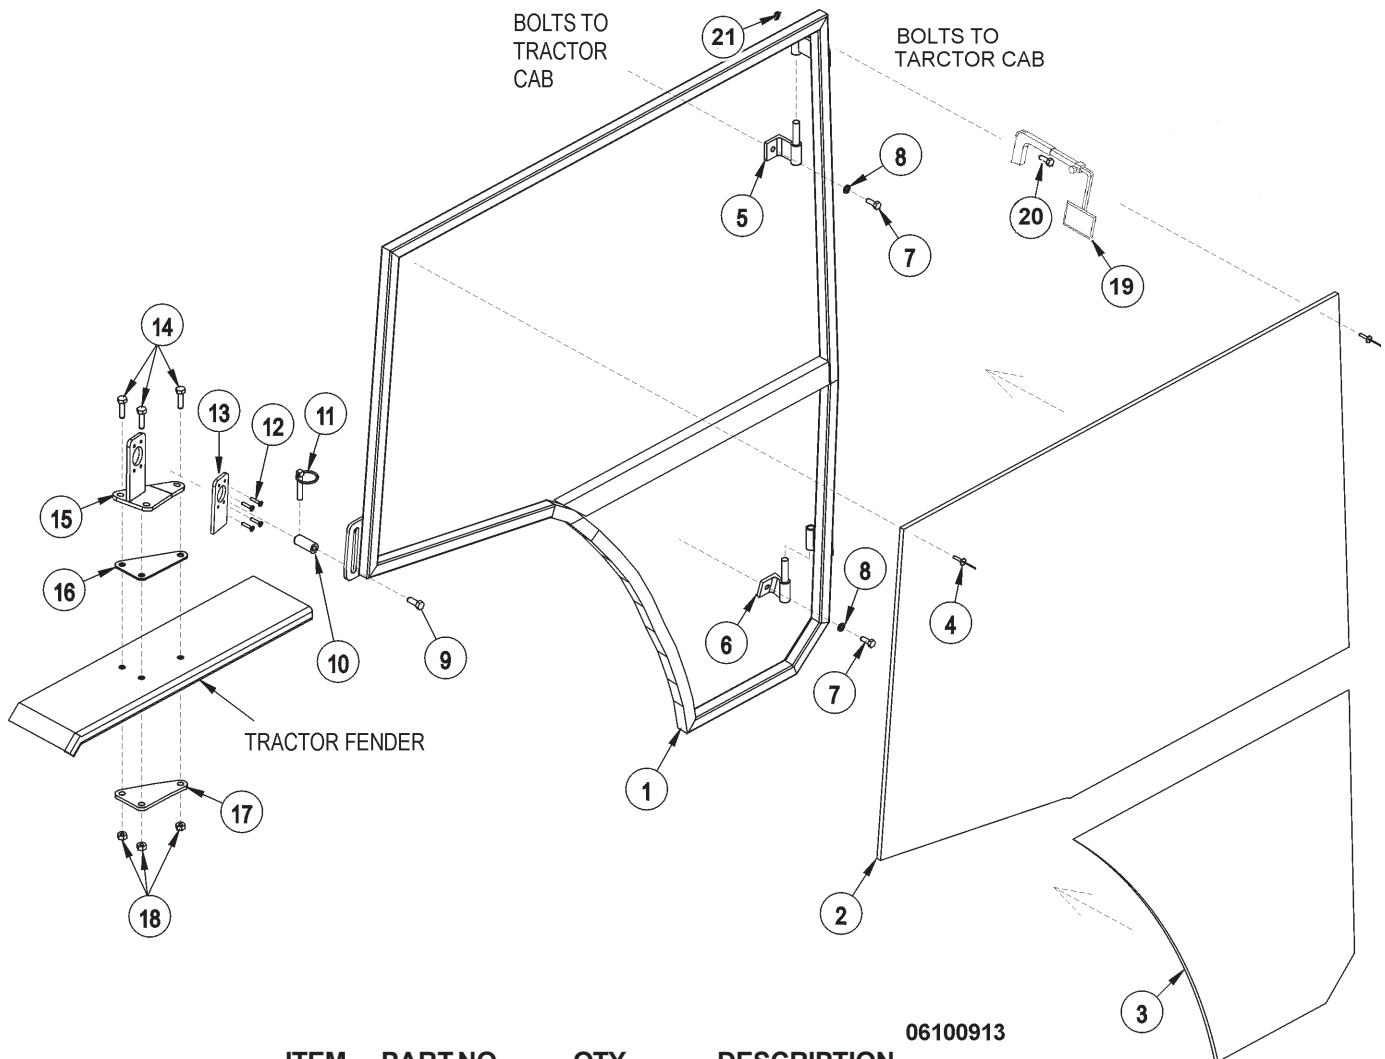

06100913

ITEM	PART NO.	QTY.	DESCRIPTION
	34625	AVAIL	FRAME AND WINDOW ASY
1	34619	1	WINDOW FRAME
2	28900A	1	LEXAN WINDOW
3	28901B	1	LEXAN WINDOW
4	6T3954	25	POP RIVET
5	28903A	1	HINGE - UPPER
6	28907A06	1	HINGE - LOWER
7	27508	2	CAPSCREW 8MM X 20MM
8	6T2619	2	LOCKWASHER 8MM
9	21630	1	CAPSCREW 3/8" X 1" NC
10	33583	1	PIN SAFETY SCREEN
11	RD1032	1	LYNCH PIN 1/4" X 2"
12	24889	4	MACHINE SCREW 10-32
13	06400005	1	GROMMET SAFETY SCREEN
14	21632	3	CAPSCREW 3/8" X 1 1/2"
15	06330000	1	SAFETY SCREEN LATCH
16	34270	1	PAD SAFETY SCREEN
17	34271	1	FENDER PLATE
18	21627	4	NYLOCK NUT 3/8"
19	AL77484	1	MIRROR BRKT, RH
20	21585	2	BOLTS 5/16"
21	21577	2	NYLOCK NUT 5/16"

POLYCARBONATE SAFETY WINDOW

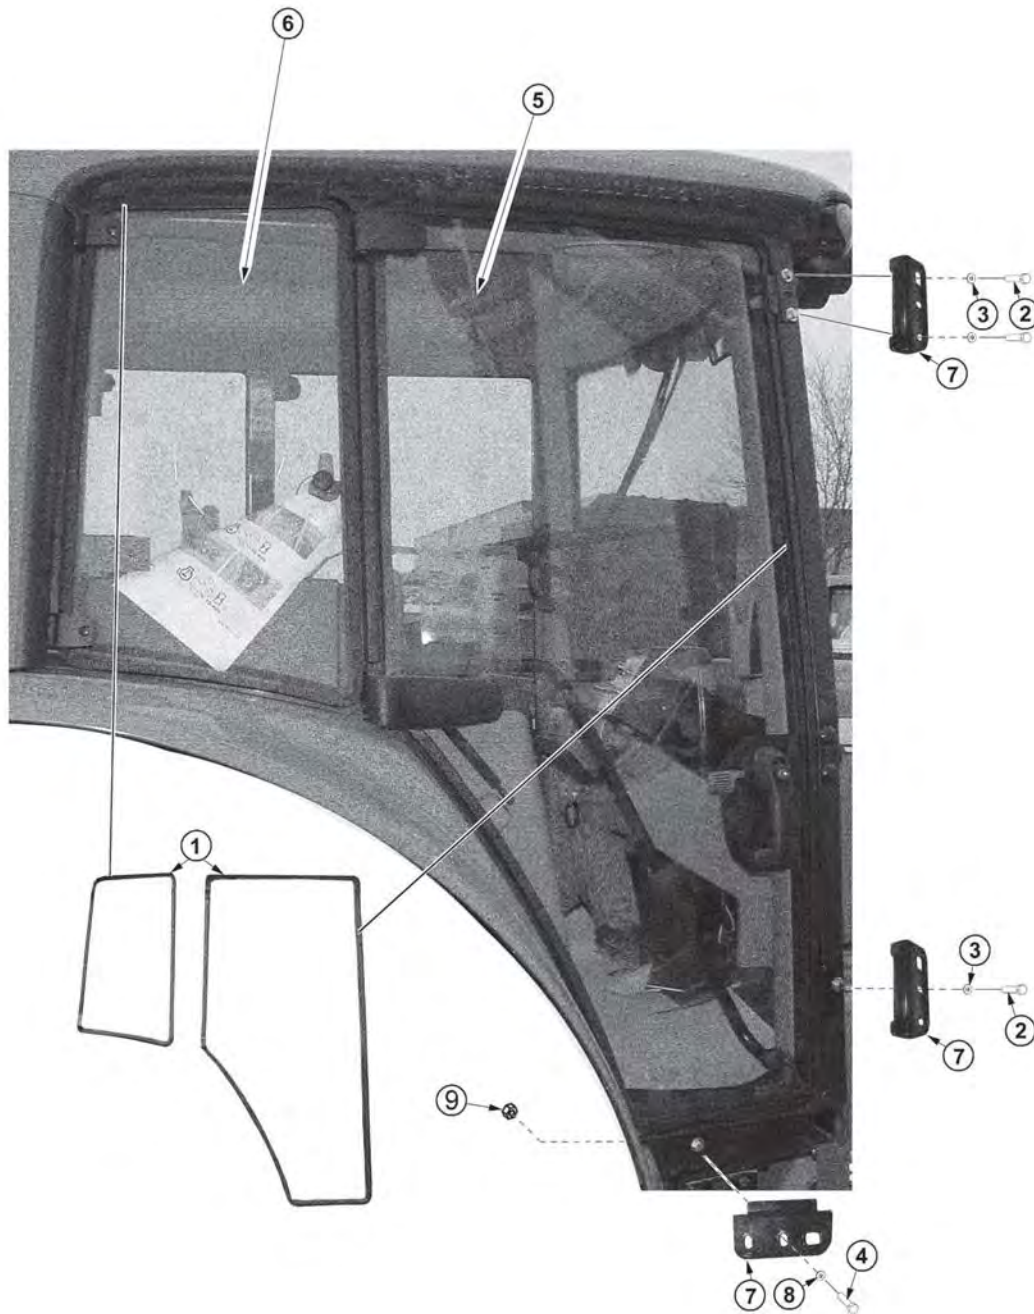


ITEM	PART NO.	QTY.	DESCRIPTION
1	31965	22 FT	TRIM SEAL
2	27508	3	CAPSCREW, 8MM X 20MM
3	22015	3	FLATWASHER, 5/16"
4	21581	1	CAPSCREW
5	06490007	1	POLYCARB, FRMD, DOOR
6	06490006	1	POLYCARB, FRMD, REAR
7	06520040	3	BRACKET, RETAIN
8	6T2619	1	LOCKWASHER
9	21577	1	NYLOCK, NUT

SAFETY LIGHT ASSEMBLY

SAFETY LIGHT INSTALLATION

1. Remove ground wire (-) from the battery
2. Remove right rear tire
3. Remove the bottom cover from the tail light. Locate the wire connector on the tractor that has a brown & green wire
4. Remove panel from right rear of outside of cab under the window
5. Install light bar to mounting bracket
(Note: Wiring should be routed through the bracket & come out the hole on the top of the tube)
6. Install the light bar and bracket assembly in wheel well securing the three 1-1/4" bolts to the fender
7. Use the bracket as a guide to drill 2, 5/16" holes in the wheel well and install 2 remaining 1" capscrews and nylock nuts
8. Install the female 2-wire connector to the wires coming from the light making sure that the green wires are common
9. Reconnect the battery ground wire (-) and test for proper operation
(Note: The marker light should flash with hazard lights and the right turn signal. The light should burn steady with hazards and the left turn signal on.)
10. Reinstall all covers that were previously removed
11. Reinstall right side tire

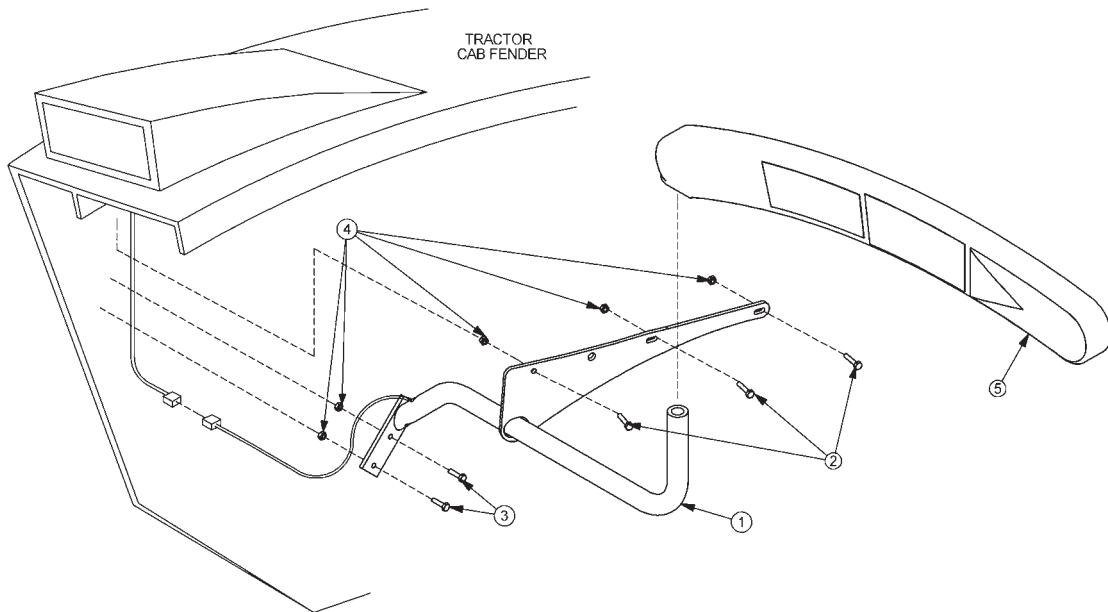

ITEM	PART NO.	QTY.	DESCRIPTION
1	34894	1	BRACKET, MOUNTING, JD72-7510, LIGHTING
2	21531	3	CAPSCREW, 1/4 x 1-1/4, NC
3	21530	2	CAPSCREW, 1/4 x 1, NC
4	21527	5	NYLOCK NUT, 1/4, NC
5	34859	1	MARKER LIGHT ASSEMBLY
*	6T1824	2	ZIP-TIE, 8" (NOT SHOWN)

--

--

SABER BOOM MOWER

COMMON PARTS SECTION

TABLE OF CONTENTS

SECTION	PAGE
TRACTOR SPECIFIC PARTS:	
BOOM SWIVEL	6-4
SABER QUICK COUPLERS - MAIN BOOM	6-6
SABER BOOM ASSEMBLY	6-8
SABER MB BOOM ASSEMBLY	6-10
SABER XB BOOM ASSEMBLY	6-12
SABER FLAIL HEAD ASSEMBLY	6-14
SBF50 DIRECT DRIVE FLAIL ASSEMBLY	6-16
SABER ROTARY HEAD ASSEMBLY	6-18
SABER XB ROTARY ASSEMBLY	6-20
SABER 60" ROTARY ASSEMBLY	6-22
RESERVOIR TANK FILTER ASSEMBLY	6-24
5SP DANFOSS - LIFT VALVE	6-26
5SP HUSCO - LIFT VALVE	6-28
4SP HUSCO - LIFT VALVE	6-30
FRONT HYDRAULIC PUMP	6-32
SABER ROTARY MOTOR	6-34
SABER FLAIL MOTOR	6-36
SPINDLE ASSY	6-38
WELDED CYLINDER PARTS	6-42
BRAKE VALVE	6-45
SWITCHBOX - HUSCO CONTROLS	6-47
SYSTEM DIAGRAM	6-48
SWITCHBOX - DAN FOSS CONTROLS	6-49
LH JOYSTICK DIAGRAM	6-50
TROUBLE SHOOTING	6-52
FIRE SUPPRESSION SYSTEM	6-57

PARTS ORDERING GUIDE

The following instructions are offered to help eliminate needless delay and error in processing purchase orders for the equipment in this manual.

1. The Parts Section is prepared in logical sequence and grouping of parts that belong to the basic machine featured in this manual. Part Numbers and Descriptions are given to help locate the parts and quantities required.

2. The Purchase Order must indicate the **Name and Address** of the person or organization ordering the parts, **who should be charged**, and if possible, the **serial number of the machine** for which the parts are being ordered.

3. The purchase order must clearly list the **quantity of each part**, the complete and correct **part number**, and the basic **name of the part**.

4. The manufacturer reserves the right to substitute parts where applicable.

5. Some parts may be unlisted items which are special production items not normally stocked and are subject to special handling. Request a quotation for such parts before sending a purchase order.

6. The manufacturer reserves the right to change prices without prior notice.

NOTE: When ordering replacement decals, refer to the part numbers and descriptions listed in the safety section in the front of this manual.




1000

For maximum safety and to guarantee optimum product reliability, always use genuine **Tiger** replacement parts. The use of inferior replacement parts may cause premature or catastrophic failure which could result in serious injury or death.

Direct any questions regarding parts to:

Tiger Corporation
3301 N. Louise Ave.
Sioux Falls, SD 57107
1-800-843-6849
1-605-336-7900


TRACTOR MOUNT KIT - BOOM SWIVEL

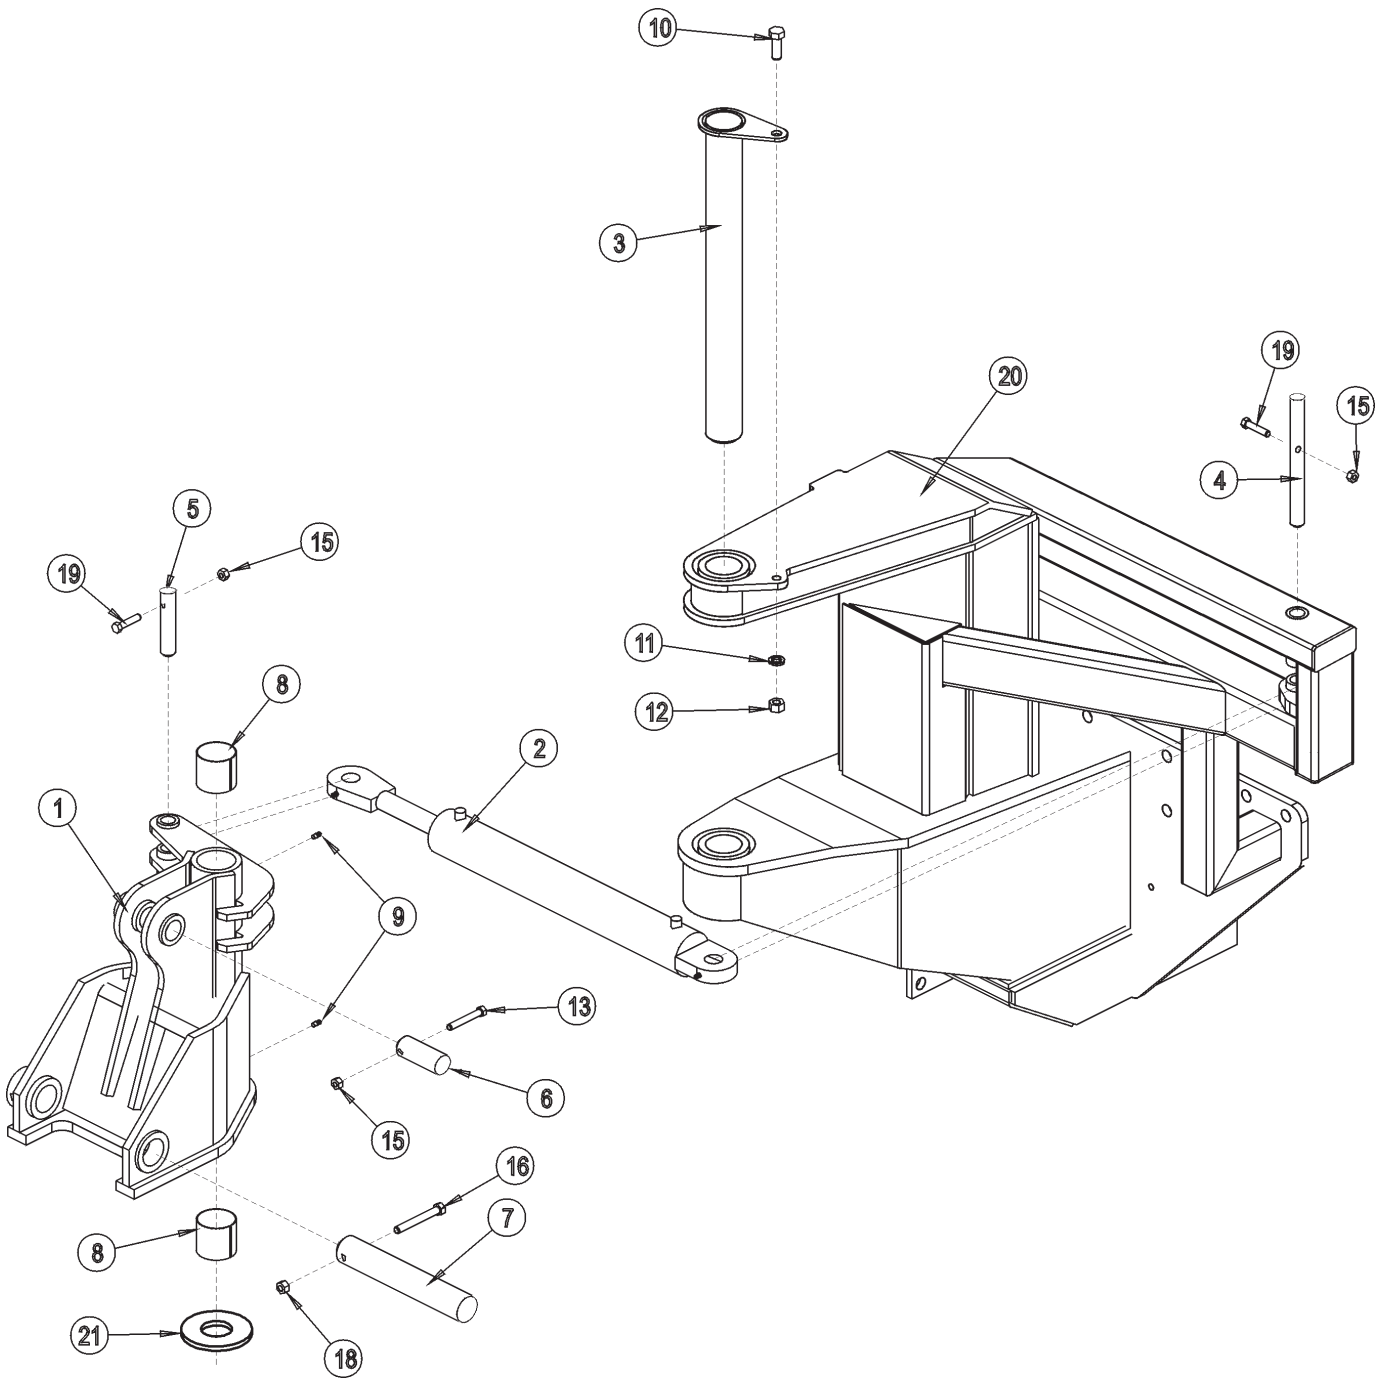

TRACTOR MOUNT KIT - BOOM SWIVEL

ITEM	PART NO.	QTY.	DESCRIPTION
1	32376	1	SWIVEL,BOOM,SABER,W/O BUSHING
2	33705	1	CYLINDER,3X17 1/2,WELDED
3	32381	1	PIN,2 1/2,SWIVEL,SABER
4	33710	1	PIN,CYLINDER,1,SWIVEL,SABER
5	32380	1	PIN,CYL,1,SWIVEL,SABER
6	32372	1	PIN,CYLINDER,STAGE,2ND
7	32378	1	PIN,BOOM TO SWIVEL,SABER
8	32322	2	BEARING,DX,2 1/2X2 1/2LONG,
9	6T3211	2	GREASE ZERK,1/8
10	21782	1	CAPSCREW,5/8 X 1-3/4 NC
11	21992	1	LOCKWASHER,5/8
12	21775	1	HEX NUT,5/8 NC
13	21687	1	CAPSCREW,7/16 X 3 NC
15	21677	3	NYLOCK NUT,7/16 NC
16	21741	1	CAPSCREW,1/2 X 4 NC
18	21727	1	NYLOCK NUT,1/2 NC
19	21683	2	CAPSCREW,7/16 X 2 NC
20	*	REF.	MAIN FRAME - REFER TO MAIN FRAME PARTS
21	06520249	1	BEARING, WASHER
	32742	ASSY	SWIVEL W/BUSHINGS,BOOM,SABER (ASSY INCLUDES ITEM 1 & 8)


SABER QUICK COUPLERS - MAIN BOOM

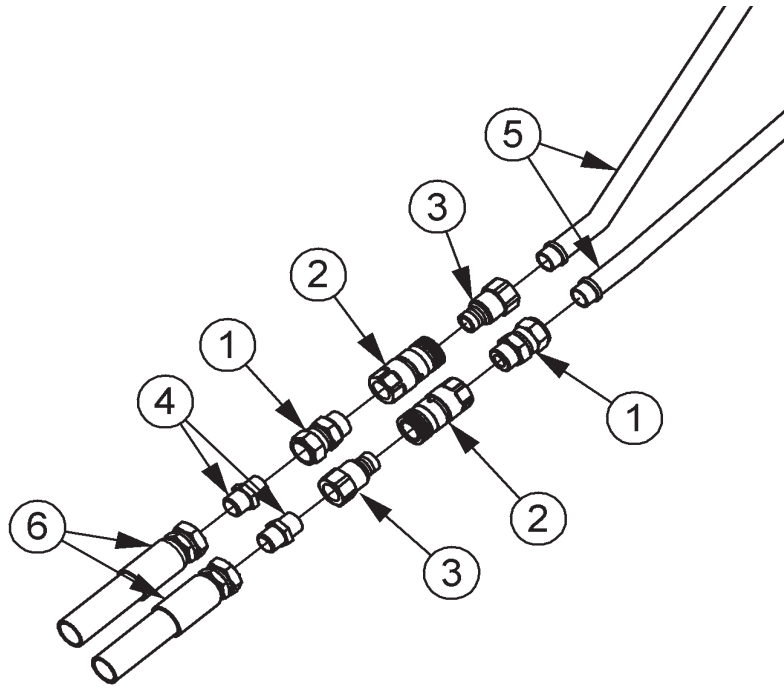

SABER QUICK COUPLERS - MAIN BOOM

ITEM	PART NO.	QTY.	DESCRIPTION
1	34392	2	ADAPTER,1ORBX1FJX
2	06503027	2	QUICK COUPLER,1"SAE,FEM,FLAT
3	06503028	2	QUICK COUPLER,1"SAE,MALE,FLAT
4	33555	2	ADAPTER,1MORBX1MJIC
5	*	REF.	PREFORMED TUBES - REFER TO BOOM ARM PARTS
5	*	REF.	#16 HOSE - REFER TO HYDRAULICS PARTS

SABER BOOM ASSEMBLY

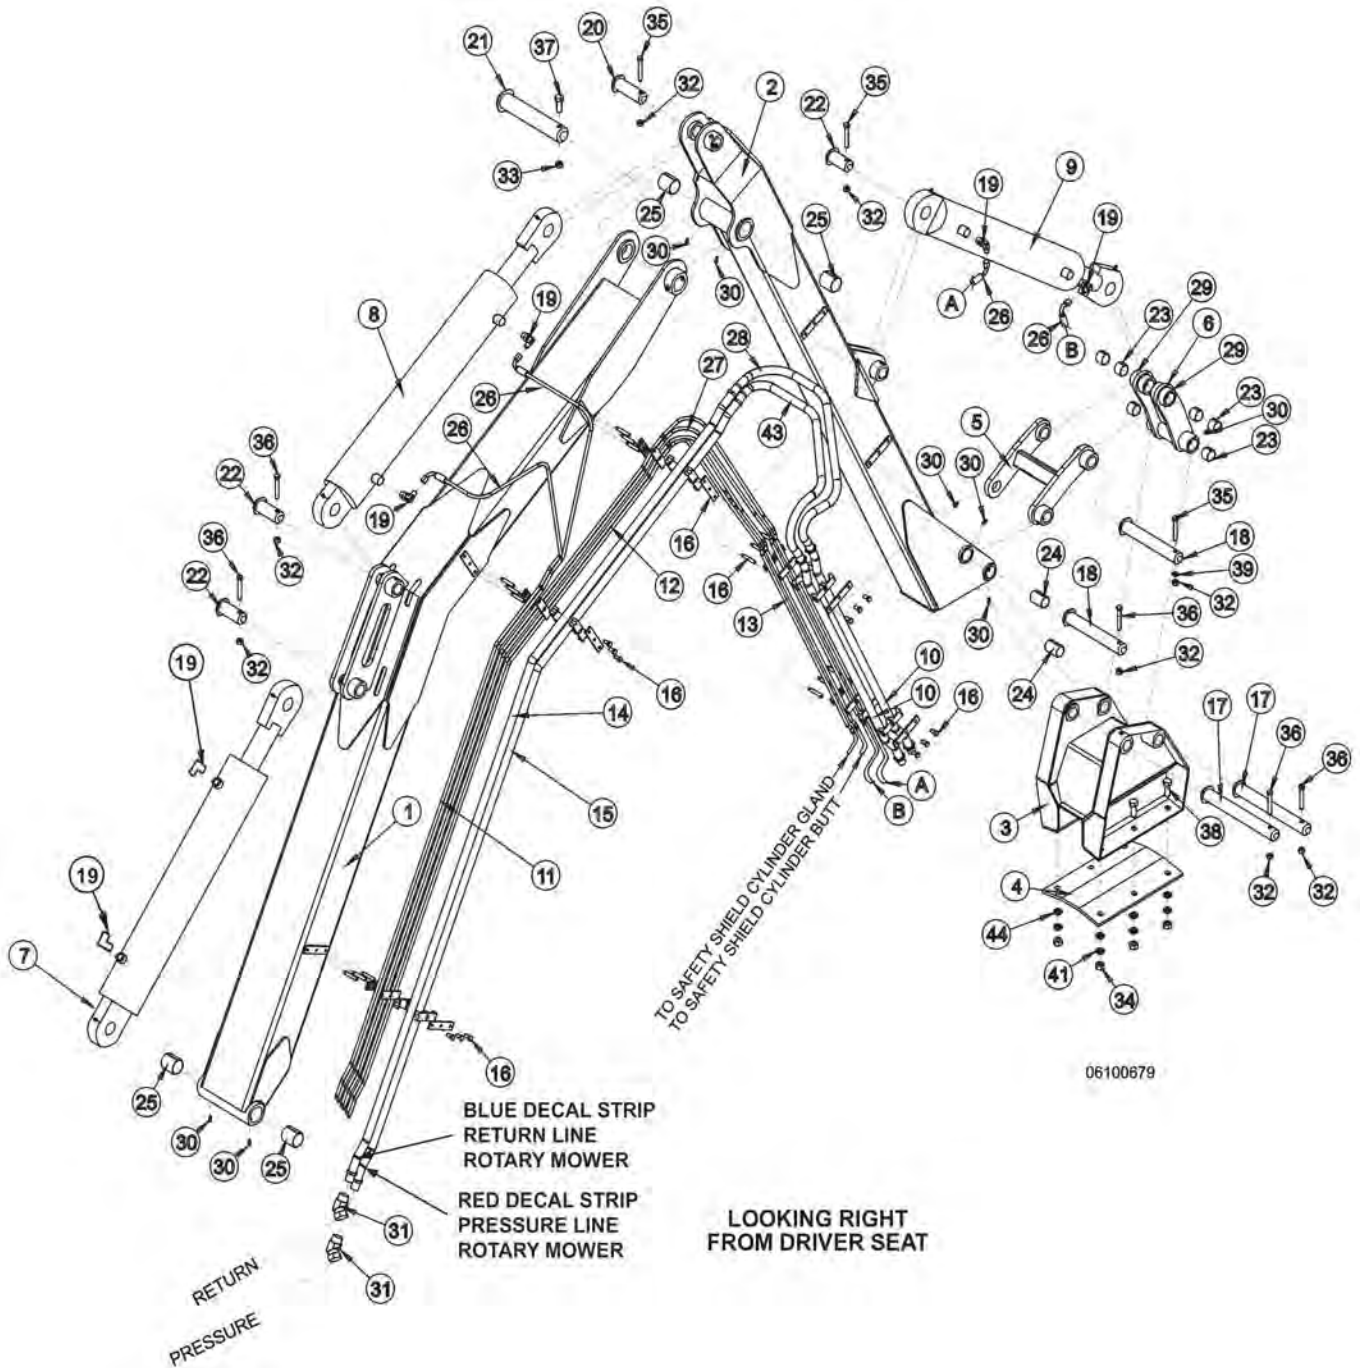


06100679

SABER BOOM ASSEMBLY

ITEM	PART NO.	QTY.	DESCRIPTION
1	32743	1	MAIN BOOM W/BEARING
2	32744	1	SECONDARY BOOM W/BEARING
3	32311	1	MOUNT - SWIVEL HEAD
4	32309	1	MOUNT HEAD PLATE
5	32316	1	LINKAGE - BOOM TO CYLINDER
6	32745	1	LINKAGE W/BEARING - CYLINDER TO SWIVEL
7	32363	1	CYLINDER
8	32364	1	CYLINDER
9	32365	1	CYLINDER
10	33542	2	PREFORMED TUBE 1" X 42 1/8"
11	32627	2	PREFORMED TUBE 3/8" X 65"
12	32628	4	PREFORMED TUBE 3/8" X 91"
13	32629	4	PREFORMED TUBE 3/8" X 40"
14	33541	1	PREFORMED TUBE 1" X 93 1/4" (ROTARY RETURN)
15	33540	1	PREFORMED TUBE 1" X 93 3/8" (ROTARY PRESSURE)
16	33215	5	TUBE CLAMP KIT
17	32313	2	PIN
18	32319	2	PIN
19	32810	6	ELBOW
20	32372	1	PIN
21	32374	1	PIN
22	32375	3	PIN
23	32318	6	BEARING
24	32321	4	BEARING
25	32362	4	BEARING
26	32818	4	HOSE 3/8" X 24"
27	32680	4	HOSE 3/8" X 43"
28	33544	1	HOSE 1" X 40"
29	6T3207	6	GREASE ZERK
30	6T3211	8	GREASE ZERK
31	24724	2	SWIVEL
32	21677	8	NYCLOCK HEX NUT - 7/16"
33	21727	1	NYLOCK HEX NUT - 1/2"
34	6T2408	6	HEX NUT - 5/8"
35	21687	3	CAPSCREW - 7/16" X 3"
36	21688	5	CAPSCREW - 7/16" X 3 1/4"
37	21741	1	CAPSCREW - 1/2" X 4"
38	6T2290	6	CAPSCREW - 5/8" X 2"
41	21992	6	LOCKWASHER - 5/8"
42	35260	1	HOSE COVER (NOT SHOWN - COVERS #27,28 & 43)
43	33543	1	HOSE 1" X 39"
44	25270	12	FLATWASHER - 5/8" USS

* ITEMS 3, 4, 34, 41 & 44 NOTUSED ON 60" ROTARY DECK

SABER MB BOOM ASSEMBLY

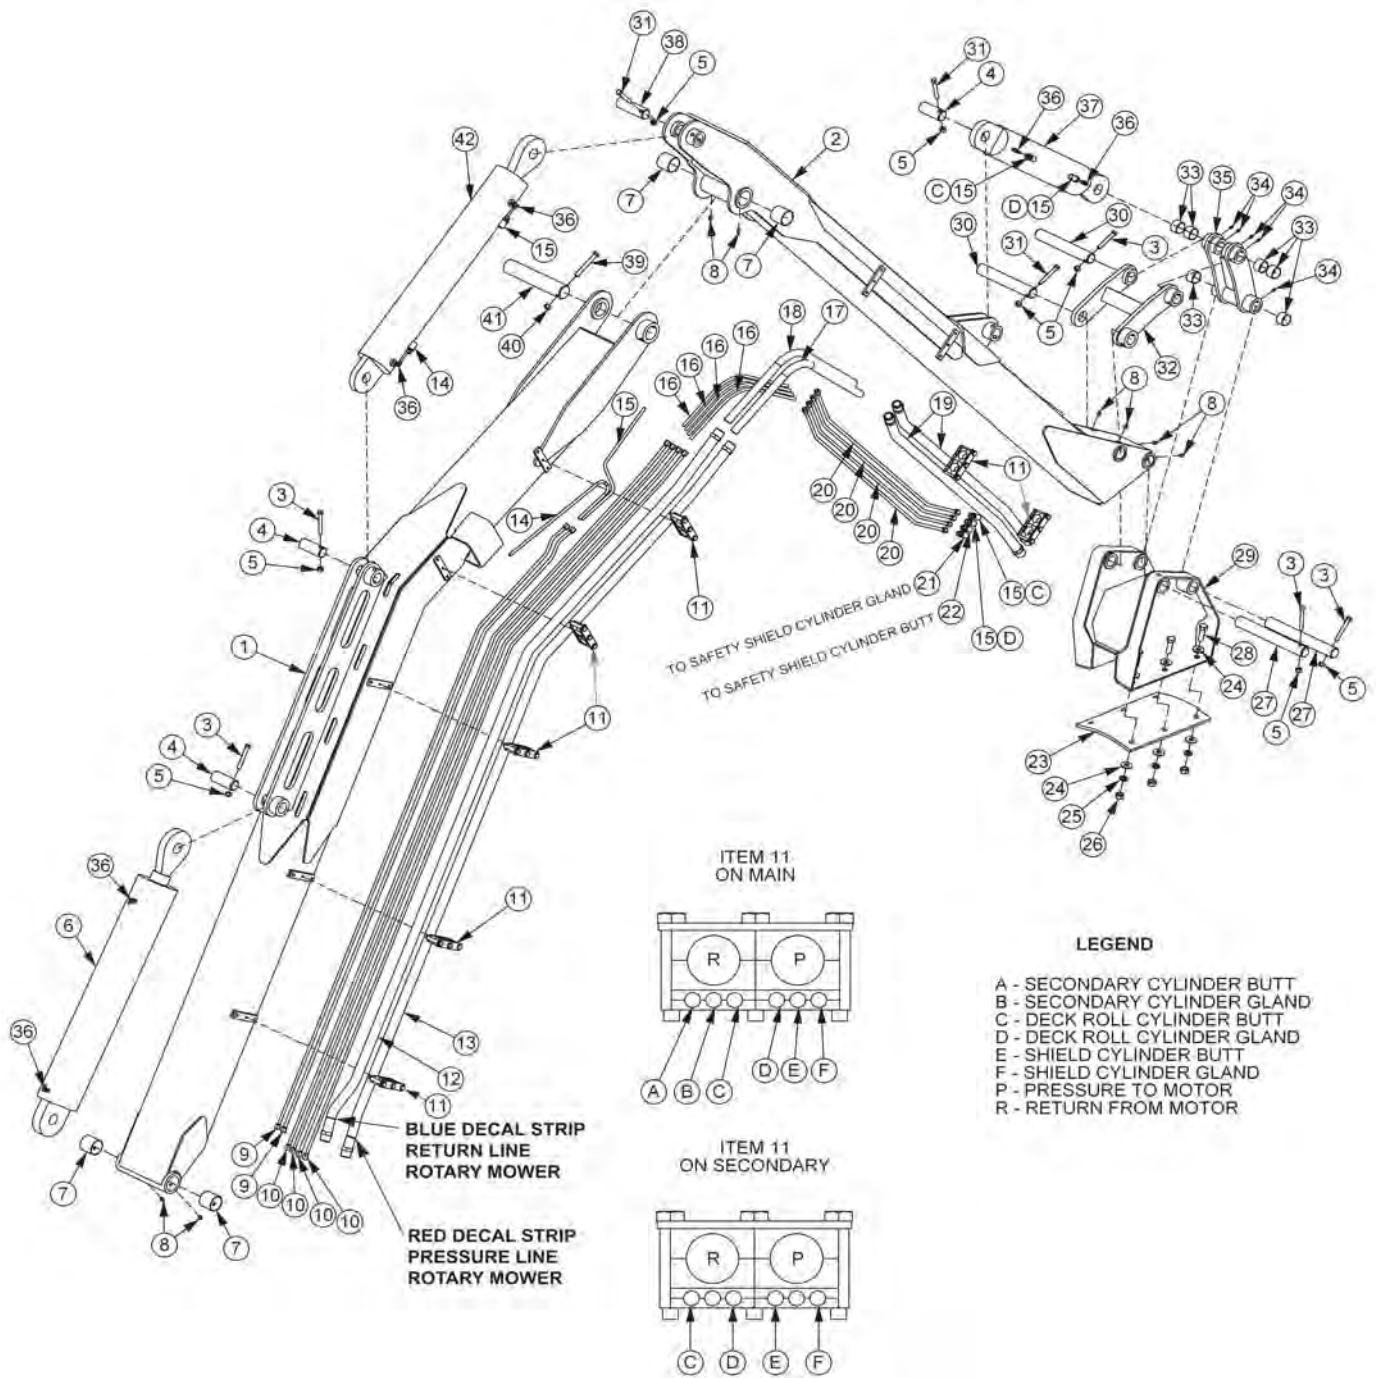


SABER MB BOOM ASSEMBLY

ITEM	PART NO.	QTY.	DESCRIPTION
1	06310075	1	BOOM, MB, PRIMARY, SABER
2	06310076	1	BOOM, MB, SECONDARY, SABER
3	21688	5	CAPSCREW, 7/16 x 3-1/4, NC
4	32375	3	PIN, 1-1/2 x 3-13/16, W/HOLE
5	21677	8	NYLOCK NUT, 7/16, NC
6	32363	1	CYLINDER, 5 x 25
7	32362	4	BEARING, DX, 2 x 2 LONG
8	6T3211	8	GREASE ZERK, 1/8 x STR
9	06506042	2	PRFRMD, 1, MAIN, SABER MB
10	06506043	4	PRFRMD, 2, MAIN, SABER MB
11	33215	7	TUBE CLAMP KIT
12	06506045	1	PRFRMD, 4, MAIN, SABER MB (ROTARY RETURN)
13	06506044	1	PRFRMD, 3, MAIN, SABER MB (ROTARY PRESSURE)
14	06500488	1	HOSE, 3/8 x 39
15	32818	3	HOSE, 3/8 x 24
16	06500489	4	HOSE, 3/8 x 52
17	06500491	1	HOSE, 1 x 47
18	06500490	1	HOSE, 1 x 49
19	33542	2	PRFRMD, 2, SEC, SABER
20	32629	4	PRFRMD, 1, SEC, SABER
21	33223	1	HOSE, 3/8 x 70
22	33222	1	HOSE, 3/8 x 59
23	32309	1	PLATE, MOUNT, HEAD, MOWER
24	25270	12	FLATWASHER, 5/8, GR 8
25	21992	6	LOCKWASHER, 5/8
26	6T2408	6	HEX NUT, 5/8, NF
27	32313	2	PIN, MOUNT, SWIVEL
28	6T2290	6	CAPSCREW, 5/8 x 2, NF, GR 8
29	32311	1	MOUNT, SWIVEL, HEAD, MOWER
30	32319	2	PIN, LINKAGE, BOOM
31	21687	3	CAPSCREW, 7/16 x 3, NC
32	32316	1	LINKAGE, BOOM TO CYLINDER, SABER
33	32318	6	BEARING, DX, 1-1/2 x 1 LONG
34	6T3207	6	GREASE ZERK, 1/4
35	32745	1	LINKAGE W/BUSHINGS, SABER
36	32810	6	ELBOW, 1/2ORB x 3/8MJ
37	32365	1	CYLINDER, 4 x 15
38	32372	1	PIN, CYLINDER, STAGE, 2ND
39	21741	1	CAPSCREW, 1/2 x 4, NC
40	21727	1	NYLOCK NUT, 1/2
41	32374	1	PIN, BOOM, STAGE 1ST TO 2ND
42	32364	1	CYLINDER, WELDED, 4-1/2 x 26-1/2

* ITEMS 23, 24, 25, 26, 28 & 29 NOTUSED ON 60" ROTARY DECK

SABER XB BOOM ASSEMBLY

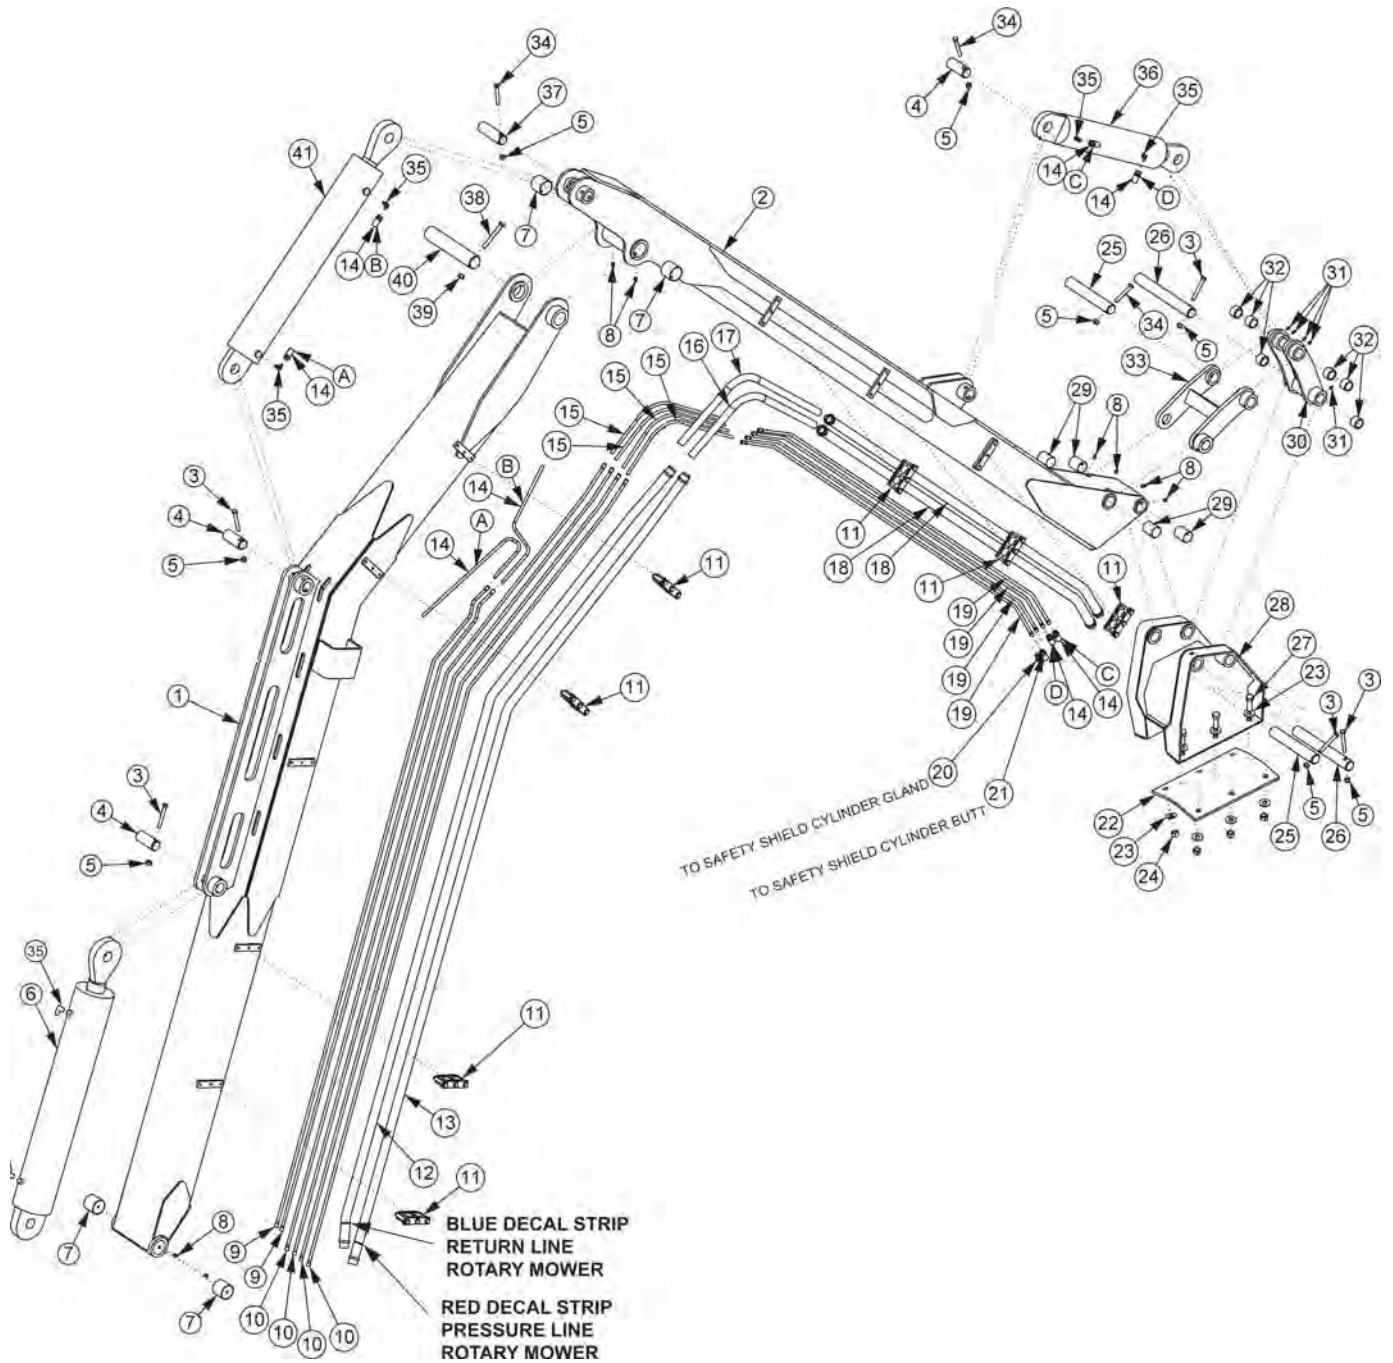


SABER XB BOOM ASSEMBLY

ITEM	PART NO.	QTY.	DESCRIPTION
1	06310031	1	BOOM, LONG, PRIMARY, SABER
2	06310032	1	BOOM, LONG, SECONDARY, SABER
3	21688	5	CAPSCREW, 7/16 x 3-1/4, NC
4	32375	3	PIN, 1-1/2 x 3-13/16, W/HOLE
5	21677	8	NYLOCK NUT, 7/16, NC
6	32363	1	CYLINDER, 5 x 25
7	32362	4	BEARING, DX, 2 x 2 LONG
8	6T3211	8	GREASE ZERK, 1/8 x STR
9	06506029	2	PRFRMD, 1, MAIN, SABER XB
10	06506030	4	PRFRMD, 2, MAIN, SABER XB
11	33215	7	TUBE CLAMP KIT
12	06506032	1	PRFRMD, 4, MAIN, SABER XB (ROTARY RETURN)
13	06506031	1	PRFRMD, 3, MAIN, SABER XB (ROTARY PRESSURE)
14	32818	4	HOSE, 3/8 x 24
15	32680	4	HOSE, 3/8 x 43
16	33543	1	HOSE, 1 x 39
17	33544	1	HOSE, 1 x 40
18	06506034	2	PRFRMD, 2, SEC, SABER XB
19	06506033	4	PRFRMD, 1, SEC, SABER XB
20	33223	1	HOSE, 3/8 x 70
21	33222	1	HOSE, 3/8 x 59
22	32309	1	PLATE, MOUNT, HEAD, MOWER
23	25270	12	FLATWASHER, 5/8, GR 8
24	6T2408	6	HEX NUT, 5/8, NF
25	32319	2	PIN, LINKAGE, BOOM
26	32313	2	PIN, MOUNT, SWIVEL, HEAD, MOWER
27	6T2290	6	CAPSCREW, 5/8 x 2, NF, GR 8
28	32311	1	MOUNT, SWIVEL, HEAD, MOWER
29	32321	4	BEARING, DX, 1-1/2 x 2 LONG
30	32745	1	LINKAGE W/BUSHINGS, SABER
31	6T3207	6	GREASE ZERK, 1/4
32	32318	6	BEARING, DX, 1-1/2 x 1 LONG
33	32316	1	LINKAGE, BOOM TO CYLINDER, SABER
34	21687	3	CAPSCREW, 7/16 x 3, NC
35	32810	6	ELBOW, 1/2ORB x 3/8MJ
36	32365	1	CYLINDER, 4 x 15
37	32372	1	PIN, CYLINDER, STAGE, 2ND
38	21741	1	CAPSCREW, 1/2 x 4, NC
39	21727	1	NYLOCK NUT, 1/2
40	32374	1	PIN, BOOM, STAGE 1ST TO 2ND
41	32364	1	CYLINDER, WELDED, 4-1/2 x 26-1/2

* ITEMS 22, 23, 24, 27 & 28 NOTUSED ON 60" ROTARY DECK

SABER FLAIL HEAD ASSEMBLY

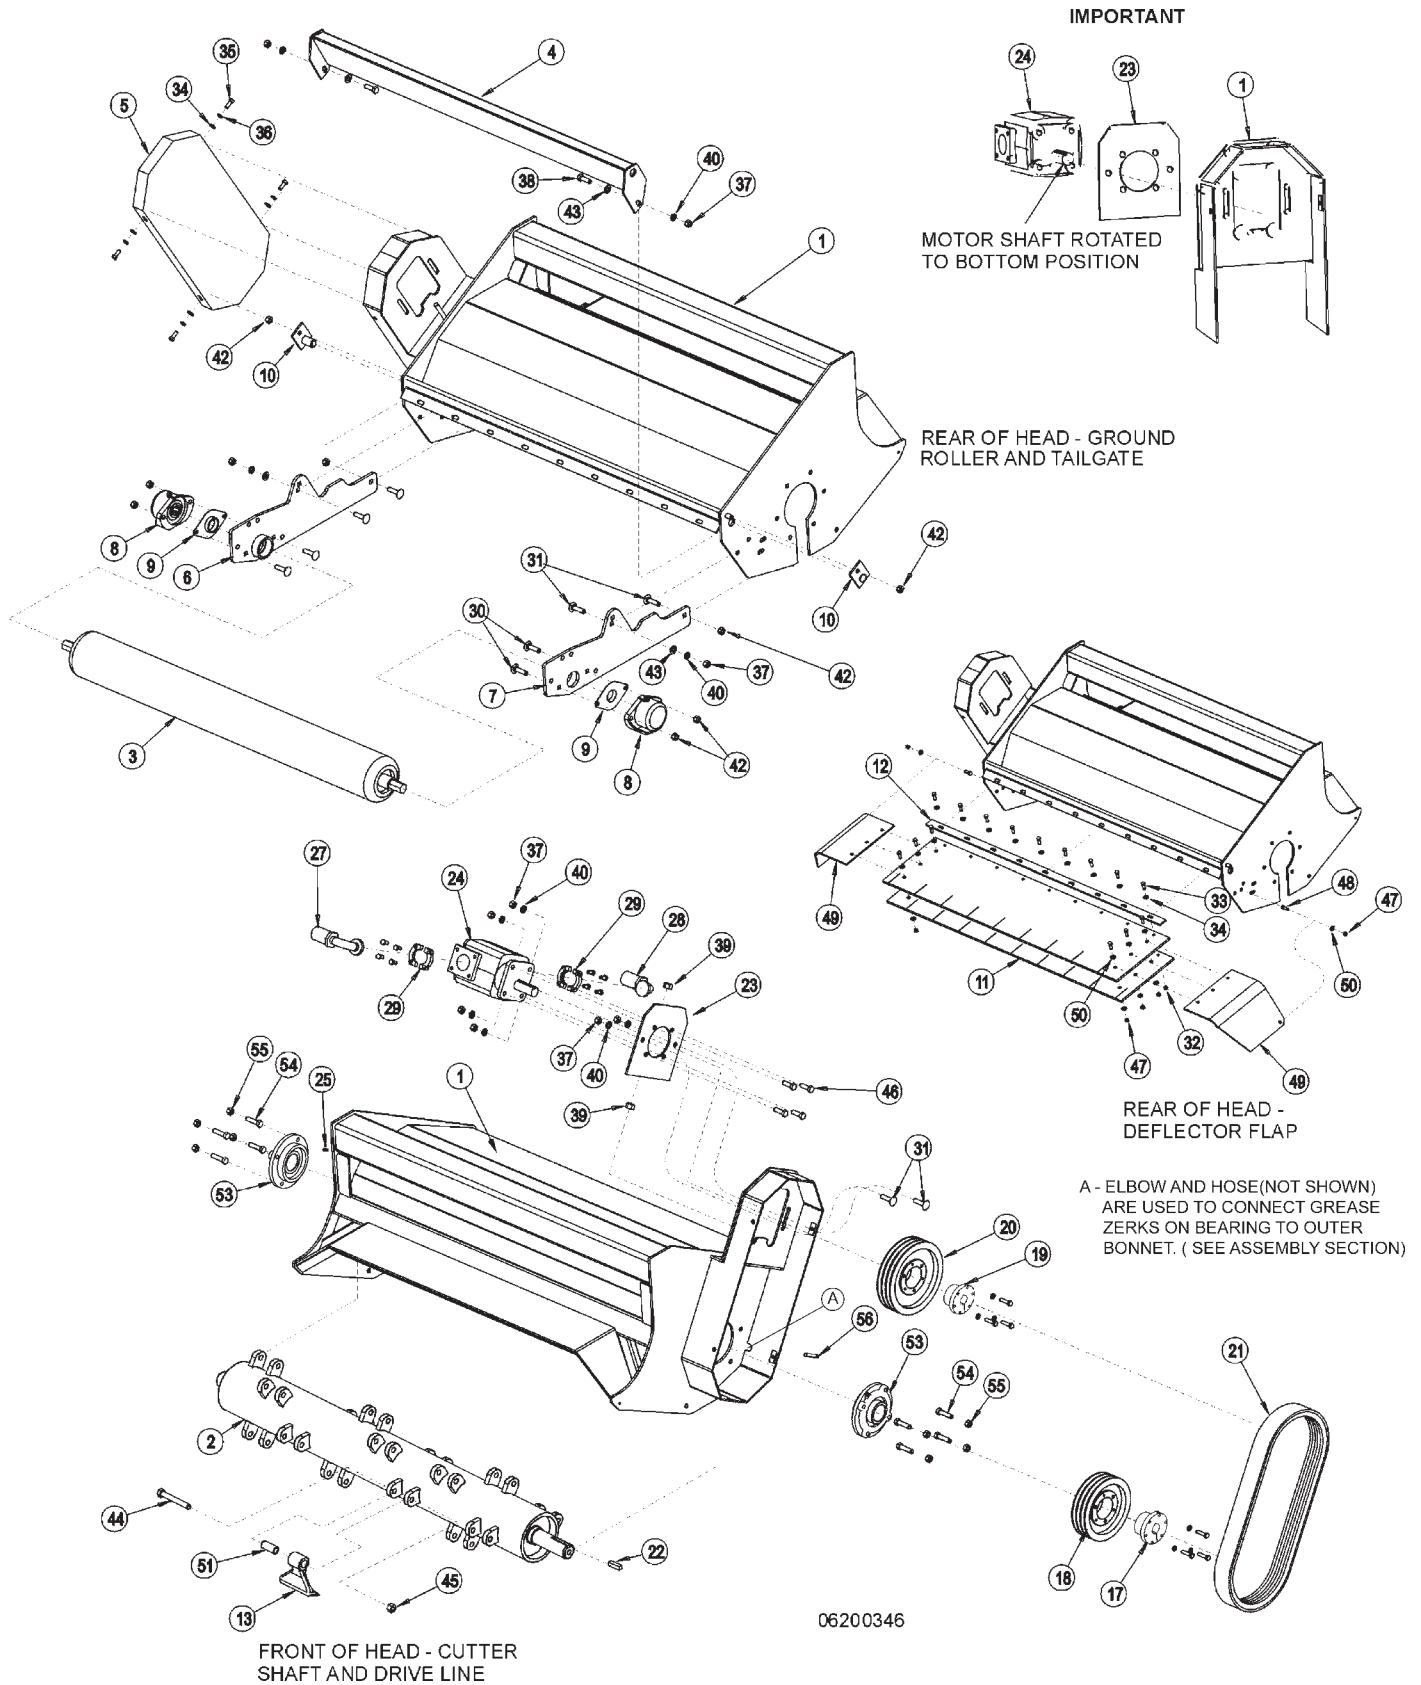


SABER FLAIL HEAD ASSEMBLY


ITEM	PART NO.	QTY.	DESCRIPTION
1	32220	1	BONNET
	06700014	AVAIL.	CUTTER SHAFT - COMPLETE WITH KNIVES
2	06320010	1	CUTTER SHAFT
3	32199	1	GROUND ROLLER
4	32218	1	TAILGATE
5	32302	1	BELT COVER
6	32301	1	GROUND ROLLER MOUNT - RIGHT
7	32300	1	GROUND ROLLER MOUNT - LEFT
8	703976	2	ROLLER BEARING
9	002037	2	ROLLER BEARING SEAL
10	02969051	2	PIN
11	32635	2	DEFLECTOR FLAP
12	32636	1	DEFLECTOR FLAP BAR
13	33622	18	CUTTER BLADE
17	02967328	1	BUSHING
18	02967325	1	PULLEY - 8 1/2" DIA.
19	32696	1	BUSHING
20	02967327	1	PULLEY - 9 3/4" DIA.
21	02967774	1	BELT SET
22	02958198	1	KEY
23	32404	1	MOTOR MOUNT
24	06504013	1	CURRENT MOTOR
	23174	1	ORIGINAL MOTOR
25	6T3211	1	GREASE ZERK
27	33551	1	HOSE - PRESSURE TO MOTOR 1" X 50"
28	33552	1	HOSE - RETURN FROM MOTOR 1" X 57"
29	TF4852	2	FLANGE KIT
30	27625	4	CARRIAGE BOLT - 1/2" X 1 3/4"
31	6T2267	6	CARRIAGE BOLT - 1/2" X 1 1/2"
32	21625	9	HEX NUT - 3/8"
33	21633	15	CAPSCREW - 3/8" X 1 3/4"
34	22016	13	FLATWASHER - 3/8"
35	21629	4	CAPSCREW - 3/8" X 3/4"
36	21988	4	LOCKWASHER - 3/8"
37	21725	10	HEX NUT - 1/2"
38	21731	2	CAPSCREW - 1/2" X 1 1/2"
39	21775	2	HEX NUT - 5/8"
40	21990	10	LOCKWASHER - 1/2"
42	6T2418	8	(PREVIOUS ASSY) -HEX NUT - 1/2" GRADE 8 STOVER
43	22018	4	FLATWASHER - 1/2" WIDE
44	33346	18	CAPSCREW - SPECIAL BLADE RETAINING PARTS
45	32674	18	HEX NUT - SPECIAL BLADE RETAINING PARTS
46	21732	4	CAPSCREW - 1/2" X 1 3/4"
47	21627	8	NYLOCK NUT - 3/8"
48	21631	2	CAPSCREW - 3/8" X 1 1/4"
49	32713	2	FLAP
50	6T2615	14	FENDER WASHER - 3/8"
51	33621	18	BUSHING
53	06520089	1	BEARING, SABER, CUTTERSHAFT
54	06530205	12	CAPSCREW, 7/16" X 1 1/2" (Installed from inside bonnet)
55	24701	8	HEX NUT, 7/16"
56	TF1033	1	GREASE ZERK

SBF50 DIRECT DRIVE FLAIL ASSEMBLY

BONNET ASSEMBLY

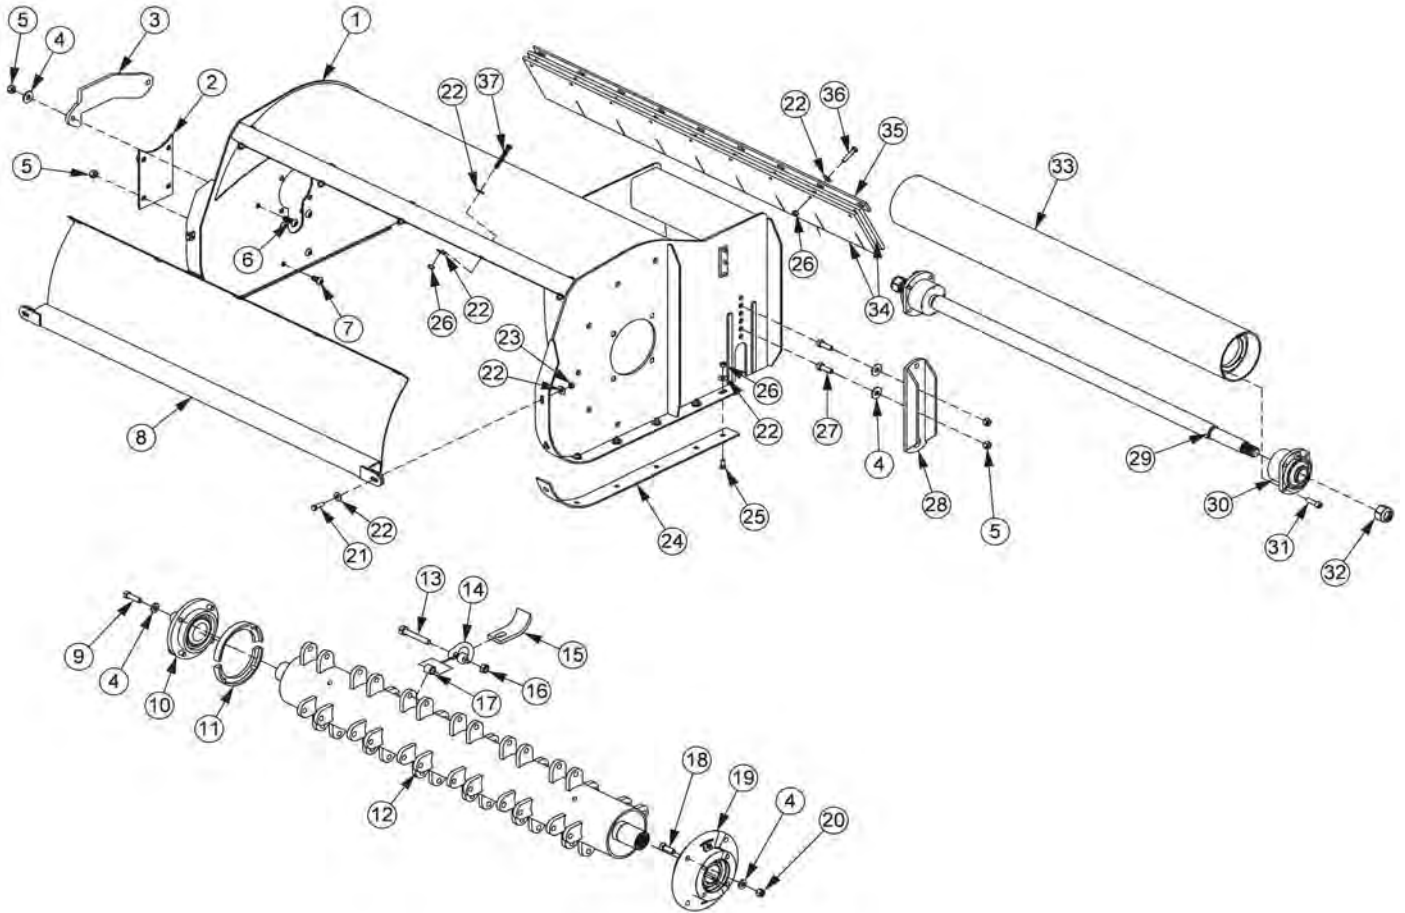

DRIVE ASSEMBLY

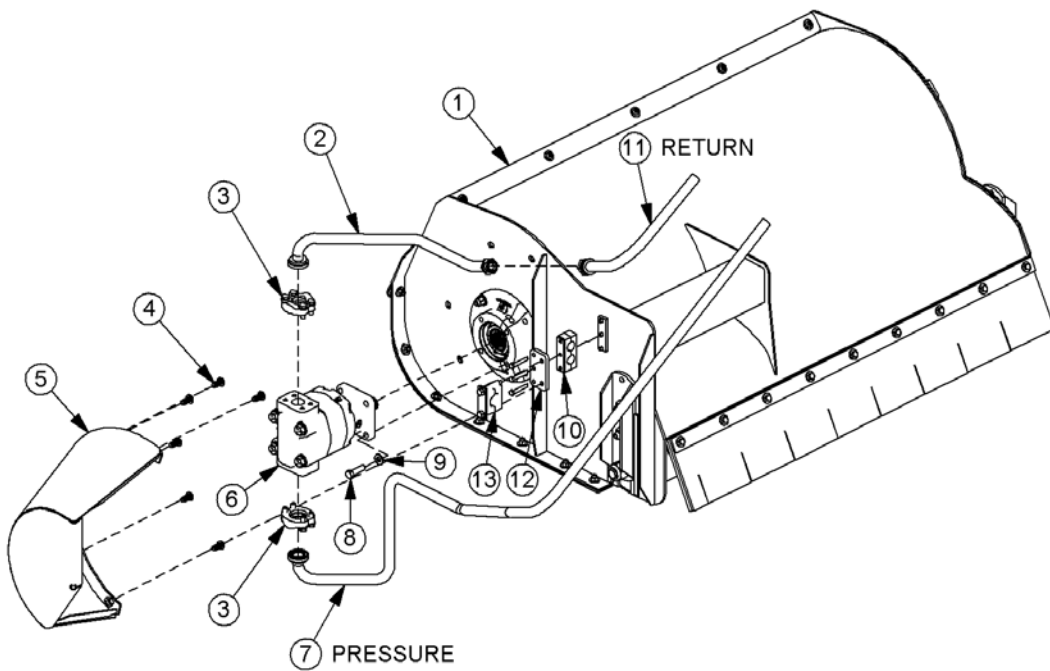

SBF50 DIRECT DRIVE FLAIL ASSEMBLY


BONNET ASSEMBLY

ITEM	PART NO.	QTY.	DESCRIPTION
1	06320112	1	BONNET
2	TF3007A	1	COVER PLATE
3	06410794	1	GUARD
4	06533006	14	FLATWASHER,1/2,GR 9
5	21727	10	NYLOCK NUT,1/2,NC
6	06530404	2	CAPSCREW,SKT/BUT HD,1/2 x 1-1/2,NC
7	06530401	4	CAPSCREW,SKT/BUT HD,1/2 x 1,NC
8	06320127	1	DOOR,SBF50 DD
9	06530218	4	CAPSCREW,1/2 x 1-3/4,NC,L9
10	06520211	1	BEARING W/ HOUSING
11	31204	1	STRING GUARD
	06700123	REF	CUTTERSHAFT ASSY
12	06370124	1	CUTTERSHAFT W/ INSERT
13	34786	24	KNIFE MNTG BOLT
14	34782	24	KNIFE MNTG CLEVIS
15	34780	24	KNIFE,CUP,BOOM FLAIL
16	6T2419	24	HEX NUT,9/16,STOVER
17	41725.01	24	SPACER
18	06537030	4	PLOW BOLT,1/2 x 1-3/4,NC,GR8
19	06520190	1	BEARING,DRIVE
20	06531005	4	HEX NUT,1/2,NC,L9
21	21631	2	CAPSCREW,3/8 x 1-1/4,NC,GR8
22	22016	35	FLATWASHER,3/8
23	21627	2	NYLOCK NUT,3/8,NC
24	06410802	2	SKID SHOE
25	6T2270	12	PLOW BOLT,3/8 x 1,NC
26	21625	26	HEX NUT,3/8,NC
27	21731	4	CAPSCREW,1/2 x 1-1/2,NC
28	06320125	2	BRACKET,GROUND ROLLER
29	31452	1	AXLE,TIE-ROD
30	TF1022	2	BEARING,GROUND ROLLER
31	6T2330	8	CAPSCREW,SKT HD,7/16 x 1-1/2,NC
32	6T1023R	2	NYLOCK NUT,1-1/8,NF
33	TF3405	1	GROUND ROLLER
34	TB1006A	2	FLAP
35	TB1008	1	FLAP BAR
36	21633	9	CAPSCREW,3/8 x 1-3/4,NC,GR8
37	06530402	5	CAPSCREW,SKT/BUT HD,3/8 x 2-3/4,NC

DRIVE ASSEMBLY

ITEM	PART NO.	QTY.	DESCRIPTION
1	06320112	REF	BONNET
2	06506040	1	PREFORMED TUBE
3	TF4852	2	FLANGE KIT
4	06530401	6	CAPSCREW,SKT/BUT HD,1/2 x 1,NC
5	06320126	1	MOTOR GUARD
6	06504003	1	MOTOR,DD
7	06500539	1	HOSE,1 x 82
8	06530223	4	CAPSCREW,9/16 x 1-3/4,NC,GR8
9	06533003	4	FLATWASHER,9/16,GR9,SAE
10	06505014	1	CLAMP KIT
11	06500386	2	HOSE,1 x 52
12	06401418	1	PLATE,CLAMP
13	06505017	1	CLAMP KIT,HOSE

SABER ROTARY ASSEMBLY

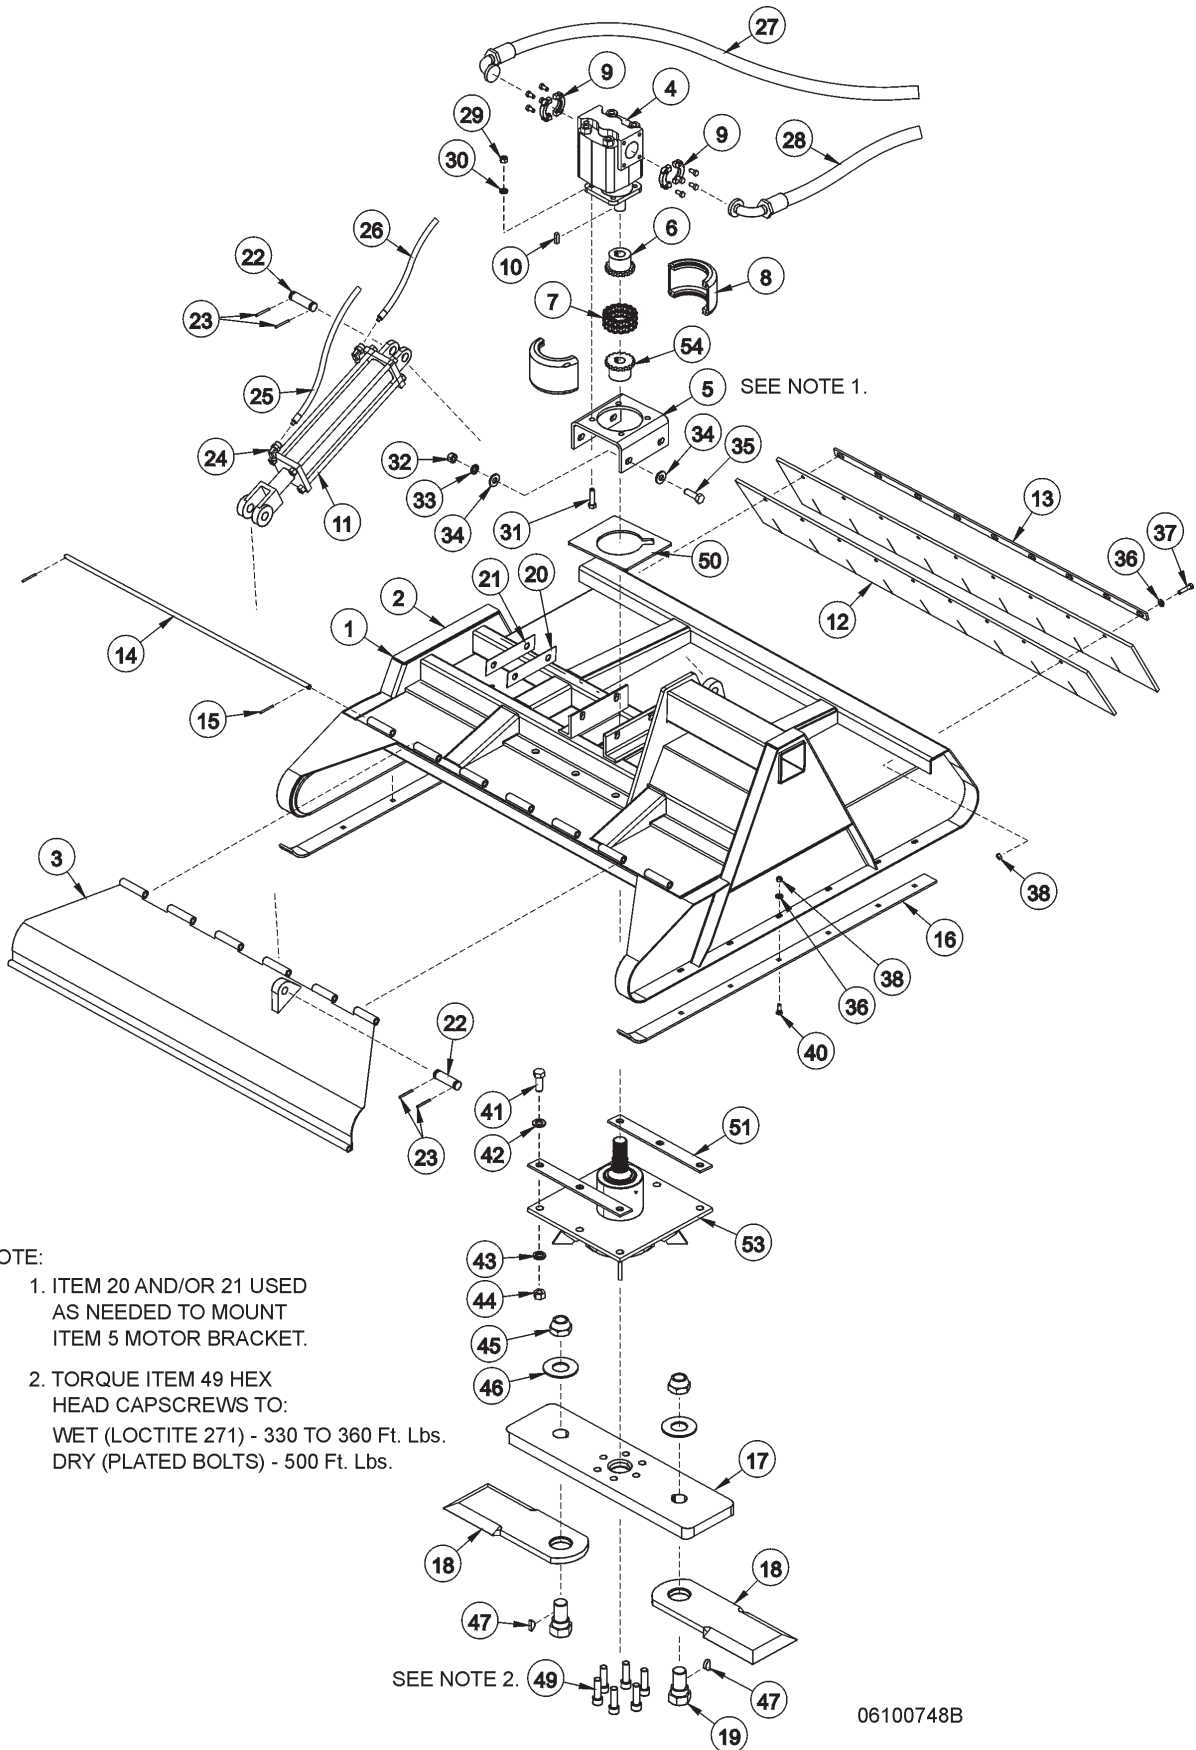

NOTE:

1. ITEM 20 AND/OR 21 USED AS NEEDED TO MOUNT ITEM 5 MOTOR BRACKET.
2. TORQUE ITEM 49 HEX HEAD CAPSCREWS TO:
WET (LOCTITE 271) - 330 TO 360 Ft. Lbs.
DRY (PLATED BOLTS) - 500 Ft. Lbs.


SEE NOTE 2. 49 47 19

06100748B

SABER ROTARY ASSEMBLY

ITEM	PART NO.	QTY	DESCRIPTION
1	06100748	OPT.	SABER ROTARY HEAD, COMPETE
2	32914	1	DECK, 50" ROTARY SABER
3	32915	1	SHIELD, 50 ROTARY SABER
4	06504012	1	CURRENT MOTOR
5	33198	1	MOTOR MOUNTING BRACKET
6	34479	1	SPROCKET, MOTOR
7	34482	1	CHAIN COUPLING
8	34483	1	COVER COUPLING
9	TF4852	2	FLANGE KIT
10	TF1124	1	KEY, WOODRUFF
11	33185	1	CYLINDER
12	32952	2	DEFLECTOR FLAP
13	33211	1	RETAINING BAR, FLAP
14	32951	1	HINGE PIN, SHIELD
15	33924	2	ROLLPIN, HINGE PIN
16	32936	2	SKID SHOE
17	34509	1	BAR, KNIFE MOUNTING
18	33203	1	KNIVES, SET OF 2, ROTARY, 3/4"
19	34883	2	BOLT, KNIFE
20	6T0822	3	SHIM, MOTOR MOUNT, THIN
21	6T0822A	3	SHIM, MOTOR MOUNT, THICK
22	TB1033	2	CLEVIS PIN
23	06537021	4	ROLL PIN, CLEVIS
24	3334306	2	ELBOW, 3/8MPX3/8MJ 90
25	33223	1	HOSE, CYLINDER 3/8" X 70"
26	33222	1	HOSE, CYLINDER 3/8" X 59"
27	33548	1	HOSE, MOTOR - RETURN (BLUE DECAL STRIP)
28	33549	1	HOSE, MOTOR - PRESSRUE (RED DECAL STRIP)
29	21725	4	HEX NUT - 1/2 NC
30	21990	4	LOCK WASHER - 1/2
31	21733	4	CAPSCREW - 1/2 X 2 NC
32	6T2408	4	HEX NUT - 5/8 NF
33	21992	4	LOCK WASHER - 5/8
34	33764	8	FLAT WASHER - 5/8
35	6T2290	4	CAPSCREW - 5/8 X 2 NF
36	22016	25	FLAT WASHER - 3/8
37	21633	9	CAPSCREW - 3/8 X 1-3/4 NC
38	21625	25	HEX NUT - 3/8 NC
40	6T2270	14	PLOW BOLT - 3/8 X 1 NC
41	33879	6	CAPSCREW - 3/4 X 2-1/2 NF
42	33880	6	FLAT WASHER - 3/4
43	21993	6	LOCK WASHER - 3/4
44	6T2413	6	HEX NUT - 3/4 NF
45	33860	2	HEX NUT, KNIFE
46	33859	2	FLAT WASHER, KNIFE
47	PT209	2	KEY, WOODRUFF
49	34475	6	HEX HD CAPSCREW - 3/4 X 2 NF
50	33614	1	PLATE, SPINDLE COLLAR
51	33617	2	SHIM, STRAP, SPINDLE
53	33219	1	SPINDLE
54	*	REF	REFER TO SPINDLE PARTS
*	33891	AVAIL	KIT BLADE (INCLUDES ITEMS 18,19,39,45,46,47)


SABER XB 50" ROTARY ASSY

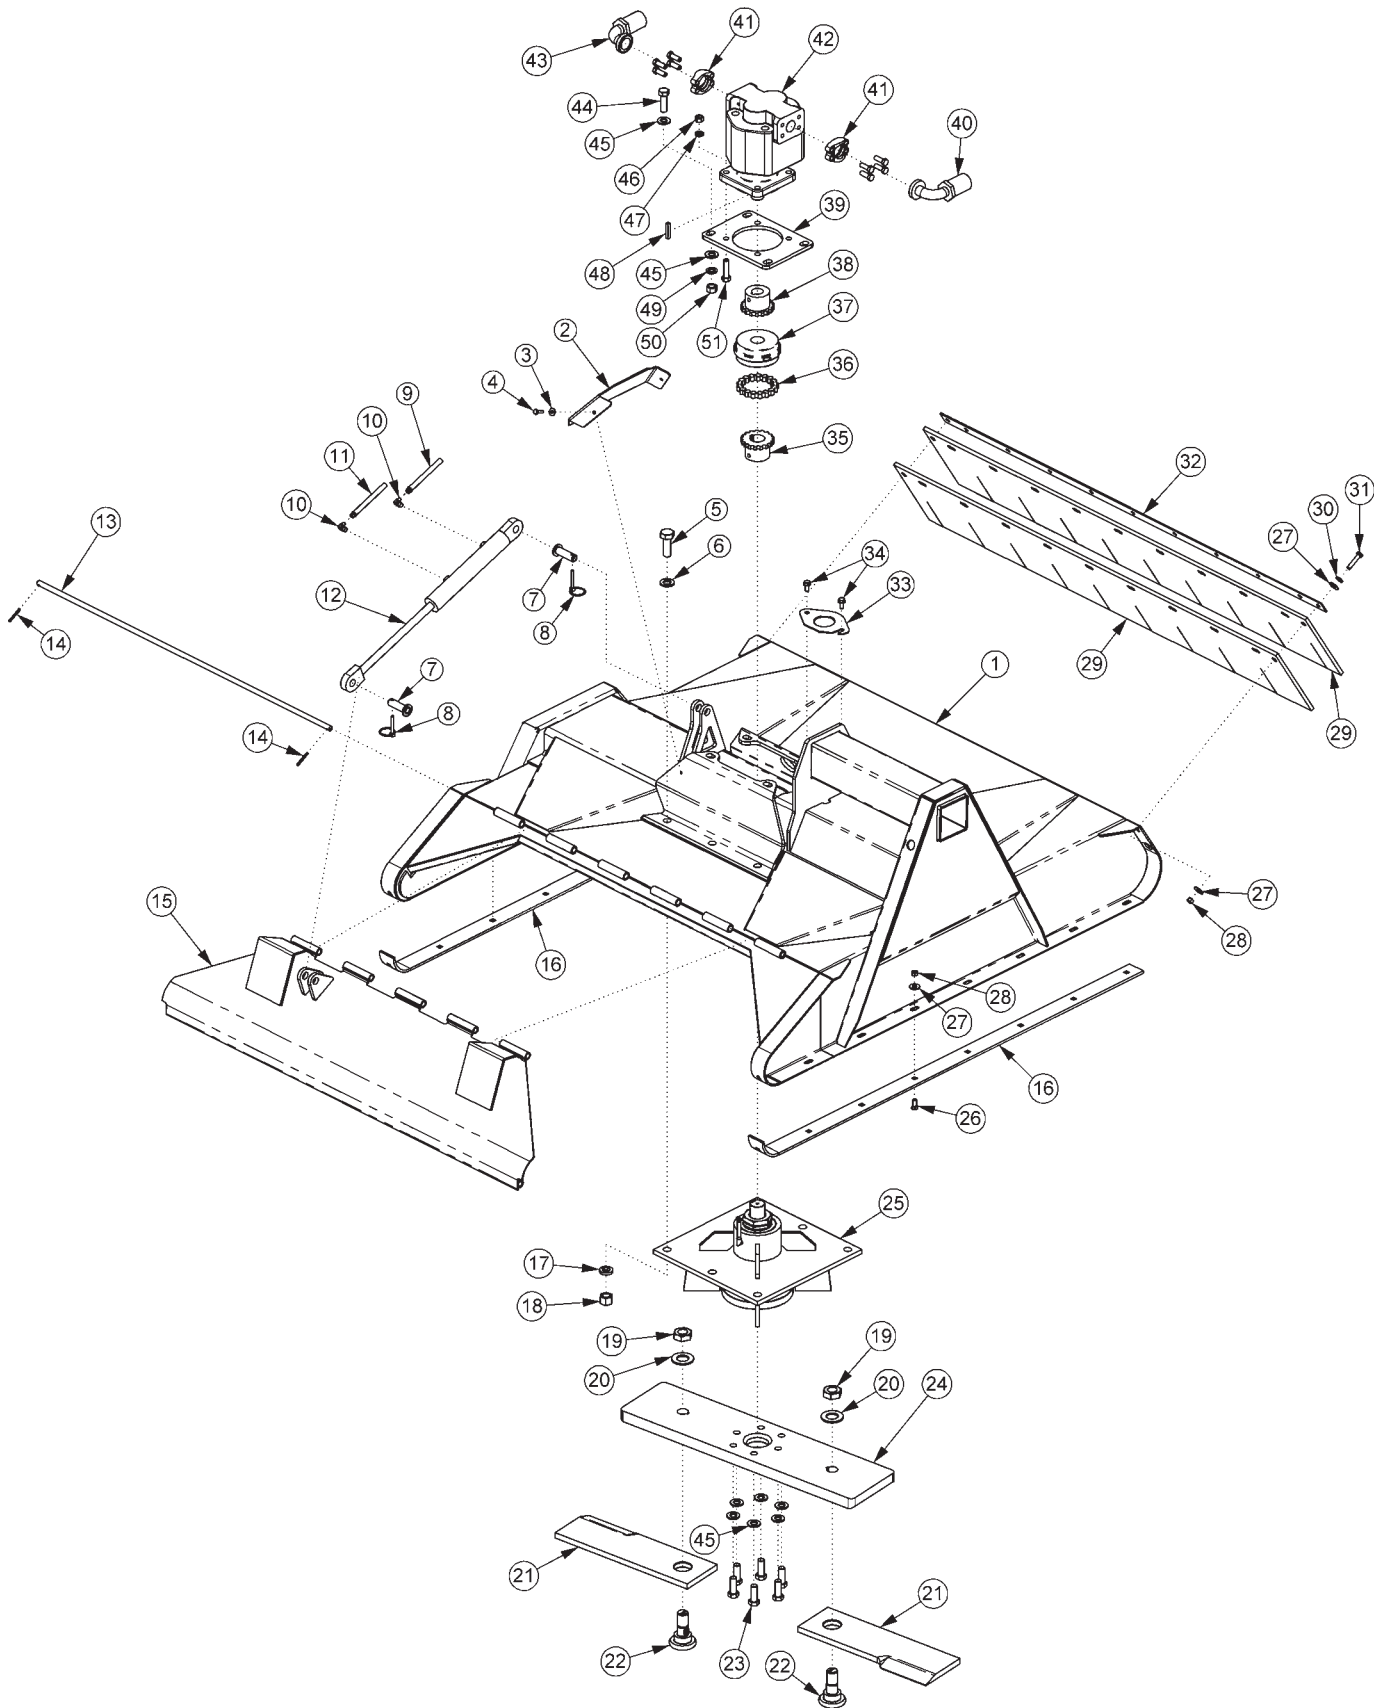

SABER XB 50" ROTARY ASSY

ITEM	PART NO.	QTY	DESCRIPTION
1	06741036	1	RTRY,TRB50,SBR,CPLT
2	06410439	1	COVER, MOTOR MNT
3	22014	2	FLATWASHER,1/4"
4	21530	2	CAPSCREW,1/4" X 1" NC
5	33879	6	CAPSCREW, 3/4 x 2 1/4,NF GR 8
6	33880	6	FLATWASHER,3/4",GR 8,SAE
7	33984	2	PIN,SHIELD,50"
8	RD1032	2	PIN,LYNCH 1/4" X 2"
9	06500291	1	HOSE, #6 x 74
10	32810	2	ELBOW, 1/2 X 3/8"
11	06500292	1	HOSE, #6 x 85
12	33785	1	CYL,1 1/2 x 8
13	33778	1	HINGE PIN,50" RTRY
14	6T3017	2	ROLLPIN, 3/16 x 1
15	33754	1	SHIELD,50"RTRY
16	33777	2	SKID SHOE,50" RTRY
17	21993	6	LOCKWASHER,3/4",GR 8
18	6T2413	6	HEX NUT,3/4,NF,GR 8
19	6T1023R	2	KNIFE MTG NUT,1 1/8,NF,GR8
20	06533002	2	FLATWASHER,1 1/8,GR8
21	06521001	2	KNIFE,TRB50,5/8
22	06538000	2	KNIFE MTG BOLT,5/8,SHOULDER
23	6T2259	6	CAPSCREW,5/8 x 1 3/4,NF,GR8
24	06400388	1	BAR,BLADE,TRB
25	6T1024H5	1	SPINDLE
26	6T2270	16	PLOW BOLT,3/8x1,NC,GR5
27	22016	29	FLATWASHER,3/8"
28	21625	29	HEX NUT,3/8",NC
29	33775	2	FLAP,50" RTRY
30	21988	13	LOCKWASHER,3/8"
31	21633	13	CAPSCREW, 3/8 x 1 3/4,NC
32	33774	1	FLAP RETAINER,50" RTRY
33	33779	1	PLATE,COVER,KNF HOLE
34	33881	2	CAPSCREW,FLG, 3/8 x 3/4,NC
35	*	REF	REFER TO SPINDLE PARTS
36	6t1029	1	CHAIN,COUPLING (5016)
37	6T1033	1	COVER,COUPLING
38	21223	1	SPROKET, 1-1/4" BORE
39	33776	1	MOTOR MOUNT,PLATE,50" RTRY
40	33549	1	HOSE - PRESSURE (RED DECAL STRIP)
41	TF4852	2	KIT,FLANGE #20
42	06504012	1	MOTOR,(M365-1 1/2" GEAR)
43	33548	1	HOSE - RETURN (BLUE DECAL STRIP)
44	6T2290	4	CAPSCREW,5/8x2,NF GR 8
45	33764	14	FLATWASHER,5/8",GR 8,SAE
46	21725	4	HEX NUT, 1/2" NC
47	21990	4	LOCKWASHER, 1/2"
48	TF1124	1	KEY,WOODRUFF
49	21992	4	LOCKWASHER, 5/8
50	6T2408	4	HEX NUT, 5/8, NF
51	21733	4	CAPSCREW, 1/2 x 2,NC
52	6T2259	6	CAPSCREW,5/8x1 3/4,NF GR 8


SABER 60" ROTARY MOWER ASSY

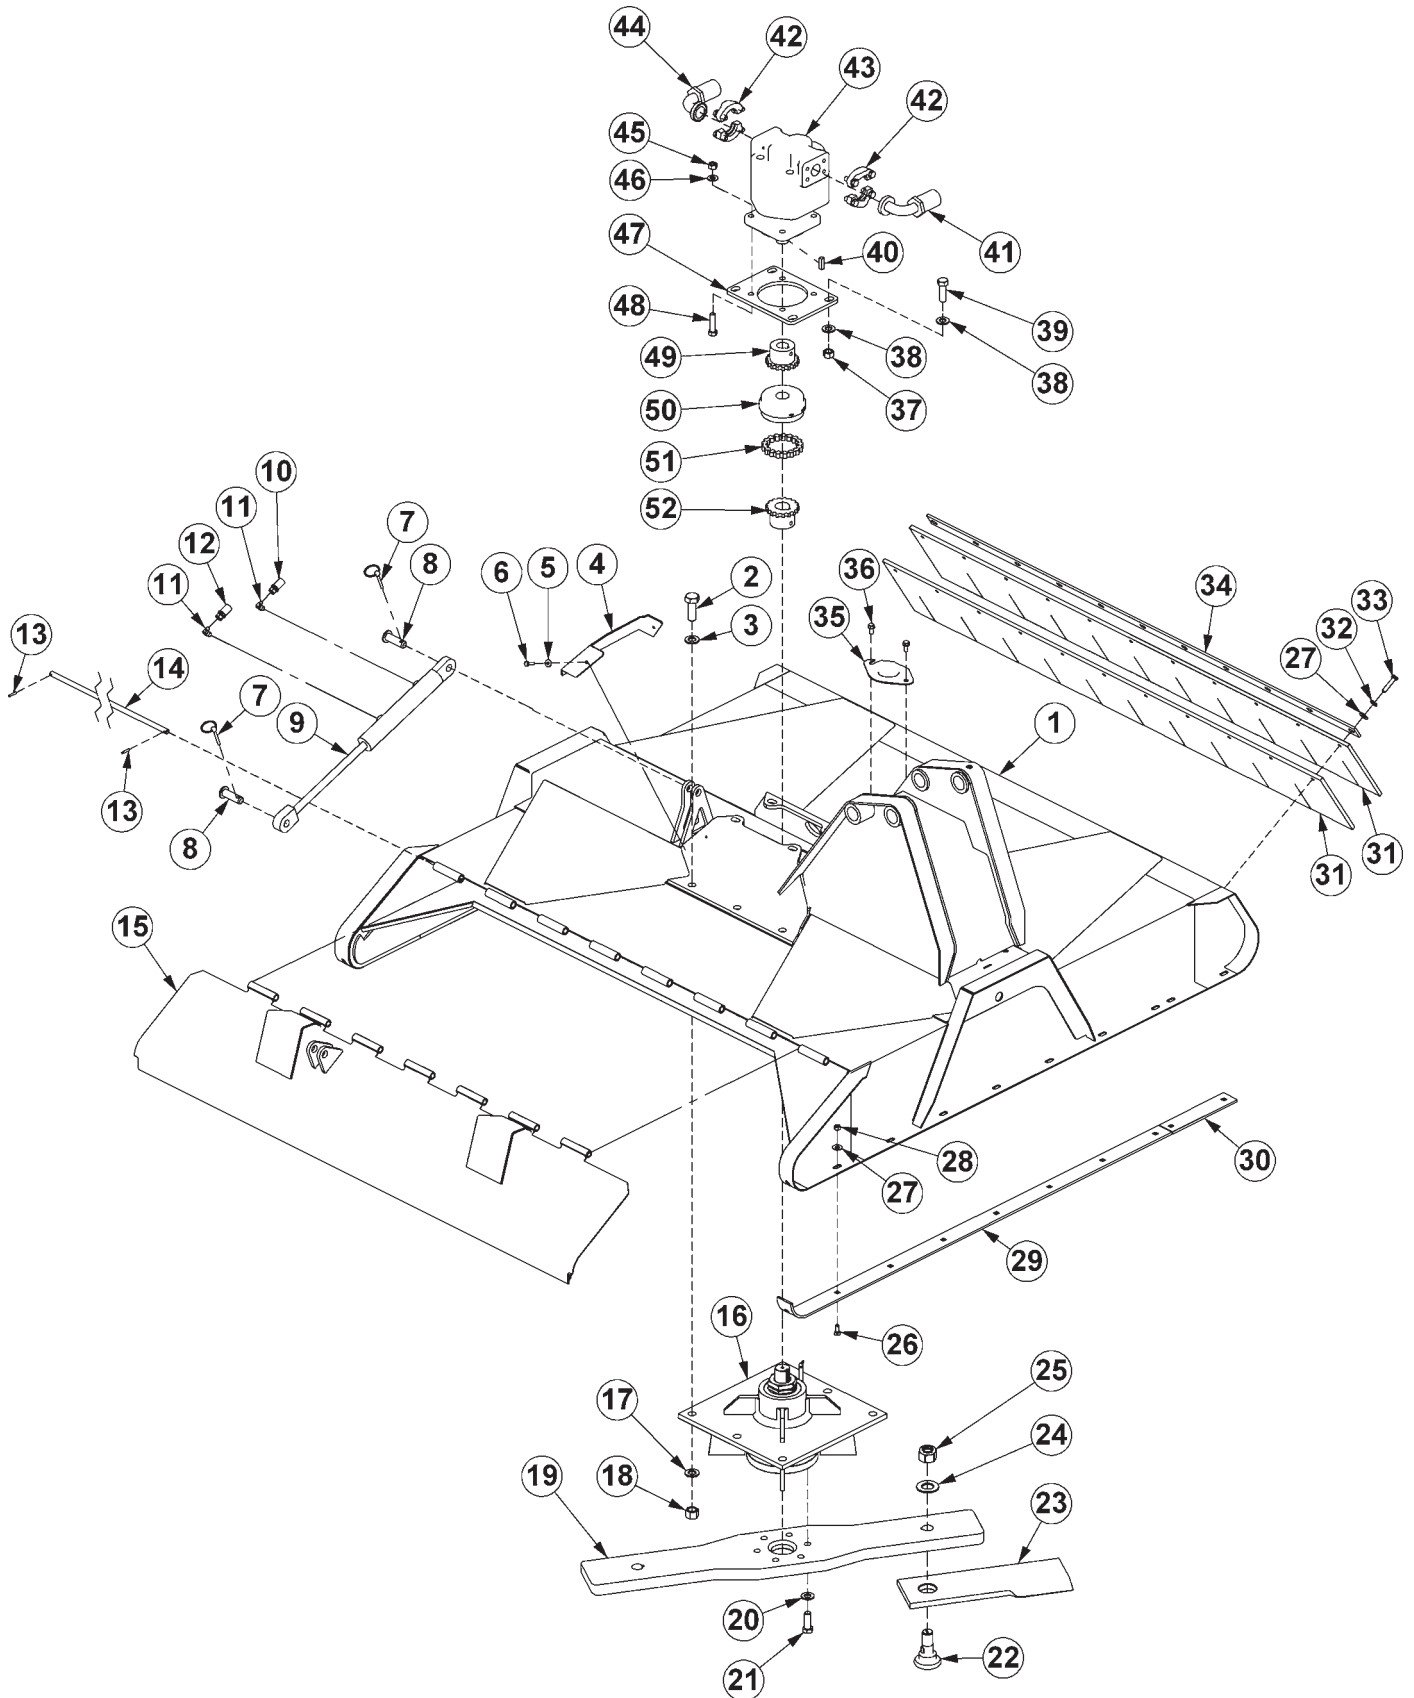

SABER 60" ROTARY MOWER ASSY

ITEM	PART NO.	QTY	DESCRIPTION
1	06741072	1	RTRY,TRB50,SBR,CPLT
2	33879	6	CAPSCREW, 3/4 x 2 1/4,NF GR 8
3	33880	6	FLATWASHER,3/4",GR 8,SAE
4	06410439	1	COVER, MOTOR MNT
5	22014	2	FLATWASHER,1/4"
6	21530	2	CAPSCREW,1/4" X 1" NC
7	RD1032	2	PIN,LYNCH 1/4" X 2"
8	33984	2	PIN,SHIELD
9	33785	1	CYL,1 1/2 x 8
10	06500292	1	HOSE, #6 x 85
	06500389	1	HOSE,#6 x 88 (SABER MB)
11	32810	2	ELBOW, 1/2 X 3/8"
12	06500384	1	HOSE, #6 x 94
	06500366	1	HOSE,#6 x 98 (SABER MB)
13	6T3017	2	ROLLPIN, 3/16 x 1
14	06420139	1	HINGE PIN,60" RTRY
15	06320162	1	SHIELD,60"RTRY
16	6T1024H5	1	SPINDLE
17	21993	6	LOCKWASHER,3/4",GR 8
18	6T2413	6	HEX NUT,3/4,NF,GR 8
19	06400690	1	BAR,BLADE,60" RTRY
20	33764	6	FLATWASHER,5/8",GR 8,SAE
21	6T2259	6	CAPSCREW,5/8 x 1 3/4,NF,GR 8
22	06538000	2	KNIFE MTG BOLT,5/8 SHOULDER
23	06521001	2	KNIFE,TRB50,5/8"
24	06533002	2	FLATWASHER,1 1/8,GR 8
25	6T1023R	2	KNIFE MTG NUT,1 1/8,NF,GR 8
26	6T2270	20	PLOW BOLT,3/8x1,NC,GR5
27	22016	31	FLATWASHER,3/8"
28	21625	20	HEX NUT,3/8",NC
29	33777	2	SKID SHOE,50" RTRY
30	06401245	2	SKID SHOE,60" RTRY
31	06520238	2	FLAP,DEFLECTOR,60" RTRY
32	21988	11	LOCKWASHER,3/8"
33	21633	11	CAPSCREW, 3/8 x 1 3/4,NC
34	6T0823	1	FLAP RETAINER,60" RTRY
35	33779	1	PLATE,COVER,KNF HOLE
36	33881	2	CAPSCREW,FLG, 3/8 x 3/4,NC
37	6T2408	4	HEX NUT, 5/8, NF
38	33764	8	FLATWASHER,5/8",GR 8,SAE
39	6T2290	4	CAPSCREW,5/8x2,NF GR 8
40	TF1124	1	KEY,WOODRUFF
41	33549	1	HOSE - PRESSURE (RED DECAL STRIP)
	33548	1	HOSE - PRESSURE (SABER MB) (RED DECAL STRIP)
42	TF4852	2	KIT,FLANGE #20
43	06504011	1	MOTOR,(M365-2 1/4" GEAR)
44	33548	1	HOSE - RETURN (BLUE DECAL STRIP)
	06500495	1	HOSE - RETURN (SABER MB) (BLUE DECAL STRIP)
45	21727	4	NYLOCK NUT, 1/2, NC
46	06533004	4	FLATWASHER,1/2",GR 8,SAE
47	33776	1	MOTOR MOUNT,PLATE,50" RTRY
48	21733	4	CAPSCREW, 1/2 x 2,NC
49	21223	1	SPROKET, 1-1/4" BORE
50	6T1033	1	COVER,COUPLING
51	6T1029	1	CHAIN,COUPLING (5016)
52	*	REF	REFER TO SPINDLE PARTS


RESERVOIR TANK FILTER ASSEMBLY

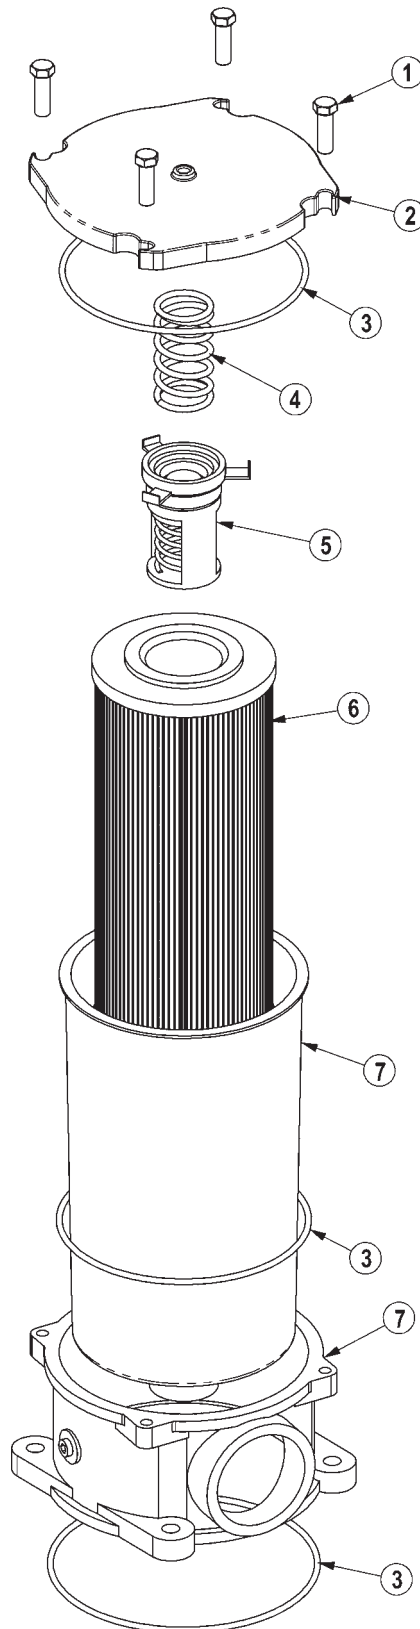

RESERVOIR TANK FILTER ASSEMBLY

ITEM	PART NO.	QTY.	DESCRIPTION
	06505044	AVAIL	FILTER ASSY SAE 10 MICRON
1	28583	4	CAPSCREW,8MMX25MM(1.25 PITCH)
2	06505045	1	COVER
3	06505046	1	SEAL KIT
4	06505047	1	SPRING
5	06505048	1	BYPASS
6	35259	1	FILTER,10 MIC,RETURN LINE
7	06505049	1	CAN/BODY


5SP DANFOSS - LIFT VALVE

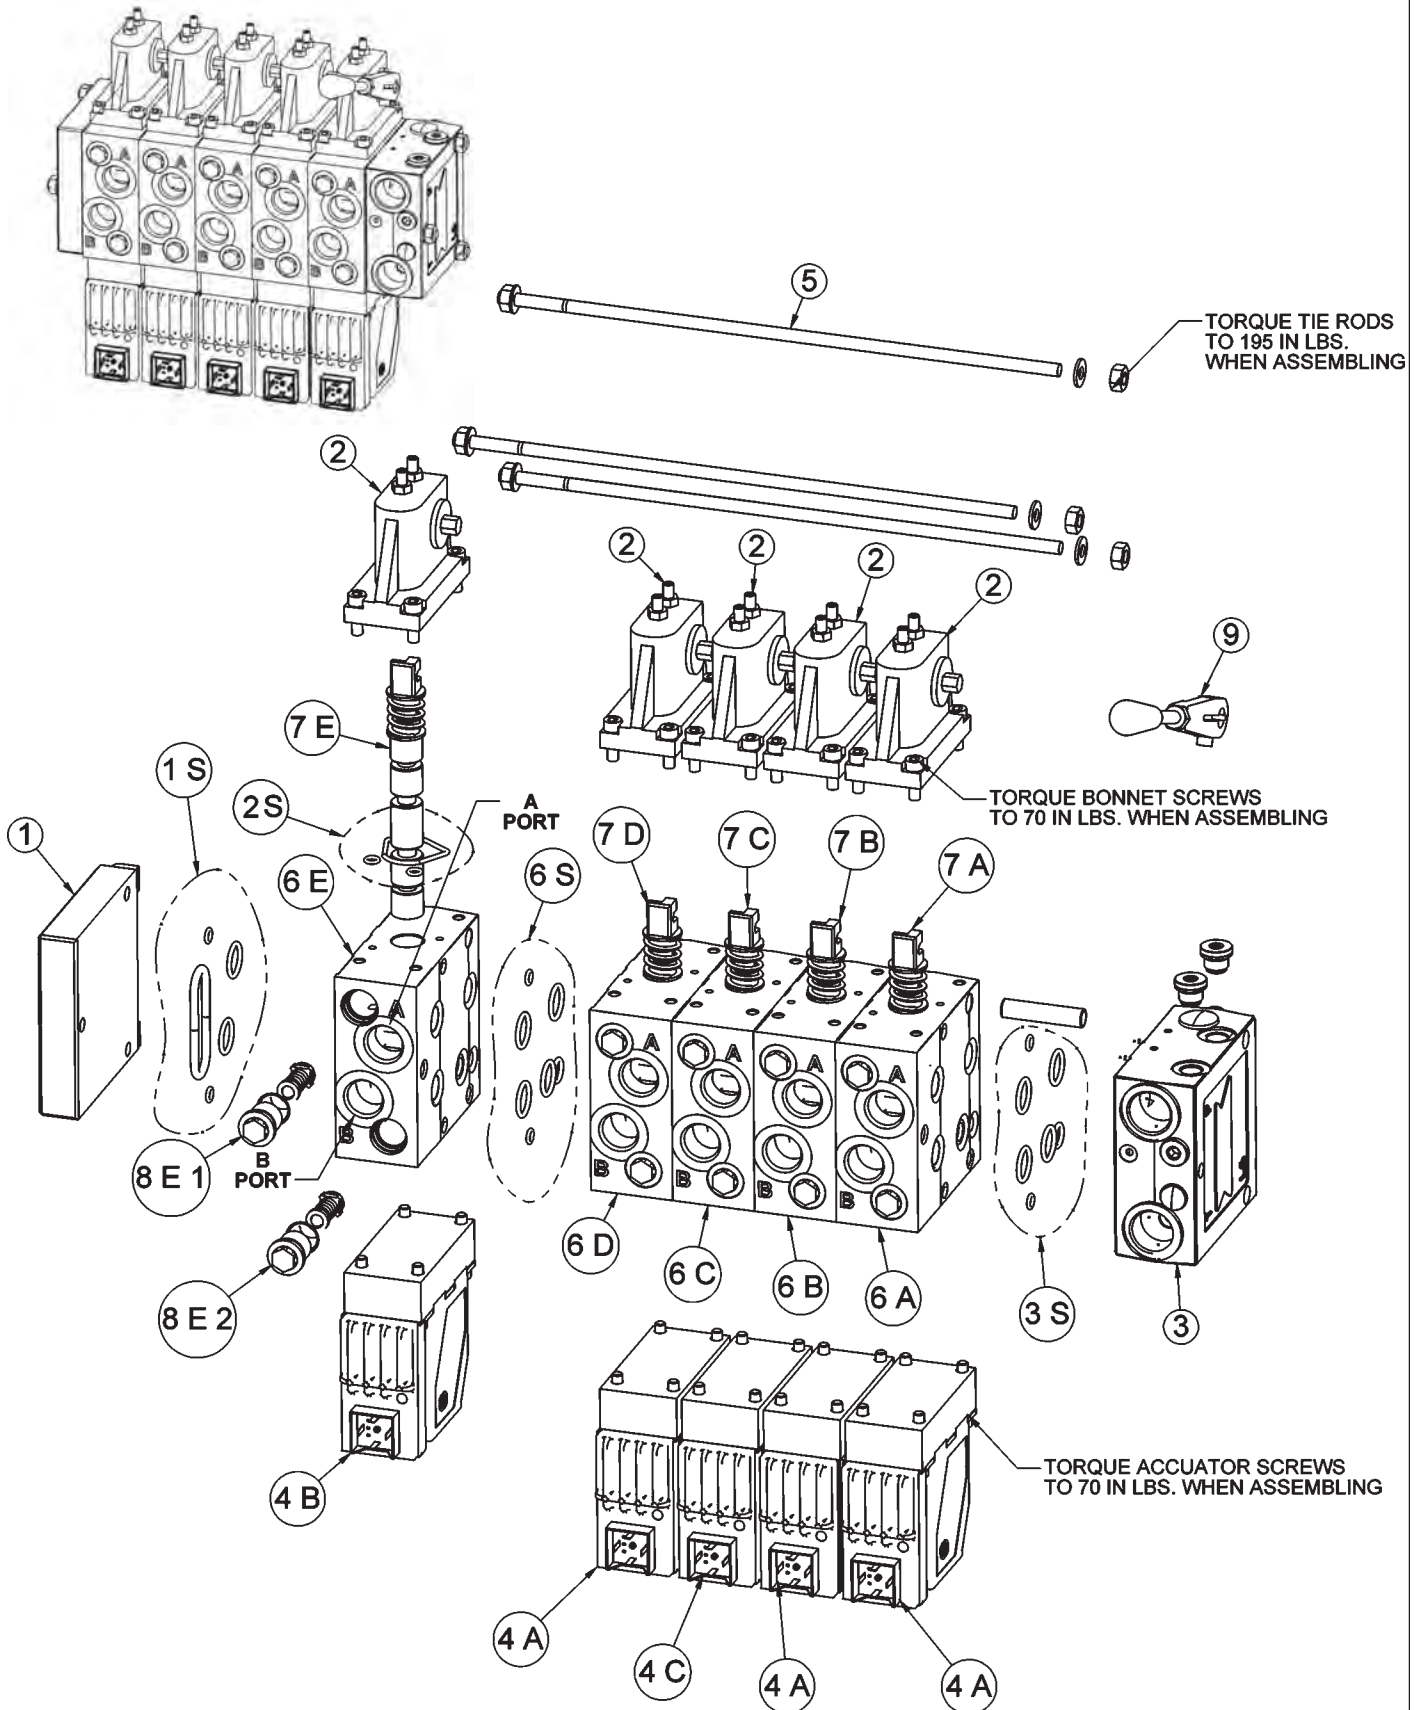

5SP DANFOSS - LIFT VALVE

ITEM	PART NO.	QTY.	DESCRIPTION
	06502096		VLV,5SP,32PVG
1	06502074	1	END PLATE
1S	06505013	1	END PLATE SEAL KIT
2	*	5	BONNET
2S	06505042	1	BONNET SEAL KIT
2A	06502073	1	MAIN BOOM BONNET
2B	06502073	1	SECONDARY BOOM BONNET
2B	06502073	1	DECK ROLL BONNET
2B	06502073	1	BOOM SWIVEL BONNET
2B	06502073	1	DECK SHIELD BONNET
3	34308	1	INLET SECTION
3S	06505013	1	INLET SECTION SEAL KIT
4	*	5	ELECTRONIC ACCUATOR
4A	06502101	1	MAIN BOOM ELECTRONIC ACCUATOR
4A	06502101	1	SECONDARY BOOM ELECTRONIC ACCUATOR
4C	06502100	1	DECK ROLL ELECTRONIC ACCUATOR
4A	06502101	1	BOOM SWIVEL ELECTRONIC ACCUATOR
4B	06502099	1	DECK SHIELD ELECTRONIC ACCUATOR
5	42202	1	TIE-BOLT KIT
6	*	5	SECTION
6S	06505013	1	SECTION SEAL KIT
6A	42698	1	MAIN BOOM SECTION
6B	42698	1	SEC BOOM SECTION
6C	06502076	1	DECK ROLL SECTION
6D	42698	1	BOOM SWIVEL SECTION
6E	06502077	1	SHIELD SECTION
7	*	5	SPOOL
7A	42697	1	MAIN BOOM SPOOL
7B	42697	1	SEC BOOM SPOOL
7C	4242106	1	DECK ROLL SPOOL
7D	06502073	1	BOOM SWIVEL SPOOL
7E	42201	1	DECK SHIELD SPOOL
8	*	10	ANTI CAV/SHOCK RELIEF
8A1	42650	1	MAIN BOOMA PORT RELIEF
8A2	06502069	1	MAIN BOOM B PORT RELIEF
8B1	42650	1	SEC BOOMA PORT RELIEF
8B2	42295	1	SEC BOOM B PORT RELIEF
8C1	42296	1	DECK ROLLA PORT RELIEF
8C2	42295	1	DECK ROLL B PORT RELIEF
8D1	42295	1	BOOM SWIVELA PORT RELIEF
8D2	42295	1	BOOM SWIVEL B PORT RELIEF
8E1	06502069	1	DECK SHIELDA PORT RELIEF
8E2	06502069	1	DECK SHIELD B PORT RELIEF
9	33459	1	HANDLE

5 SP HUSCO

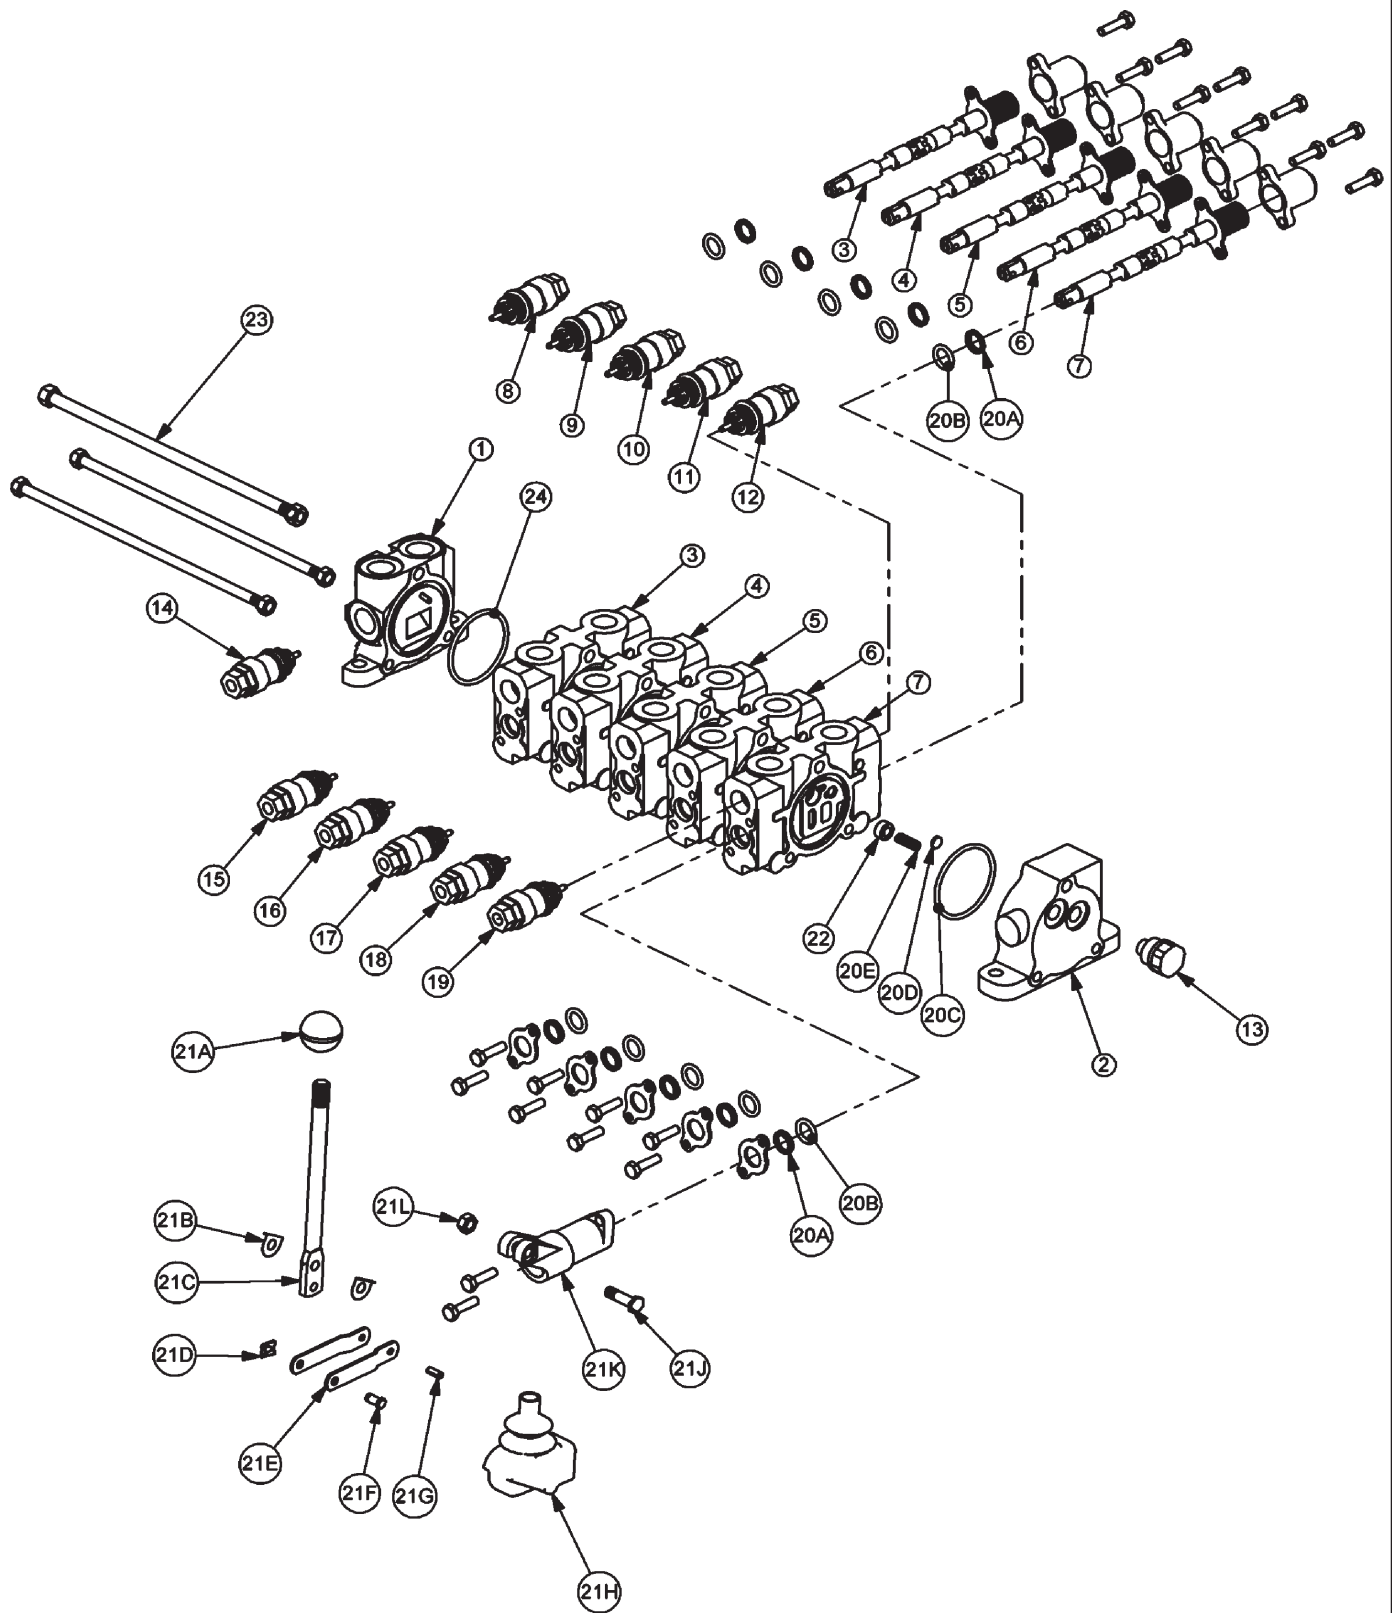


5 SP HUSCO

06502103

ITEM	PART NO.	QTY	DESCRIPTION
1	31595	1	INLET END COVER
2	31594	1	END COVER, LOAD SENSE
3	31597	1	VALVE SECTION (DOUBLE ACTING, CENTER SPRING)
4	31597	1	VALVE SECTION (DOUBLE ACTING, CENTER SPRING)
5	31597	1	VALVE SECTION (DOUBLE ACTING, CENTER SPRING)
6	31598	1	VALVE SECTION (DOUBLE ACTING, CENTER SPRING, METERED)
7	31597	1	VALVE SECTION (DOUBLE ACTING, CENTER SPRING)
8	06503067	1	RELIEF PLUG
9	06502003	1	RELIEF VALVE, 2500 PSI
10	31862	1	RELIEF VALVE, 2175 PSI
11	TB1017H	1	RELIEF VALVE, 1750 PSI
12	22588	1	RELIEF VALVE, 500 PSI
13	06503068	1	RELIEF PLUG
14	6T4209	1	RELIEF PLUG
15	06502085	1	RELIEF VALVE, 3000 PSI
16	TB1017H	1	RELIEF VALVE, 1750 PSI
17	TB1017H	1	RELIEF VALVE, 1750 PSI
18	TB1017H	1	RELIEF VALVE, 1750 PSI
19	22588	1	RELIEF VALVE, 500 PSI
20	31593	5	VALVE SEAL KIT (FOR ONE SECTION)
20A		2	WIPER
20B		2	O-RING SMALL
20C		1	O-RING LARGE
20D		1	SHUTTLE DISC
20E		1	SPRING
21	TB1017L	5	LEVER KIT (FOR ONE SECTION)
21A		1	LEVER KNOB
21B		1	LEVER
21C		2	LEVER WASHER
21D		1	LEVER CLIP
21E		2	LINKAGE
21F		1	LEVER PIN
21G		1	ROLL PIN
21H		1	LEVER BOOT
21J		1	LEVER BOLT
21K		1	LEVER DUST COVER
21L		1	LEVER NUT
22	31603	5	COMPENSATOR
23	TB1017V	1	TIE ROD KIT
24	24214	1	O-RING, LARGE

4 SP HUSCO

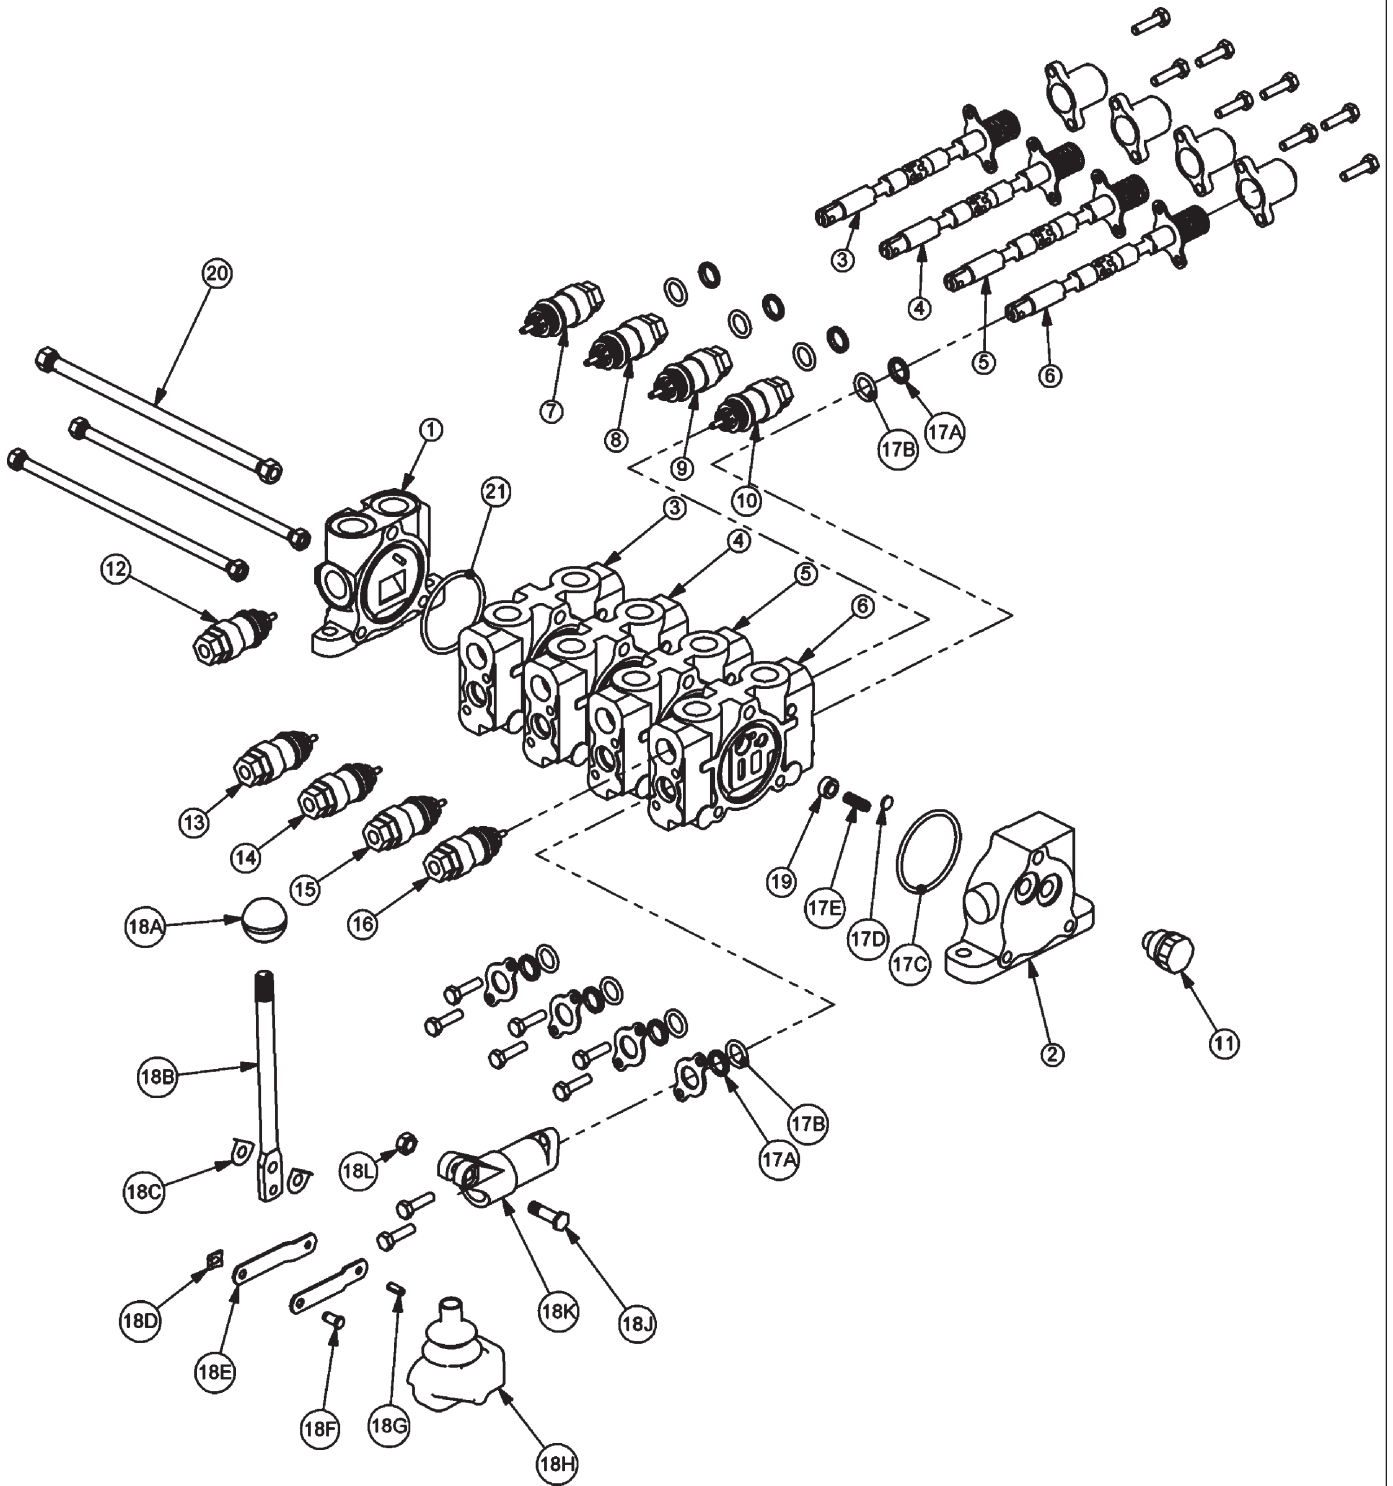


4 SP HUSCO

06502104

ITEM	PART NO.	QTY	DESCRIPTION
1	31595	1	INLET END COVER
2	31594	1	END COVER, LOAD SENSE
3	31597	1	VALVE SECTION (DOUBLE ACTING, CENTER SPRING)
4	31597	1	VALVE SECTION (DOUBLE ACTING, CENTER SPRING)
5	31600	1	VALVE SECTION (DOUBLE ACTING, DETENT - FLOAT)
6	31598	1	VALVE SECTION (DOUBLE ACTING, CENTER SPRING, METERED)
7	06503067	1	RELIEF PLUG
8	06502003	1	RELIEF VALVE, 2500 PSI
9	31862	1	RELIEF VALVE, 2175 PSI
10	TB1017H	1	RELIEF VALVE, 1750 PSI
11	06503068	1	RELIEF PLUG
12	6T4209	1	RELIEF PLUG
13	06502085	1	RELIEF VALVE, 3000 PSI
14	TB1017H	1	RELIEF VALVE, 1750 PSI
15	TB1017H	1	RELIEF VALVE, 1750 PSI
16	TB1017H	1	RELIEF VALVE, 1750 PSI
17	31593	4	VALVE SEAL KIT (FOR ONE SECTION)
17A		2	WIPER
17B		2	O-RING SMALL
17C		1	O-RING LARGE
17D		1	SHUTTLE DISC
17E		1	SPRING
18	TB1017L	4	LEVER KIT (FOR ONE SECTION)
18A		1	LEVER KNOB
18B		1	LEVER
18C		2	LEVER WASHER
18D		1	LEVER CLIP
18E		2	LINKAGE
18F		1	LEVER PIN
18G		1	ROLL PIN
18H		1	LEVER BOOT
18J		1	LEVER BOLT
18K		1	LEVER DUST COVER
18L		1	LEVER NUT
19	31603	4	COMPENSATOR
20	TB1017U	1	TIE ROD KIT
21	24214	1	O-RING, LARGE


HYDRO PUMP

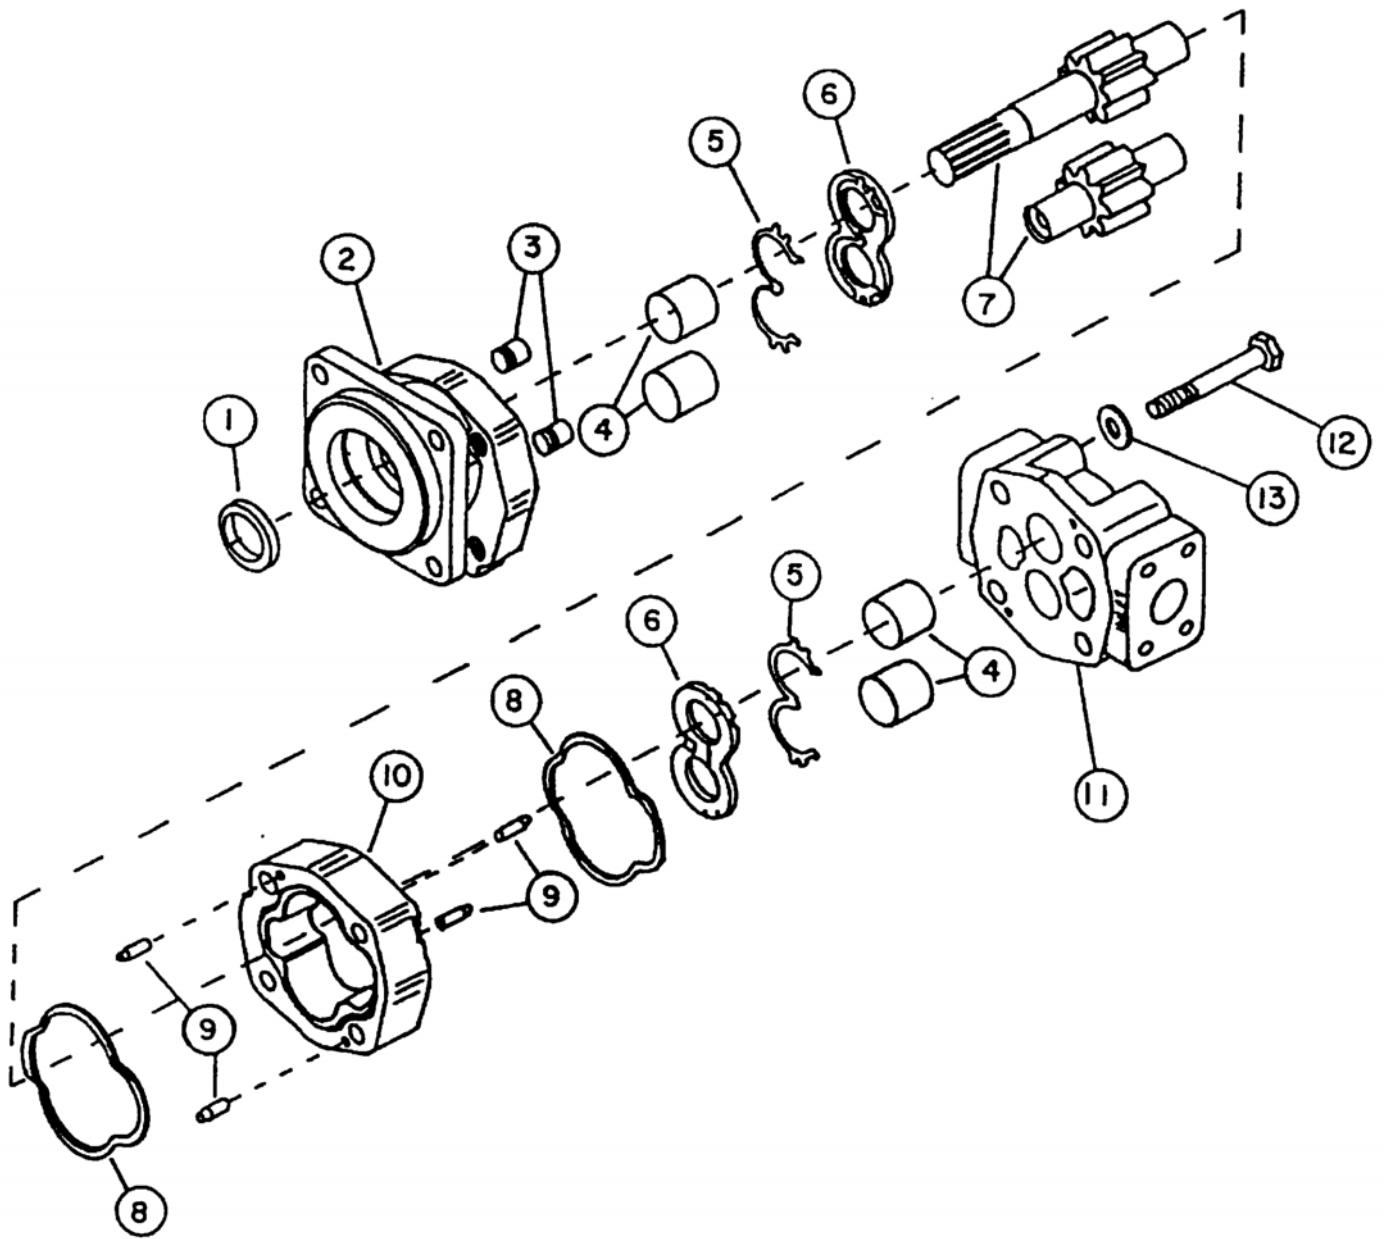

HYDRO PUMP & TSR MOTOR

ITEM	PART NO.	QTY.	DESCRIPTION
	23152	AVAIL	PUMP ASSEMBLY 1 3/4" COMPLETE
1	22765	1	SEAL (INCLUDED IN SEAL KIT)
2	22766	1	SHAFT END COVER
3	22767	2	CHECK AND END COVER
4	22768	2	BUSHING
5	22769	2	CHANNEL SEAL (INCLUDED IN SEAL KIT)
6	22770	2	THRUST PLATE (INCLUDED IN SEALKIT)
7	22771	SET	DRIVE SHAFT AND GEAR SET 1 3/4"
8	22772	2	GASKET SEAL (INCLUDED IN SEAL KIT)
9	22773	4	DOWEL PINS
10	22774	1	GEAR HOUSING 1 3/4"
11	22779	1	PORT END COVER
12	23824	4	STUDS
13	22781	SET	WASHER
	6T5322	AVAIL	SEAL APPLICATOR TOOL
	24150	AVAIL	SEAL KIT (INCLUDES 1, 5, 6 AND 8)


ROTARY MOTOR

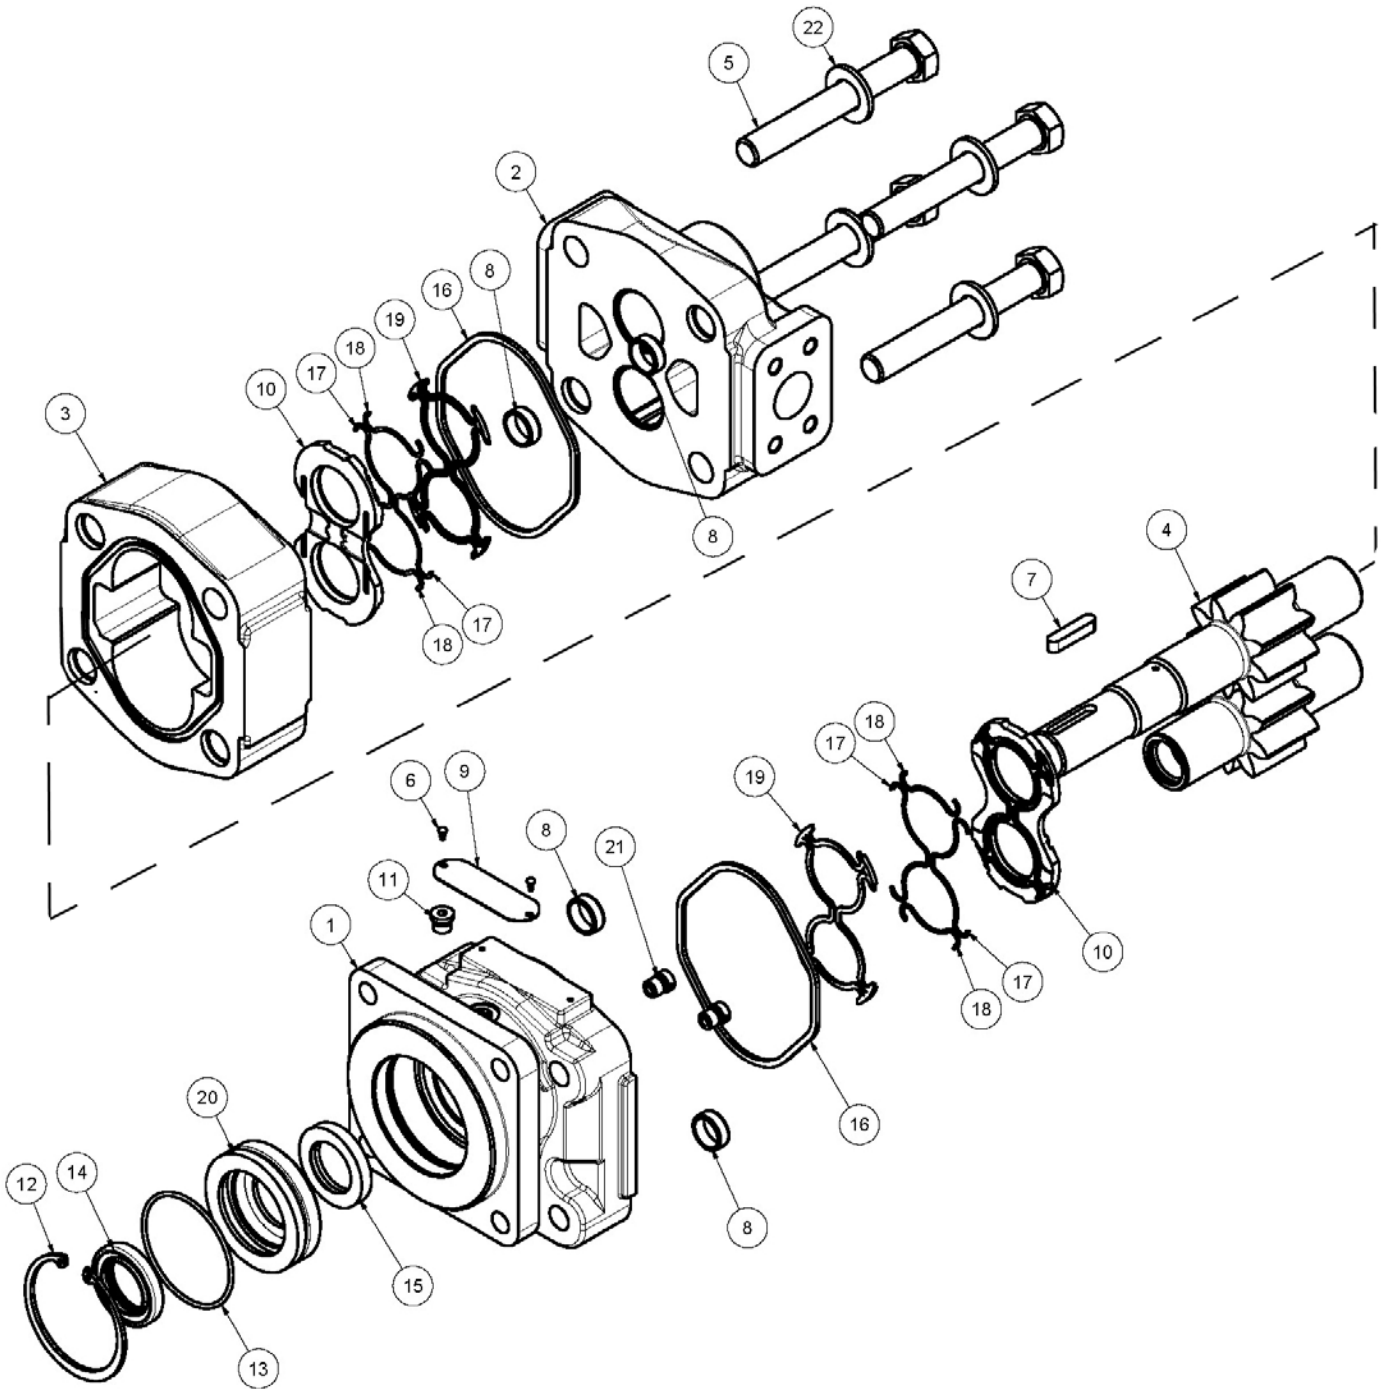

ROTARY MOTOR

ITEM	PART NO.	QTY.	DESCRIPTION
*	06504012	AVAIL	MOTOR ASSEMBLY TRB50
*	06504103	AVAIL	SEAL KIT
1	22790	1	HOUSING, SEC
2	06504088	1	HOUSING, SEC
3	06504089	1	HOUSING, GEAR
4	06504090	1	SET, GEAR SHAFT
5	06504091	4	CAP SCREW
6	06504078	2	SCREW, DRIVE
7	06504092	1	KEY
8	06504093	4	PIN, DOWEL
9	06504094	1	NAME PLATE
10	06504095	2	THRPL
11	02961940	1	PLUG, ODT
12	02962200	1	RING, SNAP
13	06504096	1	O RING
14	6T5101	1	SEAL, LIP
15	06504097	1	SEAL, LIP
16	22797	2	SEAL, SQ-R
17	06504098	4	SEAL, SIDE CHAN
18	06504099	4	SEAL, END CHAN
19	06504100	2	SEAL, BK-UP
20	06504101	1	RTNR, SEAL
21	6T5809	2	CHECK ASS'Y
22	06504102	4	WASHER

SABER FLAIL MOTOR - HIGH PRESSURE

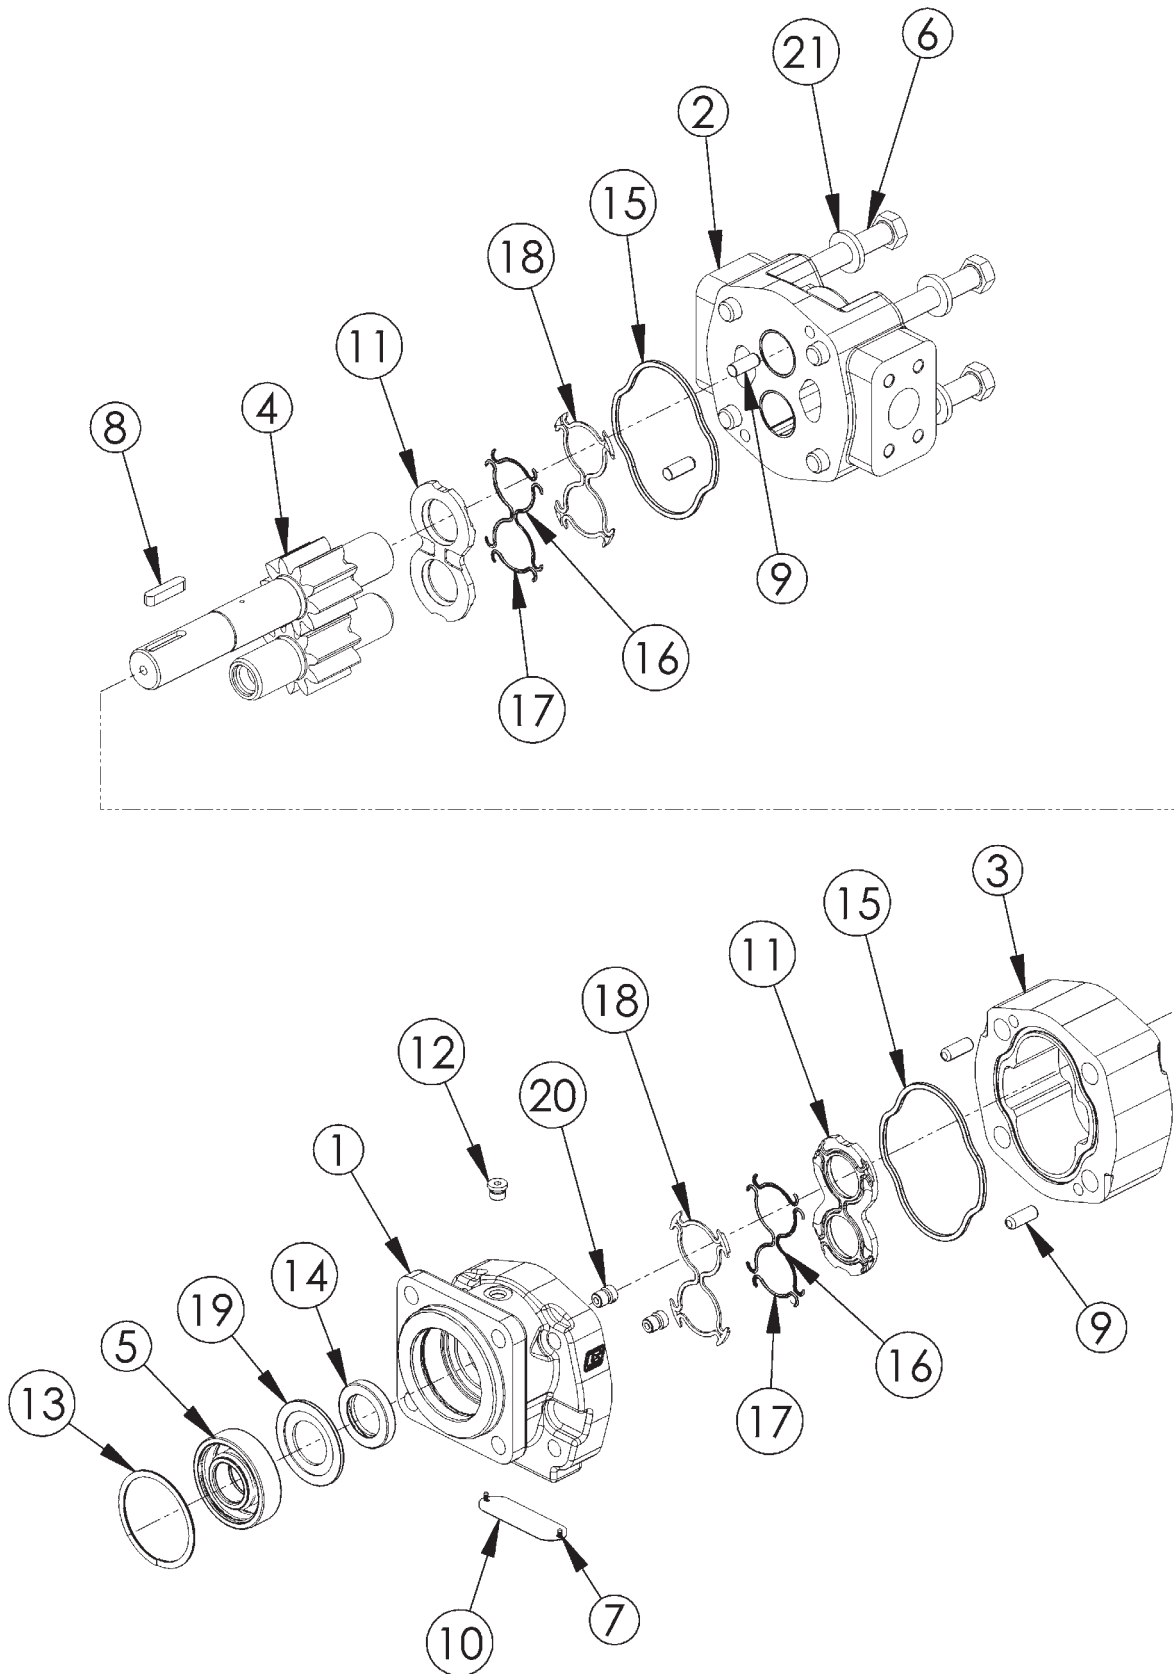

SABER FLAIL MOTOR - HIGH PRESSURE

ITEM	PART NO.	QTY.	DESCRIPTION
*	06504013	AVAIL	MOTOR ASSEMBLY 350 - SABER FLAIL
1	06504039	1	SHAFT END COVER
2	06504040	1	PORT END COVER
3	06504041	1	GEAR HOUSING
4	06504042	1	MATCHED GEAR SET
5	TF4402	1	BALL BEARING
6	06504043	4	CAP SCREW
7	06504044	2	SET SCREW
8	06504028	1	KEY
9	06504045	4	DOWEL PIN
10		1	NAMEPLATE
11	763759	2	THRUSTPLATE
12	02961940	1	HEX PLUG
13	TF4401	1	SNAP RING
14	06504049	1	LIP SEAL (INCLUDED IN SEAL KIT)
15	TF4410	2	GASKET SEAL (INCLUDED IN SEAL KIT)
16	06504046	4	SIDE SEAL (INCLUDED IN SEAL KIT)
17	06504047	4	END SEAL (INCLUDED IN SEAL KIT)
18	TF4407	2	BACK-UP SEAL (INCLUDED IN SEAL KIT)
19	06504048	1	SEAL RETAINER
20	6T5809	2	CHECK ASSEMBLY
21	02961917	4	WASHER
*	06504022	AVAIL	SEAL KIT (INCLUDES 14, 15, 16, 17, AND 18)

SABER SPINDLE ASSEMBLY


BACK SURFACE
OF COLLAR BOSS

THESE BOLTS ARE FOR SPROCKET REMOVAL

THREE BLACK COLORED BOLTS SUPPLIED WITH TAPERLOCK BEARING. THREAD INTO COLLAR ONLY. TURN BOLTS INTO COLLAR UNTIL BOLT IS FLUSH WITH BACK SURFACE OF COLLAR BOSS. DO NOT TURN IN ANY FURTHER OR TIGHTEN.

THESE BOLTS ARE FOR ASSEMBLY

THREE PLATED BOLTS. THESE BOLTS SLIP THROUGH COLLAR AND THREAD INTO SPROCKET. ADJUSTMENTS ARE REQUIRED WHEN CHAIN COUPLER IS MOUNTED TO SPINDLE ASSEMBLY. DO NOT TIGHTEN BOLTS UNTIL THAT TIME.

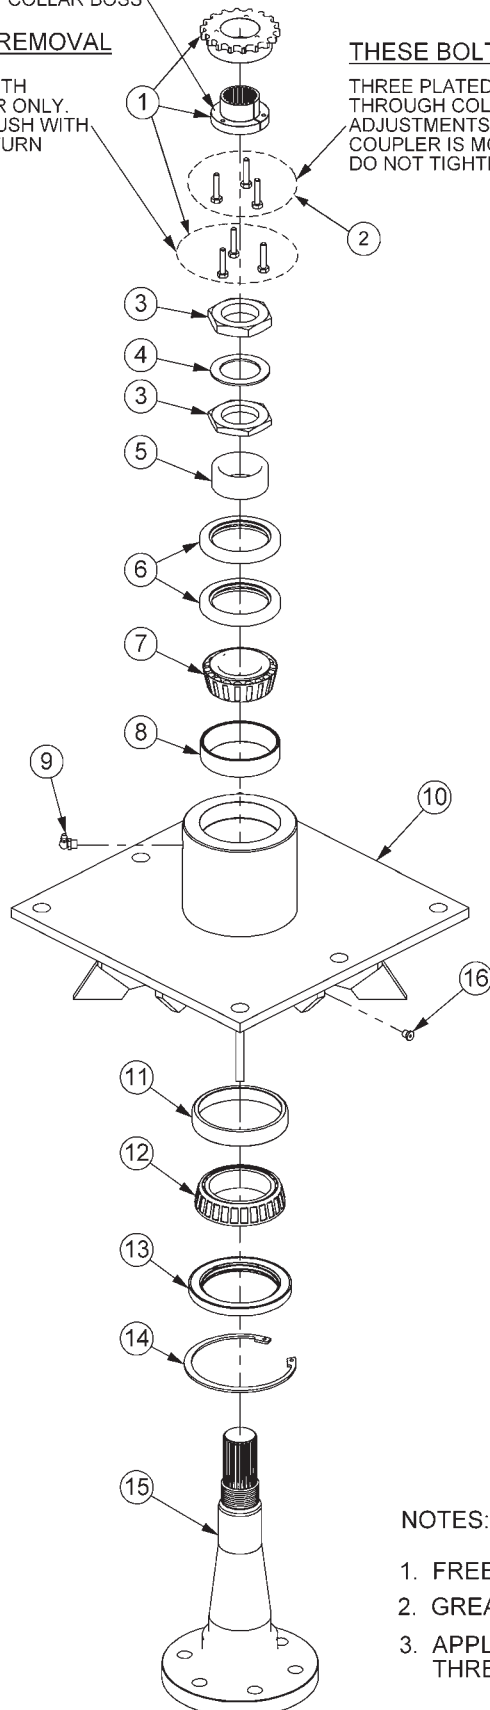

33219B


NOTES:

1. FREEPLAY: .001" - .003"
2. GREASE: FILL WITH MOBILITH SHC 220.
3. APPLY LOCKTIGHT "271" TO O-RING PLUG THREADS.

SABER SPINDLE ASSEMBLY

ITEM	PART NO.	QTY	DESCRIPTION
	33219	OPT.	SPINDLE ASSY 50" ROTARY
1	34480	1	TAPERLOCK SPROCKET
2	21530	3	CAPSCREW 1/4" X 1"
3	6T1015	2	BEARING LOCK NUT - THIN
4	22596	1	JAMWASHER
5	6T1014	1	BEARING ADJUST SLEEVE
6	6T1011	2	UPPER SEAL - SMALL
7	6T1012	1	BEARING CONE - SMALL
8	6T1013	1	BEARING CUP - SMALL
9	6T3210	1	GREASE ZERK
10	32953	1	SPINDLE HOUSING, SABER
11	33200	1	BEARING CUP - LARGE
12	33199	1	BEARING CONE -LARGE
13	33201	1	LOWER SEAL - LARGE
14	33202	1	SNAP RING
15	33186	1	SPINDLE, SABER
16	06503064	1	O-RING PLUG, 1/8"

SABER XB & 60" SPINDLE ASSY

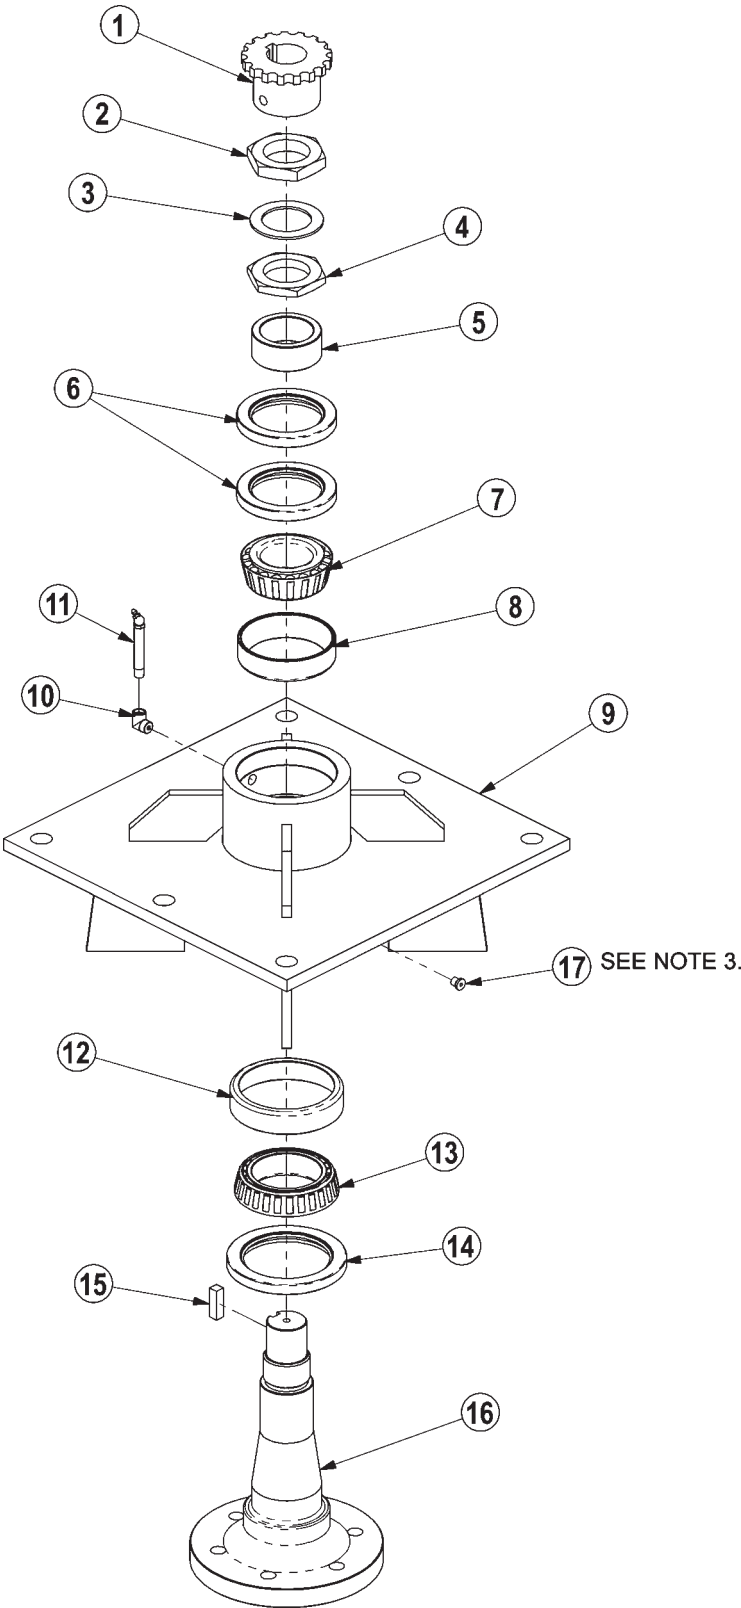


- NOTES:
1. FREEPLAY: .001" - .003"
 2. GREASE: FILL WITH MOBILITH SHC 220.
 3. APPLY LOCTITE "271" TO O-RING PLUG THRDS.

SABER XB & 60" SPINDLE ASSY

ITEM	PART NO.	QTY.	DESCRIPTION
	6T1024H5	AVAIL	SPINDLE ASSEMBLY COMPLETE
1	6T1031	1	SPROCKET
2	6T1016	1	BEARING LOCK NUT - THICK
3	22596	1	JAM WASHER
4	6T1015	1	BEARING ADJUSTMENT NUT - THIN
5	6T1014	1	BEARING ADJUSTMENT SLEEVE
6	6T1011	1	UPPER SEAL - SET OF 2
7	6T1012	1	BEARING CONE
8	6T1013	1	BEARING CUP
9	6T1010H	1	SPINDLE HOUSING
10	30570	1	FITTING STREET ELBOW
11	33990	1	GREASE ZERK
12	6T1013H	1	BEARING CUP
13	6T1012H	1	BEARING CONE
14	6T1011H	1	LOWER SEAL
15	6T1019	1	SPINDLE KEY
16	PT1018H-5	1	SPINDLE
17	06503064	1	O-RING PLUG, 1/8"
*	31771	AVAIL	SPINDLE REBUILD KIT (INCLUDE ITEMS 2 THRU 8 AND 12 THRU 15)

WELDED CYLINDER

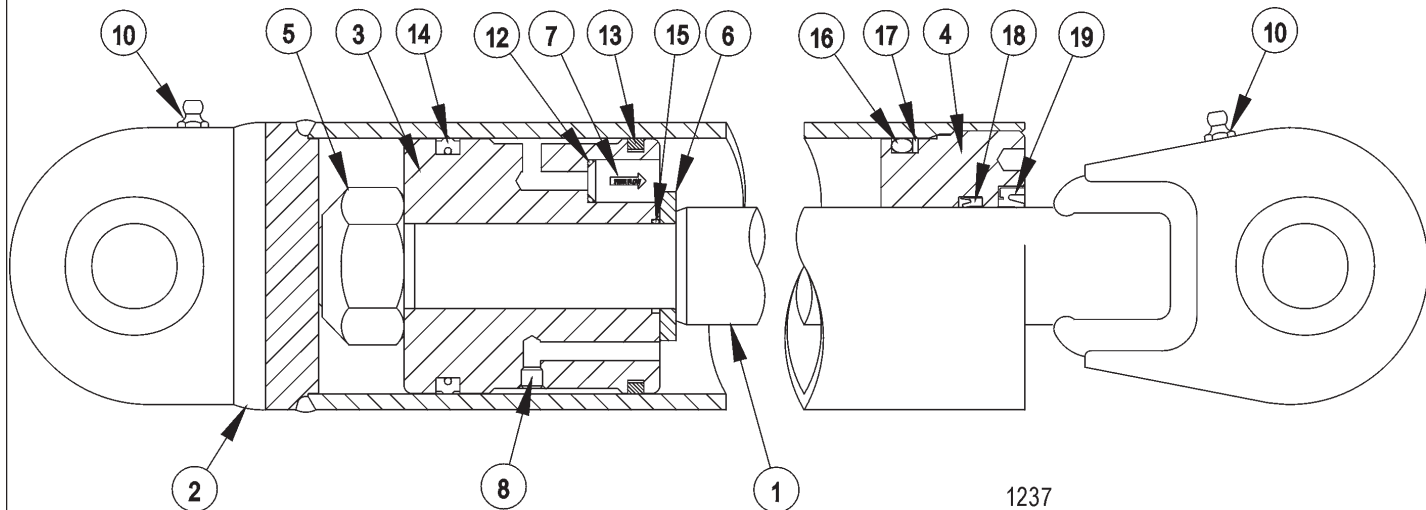

PISTON NUT

- NUT 3/4-16 UNF. LOCKNUT
- NUT 1-14 UNS. LOCKNUT
- NUT 1-1/8-12 UNF. LOCKNUT
- NUT 1-1/4-12 UNF. LOCKNUT
- NUT 1-1/2-12 UNF. LOCKNUT
- NUT 1-3/4-12 UNF. LOCKNUT

TORQUE

- 130 FT. LB
- 315 FT. LB
- 350 FT. LB
- 510 FT. LB
- 750 FT. LB
- 1800-2000 FT. LB

WARNING - MECHANICAL FASTENERS MUST BE TORQUED TO RECOMMENDED SPECIFICATIONS DURING REPAIR TO PREVENT PERSONAL INJURY OR EQUIPMENT DAMAGE.

3" X 17 1/2" CYLINDER #33705

ITEM	PART NO.	QTY.	DESCRIPTION
1	34571	1	PISTON ROD ASY
2	34572	1	BUTT & TUBE ASY
3	34573	1	PISTON
4	34574	1	GLAND
5	34575	1	LOCK NUT, 1"-14
6	34576	1	SPACER
7	34577	1	CHECK VALVE, KEPNER
8	34578	1	ORIFICE
9	33761	1	SEAL KIT, PACKING (INCLUDES ITEMS 12 THRU 19)
10		2	GREASE ZERK
12		1	O - RING
13		1	CAST IRON PISTON RING
14		1	CROWN SEAL
15		1	O - RING
16		1	O - RING
17		1	BACK - UP WASHER
18		1	U - CUP
19		1	WIPER
20	34334	AVAIL	SPHERICAL BEARING (NOT SHOWN)

WELDED CYLINDER

4" X 15" CYLINDER #32365

ITEM	PART NO.	QTY.	DESCRIPTION
1	34580	1	PISTON ROD ASY
2	34581	1	BUTT & TUBE ASY
3	34582	1	PISTON
4	34583	1	GLAND
5	34584	1	LOCK NUT, 1-1/4"-12
9	33757	1	SEAL KIT, PACKING (INCLUDES ITEMS 12THRU 19)
10		2	GREASE ZERK
12		1	O - RING
13		1	CAST IRON PISTON RING
14		1	CROWN SEAL
15		1	O - RING
16		1	O - RING
17		1	BACK - UP WASHER
18		1	U - CUP
19		1	WIPER
20	34335	AVAIL	SPHERICAL BEARING (NOT SHOWN)

4 1/2" X 26 1/2" CYLINDER #32364


1	34586	1	PISTON ROD ASY
2	34587	1	BUTT & TUBE ASY
3	34588	1	PISTON
4	34589	1	GLAND
5	34590	1	LOCK NUT, 1-1/4"-12
9	33758	1	SEAL KIT, PACKING (INCLUDES ITEMS 12THRU 19)
10		2	GREASE ZERK
12		1	O - RING
13		1	CAST IRON PISTON RING
14		1	CROWN SEAL
15		1	O - RING
16		1	O - RING
17		1	BACK - UP WASHER
18		1	U - CUP
19		1	WIPER
20	34335	AVAIL	SPHERICAL BEARING (NOT SHOWN)

5" X 25" CYLINDER #32363

1	34592	1	PISTON ROD ASY
2	34593	1	BUTT & TUBE ASY
3	34594	1	PISTON
4	34595	1	GLAND
5	34596	1	LOCK NUT, 1-3/4"-12
7	34597	1	CHECK VALVE, KEPNER
8	34598	1	ORIFICE
9	33759	1	SEAL KIT, PACKING (INCLUDES ITEMS 12THRU 19)
10		2	GREASE ZERK
12		1	O - RING
13		1	CAST IRON PISTON RING
14		1	CROWN SEAL
15		1	O - RING
16		1	O - RING
17		1	BACK - UP WASHER
18		1	U - CUP
19		1	WIPER
20	34335	AVAIL	SPHERICAL BEARING (NOT SHOWN)


PAGE
INTENTIONALLY
LEFT
BLANK

BRAKE VALVE

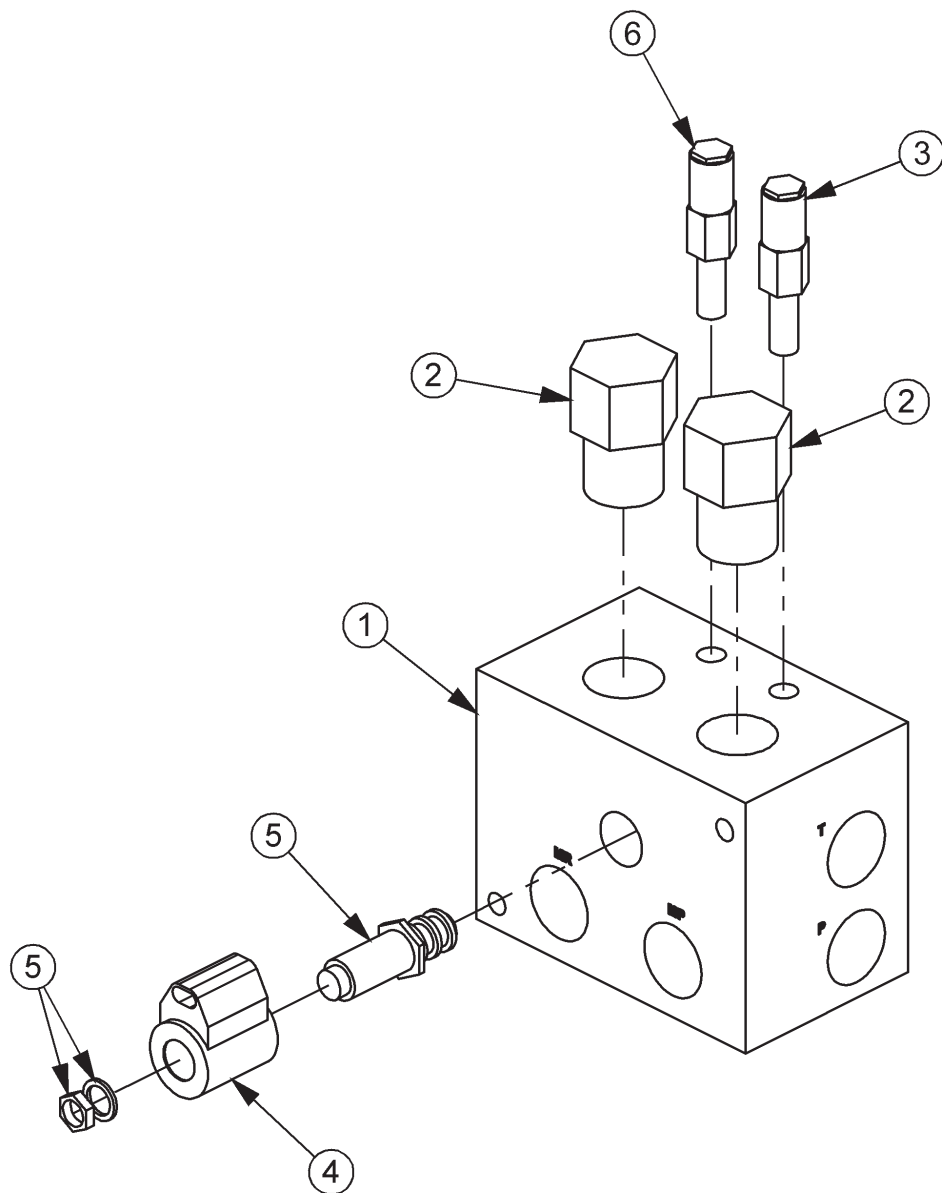

ITEM	PART NO.	QTY.	DESCRIPTION
	06510084		BRAKE VALVE, 3,500 PSI METRIPAK
1	34092	1	BRAKE VALVE, BLANK
2	34094	2	LOGICELEMENT
3	34090	1	RELIEF VALVE, 3500 PSI
4	06510095	1	METRIPAK COIL
5	34093	1	CARTRIDGE, 2 POSITION, 3 WAY (WITH NUT & WASHER)
6	34091	1	RELIEF VALVE, 2600 PSI

BRAKE VALVE HYDRAULIC SCHEMATIC

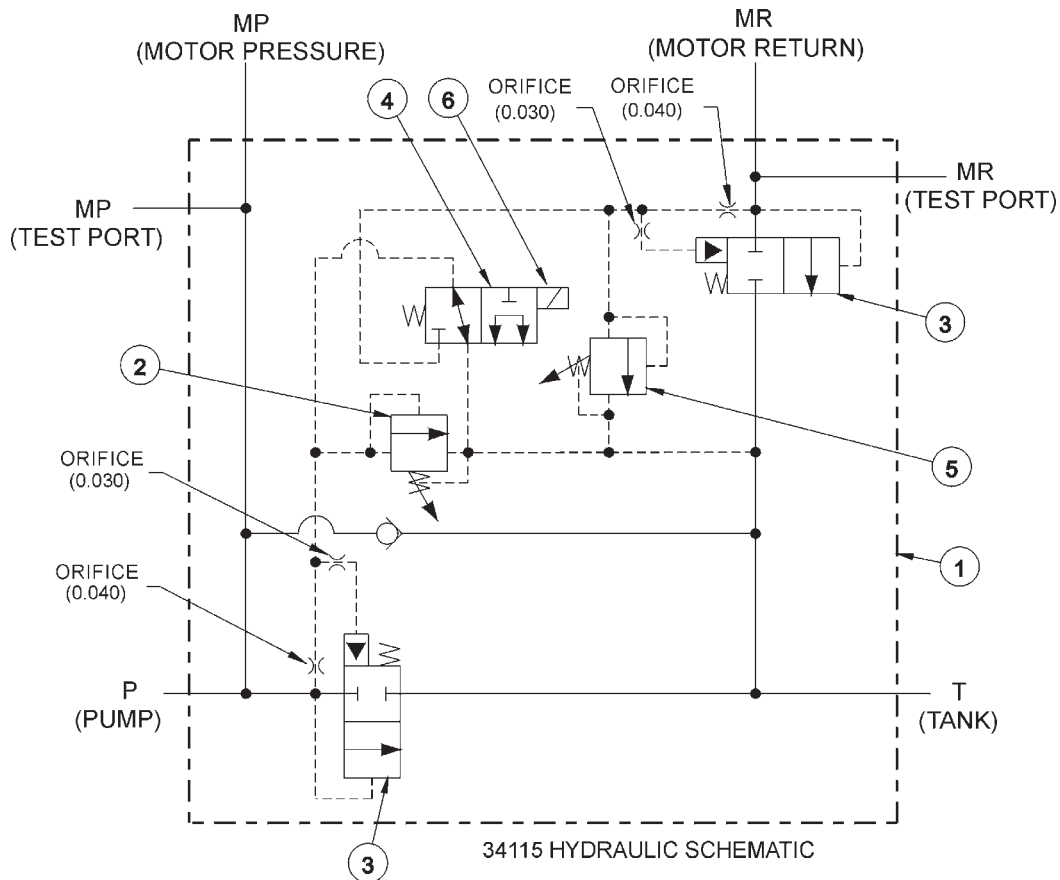

BRAKE VALVE TROUBLESHOOTING

FAILURE MODE:

- MOWER WILL NOT START - system pressure is low (engine not lugging).
- MOWER WILL NOT START - system pressure is high (engine lugging). "MR" port will be high pressure.
- MOWER WILL NOT ROTATE AT FULL SPEED - limited power.
- MOWER BLADE WILL NOT STOP - blade will not stop in proper time.



CHECK STEPS

- 1 thru 6
- 7
- 3 thru 5
- 7 thru 9

CORRECTIVE STEPS:


1. Check for voltage at solenoid (item 6), voltage must be between 10.2 volts and 13.8 volts.
2. Remove, inspect solenoid and cartridge (items 4, 6) for wear or contamination.
3. Remove, inspect logic elements near "P" port (item 3) for wear or contamination.
4. Remove, inspect 3500 psi relief valve (item 2) for wear or contamination.
5. Remove and inspect orifices near "P" port for contamination.
6. Remove "P" port hose and fitting, visually inspect for contamination, check ball for movement.
7. Remove and inspect orifices near "MR" port for contamination.
8. Remove, inspect 2600 psi relief valve (item 5) for wear or contamination.
9. Remove, inspect logic element near "MR" port (item 3) for wear or contamination.

HUSCO CONTROLS SWITCHBOX

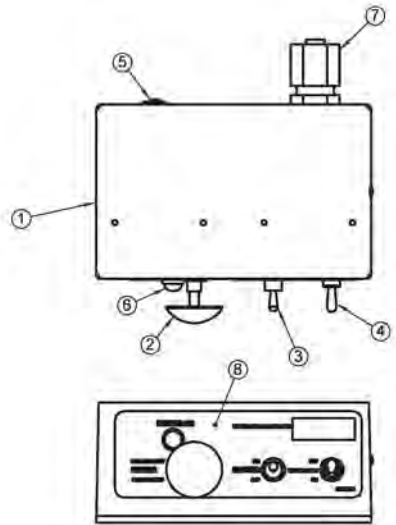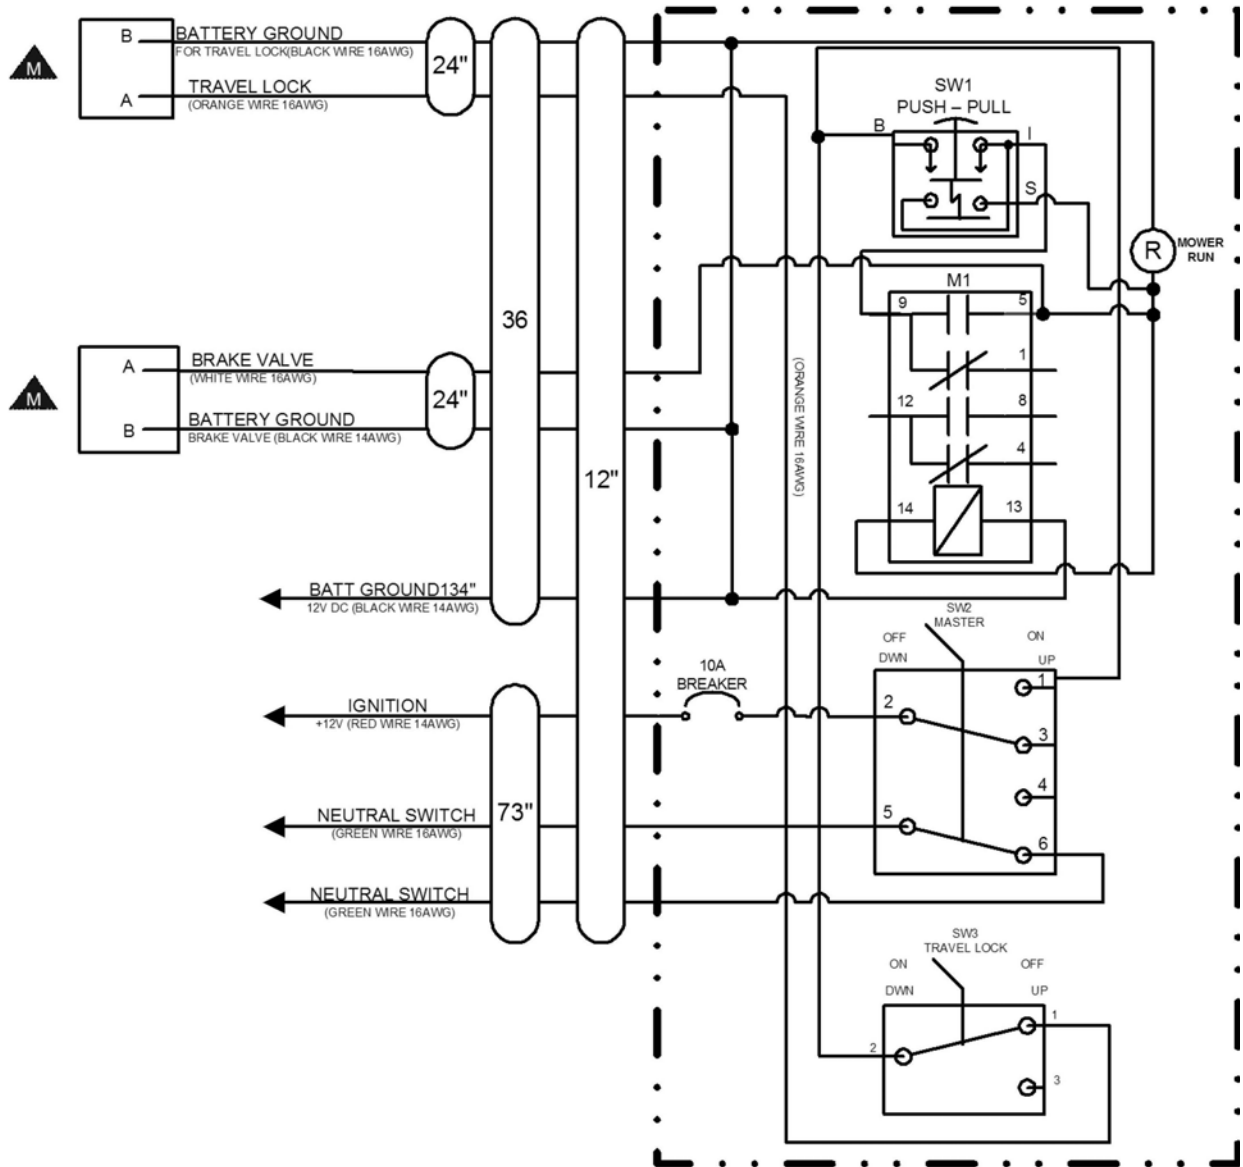


ITEM	P/N	QTY.	DESCRIPTION
1	06514012	1	SWBX,ALUM,BLK,06510100
2	35226	1	SWITCH,MOWER,COLEHERSEE
3	33811	1	SWITCH,MASTER/DECK FLOAT
4	34532	1	SWITCH,TRVL LCK
5	06514014	1	BREAKER,10A,SWBX
6	6T3923	1	INDICTATOR LIGHT,ON,RED
7	34540	1	STRAIN RELIEF,3/4,BLACK,NYLON
8	06550019	1	DECAL,SWTCHBX,BOOM,CG
9	35227	1	RELAY,DP,DT,12V,LY2F,35226

SOLENOID SWITCH BOX AND WIRING

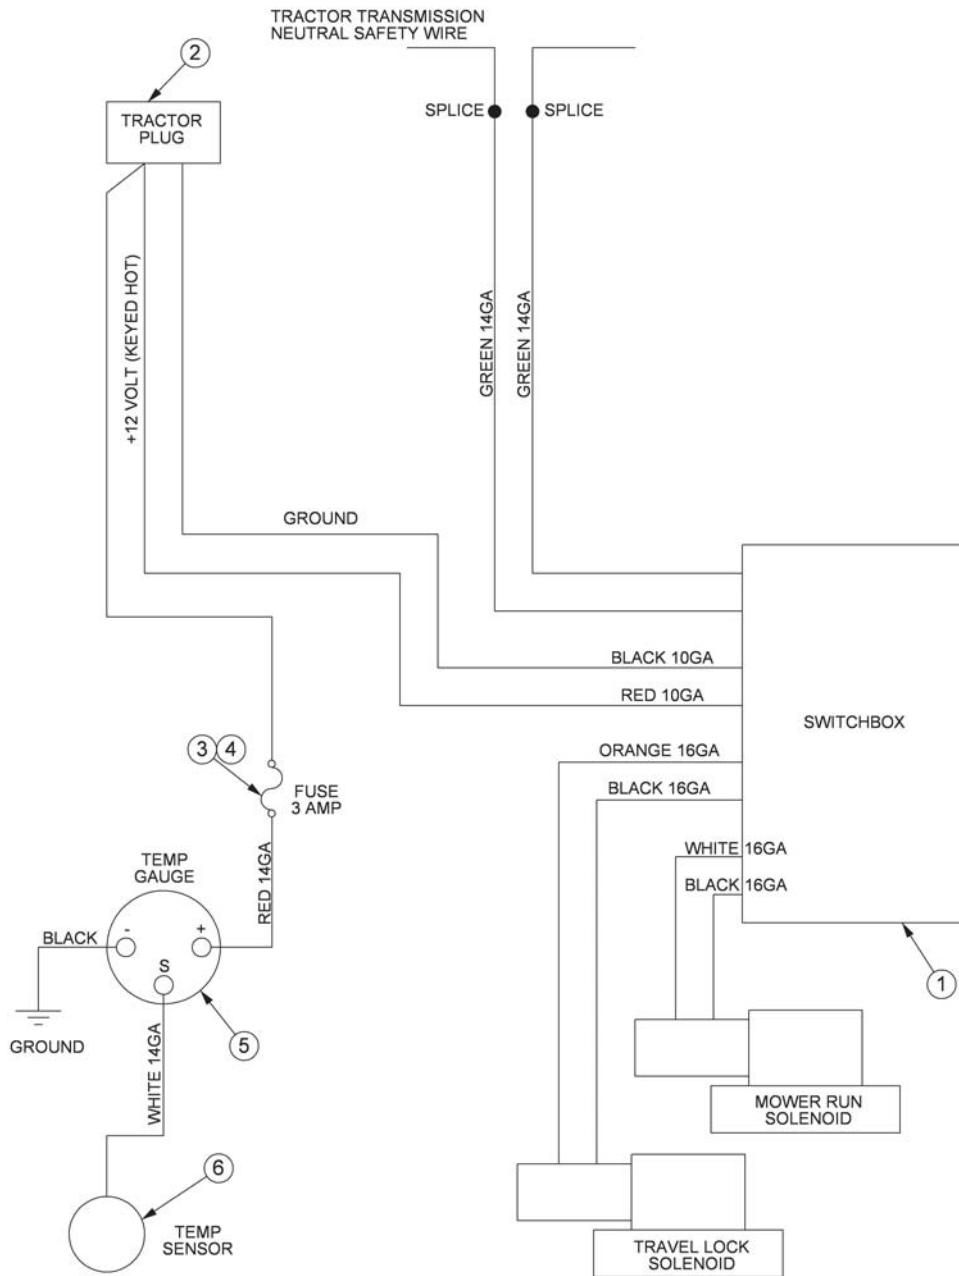


ITEM	PART NO.	QTY.	DESCRIPTION
1	*	REF	SWITCH BOX
2	RE37651	1	PLUG,AUX PWR
3	24204	OPT.	FUSE HOLDER,IN-LINE
4	6T3965	OPT.	FUSE,3AMP
5	6T3934	OPT.	TEMPERATURE GAUGE
6	6T3931	OPT.	TEMPERATURE SENSOR

JOYSTICK SWITCHBOX SERVICE PARTS

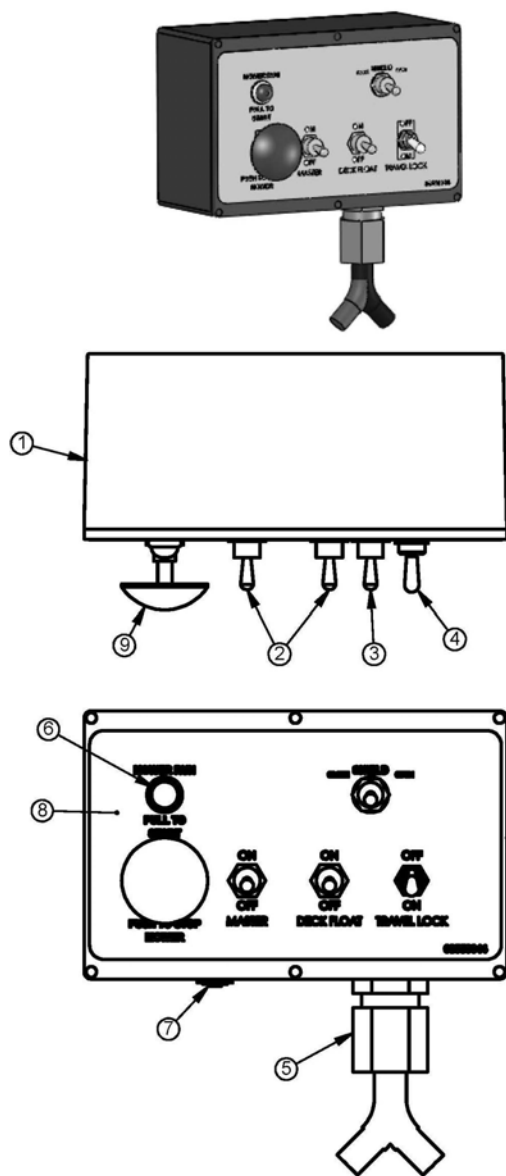


ITEM	P/N	QTY.	DESCRIPTION
1	06510196	1	SWBX,ALUM,BLK,ASSY
2	33811	2	SWITCH,MASTER/DECK FLOAT
3	33813	1	SWITCH,SFTY SHIELD
4	34532	1	SWITCH,TRVL LCK
5	34540	1	STRAIN RELIEF,3/4,BLACK,NYLON
6	6T3923	1	INDICTATOR LIGHT,ON,RED
7	06514006	1	BREAKER,15A,SWBX
8	06550044	1	DECAL,SWBX,06510047
9	35226	1	SWITCH,MOWER,COLEHERSEE
10	35227	1	RELAY,DP,DT,12V,LY2F,35226

JOYSTICK SWITCHBOX SCHEMATIC

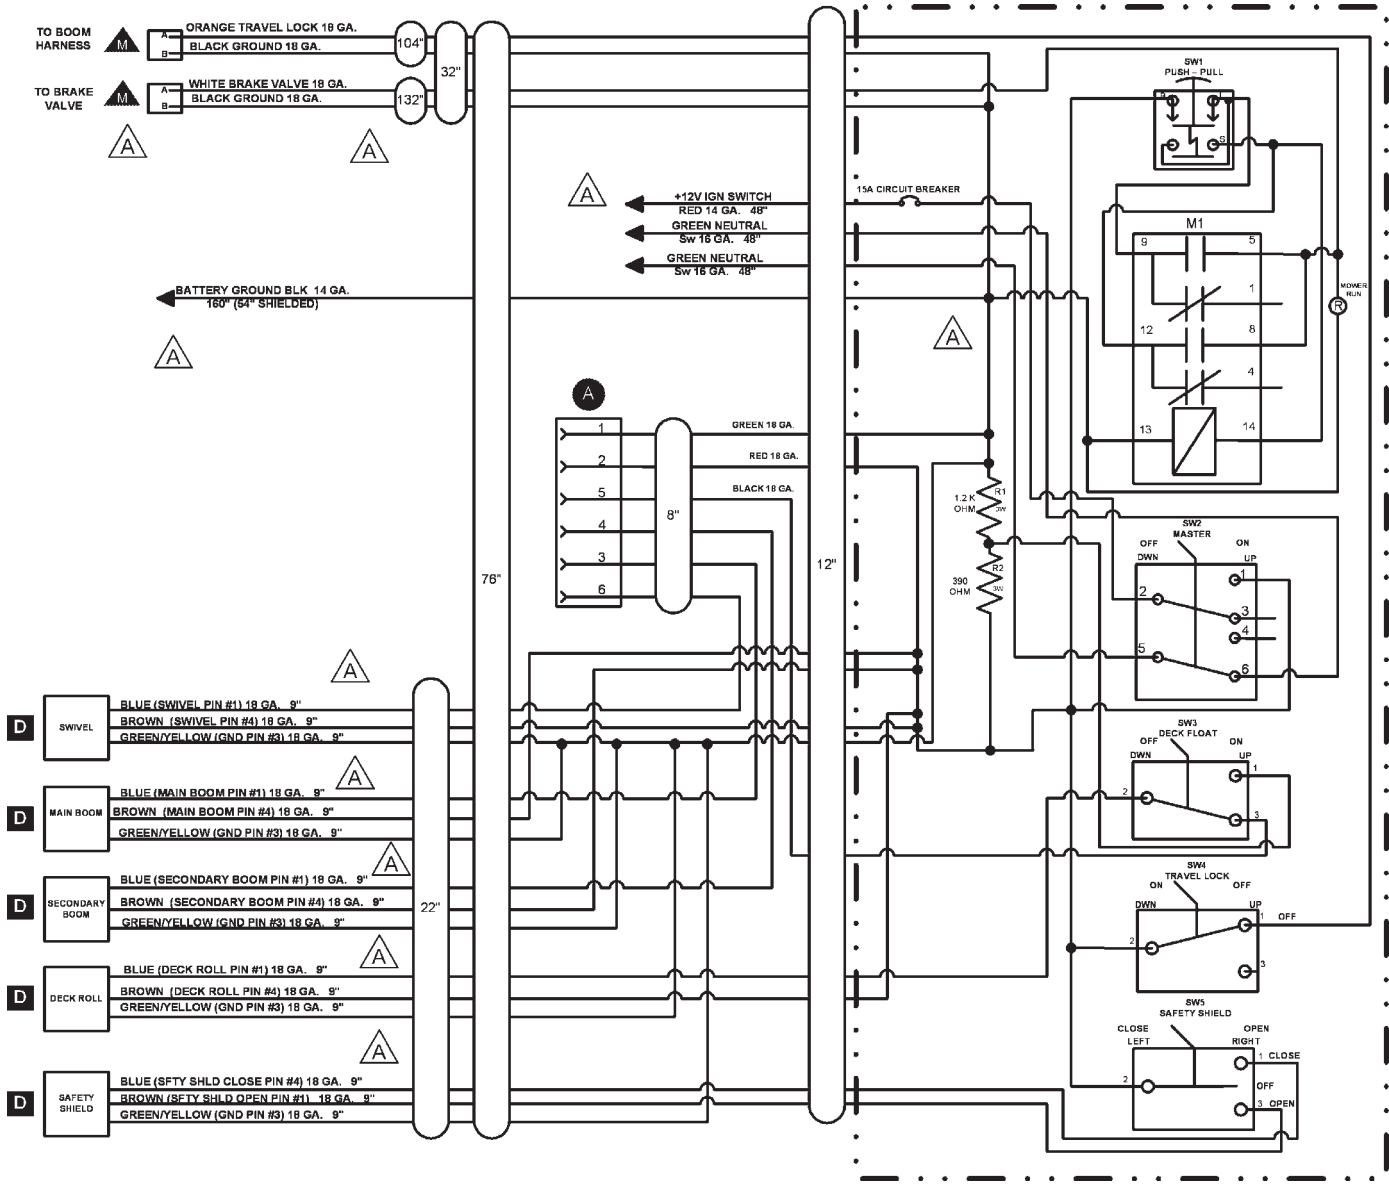

LEFT HAND JOYSTICK SCHEMATIC

LEFT HAND JOYSTICK SCHEMATIC

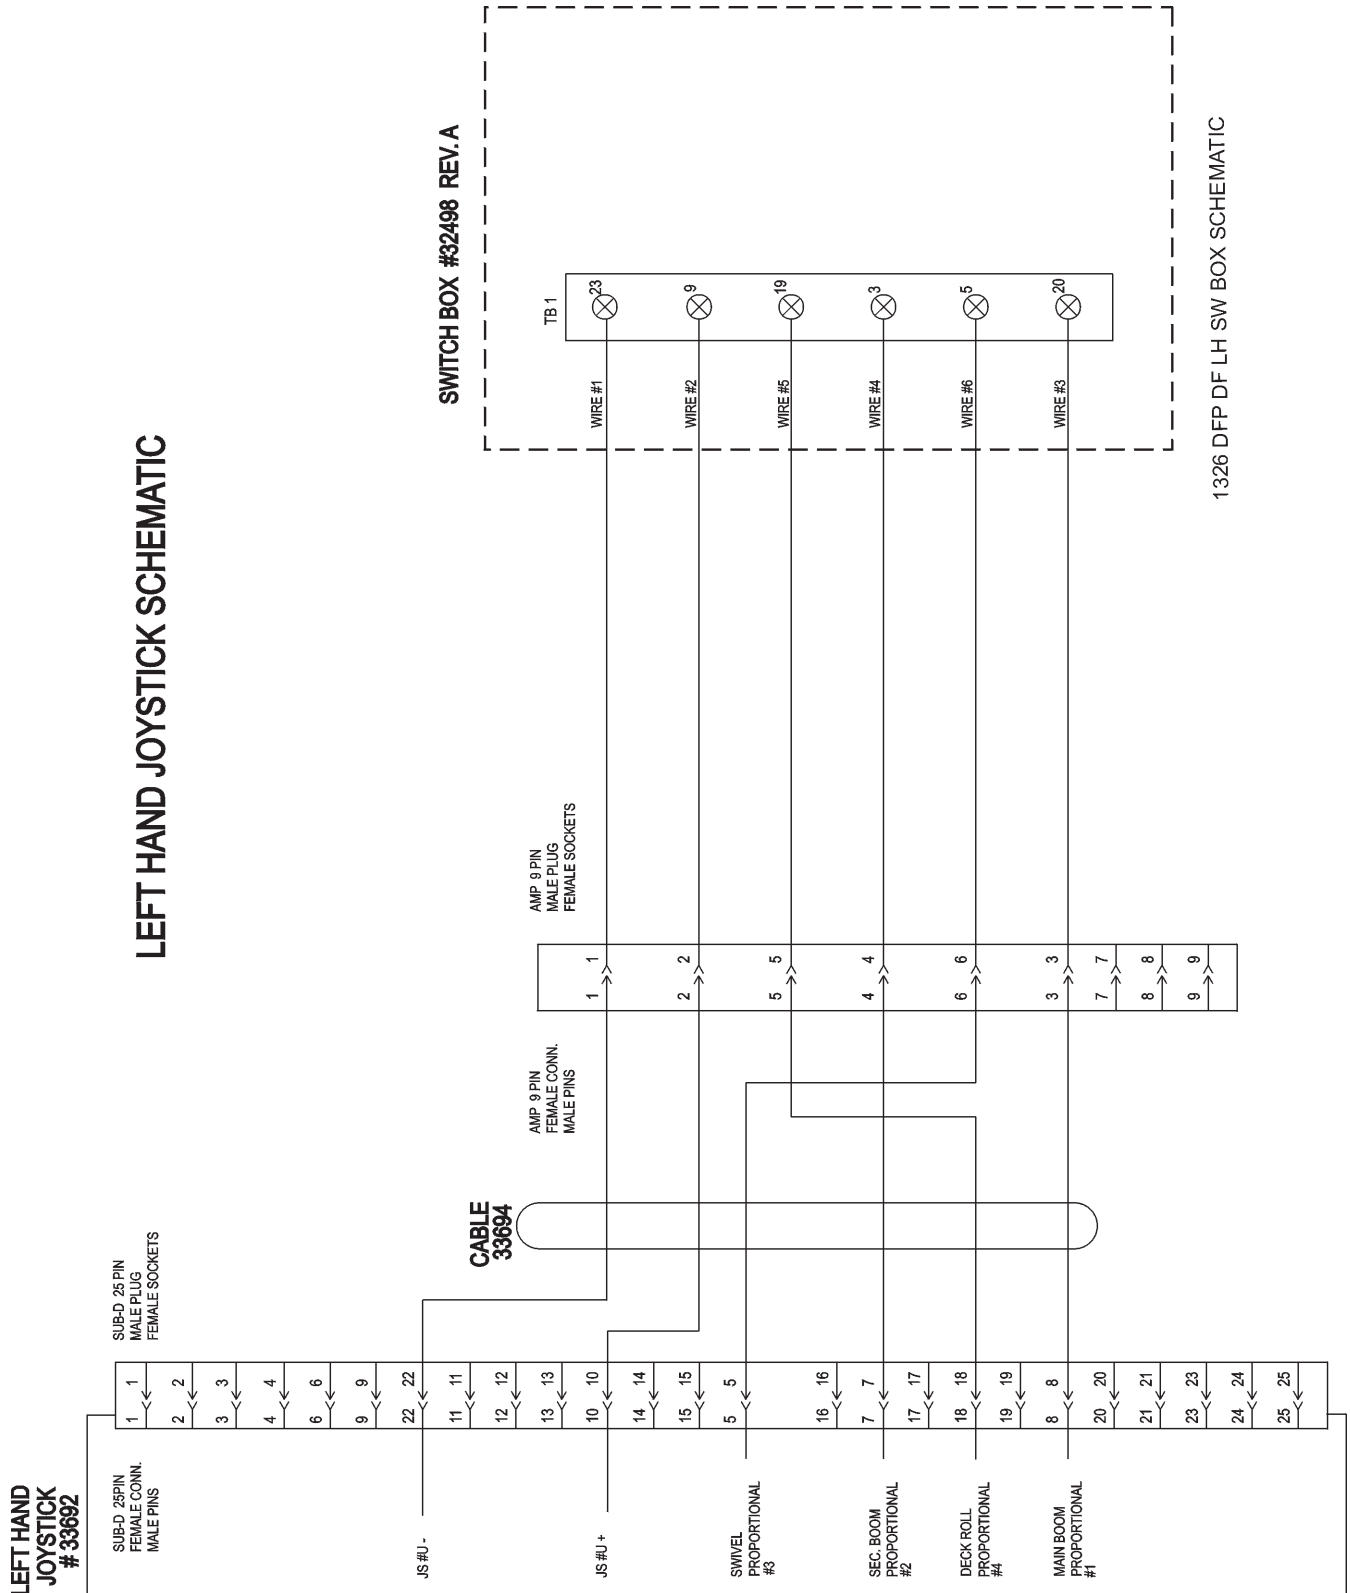

1326 DFP DF LH SW BOX SCHEMATIC

TROUBLESHOOTING

JOYSTICK TROUBLESHOOTING

Boom operation not responding to joystick movement.

Isolate hydraulic vs. electronic symptom.

Turn off electronic master switch (preventing electronic actuator on valve from attempting to hold spool in neutral position). With tractor engine running, operate the valve section with the manual handle. If function operates normally, continue with electronic inspection. If function does not operate normally, continue with hydraulic inspection.

Electronic inspection.

Connect a voltmeter to the cable connector of the valve section that is not operating. This will allow you to measure supply and signal voltage when the joystick is operated.

Main, Secondary, and Swivel Valves – signal voltage should be 50% of supply voltage with joystick in Neutral position, up to 75% of supply voltage in B direction, down to 25% of supply voltage in A direction. Signal voltage should change smoothly with lever movement.

Pin #1 – Supply Voltage Pin #2 – Signal Voltage Pin #gnd – ground

Deck Roll Valve or Float Valve – signal voltage should be 50% of supply voltage with joystick in Neutral position, up to 65% of supply voltage in B direction, down to 35% of supply voltage in A direction. Signal voltage should change smoothly with lever movement. Signal voltage should be approximately 75% of supply voltage when float switch is operated.

Pin #1 – Supply Voltage Pin #2 – Signal Voltage Pin #gnd – ground

Shield Valve or On/Off Valve – Voltage on pin #1 should be equal to supply voltage when switch is operated in A direction. Voltage on pin #2 should be equal to supply voltage when switch is operated in B direction.

Pin #1 – Signal Voltage Pin #2 – Signal Voltage Pin #gnd – ground

If none of the valve will operate with electrical signal, verify that there is oil pressure at the valve inlet. Electrical Valves must have pilot supply oil to move the spools.

Possible electronic problems.

Open circuit (broken wire, bad connection or loose connection in switch box).

Shorted to positive, ground, or other.

Incorrect voltage signal from joystick.

Continued on next sheet

TROUBLESHOOTING

Hydraulic inspection.

Install 3 pressure gauges, on the valve inlet (use M port, or tee into hose supplying oil from the pump to the inlet), on the workport that is not operating, and on the LS port.

With the spools in Neutral

Gear pump – P should be approximately 200 psi, LS = 0, workport – pressure on cylinder or function.

LS pump – P should equal pump standby pressure, LS = 0, workport – pressure on cylinder or function.

Pressure Comp pump – P should equal pump standby pressure, LS = 0, workport – pressure on cylinder or function.

Gear pump – P should be approximately 200 psi higher than LS, LS should equal workport, workport – pressure on cylinder or function.

LS pump – P should be LS + standby, LS should equal workport, workport – pressure on cylinder or function.

Pressure Comp pump – P should equal pump standby pressure, LS should equal workport, workport – pressure on cylinder or function.

Operate one spool, measure pressures with function at end of travel or stop

Gear pump – P should equal valve relief setting or workport shock valve setting. LS should equal workport. Workport should equal relief setting or workport shock valve setting.

LS pump – P should equal valve relief setting, pump max pressure setting, or workport shock valve setting. LS should equal workport. Workport should equal relief setting, pump max pressure setting, or workport shock valve setting.

Pressure Comp pump – P should equal pump standby pressure, LS should equal workport. Workport should equal pump standby pressure or workport shock valve setting.

Operate more than one spool.

Gear pump – P should approximately 200 psi higher than LS. LS should equal highest workport pressure. Workport – pressure on cylinder or function.

LS pump – P should be LS + standby pressure. LS should equal highest workport pressure. Workport – pressure on cylinder or function.

Pressure Comp pump. P should equal pump standby pressure. LS should equal highest workport pressure. Workport – pressure on cylinder or function.

Possible hydraulic problems.


Cylinder leak.

LS signal leaking to tank before reaching pump LS port.

Hydraulic system or pump not supplying flow to valve.

HYDRAULIC - TROUBLESHOOTING GUIDE

Hydraulic Troubleshooting guide

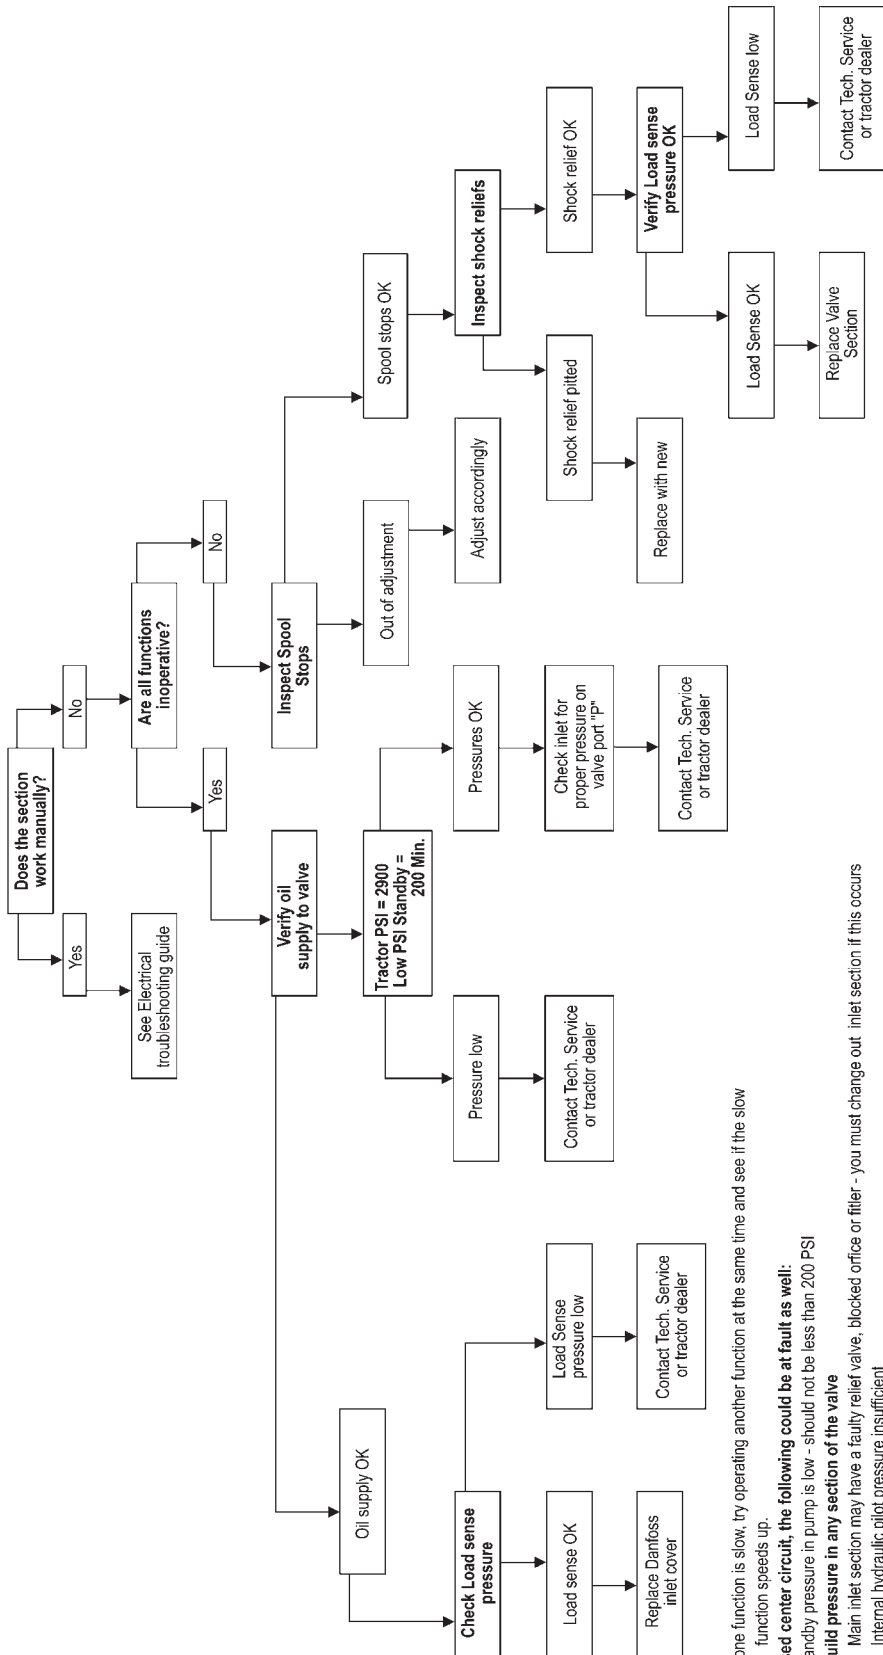

Notes: if one function is slow, try operating another function at the same time and see if the slow function speeds up.

On a closed center circuit, the following could be at fault as well:


Tractor standby pressure in pump is low – should not be less than 200 PSI

Cannot build pressure in any section of the valve

Main inlet section may have a faulty relief valve, blocked orifice or filter – you must change out inlet section if this occurs
Internal hydraulic pilot pressure insufficient

ELECTRICAL - TROUBLESHOOTING GUIDE

Danfoss Electrical Troubleshooting guide

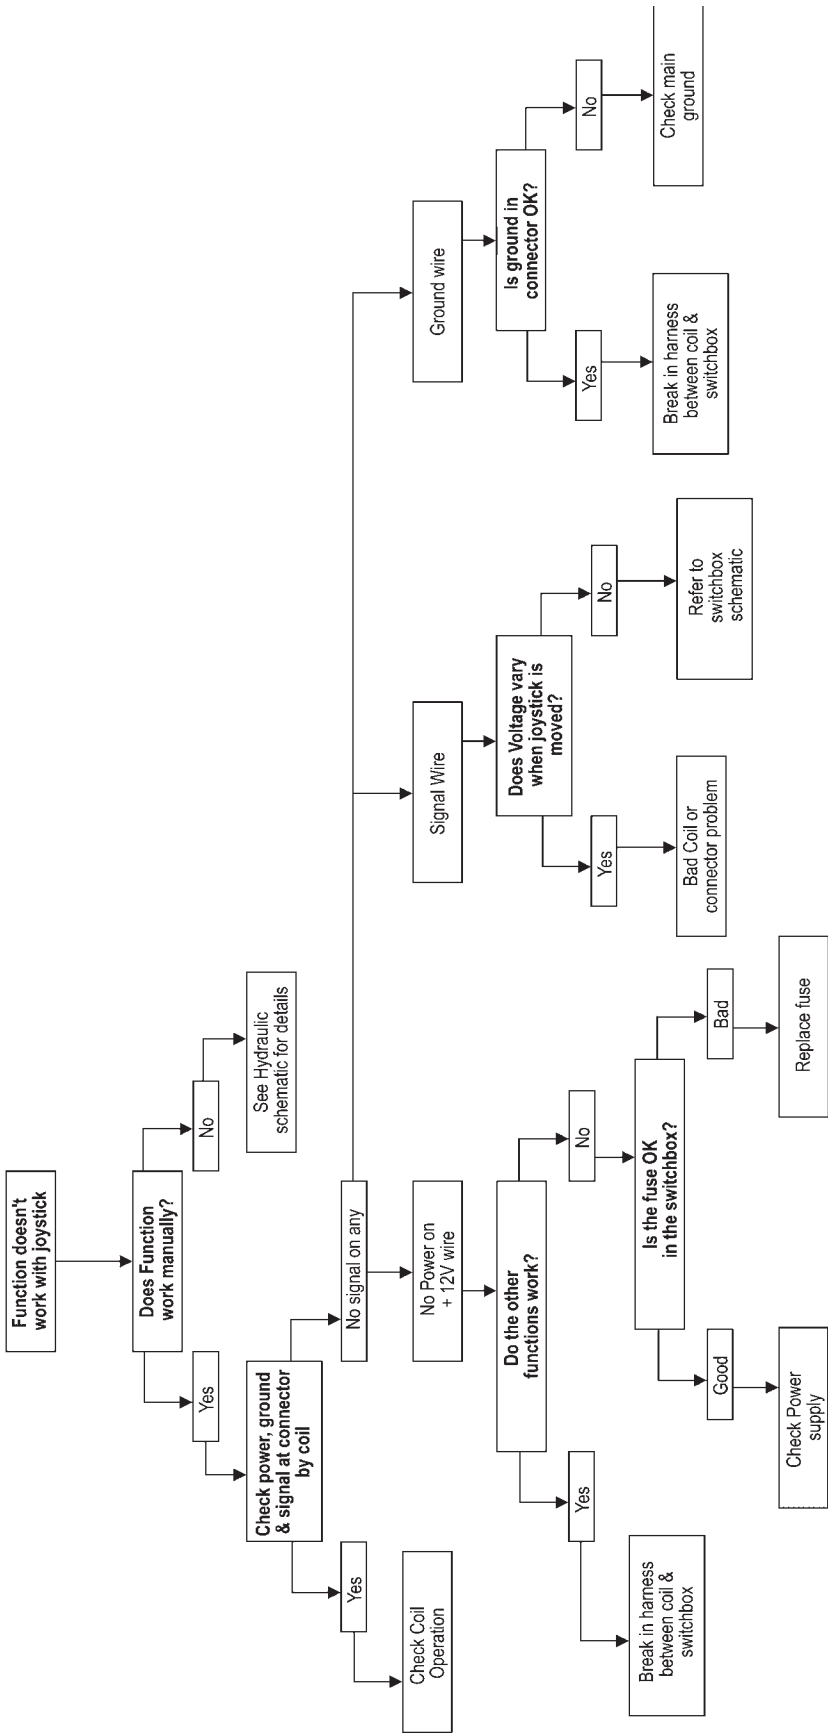


Empty rectangular box at the top of the page.

Large empty rectangular box occupying the majority of the page.

FIRE SUPPRESSION SYSTEM

FIRE SUPPRESSION SYSTEM SECTION


FIRE SUPPRESSION SYSTEM PARTS

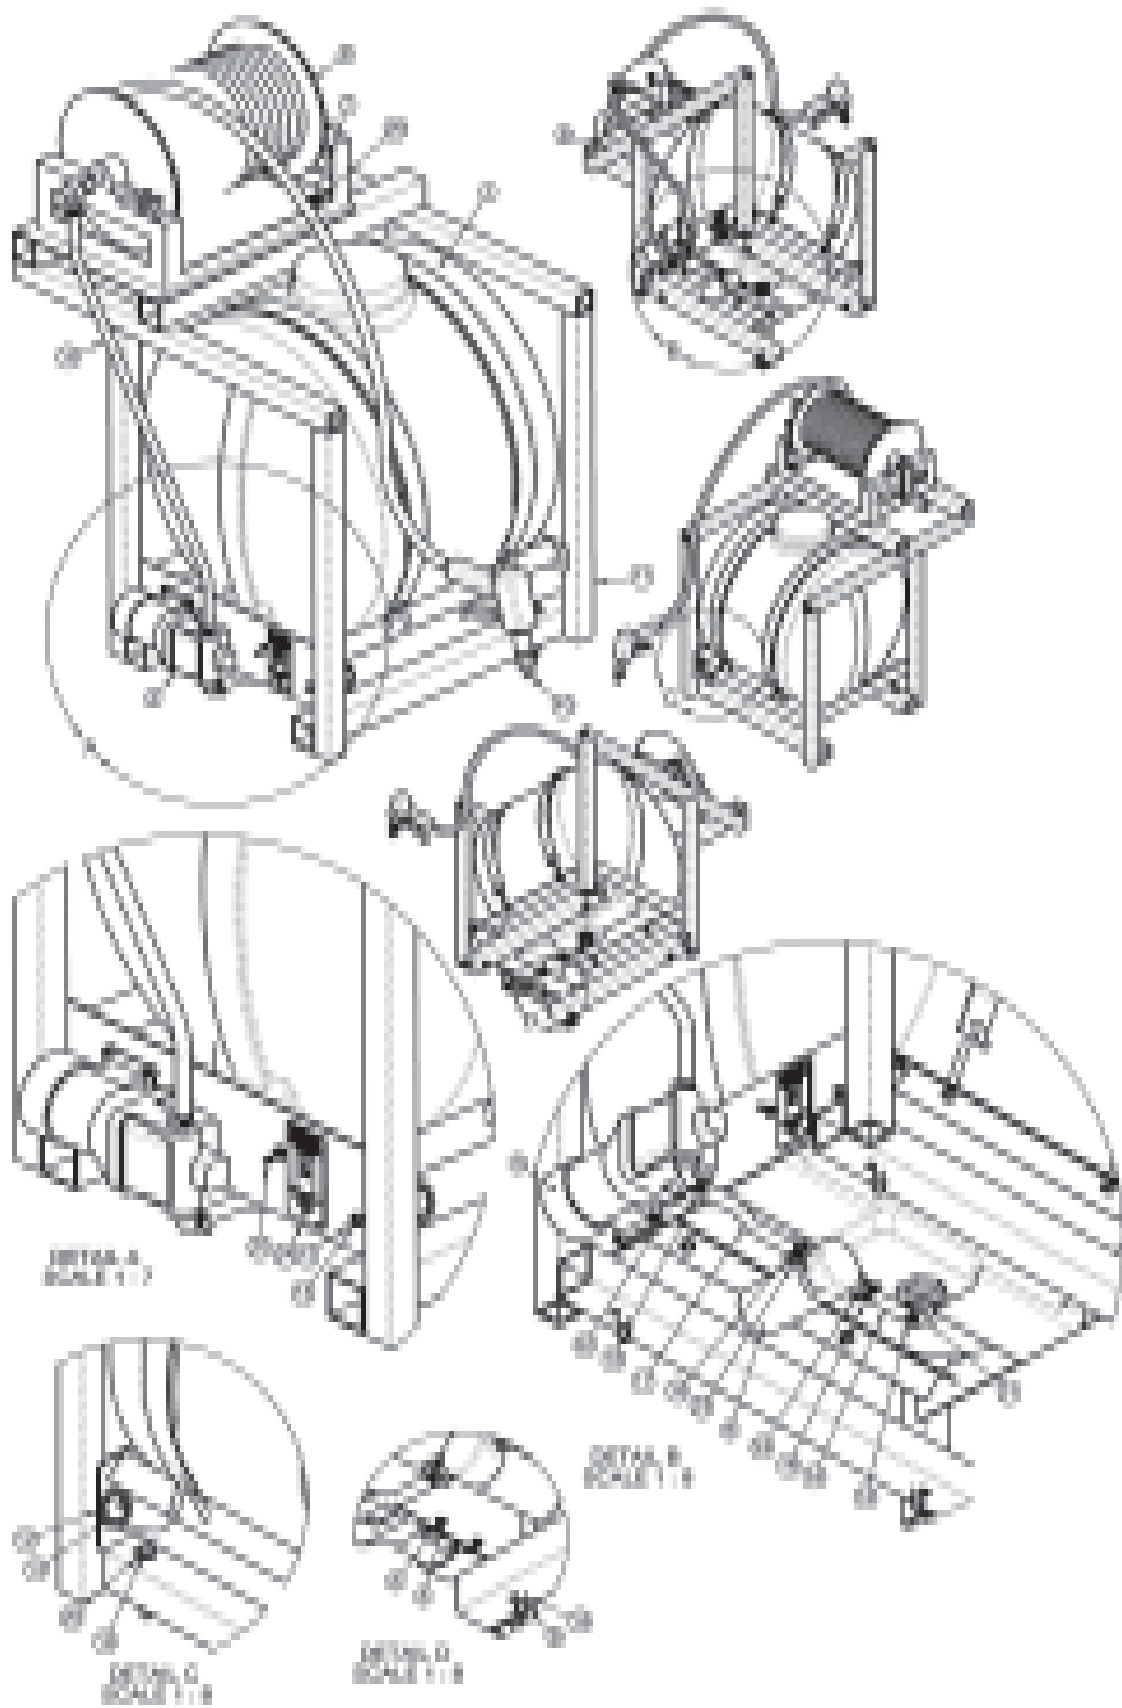

FIRE SUPPRESSION SYSTEM PARTS

ITEM	P/N	QTY	DESCRIPTION
1	06520357	1	TANK,FIRE SUPPRESS SYS,RAILKUT
2	06520358	1	MNT,TANK,FIRE KIT,RAILKUT
3	06520359	1	PUMP,FIRE SUPPRESS SYS,RAILKUT
4	6T2181	4	CAPSCREW,SKT HD,10/24 X 3/4
5	24890	4	HEX NUT,10-24 NYLOCK
6	06520360	1	HOSE REEL,FIRE KIT,RAILKUT
7	21630	4	CAPSCREW, 3/8 x 1,NC
8	21627	8	NYLOCK NUT,3/8",NC
9	06520361	1	FILTER,FIRE KIT,RAILKUT
10	06520366	1	GUN,FIRE KIT,RAILKUT
11	06370120	1	STAND,FIRESYS,RAILKUT
12	06370121	1	HOLSTER,FIRESYS,RAILKUT
13	06430090	1	SLEEVE,GUN,FIRE SYS
14	21525	1	HEX NUT, 1/4" NC
15	06520380 - A	1	HOSE,.880.D.x.50I.D.,BULK
16	06520380 - B	1	HOSE,.880.D.x.50I.D.,BULK
17	06520380 - C	1	HOSE,.880.D.x.50I.D.,BULK
18	35091	6	CLAMP, HOSE #10
19	21640	4	CAPSCREW,3/8" X 3-1/2" NC
20	22016	8	FLATWASHER,3/8"
21	06520367	1	ELBOW,3/4COUPLERx1/2BARB,NYLON
22	06520368	1	ELBOW,3/4COUPLERx1/2BARB,NYLON
23	06503108	2	ADAPTER,BARB,1/2x1/2MP
24	6T3222	1	DECAL,CONTROL,ON-OFF SWITCH
25	PT3905A	1	SWITCH,MOWER
-	06520364	1	FILTER SEAL
-	06520365	1	FILTER ELEMENT

FIRE SUPPRESSION SYSTEM WIRING

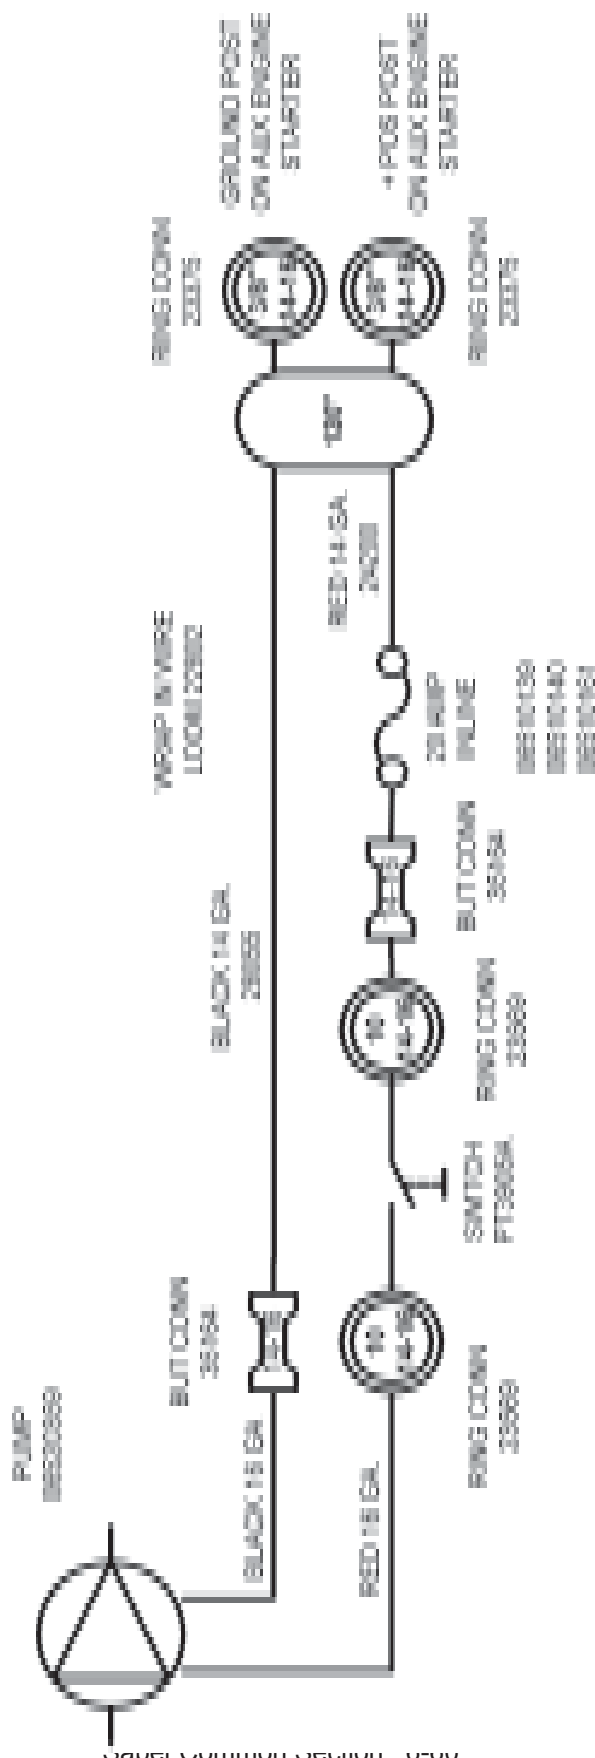

WATER CONTROL SECTION 0-00

CLEAN CUTTER - SABER

CLEAN CUTTER SECTION

ASSEMBLY - CLEAN CUTTER

CAUTION!



Failure to follow the following warnings and instructions may result in serious injury or damage to the equipment or property!

CAUTION!



WARNING: The blade alone weighs approximately 145 lbs. Be sure its weight can be supported before attempting to replace. The use of a lift mechanism will ease replacement.

CLEAN CUTTER BLADE MOUNTING

The CLEAN CUTTER blade was designed for installation onto a standard SABER spindle. It is equipped with replaceable carbide tipped teeth. Carbide is very hard, it will chip or break on impact. Handle the saw blade with care. **DO NOT** roll saw on any hard surface or allow it to strike a hard object. Set it down on a piece of belting or wood to avoid damaging carbide tips. Install two temporary(2) threaded studs into (2) opposite holes in the spindle. Align the bolt holes in adapter (part number 34767) with the studs and slide adapter over studs, be sure to index adapter so as the protruding 2 7/8" diameter pilot on the adapter faces outward away from spindle. Then slide the saw blade (part number 33874) over the studs and onto the 2 7/8" diameter pilot of the adapter. **NOTE:** Orient blade for clockwise rotation (blade rotates clockwise when looking down on top of mower deck). Then slide the collar (part number 34768) over the studs with the chamfered edge of collar to the outside, be sure the counterbore bolt holes face outward. Apply Loctite "271" to the threads of the 3/4-16 x 3 1/4" UNF Grade 8 bolts (part number 34769), and install lock washers (part number 21993) onto the bolts, then install bolts through collar, blade, and adapter into the spindle. Remove the threaded studs, and replace with bolts and lockwashers. Torque bolts in an alternating pattern to 298 Ft-lbs.

DANGER!



Never work under the Implement, the framework, or any lifted component unless the Implement is securely supported or blocked up to prevent sudden or inadvertent falling which could cause serious injury or even death. (SG-14)




OPERATION - CLEAN CUTTER

DANGER!



Never operate the Tractor or Implement until you have read and completely understand this Manual, the Tractor Operator's Manual, and each of the Safety Messages found in the Manual or on the Tractor and Implement. Learn how to stop the tractor engine suddenly in an emergency. Never allow inexperienced or untrained personnel to operate the Tractor and Implement without supervision. Make sure the operator has fully read and understood the manuals prior to operation. (SG-4)

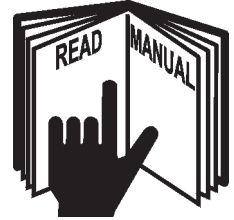

OPERATING INSTRUCTIONS

Inspect clean cutter saw before each use. Re-torque spindle bolts to 331 Ft-lbs. Inspect blade around collar and near the teeth for bends and cracks. Check for loose, broken, chipped, dull or missing teeth. Tighten all loose teeth by hammering and or replacing rivets. If teeth are broken, chipped, or missing or if blade is cracked or becomes bent remove blade and have it repaired at an approved service center Call Tiger Service Department for replacement parts and service.

The SABER Clean Cutter is intended for clean cutting trees and brush up to eight (8) inches in diameter maximum. Turn mower "ON" while tractor is running at idle RPM. Then increase tractor speed to 1,950 RPM maximum. Note, this tractor engine speed produces a mower speed of 1,500 RPM. **DO NOT operate the clean cutter mower at speeds in excess of 1,500 RPM.** If saw blade wobbles in excess of two (2) inches while tractor is idling, **STOP**, remove the blade and have it repaired at an approved service center. Call Tiger Service Department for replacement parts and service.

Allow saw to accelerate to maximum speed before moving into foliage. Advance mower head smoothly in foliage. Allow saw to cut through material, do not force or over feed. If saw slows excessively, move the head out of the foliage, and allow the saw to achieve maximum speed. **DO NOT** move up or down or roll mower head while cutting through heavy foliage. **DO NOT** use clean cutter mower on the ground. The saw blade is equipped with carbide tips, which are very hard. Striking rocks, steel, concrete, or other similar debris will break these tips.

Badly worn teeth increase stress to the saw blade and require more horsepower to cut than sharp teeth. Set-up a scheduled maintenance program for the saw before the teeth are dull. The saw will last longer, produce a better cut, cut large diameter foliage without binding, and will cost less to operate.

Check adapter and collar every time saw is changed, maintain the .004 inch taper on face (surface against the saw blade) of these two (2) items. Always clean adapter and collar before mounting the blade. If adapter or collars are worn or damaged, they must be replaced.

Familiarize yourself with the machines operation and correct operating safety precautions.

OPERATION - CLEAN CUTTER

WARNING!




Excessive wobble will generate heat in the blade, rapidly accelerating the loss of tension. The overheated blade will then rub against the foliage as it is cutting, again increasing the heat in the blade and intensifying the wobble. The blade may then weaken, crack and eventually fail. **NEVER RUN A BLADE THAT IS CRACKED OR BENT.**

DANGER!



Always keep a careful lookout and use extreme care when working around overhead obstructions. Never allow the Mower head or boom within 10 feet of any power line. When working close to overhead power lines consult your electric company for a safe code of operation.


(SBM-7)

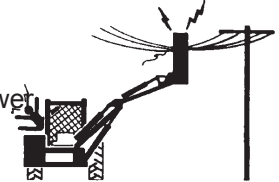

WARNING!




Do not put hands or feet under mower decks. Blade Contact can result serious injury or even death. Stay away until all motion has stopped and the decks are securely blocked up. (SGM-9)

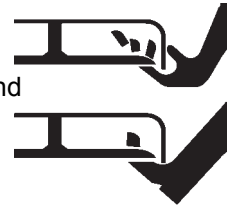

DANGER!



Never operate the Tractor and Mower Unit without an OPS (Operators Protective Structure) or Cab to prevent injury from objects thrown from ground or from overhead trimming. Stop mowing if workers or passersby are within 100 yards. (SBM-9)

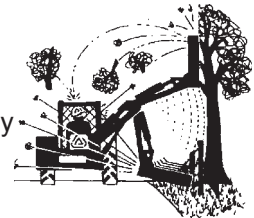

WARNING!



CAUTION: Never leave the key in the ignition switch. Also personal injury or death can occur from sudden dropping or inadvertent operation of the controls. Make certain the area is clear before lowering or raising the deck.

MAINTENANCE - CLEAN CUTTER

MAINTENANCE INSTRUCTIONS


Inspect clean cutter saw before each use. Re-torque spindle bolts in an alternating pattern to 331 ft-lbs. Check for loose, broken, chipped, dull or missing teeth. Tighten all loose tooth assemblies by hammer and or replacing rivets. If teeth tips are broken, chipped, or missing, replace tip or replace entire tooth assembly. **NEVER RUN SAW BLADE WITH MISSING TOOTH ASSEMBLY.** If saw blade is cracked, becomes bent or wobbles in excess of two (2) inches while the tractor is idling, **STOP**, remove blade and have it repaired at an approved service center. Call Tiger Service Department for replacement parts and service.

These saw blades are pre-tensioned after the tooth assemblies are riveted in place. This pre-tensioning ensures that the blade runs true and remains true under normal cutting load. Removal of more than one or two complete tooth assemblies at a time may effect the tensioning of the blade. Before cutting always check for wobble while machine is running at idle. If blade wobbles in excess of two (2) inches, **STOP**, remove blade and have it repaired at an approved service center. The teeth tips can be replaced without removing the tooth bodies from the saw blade (see TIP REPLACEMENT PROCEDURE). This method is preferred over the entire removal of tooth assemblies.


Check adapter and collar every time saw is changed, maintain the .004 to .006 inch taper (see figure below) on inside face (surface against saw blade) of these two (2) items. Always clean inside face of adapter and collar before mounting the blade. If adapter or collars are worn, chipped, or damaged, they must be replaced.

Any saw blade (regardless of condition) that has seen regular use should be serviced at least once a year at an approved service center .

Spare saw blades should be stored in a dry environment and transported only on the wooden crates that are supplied with the saw blade.

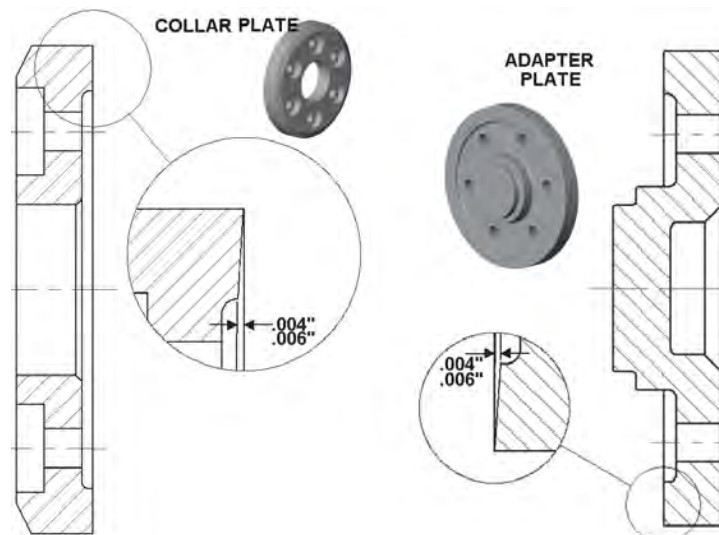

CLEAN CUTTER BLADE AND TEETH PARTS

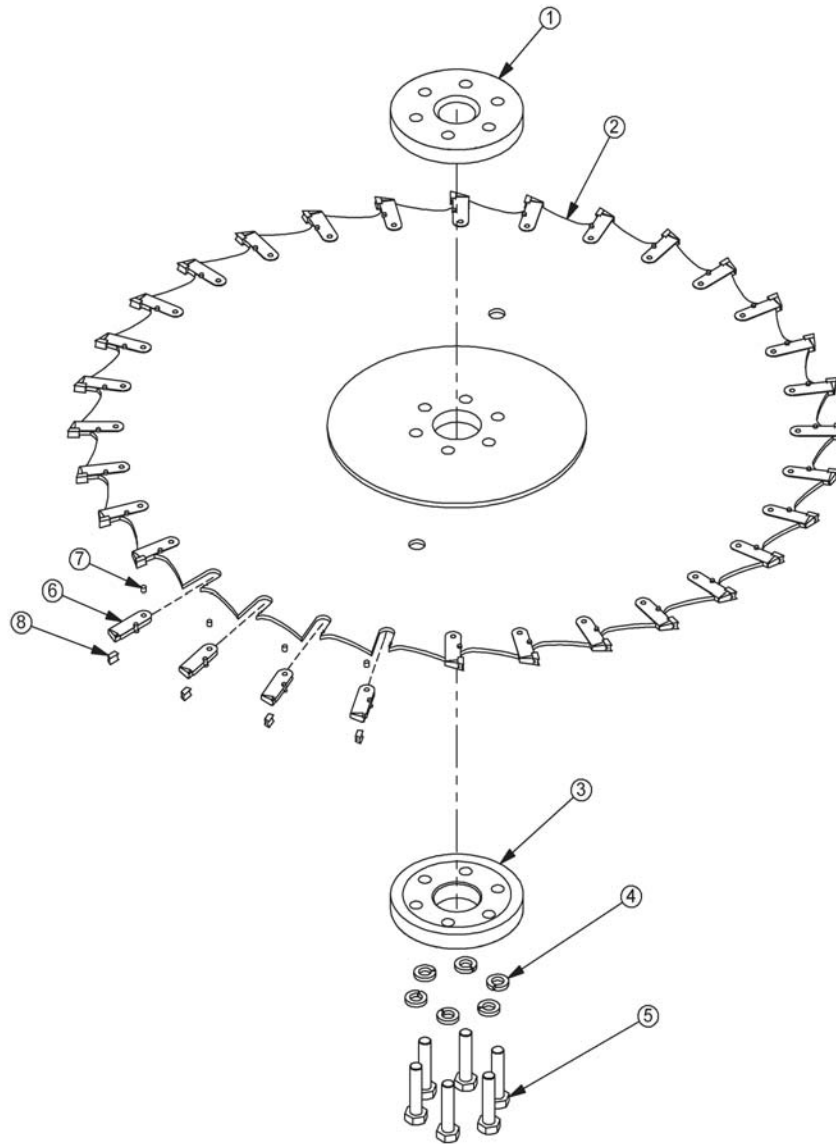


ITEM	PART NO.	QTY.	DESCRIPTION
1	06420025	1	ADAPTER,SAW,SABER,RNFRCD
2	06520224	1	BLADE, 48" SAW WITH TEETH
3	06420038	1	COLLAR, SAW BLADE - SABER
4	33880	6	FLATWASHER,3/4,GR 8,SAE
5	06530210	6	CAPSCREW,3/4 x 3 3/4 NF, GR 8
6	06520225	30	TOOTH WITH RIVET, SAW BLADE
7	34703	30	TOOTH RIVET, SAW BLADE
8	34702	30	TOOTH TIP, SAW, CARBIDE
*	34705	AVAIL	SHARPENING TOOL (NOT SHOWN)
*	34704	AVAIL	RIVET REMOVER TOOL (NOT SHOWN)

(UPDATED NOVEMBER '07)


TIP REPLACEMENT PROCEDURE



CARBIDE TIP REPLACEMENT

1. Heat face of tip to **dull orange**, remove tip, then brush tooth body clean of all debris (carbon).
2. Apply acetone to socket rail on tooth body and allow it to evaporate. Dab on soldering paste (black flux) to socket rail of tooth body and slide pre-tinned tip into place.
3. Then heat tip sides and base of socket rail to ensure silver solder flows completely around base of tip. Grasp tip with tweezers and gently twist tip back and forth to ensure complete bonding of silver solder
4. Discontinue heat, and allow to cool. Then check braze by gently tapping tip with rubber mallet.

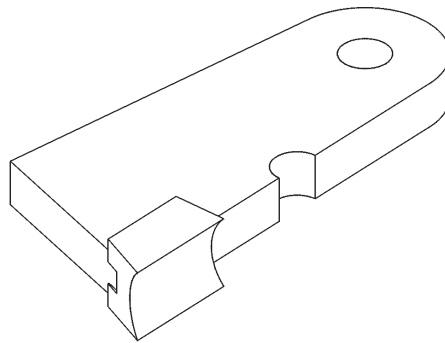

VIEW OF ASSEMBLED TOOTH

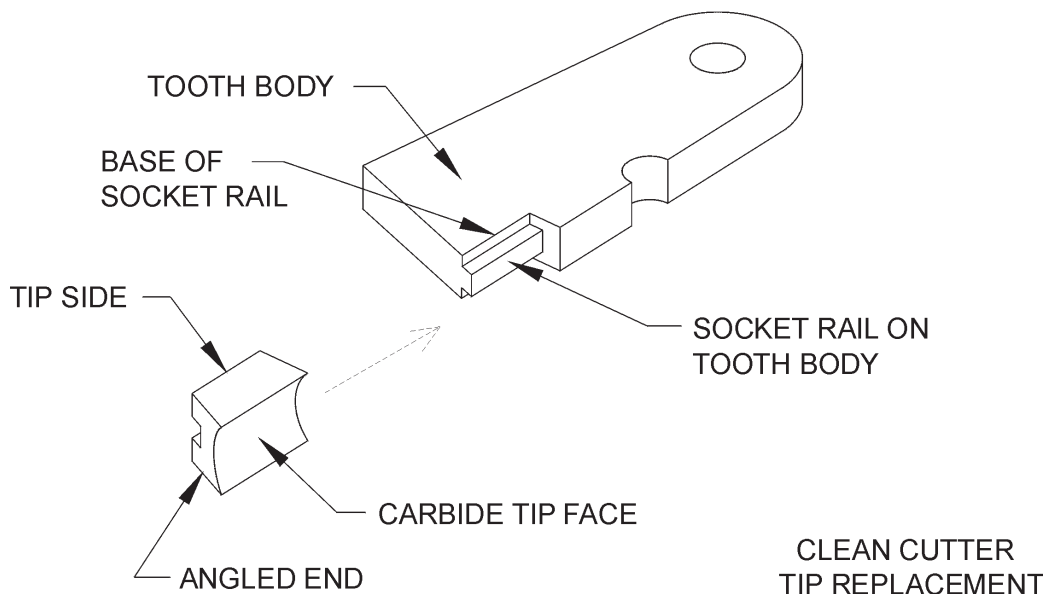



**WARRANTY
SECTION**

WARRANTY INFORMATION

Tiger Corporation, 3301 N. Louise, Sioux Falls, South Dakota, warrants to the original Retail Customer, the new Tiger equipment is free of defects in material and workmanship. Any part of equipment that in Tiger's judgement, show evidence of such defects will be repaired or replaced without charge, provided that the failure of part(s) shall have occurred within twelve (12) months from the date of delivery of said equipment to the Retail Customer. Expendable components such as knives, oil, chain sprockets, skid shoes, knife mounting disks and the like are excluded but not limited to this warranty.

The Retail Customer must pay the transportation cost to and from the Tiger Dealer's service shop for warranty service. Warranty service will be performed by the Tiger Dealer from whom the equipment was purchased, during service shop regularly scheduled days and hours of operation.

All Tiger obligation under this warranty shall be terminated if the equipment is modified or altered in ways not approved in writing by Tiger, if repair parts other than genuine Tiger repair parts have been used, or if the equipment has been subject to misuse, neglect, accident, improper maintenance or improper operation.

Tiger Corporation reserves the right to make improvements in design or changes in specification at any time without incurring any obligation to owners of equipment previously sold.

No agent or person has authority to alter, add to or waive the above warranties which are agreed to be in the only warranties, representations or promises, expressed or implied, as to the quality or performance of the products covered and which do not include any implied warranty of merchantability or fitness. In no event will Tiger be liable for incidental or consequential damages or injuries, including, but not limited to, loss of profits, rental or substitute equipment or other commercial loss.

**THERE ARE NO WARRANTIES WHICH EXTEND
BEYOND THOSE EXPRESSED HEREIN.**

It is the Purchasers obligation to sign the warranty registration form **AFTER** he / she has Read and Understands the Operation and Safety Instructions stated within this manual.

ONE LAST WORD

This manual cannot possibly cover all of the potentially hazardous situations you will encounter. By being familiar with the safety rules, operating and maintenance instructions in this manual you can help prevent accidents. The objective of this manual is to help make you a better operator. Remember, **SAFETY IS YOU!**



1012

Your safety and the safety of those around you depends on **YOU**. Common sense should play a large role in the operation of this machine.

Since we at Tiger Corporation are constantly striving to improve our products, we reserve the right to change specifications or design at any time.

TO THE OWNER / OPERATOR / DEALER



To keep your implement running efficiently and safely, read your manual thoroughly and follow these directions and the Safety Messages in this manual and on the machine. The table of contents clearly identifies each section where you can easily find the information you need.

The Occupational Safety and Health Act (OSHA 1928.51 subpart C) makes the following minimum requirements for tractor operators.

OWNER REQUIREMENTS:

1. Provide a Roll-Over-Protective Structure that meets the requirements of this Standard; and
2. Provide Seatbelts that meet the requirements of this Standard and SAE J3C; and
3. Ensure that each employee uses such Seatbelt while the tractor is moving; and
4. Ensure that each employee tightens the Seatbelt sufficiently to confine the employee to the protected area provided by the ROPS.

OPERATOR REQUIREMENTS:

1. Securely fasten seatbelt if the tractor has a ROPS.
2. Where possible, avoid operating the tractor near steep ditches, embankments, and holes.
3. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.
4. Stay off slopes too steep for safe operation.
5. Watch where you are going – especially at row ends, on roads, and around trees.
6. Do Not permit others to ride.
7. Operate the tractor smoothly – no jerky turns, starts, or stops.
8. Hitch only to the draw-bar and hitch points recommended by the tractor manufacturer.
9. When the tractor is stopped, set brakes securely and use park lock, if available



Printed in USA
© Tiger Corporation