



BENGAL BRUTE ASSEMBLIES

JD6FI € €R

Current as of GFI /2011



PARTS LISTING WITH MOUNTING AND OPERATING INSTRUCTIONS

Tiger Corporation
3301 N. Louise Ave.
Sioux Falls, SD 57107
1-800-843-6849
1-605-336-7900
www.tiger-mowers.com

© Tiger Corporation

06020016

TO THE OWNER / OPERATOR / DEALER

All implements with moving parts are potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes the potential hazards and follows reasonable safety practices. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents.


BEFORE YOU START!! Read the safety messages on the implement and shown in this manual. Observe the rules of safety and use common sense!

READ AND UNDERSTAND THIS MANUAL! Non-English speaking operators will need to GET THE MANUAL TRANSLATED as needed!



DANGER

FAILING TO FOLLOW SAFETY MESSAGES AND OPERATING INSTRUCTIONS CAN CAUSE SERIOUS BODILY INJURY OR EVEN DEATH TO OPERATOR AND OTHERS IN THE AREA.

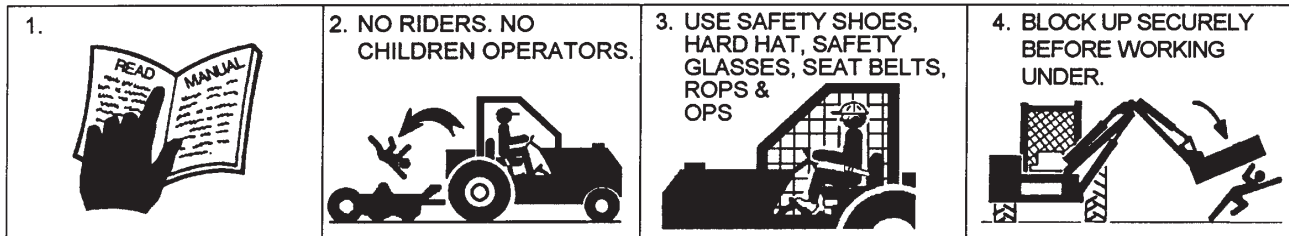

1. Study and understand Operator's Manuals, Safety Decals, and Instructional Decals for tractor and implement to prevent misuse, abuse, and accidents. Practice before operating in a confined area or near passersby.

● Learn how to stop engine suddenly in an emergency. Be alert for passersby and especially children

2. Allow no children on or near folding mower or tractor. Allow no riders on tractor or implement. Falling off may cause serious injury or death from being run over by tractor or mower or contact with rotating blades.

3. Operate only with tractor having Roll-Over Protective Structure (ROPS) and with seat belt securely fastened to prevent injury and possible death from falling off or tractor overturn.

● Personal Protective Equipment such as Hard Hat, Safety Glasses, Safety Shoes, & Ear Plugs are recommended.

4. Block up or support raised machine and all lifted components securely before putting hands or feet under or working underneath any lifted component to prevent crushing injury or death from sudden dropping or inadvertent operation of controls. Make certain area is clear before lowering or folding

5. Before transporting, put Lift Lever in detent or full-lift position. Install Transport Safety Devices securely on folding mowers. Put Booms securely in Transport Rest.

● Folding and Boom Mowers have raised center of gravity. Slow down when turning and on hillsides.


6. Make certain that SMV sign, warning lights, and reflectors are clearly visible. Follow local traffic codes.

7. Never operate with Cutting Head or Folding Section raised if passersby, bystanders, or traffic are in the area to reduce possibility of injury or death from objects thrown by Blades under Guards or mower structure.

8. Before dismounting, secure implement in transport position or lower to ground.

● Put tractor in park or set brake, disengage PTO, stop engine, remove key, and wait until noise of rotation has ceased to prevent crushing by entanglement in rotating parts which could cause injury or death.

● Never mount or dismount a moving vehicle. Crushing from rollover may cause serious injury or death.

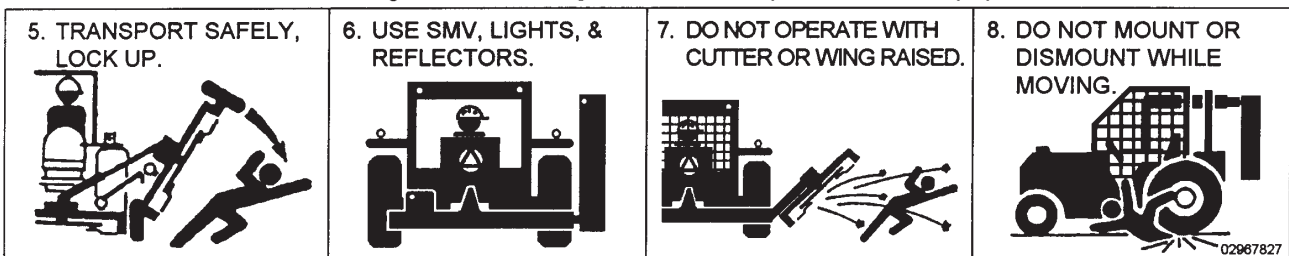

02967827

Warranty Information: Read and understand the complete Warranty Statement found in this manual. Fill out the Warranty Registration form in full and return it within 90 days. Make certain the Serial Number of the machine is recorded on the Warranty Card, and form that you retain.

FORWARD

This manual contains information about many features of the Tiger mowing and roadside maintenance equipment. Some of these include: Safety precautions, Assembly instructions, Operations, Maintenance and Parts. This manual will also assist you in the proper break-in, daily care, and troubleshooting of your new mower.

We recommend that you read carefully the entire manual before operating the unit. Also, time spent in becoming fully acquainted with its performance features, adjustments, and maintenance schedules will be repaid in a long and satisfactory life of the equipment.

Troubleshooting - Please, before you call, help us to help you!

Please look at the equipment to observe what is happening, then:

- Classify the problem
 - Hydraulic, electrical or mechanical - Read the trouble shooting section
 - Tractor or Truck chassis - Contact vehicle dealer

- If unable to correct the problem yourself, contact your local Tiger Dealer after gathering:
 - Machine model _____
 - Serial number _____
 - Dealer name _____
 - Detailed information about the problem including results of troubleshooting

Attention Owner / Operator / Dealer: It is your obligation to read, and understand, the warranty information section located at the back of this manual denoting that the purchaser understands the safety issues relating to this machine and has received and will read a copy of this manual.

If at any time, you have a service problem with your Tiger mower, Contact your local dealer for service and parts needed.

MANUFACTURED BY:

Tiger Corporation

3301 N. Louise Ave.

Sioux Falls, SD 57107

1-800-843-6849

1-605-336-7900

www.tiger-mowers.com

DISTRIBUTED BY:

1- _____ - _____ - _____

1- _____ - _____ - _____

TABLE OF CONTENTS

SAFETY SECTION_____	1
ASSEMBLY / MOUNTING SECTION_____	2
OPERATION SECTION_____	3
MAINTENANCE SECTION_____	4
PARTS SECTION_____	5
COMMON PARTS SECTION_____	6
WARRANTY INFORMATION_____	7



1012

This symbol means:

CAUTION – YOUR SAFETY IS AT RISK!

When you see this symbol, read and follow the associated instructions carefully or personal injury or damage may result.

Tiger is a registered trademark.



SAFETY SECTION

SAFETY

A safe and careful operator is the best operator. Safety is of primary importance to the manufacturer and should be to the owner / operator. Most accidents can be avoided by being aware of your equipment, your surroundings, and observing certain precautions. The first section of this manual includes a list of Safety Messages that, if followed, will help protect the operator and bystanders from injury or death. Read and understand these Safety Messages before assembling, operating or servicing this mower. This equipment should only be operated by those persons who have read the Manual, who are responsible and trained, and who know how to do so safely and responsibly.

The Safety Alert Symbol combined with a Signal Word, as seen below, is used throughout this manual and on decals which are attached to the equipment. The Safety Alert Symbol means: **“ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!”** The symbol and signal word are intended to warn the owner / operator of impending hazards and the degree of possible injury when operating this equipment.

Practice all usual and customary safe working precautions and above all -- remember safety is up to YOU! Only YOU can prevent serious injury or death from unsafe practices.



This is the Safety Alert Symbol. When you see this symbol on your machine or in these instructions, be alert to the potential for personal injury.

CAUTION!



The lowest level of Safety Message; warns of possible injury. Decals located on the equipment with this signal word are Black and Yellow.

WARNING!



Serious injury or possible death! Decals are Black and Orange.

DANGER!



Imminent death / critical injury. Decals are Red and White.

READ, UNDERSTAND, and FOLLOW the following Safety Messages. Serious injury or death may occur unless care is taken to follow the warnings and instructions stated in the Safety Messages. Always use good common sense to avoid hazards. (SG-2)

SAFETY INSTRUCTIONS




SAFETY

PELIGRO!



Si no lee Ingles, pida ayuda a alguien que si lo lea para que le traduzca las medidas de seguridad. *UI /5+

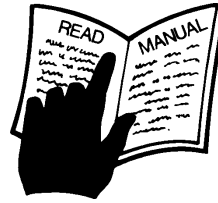

¡ LEA EL INSTRUCTIVO!

DANGER!



Never operate the Tractor or Implement until you have read and completely understand this Manual, the Tractor Operator's Manual, and each of the Safety Messages found in the Manual or on the Tractor and Implement. Learn how to stop the tractor engine suddenly in an emergency! Never allow inexperienced or untrained personnel to operate the Tractor and Implement without supervision. Make sure the operator has fully read and understood the manuals prior to operation. *UI /6+



WARNING!



Always maintain the safety decals in good readable condition. If the decals are missing, damaged, or unreadable, obtain and install replacement decals immediately. *UI /7+

WARNING!



Make certain that the "Slow Moving Vehicle" (SMV) sign is installed in such a way as to be clearly visible and legible. When transporting the Equipment use the Tractor flashing warning lights and follow all local traffic regulations. *UI /8+



WARNING!



Operate this Equipment only with a Tractor equipped with an approved roll-over-protective system (ROPS). Always wear seat belts. Serious injury or even death could result from falling off the tractor--particularly during a turnover when the operator could be pinned under the ROPS. *UI /9+



WARNING!




Do not modify or alter this Implement. Do not permit anyone to modify or alter this Implement, any of its components or any Implement function. *UI /:+

DANGER!



BEFORE leaving the tractor seat, always engage the brake and/or set the tractor transmission in parking gear, disengage the PTO, stop the engine, remove the key, and wait for all moving parts to stop. Place the tractor shift lever into a low range or parking gear to prevent the tractor from rolling. Never dismount a Tractor that is moving or while the engine is running. Operate the Tractor controls from the tractor seat only. *UI /:+

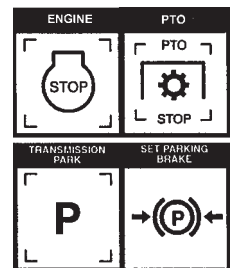

SAFETY

DANGER!



Never allow children or other persons to ride on the Tractor or Implement. Falling off can result in serious injury or death.

*****UI /32+



DANGER!



Never allow children to operate or ride on the Tractor or Implement.

*****UI /33+



WARNING!



Do not mount the Tractor while the tractor is moving. Mount the Tractor only when the Tractor and all moving parts are completely stopped.

34+

*****UI /



DANGER!



Start tractor only when properly seated in the Tractor seat. Starting a tractor in gear can result in injury or death. Read the Tractor operators manual for proper starting instructions.

*UI /35+



DANGER!



Never work under the Implement, the framework, or any lifted component unless the Implement is securely supported or blocked up to prevent sudden or inadvertent falling which could cause serious injury or even death.

***UI /36+



DANGER!



Do not operate this Equipment with hydraulic oil leaking. Oil is expensive and its presence could present a hazard. Do not check for leaks with your hand! Use a piece of heavy paper or cardboard. High-pressure oil streams from breaks in the line could penetrate the skin and cause tissue damage including gangrene. If oil does penetrate the skin, have the injury treated immediately by a physician knowledgeable and skilled in this procedure.

***UI /37+




SAFETY

WARNING!



The operator and all support personnel should wear hard hats, safety shoes, safety glasses, and proper hearing protection at all times for protection from injury including injury from items thrown by the equipment. *UI /38+

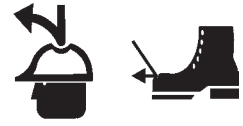

CAUTION!



PROLONGED EXPOSURE TO LOUD NOISE MAY CAUSE PERMANENT HEARING LOSS! Tractors with or without an Implement attached can often be noisy enough to cause permanent hearing loss. We recommend that you always wear hearing protection if the noise in the Operator's position exceeds 80db. Noise over 85db over an extended period of time will cause severe hearing loss. Noise over 90db adjacent to the Operator over an extended period of time will cause permanent or total hearing loss. *Note:* Hearing loss from loud noise [from tractors, chain saws, radios, and other such sources close to the ear] is cumulative over a lifetime without hope of natural recovery. *UI /19+



WARNING!




Transport only at safe speeds. Serious accidents and injuries can result from operating this equipment at unsafe speeds. Understand the Tractor and Implement and how it handles before transporting on streets and highways. Make sure the Tractor steering and brakes are in good condition and operate properly.



Before transporting the Tractor and Implement, determine the safe transport speeds for you and the equipment. Make sure you abide by the following rules:

1. Test the tractor at a slow speed and increase the speed slowly. Apply the Brakes smoothly to determine the stopping characteristics of the Tractor and Implement. As you increase the speed of the Tractor the stopping distance increases. Determine the maximum safe transport speed for you and this Equipment.
2. Test the equipment at a slow speed in turns. Increase the speed through the turn only after you determine that it is safe to operate at a higher speed. Use extreme care and reduce your speed when turning sharply to prevent the tractor and implement from turning over. Determine the maximum safe turning speed for you and this equipment before operating on roads or uneven ground.
3. Only transport the Tractor and Implement at the speeds that you have determined are safe and which allow you to properly control the equipment.

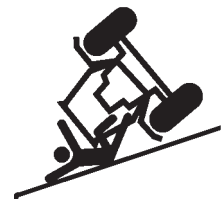

Be aware of the operating conditions. Do not operate the Tractor with weak or faulty brakes. When operating down a hill or on wet or rain slick roads, the braking distance increases: use extreme care and reduce your speed. When operating in traffic always use the Tractor's flashing warning lights and reduce your speed. Be aware of traffic around you and watch out for the other guy. (SG-19)

SAFETY

WARNING!



Never attempt to lubricate, adjust, or remove material from the Implement while it is in motion or while tractor engine is running. Make sure the tractor engine is off before working on the Implement.

*****UI /42+

WARNING!



Periodically inspect all moving parts for wear and replace when necessary with authorized service parts. Look for loose fasteners, worn or broken parts, and leaky or loose fittings. Make sure all pins are properly secured. Serious injury may occur from not maintaining this machine in good working order. *UI /43+



WARNING!



Always read carefully and comply fully with the manufacturers instructions when handling oil, solvents, cleansers, and any other chemical agent. *UI /44+



DANGER!



Never run the tractor engine in a closed building or without adequate ventilation. The exhaust fumes can be hazardous to your health.

*UI /45+

DANGER!



KEEP AWAY FROM ROTATING ELEMENTS to prevent entanglement and possible serious injury or death.

*****UI /46+



DANGER!



Never allow children to play on or around Tractor or Implement. Children can slip or fall off the Equipment and be injured or killed. Children can cause the Implement to shift or fall crushing themselves or others. *UI /47+

SAFETY

DANGER!



NEVER use drugs or alcohol immediately before or while operating the Tractor and Implement. Drugs and alcohol will affect an operator's alertness and coordination and therefore affect the operator's ability to operate the equipment safely. Before operating the Tractor or Implement, an operator on prescription or over-the-counter medication must consult a medical professional regarding any side effects of the medication that would hinder their ability to operate the Equipment safely. **NEVER** knowingly allow anyone to operate this equipment when their alertness or coordination is impaired. Serious injury or death to the operator or others could result if the operator is under the influence of drugs or alcohol. *UI /49+



DANGER!



Operate the Tractor and/or Implement controls only while properly seated in the Tractor seat with the seat belt securely fastened around you. Inadvertent movement of the Tractor or Implement may cause serious injury or death. *UI /4; +

WARNING!



Mow only in conditions where you have clear visibility in daylight or with adequate artificial lighting. Never mow in darkness or foggy conditions where you cannot clearly see at least 100 yards in front and to the sides of the tractor and mower. Make sure that you can clearly see and identify passersby, steep slopes, ditches, drop-offs, overhead obstructions, power lines, debris and foreign objects. If you are unable to clearly see this type of items discontinue mowing. *UI 0/3+

DANGER!




There are obvious and hidden potential hazards in the operation of this Mower. REMEMBER! This machine is often operated in heavy brush and in heavy weeds. The Blades of this Mower can throw objects if shields are not properly installed and maintained. Serious injury or even death may occur unless care is taken to insure the safety of the operator, bystanders, or passersby in the area. Do not operate this machine with anyone in the immediate area. Stop mowing if anyone is within 100 yards of mower. *UI 0/4+



DANGER!



All Safety Shields, Guards and Safety devices including (but not limited to) - the Deflectors, Chain Guards, Steel Guards, Gearbox Shields, PTO integral shields, and Retractable Door Shields should be used and maintained in good working condition. All safety devices should be inspected carefully at least daily for missing or broken components. Missing, broken, or worn items must be replaced at once to reduce the possibility of injury or death from thrown objects, entanglement, or blade contact. *UI 0/5+

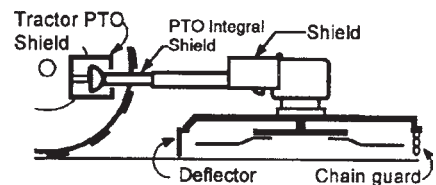

SAFETY

DANGER!



The rotating parts of this machine have been designed and tested for rugged use. However, the blades could fail upon impact with heavy, solid objects such as metal guard rails and concrete structures. Such impact could cause the broken objects to be thrown outward at very high velocities. To reduce the possibility of property damage, serious injury, or even death, never allow the cutting blades to contact such obstacles. *UI O/6+

WARNING!



Extreme care should be taken when operating near loose objects such as gravel, rocks, wire, and other debris. Inspect the area before mowing. Foreign objects should be removed from the site to prevent machine damage and/or bodily injury or even death. Any objects that cannot be removed must be clearly marked and carefully avoided by the operator. Stop mowing immediately if blades strike a foreign object. Repair all damage and make certain rotor or blade carrier is balanced before resuming mowing. *UI O/7+



WARNING!



Many varied objects, such as wire, cable, rope, or chains, can become entangled in the operating parts of the mower head. These items could then swing outside the housing at greater velocities than the blades. Such a situation is extremely hazardous and could result in serious injury or even death. Inspect the cutting area for such objects before mowing. Remove any like object from the site. Never allow the cutting blades to contact such items. **UI O/8+

WARNING!



Mow at the speed that you can safely operate and control the tractor and mower. Safe mowing speed depends on terrain condition and grass type, density, and height of cut. Normal ground speed range is from 0 to 5 mph. Use slow mowing speeds when operating on or near steep slopes, ditches, drop-offs, overhead obstructions, power lines, or when debris and foreign objects are to be avoided. *UI O/9+

WARNING!



Avoid mowing in reverse direction when possible. Check to make sure there are no persons behind the mower and use extreme care when mowing in reverse. Mow only at a slow ground speed where you can safely operate and control the tractor and mower. Never mow an area that you have not inspected and removed debris or foreign material. ***UI O/; +

WARNING!



Do not put hands or feet under mower decks. Blade Contact can result serious injury or even death. Stay away until all motion has stopped and the decks are securely blocked up. *UI O/; +



DANGER!



Replace bent or broken blade with new blades. NEVER ATTEMPT TO STRAIGHTEN OR WELD ON BLADES SINCE THIS WILL LIKELY CRACK OR OTHERWISE DAMAGE THE BLADE WITH SUBSEQUENT FAILURE AND POSSIBLE SERIOUS INJURY FROM THROWN BLADES. ****UI O/32+

SAFETY

WARNING!



Do not mow with two machines in the same area except with Cab tractors with the windows closed. *U O/33+

DANGER!



Rotary and Flail Mowers are capable under adverse conditions of throwing objects for great distances (100 yards or more) and causing serious injury or death. Follow safety messages carefully. **STOP MOWING IF PASSERSBY ARE WITHIN 100 YARDS UNLESS:**

- Front and Rear Deflectors are installed and in good, working condition;
- Mower Head is running close to and parallel to the ground without exposed Blades;
- Passersby are outside the existing thrown-object zone;
- All areas have been thoroughly inspected and all foreign material such as rocks, cans, glass, and general debris has been removed.



NOTE: Where there are grass and weeds high enough to hide debris that could be struck by the blades, the area should be: inspected and large debris removed, mowed at an intermediate height, inspected closely with any remaining debris being removed, and mowed again at desired final height. *UDO/3+



DANGER!



Use extreme caution when raising the Mower head. Stop the Blades from turning when the Mower Head is raised and passersby are within 100 yards. Raising the Mower head exposes the Cutting Blades which creates a potentially serious hazard and can cause serious injury by objects thrown from the Blades or by contact with the Blades. *****UDO/4+

DANGER!



Be particularly careful in transport. The Mower has raised the center of gravity for the tractor and has increased the possibility of overturn. Turn curves or go up slopes only at low speed and using a gradual turning angle. Slow down on rough or uneven surfaces. *UDO/5+



WARNING!



Never Leave the mower unattended while the head is in the raised position. The mower could fall causing serious injury to anyone who might inadvertently be under the mower *****UDO/6+



WARNING!



The rotating parts of this machine continue to rotate even after the Tractor has been turned off. The operator should remain in his seat for 60 seconds after the brake has been set, the PTO disengaged, the tractor turned off, and all evidence of rotation has ceased. *UDO/7+

“Wait a minute...Save a life!”

SAFETY




Relieve hydraulic pressure prior to doing any maintenance or repair work on the Implement. Place the Mower Head on the ground or securely supported on blocks or stands, disengage the PTO, and turn off the engine. Push and pull the control Levers or Joystick several times to relieve pressure prior to starting any maintenance or repair work. *UDO /8+

DANGER!




Always keep a careful lookout and use extreme care when working around overhead obstructions. Never allow the Mower head or boom within 10 feet of any power line. When working close to overhead power lines consult your electric company for a safe code of operation. *UDO /9+

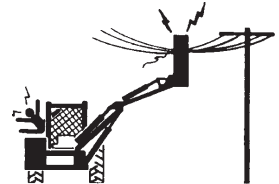

DANGER!




When transporting Boom Mower on a truck or trailer, the height or width may exceed legal limits when the boom is in the transport position. Contact with side or overhead structures or power lines can cause property damage or serious injury or death. If necessary lower boom to reduce height and/or remove mowing head to reduce width to the legal limits. *UDO /; +

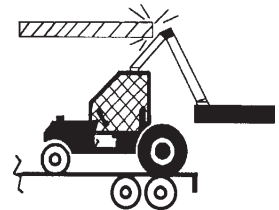

DANGER!



Never operate the Tractor and Mower Unit without an OPS (Operators Protective Structure) or Cab to prevent injury from objects thrown from ground or from overhead trimming. Stop mowing if workers or passersby are within 100 yards. *UDO /; +

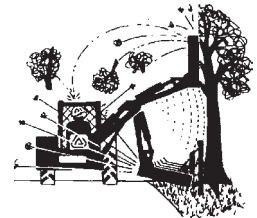

DANGER!




Each Rear Wheel must have a minimum of 1500 pound contact with the surface to prevent lateral instability and possible tip-over which could result in serious bodily injury or even death. Widen the wheel tread and add weights if needed. Refer to the mounting instructions or call Customer Service if you need assistance with Counterweight Procedure. *UDO /33+



DANGER!




Always disconnect the wire leads from the mower pump solenoid before performing service on the Tractor or Mower. Use caution when working on the Tractor or Mower. Tractor engine must be stopped before working on Mower or Tractor. The Mower Blades could inadvertently be turned on without warning and cause immediate dismemberment, injury or death. ***UDO /34c+

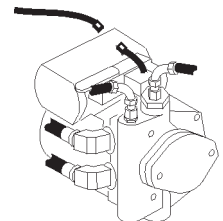

DANGER!



The flail cutter shaft is designed for standard rotation (same rotation as the tractor wheels during forward travel). **Never operate the cutter shaft in the reverse rotation.** Operating this mower in reverse rotation may cause objects to be thrown out the front of the mower head.

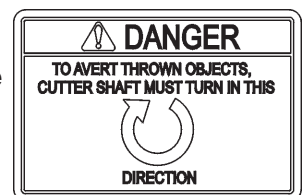

SAFETY

WARNING!



Engine Exhaust, some of its constituents, and certain components contain or emit chemicals known to the state of California to cause cancer and birth or other reproductive harm.

WARNING!



Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the state of California to cause cancer and birth or other reproductive harm. **Wash hands after handling!**

Tiger mowers use balanced and matched system components for blade carriers, blades, cutter-shafts, knives, knife hangers, rollers, drive-train components and bearings. These parts are made and tested to Tiger specifications. Non-genuine “will fit” parts do not consistently meet these specifications. The use of “will fit” parts may reduce mower performance, void mower warranties and present a safety hazard. Use genuine Tiger mower parts for economy and safety.

SEE YOUR  DEALER

In addition to the design and configuration of this Implement, including Safety Signs and Safety Equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence, and proper training of personnel involved in the operation, transport, maintenance, and storage of the machine. Refer also to Safety Messages and operation instruction in each of the appropriate sections of the Tractor and Equipment Manuals. Pay close attention to the Safety Signs affixed to the Tractor and Equipment. (SG-18)

SAFETY

DANGER

FAILING TO FOLLOW SAFETY MESSAGES AND OPERATING INSTRUCTIONS CAN CAUSE SERIOUS BODILY INJURY OR EVEN DEATH TO OPERATOR AND OTHERS IN THE AREA.

1. 	2. NO RIDERS, NO CHILDREN OPERATORS 	3. USE SAFETY SHOES, HARD HAT, SAFETY GLASSES, SEAT BELTS, & ROPS 	4. BLOCK UP SECURELY BEFORE WORKING UNDER
---------------	--	--	--

1 Study and understand Operator's Manuals, Safety Signs, and Instructional Decals for tractor & flail mower to prevent misuse, abuse, & accidents. Practice before operating mower in a confined area or near passersby.

- Learn how to stop engine suddenly in an emergency. Be alert for passersby and especially children.

2 Allow no children on or near implement or tractor. Allow no riders on tractor or implement. Falling off can cause serious injury or death from being runover by tractor or mower or contact with Flail Mower Blades.

3 Operate only with tractor having Roll-Over Protective Structure (ROPS) and with seatbelt fastened securely and snugly to prevent injury and possible death from falling off or tractor overturn. Personal Protective Equipment such as Hard Hat, Safety Glasses, Safety Shoes, and Ear Plugs are recommended.

4 Block up or support raised machine and all lifted components securely before putting hands or feet under or working underneath any lifted component to prevent crushing injury or death from sudden dropping or inadvertent operation of controls. Make certain that area is clear before lowering or folding.

5 Before transporting, put Lift Lever in detent or full-lift position. Install Transport Safety Devices securely on folding implements. Slow down when turning and on hillsides.

- Install **Restrictor in folding circuit to slow down lowering and unfolding if action is faster than is desirable.

6 Make certain that SMV sign, Warning Lights, and Reflectors are clearly visible. Follow local traffic codes.

7 Never operate with Flail Mower or Folding Section raised if passersby, bystanders or traffic are in the area to reduce possibility of injury or death from objects thrown by Blades under Shields or implement structure.

8 Before dismounting, secure flail mower in transport position or lower to ground.

- Put tractor in park or set brake, disengage PTO, stop engine, remove key, and wait until noise of rotation has ceased to prevent entanglement in rotating parts which may cause injury or death.
- Never mount or dismount a moving vehicle. Crushing from runover may cause injury or death.

5. TRANSPORT SAFELY, LOCK UP 	6. USE SMV, LIGHTS, & REFLECTORS. 	7. DONOT OPERATE WITH MOWER OR WING RAISED 	8. DO NOT MOUNT OR DISMOUNT WHILE MOVING
---	--	---	---

PART NO.
LOCATION

002369
HYDRAULIC TANK

PELIGRO

Si No Lee Ingles. Pida Ayuda a Alguien Que Si Lo Lea. Para Que le Traduzca las Medidas de Seguridad.

LEA EL INSTRUCTIVO

00725746

00725746
INSIDE OF CAB

DANGER

THROWN OBJECTS

CUTTING BLADES

KEEP AWAY - ROTATING BLADES

BEING HIT BY THROWN OBJECTS OR CONTACTING ROTATING BLADES CAN CAUSE INJURY OR DEATH.

- Stop mowing if passersby enter the area of thrown objects (See Operator's Manual).
- Use special care if Mower Head or Wing is raised off the ground. (See Manual).
- Operate only if all Guards-Deflectors are in place and in good condition.

00769737

00769737
MOWER DECK

SAFETY



PART NO.
LOCATION

00758194
MOWER DECK



02962764
MAIN BOOM, SECONDARY BOOM, MAIN FRAME



02962765
MAIN FRAME

02965262
HYDRAULIC TANK

SAFETY

DANGER

CUTTING BLADES



THROWN OBJECTS



PART NO.
LOCATION

02967668
MOWER DECK

KEEP AWAY - ROTATING BLADES


BEING HIT BY THROWN OBJECTS OR CONTACTING ROTATING BLADES CAN CAUSE INJURY OR DEATH

- Stop mowing if passersby enter the area of thrown objects. (See Operator's Manual)
- Use special care when Flail or Wing is raised off the ground. (See Oper. Manual)
- Operate only if all Guards-Deflectors are in place and in good condition.


02971123
HYDRAULIC TANK



03200285
OUTSIDE OF CAB

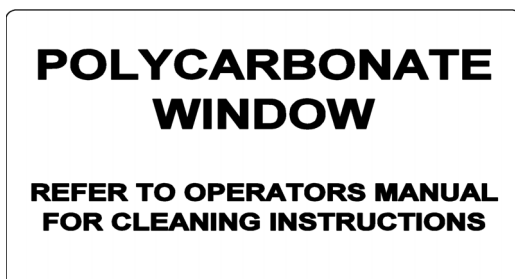

22645
INSIDE OF CAB

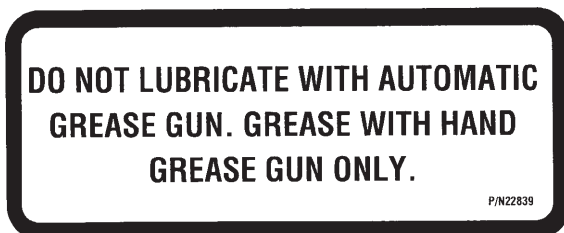

22839
MOWER DECK

SAFETY



PART NO.
LOCATION

22840
INSIDE OF CAB




24028
MOWER DECK

25387
INSIDE OF CAB



10" x 5.5" 31522
MOWER DECK, MAIN BOOM
18.25" x 10" 31523
HYDRAULIC TANK
13.5" x 7" 31513

SAFETY

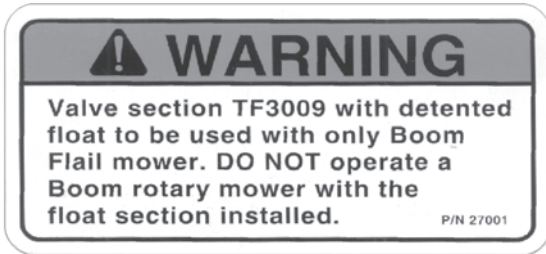




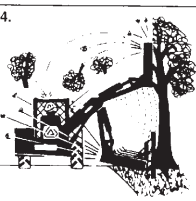

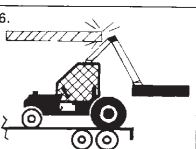
PART NO.
LOCATION

27001
INSIDE OF CAB



31935
INSIDE OF CAB

DANGER

1. EACH REAR WHEEL MUST HAVE A MINIMUM OF 1500 POUNDS CONTACT WITH THE SURFACE TO PREVENT LATERAL INSTABILITY AND POSSIBLE TIP-OVER WITH BODILY INJURY. WIDEN WHEEL TREAD AND ADD WEIGHTS IF NEEDED. SEE MANUAL OR CALL TIGER CUSTOMER SERVICE FOR COUNTERWEIGHT PROCEDURE.
 
2. TRANSPORT CAREFULLY! SLOW DOWN EVEN MORE ON SLOPES AND WHEN TURNING; NEVER TURN UP A SLOPE SHARPLY OR AT HIGH SPEED; AND USE EXTRA CARE IN ROUGH OR BUMPY AREAS TO PREVENT OVERTURN AND POSSIBLE CRUSHING INJURY OR DEATH. IF YOUR VIEW TO THE REAR IS BLOCKED, IT IS YOUR RESPONSIBILITY TO INSTALL MIRRORS THAT PROVIDE A REAR VIEW TO PREVENT ACCIDENTS FROM BLIND SPOTS.
 
3. REAR-MOUNTED BOOM MOWERS MOVE CENTER OF GRAVITY TO THE REAR AND REMOVE WEIGHT FROM FRONT WHEELS. ADD FRONT BALLAST UNTIL AT LEAST 20% OF TRACTOR'S WEIGHT IS ON FRONT WHEELS TO PREVENT REARING UP, LOSS OF STEERING CONTROL, AND POSSIBLE INJURY.
 
4. NEVER OPERATE UNIT WITHOUT AN OPS (OPERATOR PROTECTIVE STRUCTURE) OR CAB TO PREVENT INJURY FROM OBJECTS THROWN FROM GROUND AND OVERHEAD TRIMMING. STOP CUTTING IF ANYONE IS WITHIN 100 YARDS.
 
5. KEEP THE BOOM AND CUTTERHEAD AT LEAST 10 FEET FROM ELECTRIC LINES AND PIPE LINES TO PREVENT ACCIDENTAL CONTACT AND POSSIBLE SERIOUS INJURY OR EVEN DEATH.
 
5. WHEN TRANSPORTING BOOM MOWERS ON A TRUCK OR TRAILER, THE HEIGHT OR WIDTH MAY EXCEED LEGAL LIMITS. CONTACT WITH SIDE OR OVERHEAD STRUCTURES OR POWER LINES CAN CAUSE SERIOUS INJURY OR DEATH. LOWER BOOM TO REDUCE HEIGHT AND/OR REMOVE MOWING HEAD TO REDUCE WIDTH TO THE LEGAL LIMITS, IF NEEDED. 32707
 

32707
HYDRAULIC TANK



42350
MOWER DECK

SAFETY

ATTENTION

**SERVICE HYDRAULIC SYSTEM
WITH UNIVERSAL TRACTOR
HYDRAULIC OIL.**

32708

PART NO.
LOCATION

32708
HYDRAULIC TANK

CAUTION

For your safety and to guarantee optimum product reliability, always use genuine TIGER replacement parts. The use of inferior "will-fit" parts will void warranty of your TIGER implement and may cause premature or catastrophic failure which can result in serious injury or death. If you have any questions concerning the repair parts you are using, contact TIGER, 3301 N. LOUISE AVE., SIOUX FALLS, SD 57107

32709

32709
INSIDE OF CAB


33224
MOWER DECK

Tiger™

33438
MAIN BOOM

SAFETY

PART NO.
LOCATION

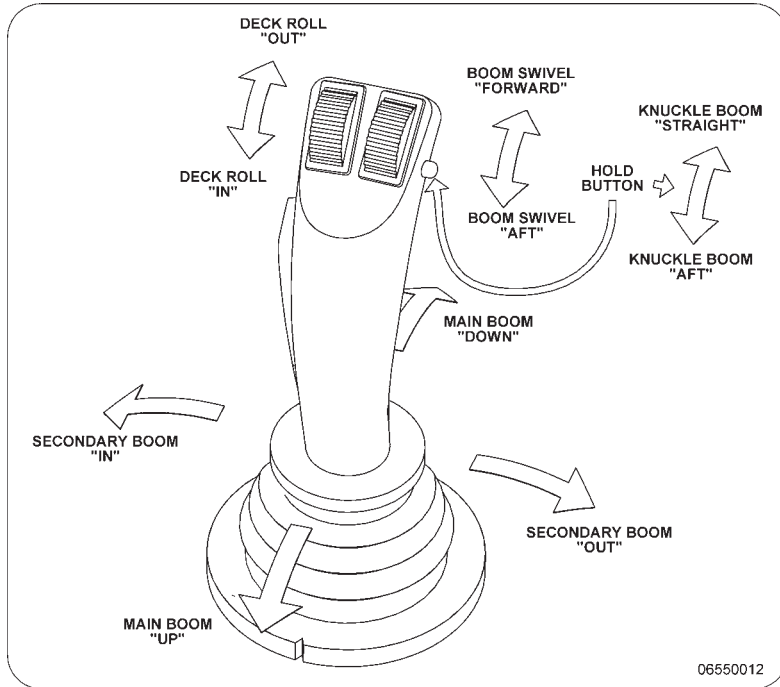

06550012
INSIDE OF CAB

MOWING SAFETY TIPS

- 1 Read & understand the Operators Manual.
- 2 Wear Your Seat Belt.
- 3 Keep all shields and guards in place.
- 4 Make sure equipment is in proper working condition.
- 5 Never attempt to get off or on a moving tractor.
- 6 Never allow riders on tractor or equipment.
- 7 Only start the tractor from the seat with the key.
- 8 Always inspect the area before mowing. Remove all foreign debris.
- 9 Always keep bystanders and coworkers a minimum of 300 feet away.
- 10 Never allow the mower blades to contact solid objects or foreign material.
- 11 Never approach rotating elements.
- 12 Disengage the PTO, place transmission in "Park", set parking brake, shut off engine, and remove key and wait until all rotating motion has stopped before leaving seat.

Tiger

33743


33743
INSIDE OF CAB

SAFETY

PART NO.
LOCATION



RED 42399
REFLECTIVE TAPE
MOWER DECK

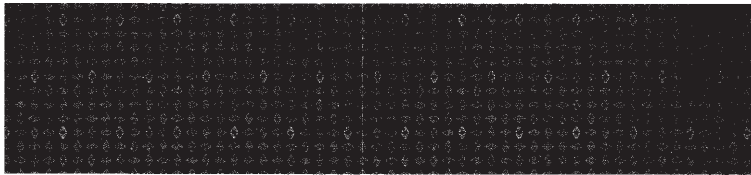

AMBER 424006
REFLECTIVE TAPE
MOWER DECK



6T3217
MOWER DECK



6T3219
INSIDE OF CAB


6T3220
FRONT PUMP MOUNT

SAFETY



PART NO.
LOCATION


6T3221
INSIDE OF CAB

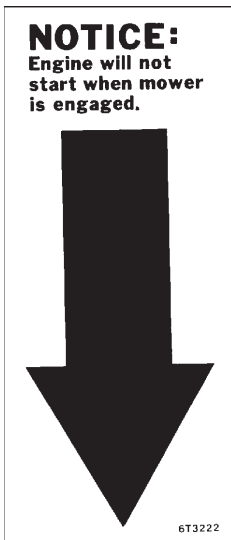

6T3222
INSIDE OF CAB




6T3224
MOWER DECK

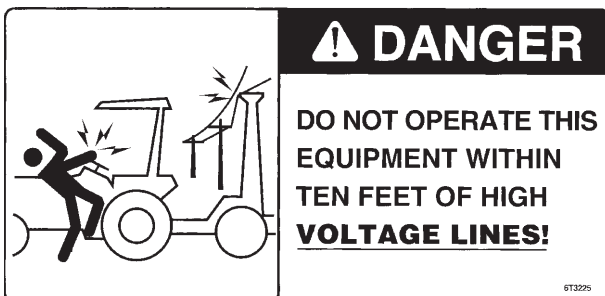

6T3225
INSIDE OF CAB

SAFETY

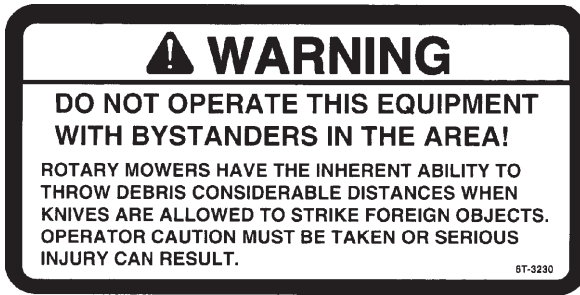

PART NO.
LOCATION

6T3230
INSIDE OF CAB



6T3231
INSIDE OF CAB



6T3233
HYDRAULIC TANK



6T3234
INSIDE OF CAB



6T3236
MOWER DECK

SAFETY

⚠ WARNING

WHEN CUTTING HEAVY BRUSH,
BLADE BOLTS SHOULD BE
INSPECTED HOURLY AND
RETORQUED TO 600 FT. LBS.

6T-3237

6T3237

PART NO.
LOCATION
6T3237
INSIDE OF CAB

<p>DOWN ↑ MAIN BOOM ↓ UP</p>	<p>OUT ↑ SECONDARY BOOM ↓ IN</p>	<p>OUT ↑ DECK ROLL ↓ IN</p>	<p>CLOSE ↑ SHIELD ↓ OPEN</p>	<p>FORWARD ↑ SWIVEL ↓ AFT</p>	<p>IN ↑ SWITCH / KNUCKLE ↓ OUT</p>
---	---	--	---	--	---

06550008
INSIDE OF CAB

<p style="text-align: center;">⚠ WARNING</p> <p style="font-size: x-small;">IT IS RECOMMENDED THAT THE BOLT AND LOCK NUT BE REPLACED WHENEVER BLADES ARE REPLACED. REPLACE THESE ANY TIME THEY ARE DAMAGED OR WORN AS FAILURE TO DO SO CAN LEAD TO BLADES COMING OFF CAUSING SERIOUS INJURY OR DEATH.</p>	<p style="text-align: center;">IMPORTANT</p> <ul style="list-style-type: none"> • WHEN REPLACING BLADES, IT IS RECOMMENDED THAT ALL BLADES BE REPLACED FOR PROPER BALANCE TO AVOID EXCESSIVE VIBRATIONS WHICH CAN DAMAGE SPINDLE ASSEMBLY. • SEE YOUR OPERATOR'S MANUAL FOR PROPER INSTALLATION INSTRUCTIONS. <p style="text-align: right; font-size: x-small;">6T-3243</p>
--	--

6T3243
INSIDE OF CAB

GREASING INSTRUCTIONS

CUTTER SHAFT BEARING

GREASE EVERY 8 HRS. OR DAILY

NOTE: If unusual environmental conditions exist-extreme temperatures, moisture, or contaminants-more frequent lubrication is required.

6T3249A

6T3249A
MOWER DECK

GREASING INSTRUCTIONS

GROUND ROLLER BEARING

GREASE EVERY 8 HRS. OR DAILY

NOTE: If unusual environmental conditions exist-extreme temperatures, moisture, or contaminants-more frequent lubrication is required.

6T3261

6T3261
MOWER DECK

SAFETY

! **WARNING**

**DO NOT OPERATE MOWER
WITH SAFETY SHIELD REMOVED.**

TB1011

TB1011
MOWER DECK



Tiger Corporation

800-843-6849
www.tiger-mowers.com

Description	Application	General Specification	Recommended Lubricant
Tractor Hydraulics	Reservoir	JD-20C	Mobilfluid® 424
Mower Hydraulics	Reservoir	ISO 46 Anti-Wear/ Low Temp	Mobil DTE® 15M
Cold Temperatures 0°F Start-up		JD-20C	Mobilfluid® 424
Normal Temperatures 10°F Start-up		ISO 46 Anti-Wear	Mobil DTE® 25
Normal Temperatures 15°F Start-up		ISO 100 Anti-Wear	Mobil DTE® 18M
High Operating Temperatures Above 90°F Ambient			
Flail Rear Gearbox	Reservoir	PAO Synthetic Extreme Pressure Gear Lube	Mobilube SHC® 75W-90, Mobil 1 Synthetic Gear Lubricant
Cutter Shaft and Ground Roller Shaft (Flail)	Grease Gun	Lithium Complex, NLGI 2 ISO 320	Mobilgrease® CM-S
Drive Shaft Coupler (Rotary and Flail) Drive Shaft Yoke, U - Joint and Stub Shaft	Grease Gun	Lithium Complex, NLGI 2 ISO 320	Mobilgrease® CM-S
Boom Swivel, Boom Cylinder Pivots (Rotary and Flail Boom Type)	Grease Gun	Lithium Complex, NLGI 2 ISO 320	Mobilgrease® CM-S
Deck Boom Pivot & Deck Stop Adjustment (Rotary and Flail)	Grease Gun	Lithium Complex, NLGI 2 ISO 320	Mobilgrease® CM-S
Deck Spindle (Rotary)	Grease Gun	Tiger Spindle Lubricant	Tiger Part #25351

For Mobil product information, availability, or technical information, call 1-800-662-4525.

Tiger PN 34852

34852
HYDRAULIC TANK

SAFETY



ITEM	PART NO.	QTY.	DESCRIPTION
	50023	AVAIL	MANUAL CANISTER COMPLETE
1	00776031	1	ROUND MANUAL CANISTER
	33997	1	DECAL, SHEET, MANUAL CANISTER
2		*	DECAL
3		*	DECAL
4		*	DECAL
5	*	AVAIL	SPECIFIC PRODUCT MANUAL
6	33753	1	E M I SAFETY MANUAL
7	34296	1	FRONT ADHESIVE PAD
8	34297	1	REAR ADHESIVE PAD
9	6T1823	4	ZIP TIE 14" LONG

NOTE:

The manual canister can be bolted, zip tied or adhered to a variety of surfaces. Locate a protected area within the view of the operator. Then select an installation method and attach the canister. **CAUTION - AVOID DRILLING HOLES INTO UNKNOWN AREAS**, wires and other parts may be located behind these areas. When adhering the canister to a surface, thoroughly clean that surface before installing the canister.

SAFETY

FEDERAL LAWS AND REGULATIONS

This section is intended to explain in broad terms the concept and effect of federal laws and regulations concerning employer and employee equipment operators. This section is not intended as a legal interpretation of the law and should not be considered as such.

Employer-Employee Operator Regulations

U.S. Public Law 91-596 (The Williams-Steiger Occupational and Health Act of 1970) OSHA

This Act Seeks:

“...to assure so far as possible every working man and woman in the nation safe and healthful working conditions and to preserve our human resources...”

DUTIES

Sec. 5 (a) Each employer-

(1) shall furnish to each of his employees employment and a place of employment which are free from recognized hazards that are causing or are likely to cause death or serious physical harm to his employees;

(2) shall comply with occupational safety and health standards promulgated under this Act.

(b) Each employee shall comply with occupational safety and health standards and all rules, regulations and orders issued pursuant to this Act which are applicable to his own actions and conduct.

OSHA Regulations

OSHA regulations state in part: “At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee in the safe operation and servicing of all equipment with which the employee is, or will be involved.”

Employer Responsibilities:

To ensure employee safety during Tractor and Implement operation, it is the employer’s responsibility to:

1. Train the employee in the proper and safe operation of the Tractor and Implement.
2. Require that the employee read and fully understand the Tractor and Implement Operator’s manual.
3. Permit only qualified and properly trained employees to operate the Tractor and Implement.
4. Maintain the Tractor and Implement in a safe operational condition and maintain all shields and guards on the equipment.
5. Ensure the Tractor is equipped with a functional ROPS and seat belt and require that the employee operator securely fasten the safety belt and operate with the ROPS in the raised position at all times.
6. Forbid the employee operator to carry additional riders on the Tractor or Implement.
7. Provide the required tools to maintain the Tractor and Implement in a good safe working condition and provide the necessary support devices to secure the equipment safely while performing repairs and service.

Child Labor Under 16 Years of Age

Some regulations specify that no one under the age of 16 may operate power machinery. It is your responsibility to know what these regulations are in your own area or situation. (Refer to U.S. Dept. of Labor, Employment Standard Administration, Wage & Home Division, Child Labor Bulletin #102.)

SAFETY

>8 * % \$ F ! ' 6 9 B ; 5 @ 6 F I H 9

5 G G 9 A 6 @ M G 9 7 H = C B

5 GG9 A 6 @M

6 YZcfY UHfYa dh]b['hc'a ci bhnci f' H][Yf'a ck YfZ]h]g]ja dcfhUbh
hc' fYUX'Ub'i bXYfghUbX' U`cZ H Y' GUZYmIA YggU[Yg]b`H Y'GUZYm
GYW]cb'cZH]g'a Ubi U"

Ô@& & { } |^c • @ { ^ } c|ãcææ • c@]æ& ð* |ãcð { æ^ • ^ |^ @|^ æ^ } [
• @|æ^ • ÈT æ^ & |æ } @ dæ& | { [à^ |ã @ æ] | | |æ [] ^ | | @ { [, ^ |^ & ð^ à^



œ, æ • ^ • æ - [| | |æ È @ ãc | | | |ãcð |ãcæ à |æ^ @æ] æ • È

Ü^ææ æ à ~ } à^ | • æ à @ ^ } ã^ Æ • ^ { à | Æ & ð } ð • d' & ð } • à^ | |^ æ {] ð* ð { [~ } c
^ [~ | Vã^ | { [, ^ | È Ü^ - | ð @ Æ æ • Æ & ð } [~ c@ { æ ~ æ | | à^ æ^ à ð | • dæ& } • ð || & æ æ]
] æ • È (ASM-C-0001)


HF 57 HCF 'DF 9 D5 F 5 HCB

- œ È Ü^ { [ç^ |ã @æ à |^ - c@æ à • c^ } • È
- ô È Öã & } } ^ & c à æ^ | ^ & æ | ^ • - [{ à [@ à æ^ | ã • È
- ô È Ü^ { [ç^ ^ } * ð^ • ã^ } æ^ | • È | | æ^ @ [à ð æ&^ • • - [] c ~ || ^ È
- ô È Ü^ { [ç^] | ~ * • - [{ dæ& | & æ ð * , @|^ { æ - æ ^ æ à] ~ { } { [~ } c , ð | à^ ææ& @ à È
- ô È Ü^ { [ç^ æ ^ - [] c , ^ ã @ æ à , ^ ã @ ~ }] | | • È
- œ È Üæ^ @ dæ& | [] ð |æ È æ à • æ à |^ [ç^ @ |ã @æ à |^ - c |^ æ , @^ | • È

(ASM-JD-0001)

7 F 5 B ? G < 5 : H' 5 8 5 DH 9 F

Q } ^ & ^ • • æ ^ |^ { [ç^ @ | ~ | & æ • & ^ , • - [{ @ & æ \ • @æ] ~ || ^ È V @ } ð • æ | @ & æ \ È
• @ææææ ç | ð @] ~ || ^ , ã @ & æ • & ^ , • æ à || & , æ @ | • æ • @ , } ð @ Æ æ • Æ & ð } È
(ASM-JD-0051)

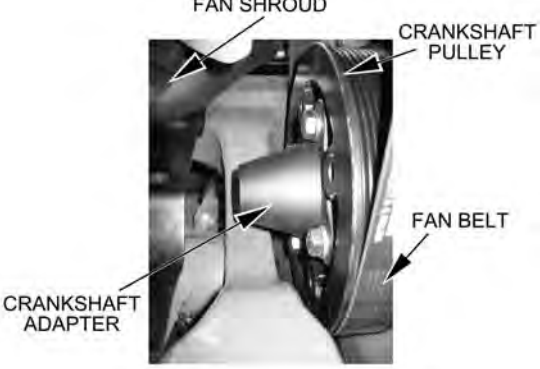

5 GG9 A 6 @M

: FCBH7F5B?G<5: H'DI @M

Vä! @ + } à @ @ @ + { } c&æ\•@ec] ~||^ ~•^à à R @ Ö^!^, ß} [cæ], +! @
 ä•æææ} [~æ+{ } cáîä^•^•c{ ÈY[~, ß} ^^à d [!à! æã~!^} c] ~||^É, æ @! æ à à |c+{ { R @
 Ö^!^ d æ], +! æ+{ } cáîä^ d à^ ä•æ^!à [] ~| dæd |É
 Q•]^&c@ +{ } c] ~||^ [] ~| dæd | d ç!ä^ [~ @æ^ @ & ||^&c] ~||^ } ^^àà d { [~ } c
 @ •] æ!] |æÉQ^ [~] ~||^ @ @ @ QD[~! @ |• } ^^àà d { [~ } c@ •] æ!É [~] ~||^ ä
 @ & ||^&c [] ^ } ^^ààÉQ^ [~] ~||^ ä [^• } [c@æ^ @ QD[~! @ |• ä @] ~||^É [~, ß} ^^à
 d [!à! @ & ||^&c] ~||^É, æ @! æ à à |c+{ { R @ Ö^!^É



D5FHGF9EI #98'HC'DI F7<5G9': FCA'>C<B'899F9.

Ú ~||^ + { { RÖ ÈÜÍ FÍ HGE

Y æ @! + { { RÖ ÈÜÍ FÍ GHÍ

Ó |c+{ { RÖ ÈÜÍ FÍ Í Í

V | ~^ [] @] ~||^ à |c, æ@ [& æ^ ä HÍ J |àÉÉ

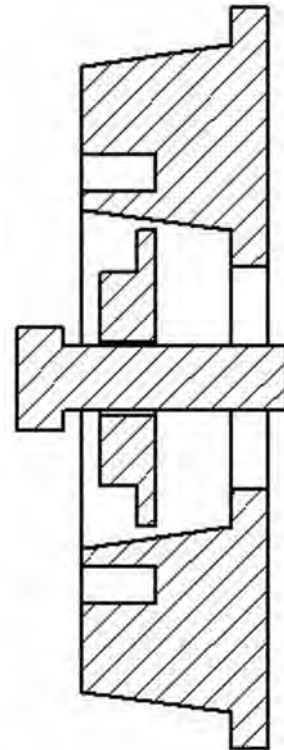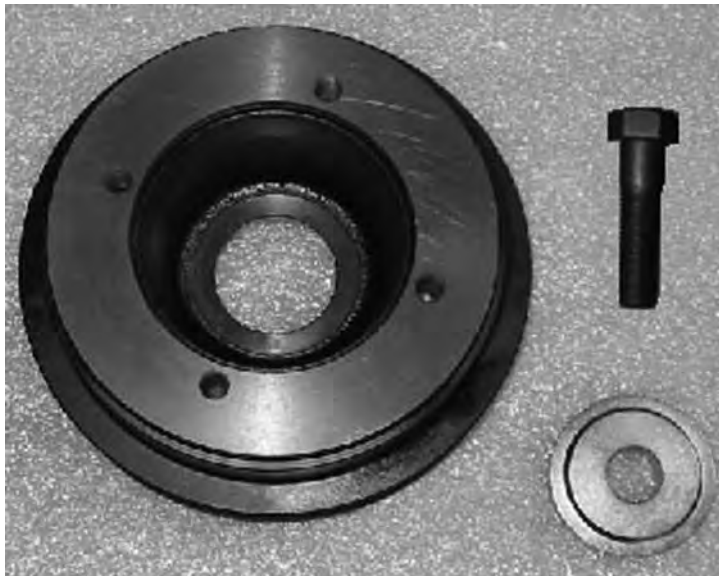

Gc`i hcb.

FÈ Ô!^æ } [•^ [~&æ\•@ec] ~||^ ~•^ * VYFÍ GÍ &^æ æ à &'!^] ä^!É

GÉ @] | æ!ä @ GÍH { à^æ [~VYFÍ JÍ J |^ææ ä * & { } [~] à æ [~] à @ |^ææ ä * ^à^ [~@
 &æ\•@ec] [•^É

HÈ Öä àæ]^! { [~] æ^ &æ^ &^, ä &^æ ÛÖÖHE^ } * ä^ [ä @] æ^ ~•^ æ^, &æ^ &^, É
 | ÈÜ [•ææ} àæ]^! @] ~||^ [] @ &æ\•@ecæ à @^ææ &æ^ &^, ~] æ @ Q [] [c!^ [] @
 &æ^ &^, d] ~|| @] ~||^ • dææ @ [] d @ æ^!É

Í ÈVä @ } &æ^ &^, d •]^&æææ } ÍÉ@ { QÍ J |àÉÉ Q@ } * ä^, ß { [•c!^! @æ^ d à^
] ä^!É

Í ÈT^æ^!^! } ð^ c [] @] ~||^É] ^ & ä ÉÉH+ [|••É

(ASM-JD-0080)




5 GG9 A 6 @M

8 F=J9 G<5 : H'5 B8 `: FCBH'DI AD'ACI BH#B;

Ü{ [ç^ à| |{ |æææ | } ææ à |æ } æç æ ~ æ } c@æ ç æ |, |[[{ | } æææ]
 [~à|æ^ • @æÜ^ { [ç^ æ à àæ&æ | ææ • @^ç+ { |[[{ ~ } * æ^ & {] æç ^ } çQ • ææ] ææ!
] |ææ [] dææç | ^ } * æ^ ~ • æ * à | | æ æ à [& , æ @ • æ • @ , } æ Úææ Ú^ææ } È Ö | ^ æ ^ • | ^ ç ^
 • ^ & æ } [~ @ æ à | æ ^ • @ææ æ à æ • ææ + { @ • ææ [~ @ ^ } * æ^ & {] æç ^ } çU } & ^ [~ @æ^ @
 • | ^ ç ^ • ^ & æ } æ] | ææ È à [çç •] ææ!] | ææ ~ • æ * à | | æ æ à [& , æ @ • æ • @ , } æ Úææ Ú^ææ } È Q • ææ • @ææ } à [~à|æ^ • @æç @ [~ * @] ^ } æ * æ à æ ç à | æ ^ • @æ • | ^ ç ^ È Úææ æ à • | ^ ç ^
 ^ [\ ^ • @] à à æ æ } ^ à ÈQ • @ææ à ^ •] [çæ • ^ ç æ æ æ æ • | ^ ç ^ È } • @æç | ^ È æ à @ } æ • ææ È
 Çæ } @ } [æ • [] @ • @ææ æ à ^ [\ ^ ç ^ æ • @ , } æ] æç | ^ à | | , È 'G' UziYbX' a i ghVY'
] bghU`YX`] b`W`ffYWicf] YbH`jcbZU] i fY`hc`Xc`gc`a UmfYgi`h] b`XUa U`Y`hc`fUWcf`UbX`#f`
 Xf] j Yg\ Uzi` Çææ } ææææ } [~ • @ææ } à È æææ } { } [] } ç P^ ç È æææ } { } È Çææ } { }] æ
 • ^ & | ^ à È æææ } ææ à | æ ^ • @ææ ç ç } { } • @æ È V @ ^ } à [~à|æ^ • @æç • @] à à } [{ | ^ ç ææ F@+
 æ æ + { { & } ææç , ææ } { } @ ~ • æ * È V @ } & æ] æ * à | [ç] à | æ ^ • @æç S` à ^ à | æ ^ • @ææ æ à
 & @ & ææ @ • ^ È - ææ * ^ È @] { } È { } [] } ç à | æ ^ • @ææ æ à { [] çæ *] | ææ ç ^ } ~ | ^ ææ æ È
 ç } ^ • ææ ææ } ^ à à ç | ^ [] ^ ææ } È S , ^ | æææ | } ææ æ à | ^ | ææ à | | ç È

7 5 I HCB. `8 C`BCH`GH5 FH`H<9`HF5 7 HCF`I BH@5 @@<CG9G`5 F9`5H5 7 <98 ZH5 B?`
 -G: =@@8`K #K`DFCD9F`C=@5 B8`65 @@J5 @9G`5 F9`CD9B`GH5 FH#B; `5H`H<-G`HA9`
 K=@@75I G9`G9F<CI G`85 A5; 9`HC`H<9`DI AD` (ASM-JD-0243)

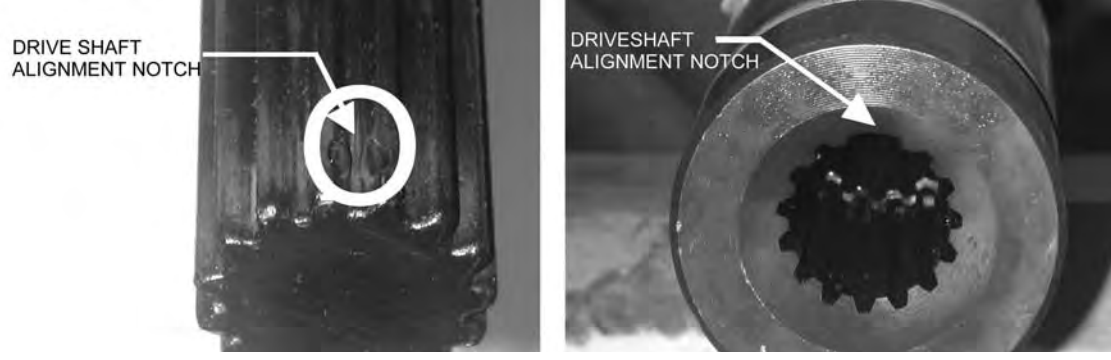

5 8>I GH#B; `F95 F`K <99 @G


Üæ^ | ^ æ [~ ç æ çç | [] ç ææ È ææ à • È : c`ck`h Y] bghf W`jcbg`] b`h Y`fUWcf`ck bYffg
 a Ubi U`Zf`UX1 gh] b [`hfYg`UbX`f] a g È V @ à ææ , @^ • TWUV à ^ ææ • ç à ç ç @ , ææ • ç
 • ^ ææ * È PUVOK V@ { æ | ^ ~ æ ^ • , æææ * @ , @^ • ç [] [] • ææ • [~ ç æ çç | È Ç [ææ
 } [ç [~ æ ^ , ææ | ^ • ç ææ] • , @ } çææ] [| çæ * à ç ææ | È Ç | ^ ææ [~ ææææ } È ææ à ^ • ç ç
 | ^ ææ @ | ^ æ , @^ • | ^ { [ç^ à à | æ * ææææ } [~ @ { [, ^ È (ASM-B-0001)



5 GG9 A 6 @M

G-89 'A FFCF' ACI BHB;

Öãæ•^ { à^ @ |ã @•ã^ { ài | àiãã ^ÉÖ^ c@ •~ æ^ | [ã æ à] ã ^ 9 @ , } ã] æç ^ à^ [, DÍ ÈD +È Ö•^ { à^ @ { ð * ^ @ | È T [~ } c@ |ã @ { ài | àiãã ^ cæ ã @ã , æ^ [} @ ~]] ^ |ã @ & [] ^ | ~ @ dæç | &æ æ • @ , } ã] æç ^ à^ [, ÈÜ ^ ^ | @ Úæ Ö Á ^ & ç } È •æ^ç • & ^ ^ } È&æ ð | @ã , æ^ à^ çã È (ASM-JD7220-0001)

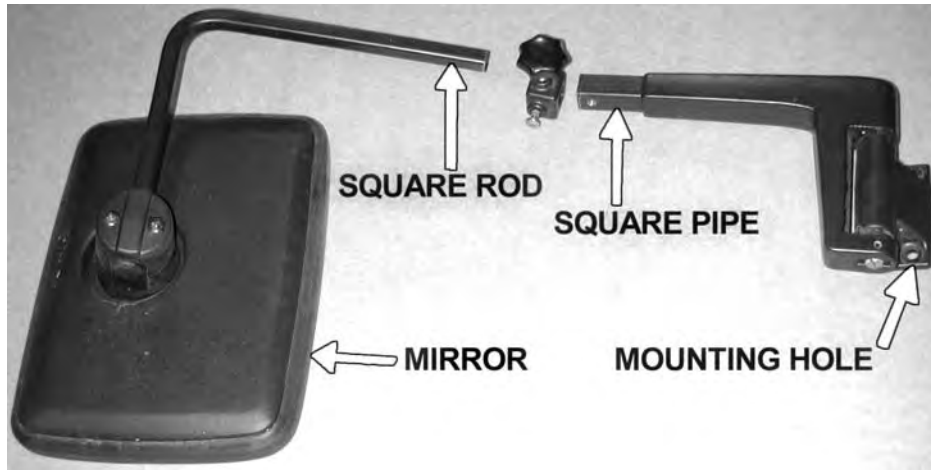

5 GG9 A 6 @M

GAJ`6F57?9H: CF`@FG`5DD@75HCBG

0fraz@cc ÜT X àlæ&^cđ c@ |^c-^} à^l æ • @, } đ ^}•^l c@ çã ãããã [~c@ •ã} , @^ c@ { [, ^l ã •đ, ^ã ã c@ à[{| ^•É (ASM_JD_LRS_001)



A5-B: F5 A9`-BGH5 @@HCB

Y ã@æ [ç^l@æ @ ãcæ à Ò | æ&Éæ à•Éæ^ [}^•ã^ [~c@ ÷æ ^~] đ c@ &|l^&đ { æ&@* { [~}đ* @|^•ÉQ•æ&æ&•&^, • æ à æ [c@ | @æà, æ^ æ • @, } ã { æ ÷æ ^ Ûæc Û^&đ } đ •^&^l^ c@ •ã^• [~c@ { æ ÷æ ^ đ c@ dæđ | &æđ * ÉÖU ÒUVđ c@} æc@ đ ^É Û^ { [ç^ c@ æ&•&^, • [}^ ææđ ^ æ à æ]^ æc@æ [| & ã * æ^} É Û^ ã •^l^ c@ æ&•&^, • æ à c@ } Ò | ~^ ^ đ çæ^ • } [ç^ ã ã c@ đ | ~^ ^ &æc [| &æ^ ã ã c@ T æ ç } æ & Û^ &đ } [~c@ { æ ÷æ (ASM-C-0003)

GK #7 <6 CL`K #B;

Û, ^l ÷l c@ •, æ&@ [ç^ æ&••^à c@ | ~^ c@] [l c | ææ^ à } c@ | ã @|^æ [~c@ &æÉ cE R @ Ó^l^ |] * ã ~•^àÉ æc} { à^l ÛÖÍÍÍ FÉ ÖU ÒUV &}}^&c@] | * đ c@ ææ [| l c } đ c@ ã ã * ã &| } | ^ç^ à É V@, ã^ ã c@] | * æ &| | ^à ÛÖÉÓŠÓŠ æ à ÛÖÉÖÈ V@ ÛÖÖ, ã^, ã æ, æ • à^ @É [æ] ^à • đ à &æ] ^à É cæ&@&}}^&đ | HÍ HÍ đ ^} à [~ÛÖÖ, ã^ æ à æ^, ã^ àæ [| æ^l^É V@ ÓŠÓŠ æ à ÛÖÉÖÖ, ã^ æ^ @c, @} dæđ | \^ ã ç | } ^à đ % ã +É Ö | } } ^&c@ ÓŠÓŠ, ã^ [~c@] | * đ c@ ÓŠÓŠ, ã^ ÷l { c@ •, æ&@ [ç^ É V@} &}}^&c@ ÛÖÉÖÖ, ã^ [~c@] | * đ c@ ÛÖÖ, ã^ ÷l { c@ •, æ&@ [ç^ É A DCFH5 BH. ÷`gca YWUgYg`h YfYX`UbX`cfUb [Yk] fYg`a UmVY`gk] hW YX" cEY cEÛ ç^c@, ã^ đ à &^æ, @æ, ã^ ã, @æ

V@ ç [ÖÜÖÖ, ã^• { ~•cà^ &}}^&ç^ à đ c@ } ^ dæ •æ^, ã^ à^ &æ* c@ } ^ dæ •æ^, ã^ æ à &}}^&c [} ^ ÖÜÖÖ, ã^ đ [] ^ ^} à æ à c@ [c@ | ÖÜÖÖ, ã^ đ c@ [c@ | É Û^l^ đ c@ •, æ&@ [ç^ •&@ { æ&æ à, ã ã * àæ | æ ÷l æãã } æ ã ÷l { æ } É

V@ Ò^ dæ Ûæ^, ã^ ã æà [, } , ã^ [| ææ^ à } à^l •ç^l^ ã * &| } { } É Ö^ cæ [| ç^ c@ | ã @ •ã^ [~&| } { } đ æ&••ÉY cE/VÓP UW ÷l ^ç^ ã * , ã^ É

cE^l &}}^&ç^ * c@ [| , ^l đ c@ •, æ&@ [ç^ É [ç^ c@, @, ã^ æ] * c@ ææ^l^ [| , ã^ đ c@ • [] [ã çæ^É (ASM-JD-0245)



5 GG9 A6 @M

DF9 GGI F9' @B9' =BGH5 @@HCB

V@ @áíæ|æ]í^•~í^ íá^, áí à^]í{ à^á áúú @ í^æ [~@ dæúú í^ [í^ çæç^É Ší &æ @ í^••~í^] [í^ç] @ í^æ í^ [í^ ç á í^ [í^ ç @] í^* Ç^í^ í^ @ P^áíæ|æÚí^ í^ áí^•dæúú } áú @ Úæ@ Ú^&úú] í^• í^ [í^ ç] [~@] í^•~í^] [í^ ç @] í^* á í^ [í^ ç á @] í^ çæç G { { æúú í^ É í^ çæç } } ^&cæF@+@•^ í^ [í^ ç @ dæúú í^ [í^ ç çæç^ í^ @ Vá^ í^ çæç^É (ASM-27mmPRESSURE-0001)


F9HI FB' @B9' =BGH5 @@HCB

V@ í^ç í^ íá^, áí à^]í{ à^á }^çúú @ í^•~í^ íá^ [] @ dæúú í^ [í^ çæç^É Ší &æ @ í^ç í^] [í^ ç á í^ [í^ ç @] í^* Ç^í^ í^ @ P^áíæ|æÚí^ í^ áí^•dæúú } áú @ Úæ@ Ú^&úú } í^ @] [í^ ç] [~@ í^ç í^] [í^ ç @] í^* á í^ [í^ ç á @] í^ çæç G { { æúú í^ [í^ ç á í^, É í^ çæç } } ^&cæF@+@•^ í^ [í^ ç @ dæúú í^ [í^ ç çæç^ í^ @ Vá^ í^ çæç^É (ASM-27mmRETURN-0001)

@C58 'G9BG9' @B9' =BGH5 @@HCB

V@ [í^ çá] íá^, áí à^]í{ à^á áúú @ à^ [í^ ç] [~@ dæúú í^ [í^ çæç^ Ç^í^ í^ @ P^áíæ|æÚí^ í^ áí^•dæúú } áú @ Úæ@ Ú^&úú] í^• í^ @] [í^ ç] [~@ [í^ çá] í^ [í^ ç @] í^* [] @ dæúú í^ í^ [í^ ç í^ @ [í^ çá] í^ áúú í^ [í^ ç @] í^* É Ç^í^ í^ æ í^ { { æúú í^ [í^ ç á í^, áúú í^ } æF@+@•^ í^ [í^ ç í^ [í^ ç í^ @ Vá^ í^ çæç^É Ú^í^ í^ @ Úæ@ Ú^&úú] í^• í^ áúú í^ [í^ ç á í^ [~@ dæúú í^ [í^ ç çæç^ @ [í^ ç] É (ASM-14mmLOAD SENSE-0001)

A5 BI 5 @@ H'J5 @9' DCFHG

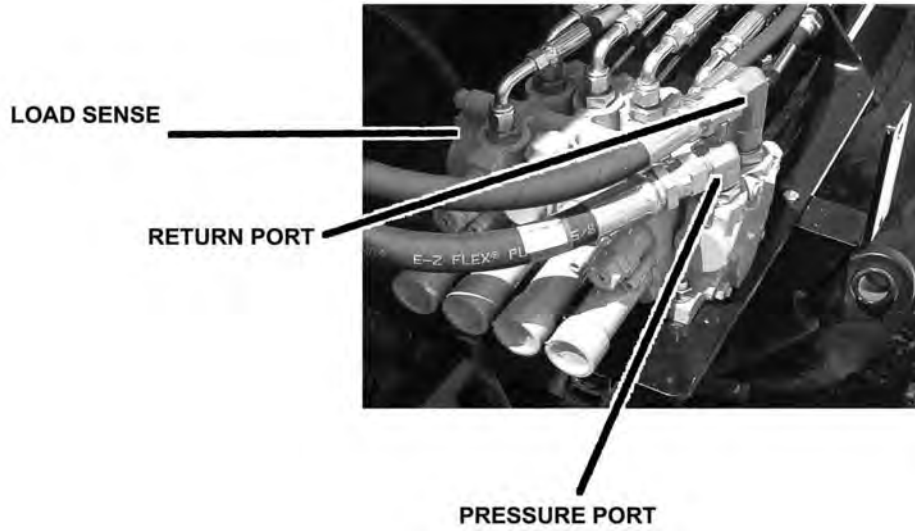



(ASM-C-0057)



5 GG9 A 6 @M


J5 @9'ACI BH#B;

V@ { [~ } @ * à à à à à c f i R Ö I c c P ù • ^ i à • d à d i • ^ à à i • c [[] * | ^ * • , @ @ , ^ à à d à ^ à à à à à à • @ , } à @] @ d à à [, È Ù & ' ^ @ à à à à ^ c d @ d à d i , à @ @ à , à ^ • @ , } à @ Ù à à Ù Ù & à } [~ @ { à ~ à È @ } @ @ | ^ • f i @ à à | ^ • [] @ P • & & } d [| ç à ç ^ • à à & } à i @ Ò à f • • ç à ç ^ [] @ ç à ç ^] à à È V @ } à à } @ @ | ^ • [] @ ç à ç ^ , à @ @] à @ @ | ^ • à à • ^ & ' ^ @ à à ç à ç ^ [] d [[~ @ { [~ } @ *] à à È Ù [~ à @ @ à à à à à à à • f i { @ à à ç à ç ^ d @ @ à à à à à & à à à i • à } [à à [] @ à à ç à ç ^] à à [~ @ Ù à à Ù Ù & à } È Q • à à @ & } d [| à à | ^ • d @ ç à ç ^ à à @ { [~ } @ *] à à [] @ P • & & ç à ç ^ • È U } @ Ò à f • • ç à ç ^ • È à à à @ @ ^ | ^ d à à à & } d [| à à | ^ • È (ASM-JD7X30-0001)

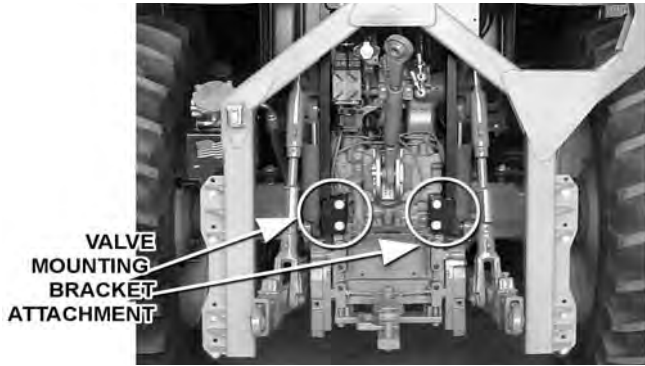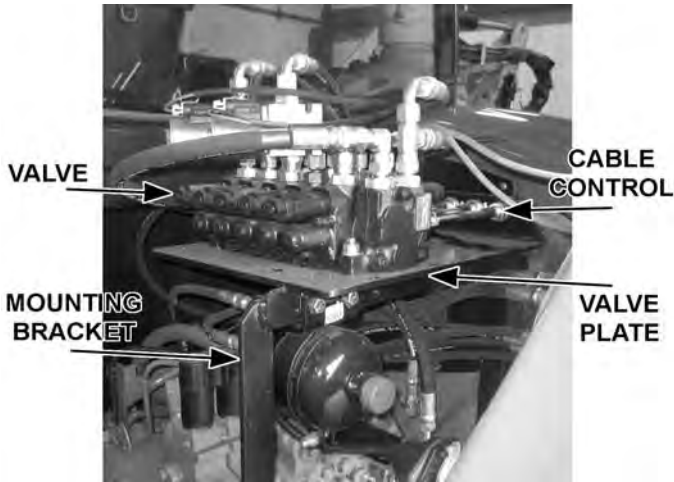

A5 BI 5 @GK #H7 <6 CL'ACI BH#B;

V@ • , à à @ [ç à d à ^ • ^ & ' ^ à d @ [] ^ à à i q • à à [~ @ & } d [| @ à à | ^ • È i ç à ç ^ • à à à È Ù ^ à i d @ Ù à à Ù Ù & à } f i à à • ^ { à | à à & { [] ^ } • } ^ à à à È (ASM-C-0096)

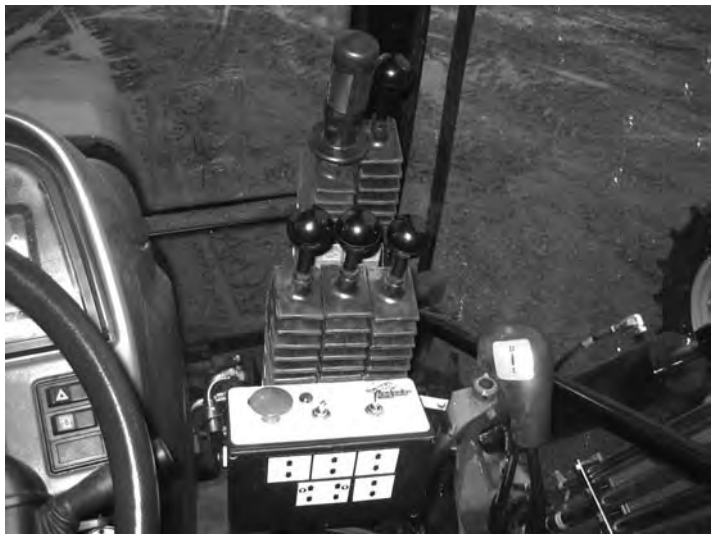

ASSEMBLY

CABLE CONTROL LEVER STAND



On the corner cab post, mark a point at 1-3/8" from the windshield and 22-1/2" from the floor; then cut a 3/4" diameter hole through the outer plastic shell. This will expose a threaded steel boss to attach the control box support bracket.

The rear corner of the cable control stand is placed approximately 6-1/4" from the edge of the mat. The front edge of the stand is up against the corner cab post and the door sill lip of the mat.

Before you mark or drill any holes, check for support plates or wires under the mat and the cab floor.

NOTE: Cutting into plates or wires makes more work for everyone and could be dangerous. When you know where the wires/plates lie, mark one of the mounting holes. Drill a 3/8" hole through the mat and through the floor of the cab. Next, lift the mat up and mark the other two holes on the cab floor.

Drill the holes through the floor. Mark the mat and drill the other two 3/8" holes.

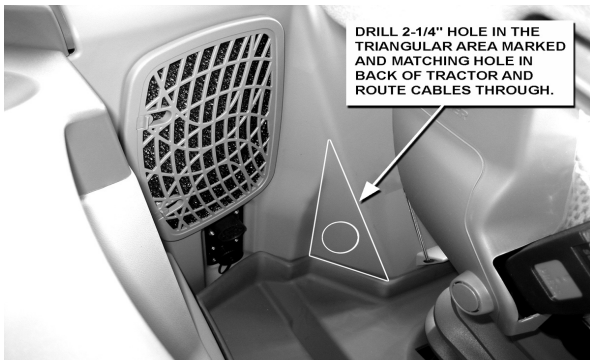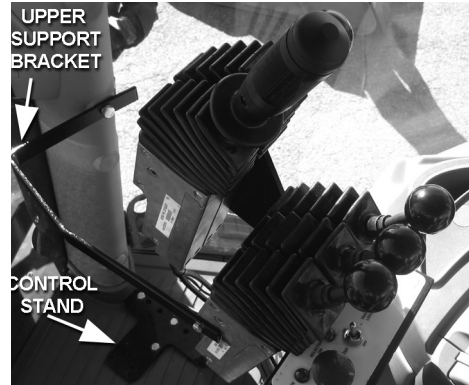

Use a 1" hole saw and cut a 1" hole through the mat over each 3/8" hole. Secure the stand to the floor with the spacers, capscrews and nylock nuts provided.

Secure cables and wires from the control stand with zip ties and route past the right side of the driver's seat. Drill a 2 1/4" diameter hole in the triangular area behind the driver's seat. Drill a hole to the outside rear of the tractor.

Wrap the cables with the 6" split hose at the point they pass through the hole, and secure the zip-ties. Apply RTV sealer in and around individual cables and split hose, inside and outside of the cab for a water tight seal. Install upper support bracket from cab post to the control lever stand.

(ASM-JD CBL MNT-0002b)

STAND PLACEMENT



EDGE OF POST / SILL




5 GG9 A 6 @M

9 @7 HF CB7 ' @: H'J5 @9 'DCF HG

(ASM-C-0089)

DANFOSS VALVE

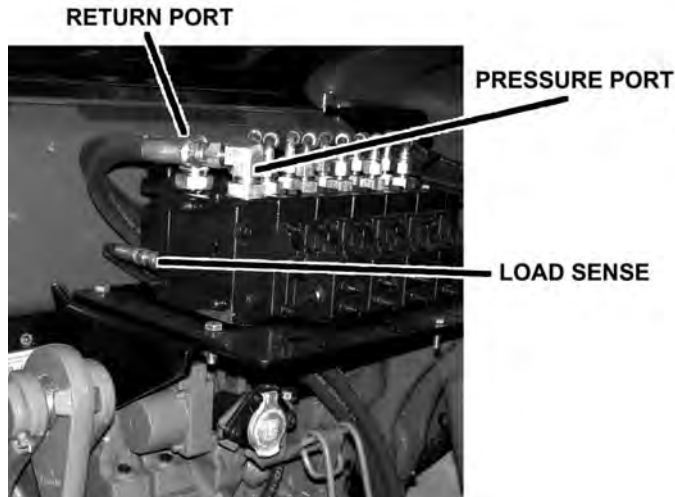

G9 @7 HCF ' J5 @9 'BGH5 @5 HCB'

BCH9. Ü^A! d @ Úæø Ú^&ç } æ à ã | • dææ } à^ | , † | æå, æ^ æ à [• ææ } È
 V@ • ^ | ^ & ç | çæç^ æ æææ@à d @ à [{ | ^ • È V@ FD+ @ • ^ • † { @ • , æ^ |
 • ^ & ç } [~ @ | æççæç^ æ^] | { à^ à d @ % È æ à % + [| • [] @ • ^ | ^ & ç | çæç^ È È! }
 È^ æ æå^ à d @ | ^ c | } • ^ & ç } [~ @ | æççæç^ È Èææ@ @ FD+ @ • ^ • † { @ % + [| c [~
 @ • ^ | ^ & ç | çæç^ d @ | } È^ [] @ | æççæç^ È È FD+ @ • ^ • æ^ æææ@à d @ % È È
 + È È % È + B % È + [| • [] @ • ^ | ^ & ç | çæç^ d @ | } ~ & | ^ & | æ à^ | æ à • , æ^ | & | æ à^ È
 (ASM-SLCTR VLV INSTLN-0001)


FROM SWIVEL SECTION ON LIFT VALVE RETURN TO VALVE



5 GG9 A 6 @M

>CMGH7 ? 'GK #7 <6 CL 'ACI BH#B;

Š [&æ^ c@ ç [@|^• ã @ |š @+[] c&[] }^i [~c@ &æ ÷æ ^É V@•^ , ã| à^ c@ { [^} ã *
@|^• ÷! c@ ç [{ [^} ã * à| |• [~c@ • , ã&@ [ç à|æ^ ^É Ù^^] ãç !^ à^ [, È T [^} c@
à|æ^ ^c^• ã * c@ @ã, æ^•]] ãáÉæ } [çá ã @ Ùæç Ù^&ã } È (ASM-JD-0081)

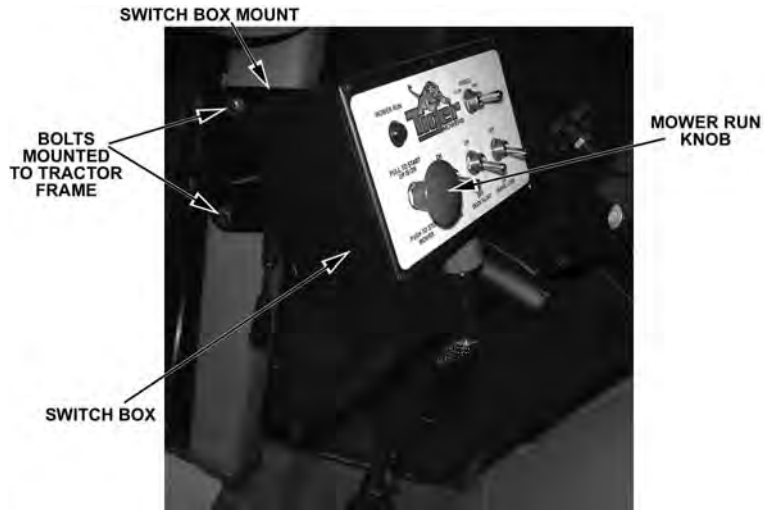

5 GG9 A 6 @M

A5-B6CCA. %☒+Ú[!dÉÓ[[{ WÜK ĩ Ę Ù^& } á•

(Note: Extend secondary boom completely; roll deck to be level with ground, and lower main boom until deck is on ground. Now index main boom “up” function and determine the time required for main boom to rise completely.)

%☒+Ú[!dÉÓ[[{ Ö[, } K ĩ Ę Ù^& } á•

(Note: Extend secondary boom completely, roll deck to be level with ground, and raise the main boom to “full up”. Then index the main boom “down” function to determine the amount of time required for the deck to contact the ground. CAUTION: Stop the boom just as the deck contacts the ground.)

G97CB85FM

6CCA K %☒+Ú[!dÉÓ[[{ U~ dK ĩ Ę€ Ù^& } á•

(Position main boom full up, roll deck out until deck cylinder is fully retracted, and bring secondary boom in completely. Then index the secondary boom “out” function and determine the time required for boom to extend out completely.)

%☒+Ú[!dÉÓ[[{ QK ĩ Ę€ Ù^& } á•

(Position the main boom full up, roll deck out until deck cylinder is fully retracted, and extend secondary boom completely. Then index the secondary boom “in” function and determine the time required for boom to come in.)

897?FC@@ %☒+Ú[!dÉÖ^& U~ dK ĩ Ę Ù^& } á•

(Raise main boom to vertical, extend secondary boom out slightly so that deck can be articulated without contacting the main boom, and roll deck in until deck cylinder is completely extended. Then index the deck roll “out” function and determine the time required for the deck to roll out.)

%☒+Ú[!dÉÖ^& QKVæ*^cĩ Ę Ù^& } á• ☒~ cÖU ßUV~ •^ Šā ãÙ&^, D

(Raise main boom to vertical, extend secondary boom out slightly so that deck can be articulated without contacting the main boom, and roll deck out until deck cylinder is completely retracted. Then index the deck roll “in” function and determine the time required for the deck to roll in.)

6CCA

GK ð9 @% ☒+Ú[!dÉÓ[[{ ☒dK FI Ęĩ Ù^& } á•

(Extend booms completely; rotate head to be level with ground, lower main boom until deck is just above ground, and swivel boom full forward. Then index the boom swivel “aft” function and determine the time required for the boom to swivel aft. Use caution when doing this, stop boom before main boom contacts tire.)


%☒+Ú[!dÉÓ[[{ Ø! , æåK FI Ęĩ Ù^& } á•

“(Extend booms completely, rotate head to be level with ground, lower main boom until deck is just above ground, and swivel boom aft and until near tire. Then index the boom swivel “forward” function and determine the time required for the boom to swivel full forward.)



5 GG9 A 6 @M

(ASM-DF CALIBRATION LRS-0001)

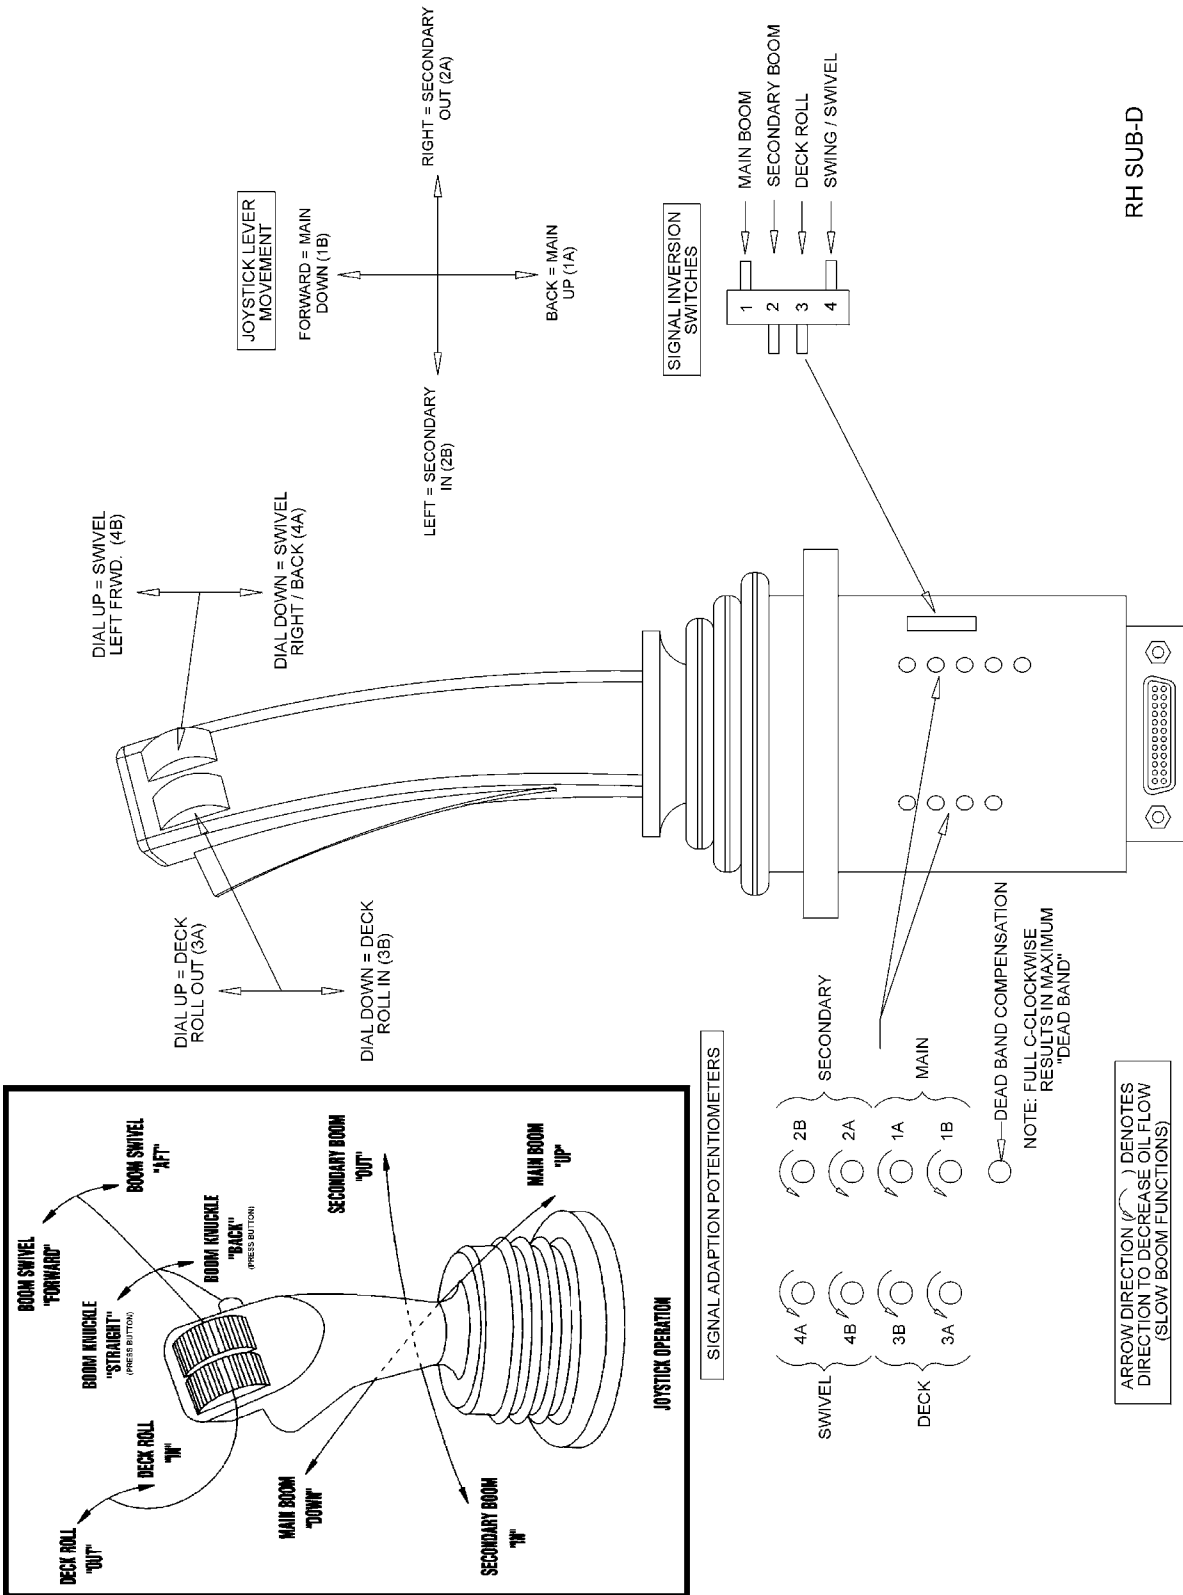

RH SUB-D

ARROW DIRECTION (/) DENOTES
DIRECTION TO DECREASE OIL FLOW
(SLOW BOOM FUNCTIONS)



5 GG9 A 6 @M

F95 F`GHCK `69B; 5 @<CG9`FCI H-B;

K5FB-B; `BCH9. V@•`ãã^} |^|^æ^ [~@ãæ|æ] |^••`|^ &~|ã &æ•^ @•`ãã^ } { [ç^ { ^} c [~ç^ | ^ @æ] } æ•É•Ç^ [] ^ ð @ , æ [~@•^] æ• &~|ã à^ •^ç^|^ | ^ @ | c [| \ a|^ãÉ ÖU ßUV ÇSSUY @•^ @ãæ|æ @•^ ð ÓÚÓÇS [| ÓWÚUV ð [|ã^ | ð] | ^ç^ } c @ãæ|æ æ~|^ T æ^•`|^ @ @•^ ã [] c] ð &@ | •d^æ@æ à [[{ [ç^ •É T ^æ~|^ VY ÒÖ&@& VY ÒÖ @ }] | &^ã , æ@ææ ç } É



T æ\ @ F+|^ç | } @•^ æH+B Í + + [{ @ ^ } à @æ , ð | & } } ^ & ç ð @ à [[{] | ^ + | { ^ãç à^ [| @•^ÉV@•^ { æ• , ð | à^] | æ~|ã ð @ @•^ &~|ã } •ÉV@ F+|^|^•`|^ @•^ @~|ã à^ | ^ ç ð + | | | , @ | ^ç | } @•^ÉÚ [^ ç @ @•^ @ [^ * @ @ •] æ~|ã à^ç ^ } @ • , æ~|ã ç ð @ { æ~|ã ç ^ÉÖ } } ^ & ç @ @•^ ð @ à [[{] | ^ + | { ^ãç à^ [| @•^ ç ð @ { [ç^ @ à [[{ ç { ð ç^ , ^ç + [{ ~ | | + | , çãÉÇ•^ { à^ @ • , æ~|ã &~|ã } ç ð | | æ~|ã @ | ^ç | } @•^ + | @ { [ð | ð @ { æ~|ã ç ð @ } | ^••`|^ | ð ^ [] @ à [[{ ÉÚæ~|ã @ + @•^ ð @ ð] &~|ã } ç ð , | ç @ @•^ , æ@æ] | æ @•^ à^ + | ^ ç @ } ð * @ @ &~|ã } ÉÇ [ç æ [~@ F@ + @•^ çÉ [^ ç [[~@ @•^ æ [ç^ @ @ &~|ã } æ • @ , } æ [ç^ ç ð • ^ & | ^ @ { , æ@æ: ð ç ð @ [@ | @•^Éß^çÉ { ç^ •`|^ @ | ^ ã ^ } [^ * @ | æ~|ã + | ç | @•^ ð] æ [ç æ @ ð ð ç , @ | ^ @ { æ~|ã à [[{ ç { à^ } à^ ð @ • , æ~|ãÉæ • @ , } ð @ } ^ ç ð ç ç^É ç ð à ç @ } @ @•^ ð @ @ &~|ã } É Ç æ | É , | ç @ @•^ [] ^ ç @ | • ç^ [~@ &~|ã] , æ@ @ @•^ , | ç É V Ç , ð | | | ç & ç @ @•^ + [{ æ~|ã ç } ç ð @ æÉ (ASM-T4 HOSE ROUTING-0001)



5 GG9 A 6 @M

: =@@B; `<MBF5I @7`F9G9FJC=F

Ü^A; d @A' æ l} æ &A^& d} f; ãð * •] ^&æææ} • æ à @áæ |æ[ð|^~ ã^ { ^} • È

BCH9.' GHUj]b[`cf'fi bb]b[`nci f'H][Yf' a ck Yf' VYZfY'Z`][b['fYgYfj c]f'k]`WU gY gYf]ci g'XUa U[Y'hc \ nXfU `]Wdi a d"

(ASM-C-0004hydro resrv)

=BGH5 @@@B; `C!F=B; `: =H=H; G

Q•æð * • dæ @É | óæ à J€ó UÉð * •] ^~ ã^ • @æ@ UÉð * æ à , æ @! à^ ~] ææ • c@ • , ã^ à [à^É Q•^c@ • , ã^ æ à c'] ð ~ } æ@ • , ã^] [ð l' à ð @ à^ ð^ à à^& d} æ à UÉ ð * &] æææ { æ^É P [| à • , ã^ ð • ^cá ð^& d} , æ@æ , |^ } &æ æ à c'] @ UÉð * } ~ cæ æ f [{ @ • , ã^ à [à^ æ à &æ^~] | æ @ } È (ASM-C-0056)

=BGH5 @@@B; `B5H=CB5 @D=D9` : =H=H; G

Y @]^ç^ ð • æð * æ ð ^ ãð * È | æ @ @^ææ • & [& , ã^ U [\ ð * æ@ ^ } à D, æ@ l' f] æ^É Q @æ , æÉ@ æ^ , ð à^ æ @ } ^ à , @ } ð • æ^ à É P UVOK Q æ } [c } ^ & • • æ^ d æ^ UÉð * ãð * È | @ • ^ ð • æ^ à ð • , ã^ • È (ASM-C-0088)

DF9: CFA98`HI 69`=BGH5 @@@H=CB

Šæ à [[{ • []] f [[• [@æ@ • æ^ , æ@ @æ & æ]] æ • ã ~] È Š | ææ æ ç à^ & æ] • æ à ð • æ@ @ { [[• ^] [] d @æ &]] æ • È
@æ * ^ @ c à^ æ à @ • ^ • æ [~ d ð^ à ð @ Ó [{ []] Úæó ð^& d} È Q • æ@ @ c à^ & [• ^ • c d @ à [{ æ { ã • É à ð * & æ^~ }] [c d] ð & @ @ c à^ È Úææ @ [@] c à^ [~ @ æ^ [~ @ ã • c c à^ È U] ~ * æ & æ] à [| • È à cá] [c æ @ } È Ó @æ æ ç à^ f | & | | & c æ } { ^ } c æ à @æ [] ^ æ^ ð & @ à [| à^] È V @æ & æ] à [| • & æ] [, à^ æ @ } ^ à È (ASM-C-0085)

; 9B9F5 @<CG9`=BGH5 @@@H=CB

Ü^A; d @ Úæó ð^& d} f; à^æ^ à ð f; { ææ } æ [~ c @ • ^ • æ à ãð * • f; | @æ æ] | ææ } È (ASM-C-0011)

<CG9`7CJ9F=B;

Ü^& | ^ @ • ^ • d * ^ @ • , æ@ ð æ • , @ | ç^ [[• ^ È Y | æ @ @ • ^ • à ç^ ^ } @ • , ã^ æ à { æ à [[{ , æ@ @ @ • ^ & ç^]] [çæ^ à È Y | æ @ @ • ^ • à ç^ ^ } @ { æ à [[{ æ à ^ & } à æ^ à [[{ , æ@ @ @ • ^ & ç^]] [çæ^ à È Y @ | ^ @ • ^ • { æ & } ææ@ ~ æ ^ [[[@ | ^ à * ^ • È | æ , æ@] æ @ • ^ & | ^ , æ@ @ • ^ & æ] • [: ð æ • È U] } } & æ ~ } æ É @] | • • | ^ æ à | ^ c'] @ • ^ f [{ @æ & } d [| çæ^ , ð æ [] ^ à d à | [~ l' à ð • æ^ @] | l' & ç^ & æ @ • ^ , | æ È Ó | ç^ | @ çæ^ È çæ^ ãð * • , æ@ @ ^ | [, @ • ^ & ç^] æ à ^ & | ^ , æ@ à ææ • d ð *] | [çæ^ à È (ASM-C-0058)

577I AI @HCF`=BGH5 @@@H=CB

Q • æ@ @ ææ { ~ | æ | à ææ ^ c [] @ | ð @ { æ f æ ^ { æ c [| æ çæ^ { [~] È ã æ } | ææ | ^ È , æ@ @æ & æ • & ^ , • È [& , æ @ • æ à •] ææ | • È ã æ } | ææ | ^ È æ • @ , } ð @ Úæó ð^& d} È Q • æ@ @ ææ { ~ | æ | ð @ à ææ ^ c æ à ^ & | ^ , æ@ @ @æ , æ • @ , } È Q • æ@ ãð * • æ à @ • ^ • d @æ & | ð à^ | æ à &] d [| çæ^ æ • @ , } ð @ Úæó ð^& d} È | gYHYZcb`HJdYcb`U`d]dY`Z]H]b[g`fM WdhC!f]b[gL" (ASM-C-0012)



5 GG9 A 6 @M

; F95 G9 @ GG'6 95 F-B; 'BGH5 @ @ HCB'

Qā !^& { ^} ā^ā @e*!^æ^ à^ æ] |ā à ç @ à[!^ ç æā ð ð •^!ā } [~@
 * !^æ^!^•• à^æð * È (ASM-GRSLSS BRNG-0001)

Assembly



When a PolyLube™ bearing is press fit into a housing, it expands into the housing and creates a highly loaded press fit condition. This is possible because of the elastic properties of the bearing's backing material. Press fits on wall thicknesses up to 1/8" have demonstrated

that the close-in ratio is one-to-one (0.001 press yields a 0.001 close in). However, press fits should be minimized, even though the tube will readily take presses of 0.004" to 0.005". The use of a standard H7 housing bore is also recommended.

Due to thermal lag, the bearing wear surface may be hotter than the adjacent housing, when heat is generated from running friction. As a result, the installed bearing may expand inward, reducing the shaft clearance. For optimum performance, Polygon recommends a smooth, hardened steel shaft with a 16 micro finish. However, PolyLube's rugged bearing surface will permit use of a rougher finished shaft, such as a standard drill rod, if the bearing to shaft clearance is increased. (See Part # listings for recommended shaft clearances).

Shaft clearances should be increased for dry running applications with high rubbing velocities. Fluid cooling and lubricants will reduce the operating temperatures, permitting tighter shaft clearances. Heat transfer through the bearing wall is inversely proportional to the wall thickness. The thinner the wall, the greater the transfer of heat. Thermal conductivity, for example, is 1.8 to 2.3 Btu • in/(hr • ft² • °F).

Typical installation tools are illustrated below:

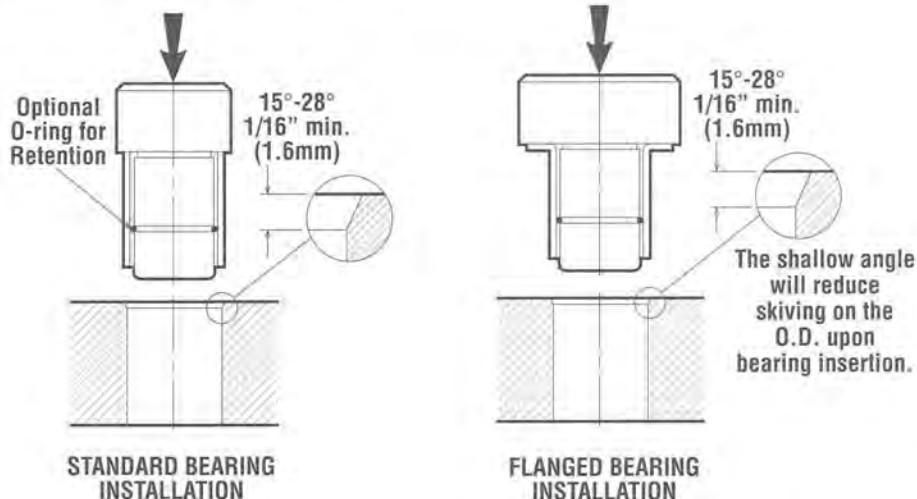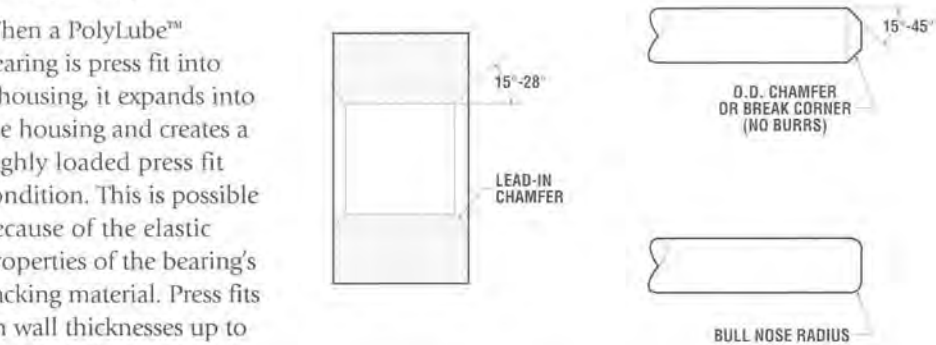

5 GG9 A 6 @M



CD9 F5 HCB'G97 HCB

UJ^!aa } Ú^&a } HË

CD9F5HCB

CD9F5HCB

ÜUVÖÿ PÒÖÖ ÜÜÜÖVÖP

- “ Ö•] ^&cà|ææ^• æ á à|ææ^ à| [Ö ÷ | | [•^} ^•• æ á à^ç&•• Æ^ , ^æÉ Ü [ææ ð J€} ð { æ^ ÷ | &@& ð * ^ææ^É Ü^] |ææ^ áææ æ^ áÉ [] É æ á { ã•ð * à|ææ^• æ & {] |^ç^•^ç ð { æææ | [ææ^ àææ&É
- “ Ö•] ^ [[ð | à | [Ö æ á] ~ ç æ^ ç Ö] ^ á ð Ö æ] | [] | ææ^ ð | ~ ^ É
- “ Ö•] ^ | ^ à à^ | á^ ÷ & ð | • æ^ ð] [• ææ } æ á] [ç áææ æ^ áÉ Ü^] |ææ^ [] É à [\^ } É æ á { ã•ð * •^&æ } • ð { ^ á ææ^ | É
- “ Ö•] ^ @ á | ææ | ææ | ð ^ • æ^ | | [] ^ | | & } } ^ & ç á ð Ö @ á | ææ | ææ { [ð | É Ö @ & ÷ | @ á | ææ | ææ | ^ æ • æ } * Ö • ^ • æ á ~ ææ * É Ö Ü PUV ~ • ^ [~ | ææ á ð & @ & ÷ | [ð | ^ æ • É W^ ææ ð & [~ @ ææ] ææ | [] & æ á à | æ á ð & @ & ÷ | @ á | ææ | ææ [ð | ^ æ • É
- “ Ö•] ^ & c @ & { } á ææ] [~ á^ & • \ æ • Ö • æ á æ á , æ^ É OPS-B- 0025



WARNING

Ö [] [c] ~ c @ æ á • [] ^ ç ~ } á | { [, ^ | á & • É Ö | ææ^ Ö [] ææçææ | ^ • | ç ð • ^ | ð ~ • ð b | ^ [] ^ ç ^ } á^ ææ^ Ü ææ æ æ ~ } ææ { [æ } @ • ð]] ^ á æ á ç @ á^ & • æ^ • ^ & | ^ | à [& ^ á ~] É Ö Ö T Ö J D



DANGER

Ö | Ü ææ^ Ç Ü @ | á • É Ö ~ æ á • æ á [ç @ | • ææ^ ç á^ ç ææ • ð & ÷ á ð * Ö ~ c } [ç | ð æ á ð ð É Ö ^ ÷ & ÷ | • É Ü ç ^ | Ö ~ æ á • æ á Ö æ á ç Ü @ | á • { ~ • ç á^ ~ • ^ á æ á { æææ^ á ð ð * [] á , [\ ð * & } á ææ } É Ö | • ææ^ ç á^ ç ææ • Ö ~ | á à ð •] ^ & ç á ~ | | ææ | æ ç á ææ ÷ | { ã • ð * [] à [\^ } & {] [] ^ } ç É T ã • ð * É à [\^ } É | , [] ææ { • { ~ • ç á^ | ^] | ææ^ á ææ } & ð | ^ á ~ & @] [• ææææ [~ ð b | ^ [] á^ ææ @ ÷ { ç @ [,] [á b & ç É] ææ * | ^ ^ } É | à | ææ^ & } ææ É Ö Ö T Ö J D

Ö [{ U] ^ | ææ } Ü & æ } H É |

CD9F5HCB

Boom PRE-OPERATION Inspection



O qy gt "K %aaaaaaaaaaaaaaaa

O cmg aaaaaaaaaaaaaaaaaaaaa

F cvg<"*****"aaaaaaaaaaaaaaaa

Uj klv aaaaaaaaaaaaaaaaaaaaa



6 YZ:fY Wc bXi W]b[' H Y]bgdYW]cbžā U_Y gi fY'H Y fUWcf 'Yb[]bY'jg'cZZU''fcHU]cb\ Uq
 glcddYX' UbX' H Y fUWcf 'jg']b' dUf_' k]H ' H Y dUf_]b[' VfU_Y Yb[U] YX" AU_Y gi fY' H Y
 a ck Yf 'jg'fYg]b[' cb' H Y [fci bX'cf'gYW fYmiV'cW_YX' i d'UbX'U'\ mXfU']WdfYggi fY\ Uq
 VYyb'fY]Yj YX"

Table 1:

Kgo	Eqpf kklq'cv'Uctv' qh'Uj klv	Ur gekle'Ego o gpw" kh'pqv'QCMO
Vj g'Qr gtcvtai'O cpwcrku'lp'yj g'tcevt		
Cmluchgv 'f gecni'ctg'lp'r meg'cpf 'rgi kdr		
Vj g'o qwpvpi 'htco g'dqnu'ctg'lp'r meg'cpf 'kij v		
Vj g'dqgo 'eqppgevkp'dqnu' 'r kpu'ctg'kij v		
Vj gtg'ctg'pq'etcemi'lp'dqgo		
Vj g'j {f tcwle'e{rpf gtu'r kpu'ctg'kij v		
Vj g'j {f tcwle'r wo r 'j que'eqppgevkpu'ctg'kij v		
Vj g'j {f tcwle'xcxkg'eqvtqni'hpvekp'r tqr gtn		
Vj gtg'ctg'pq'rgcnpi 'qt'f co ci gf 'j qugu		
Vj g'j {f tcwle'qkl'rgxgriku'hwm		
Vj gtg'ku'pq'gxkf gpeg'qh'j {f tcwle'rgcmi		
Vj g'drcf gu'ctg'pqv'ej kr gf . 'etcemgf 'qt'dgpv		
Vj g'drcf g'dqnu'ctg'kij v		
Vj g'f ghgevtu'ctg'lp'r meg'cpf 'lp'i qaf 'eqpf kklq		
Vj g'dqgo 'uj lgrf u'ctg'lp'r meg'cpf 'lp'i qaf 'eqpf kklq		
Vj g'unkf 'uj qgu'ctg'lp'i qaf 'eqpf kklq'cpf 'kij v		
Vj gtg'ctg'pq'etcemi'qt'j qgu'lp'dqgo 'f gem		
Vj g'j {f tcwle'o qvt'o qwpvpi 'dqnu'ctg'kij v		
Vj g'dqgo 'j gcf 'ur kpf rg'j qwvpi 'ku'kij v'cpf 'hwdtlecyf		

Qr gtcvtai'Uki pcwtg<

DO NOT OPERATE an UNSAFE TRACTOR or MOWER

Ó [{


U] ^! aā } Û ^ & ā } HĒ Ì

CD9F5HCB

CD9F5HCB

* 'Gk JHW Vcl

V@ Úæ^c Ú@|á |^ç^i []^} • æ á &[•^• @ • @|á
 || &æ^á [] @ ~{ } c [~@ &^i @æÉY @ } { [çð *
 æ [] ^æ @ * [~ } áÉæ, æ • @æ^ @ • @|á ð @
 &[•^á] [•æð } ÉY @ } { [, ð * ð @ à: ~ • @ [] ð
 d^^ æ [ç^ * [~ } á |^ç^i @ • @|á { æ à^ [] ^á
 † | ^æ ð: &^æ * ÉÚ^æ æ á † || , @ , æ ð * []
 @ á^ææ • @ , } à^ [, ÉÖ [] [c: ~ } @ &^i @æ
 ð ð { æ^ææ |æ^i @æ í +áææ ^áÉ

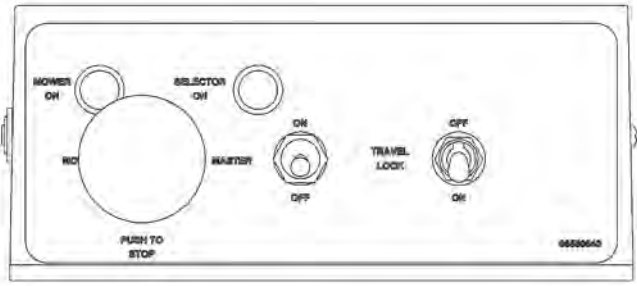

DANGER

SAFETY SHIELD & DEFLECTOR OPERATION

<p>SAFETY SHIELD</p> <p>DEFLECTOR</p>	<ul style="list-style-type: none"> • Failure to close Safety Shield and Deflector may allow objects to be thrown outward with great force which can cause property damage, bodily injury, or death. <ol style="list-style-type: none"> 1. Keep Safety Shield and Deflector fully closed when cutting grass and weeds to reduce possibility of objects being thrown outward by the Blades if persons are in the area. 2. Before Cutting brush, trimming limbs, or other such operations, raise the Deflector and Safety Shield fully to allow the blades to contact the material if area is clear of passerby. Operator must stop cutting and close shield if passerby enters the thrown objects area or blade contact area. 3. Repair or replace Safety Shield and Deflectors as needed. 4. Always transport with Safety Shield and Deflector closed.
---	--


02967867

Ó [{ U] ^ | æ ð } Ú ^ & ç } H É Ö


CD9F5HCB

CD9F5HCB


ΣΧΟΔΙΑΣΤΗΡΕΩΣ

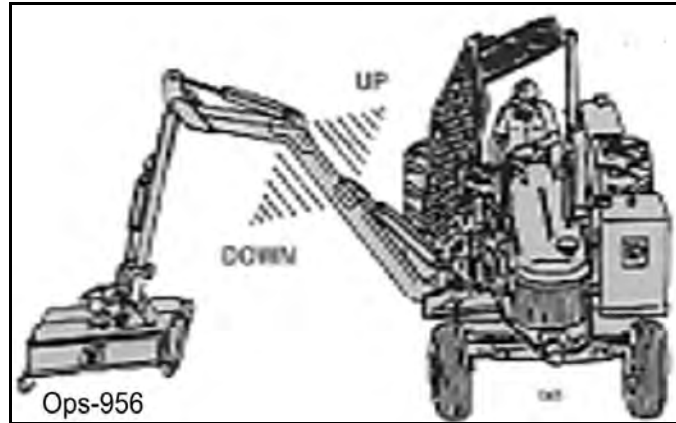

ΣΧΟΔΙΑΣΤΗΡΕΩΣ

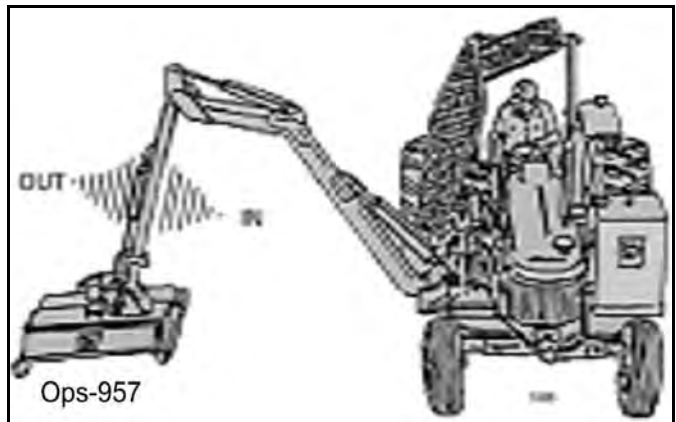

ΣΧΟΔΙΑΣΤΗΡΕΩΣ

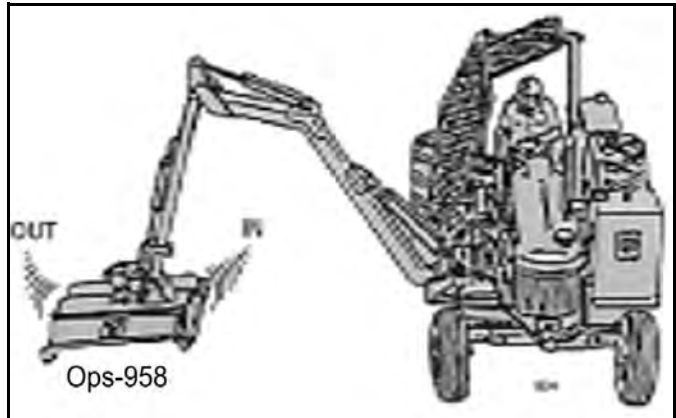


Όλες οι

επιπλέον πληροφορίες


CD9F5 HCB

CD9F5 HCB

ΣΧΟΔΙΑ ΟΥΤΟΥ ΑΝΟΙΧΤΟ

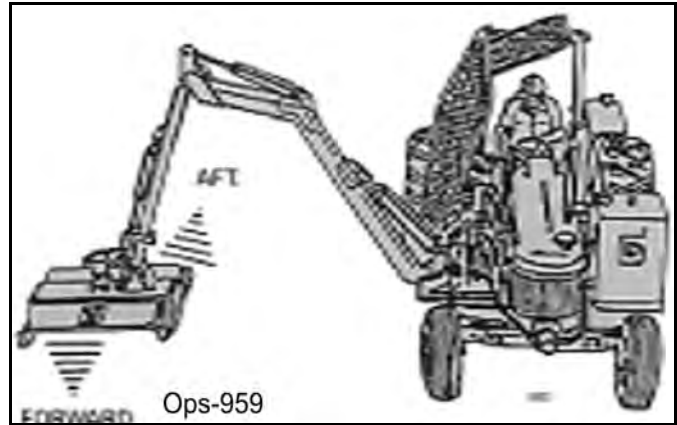

ΣΧΟΔΙΑ ΟΥΤΟΥ ΚΛΕΙΣΤΟ

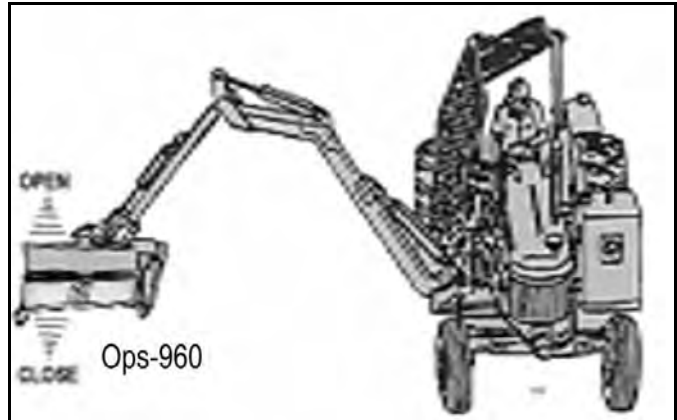

Όλες οι πληροφορίες σχετικά με τον εξοπλισμό αυτόν, συμπεριλαμβανομένης της λίστας ανταλλακτικών, είναι διαθέσιμες στην ιστοσελίδα μας.

Όλες οι πληροφορίες σχετικά με τον εξοπλισμό αυτόν, συμπεριλαμβανομένης της λίστας ανταλλακτικών, είναι διαθέσιμες στην ιστοσελίδα μας.

CD9F5HCB

CD9F5HCB

WARNING



CAUTION: Do not touch the boom or secondary boom while the machine is in operation. The boom and secondary boom can move unexpectedly and cause injury.

Always use proper lifting techniques. Do not lift or move loads that are too heavy or unbalanced. The boom and secondary boom can become unstable if not used correctly.




CAUTION: Do not touch the boom or secondary boom while the machine is in operation. The boom and secondary boom can move unexpectedly and cause injury.



CAUTION: Do not touch the boom or secondary boom while the machine is in operation. The boom and secondary boom can move unexpectedly and cause injury.

Always use proper lifting techniques. Do not lift or move loads that are too heavy or unbalanced. The boom and secondary boom can become unstable if not used correctly.

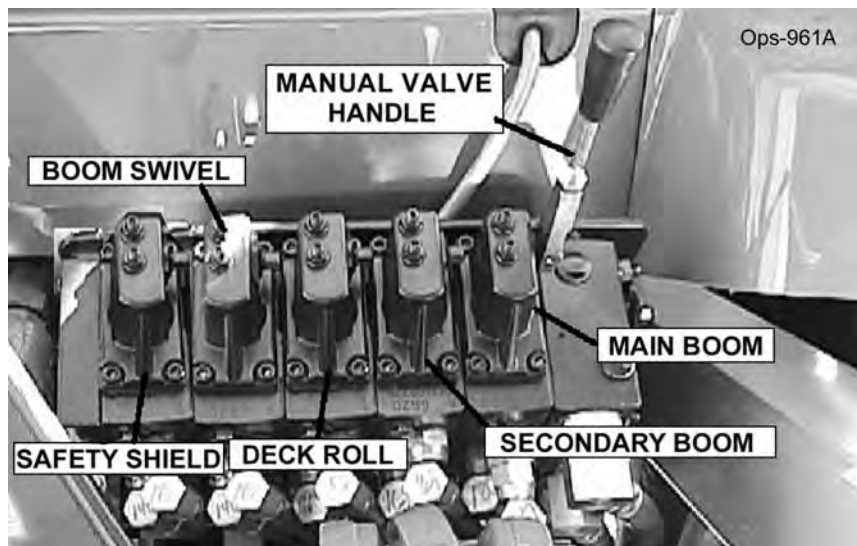

Ó[[{


U] ^{ } Ú^& } HCB

CD9F5HCB

CD9F5HCB

Control Panel

Refer to the operator's manual for detailed information on the control panel. The control panel includes the Mower Run Indicator Light, Mower Control Switch, Joystick Master Switch, Safety Shield Switch, Travel Lock Switch, and Deck Float Switch.

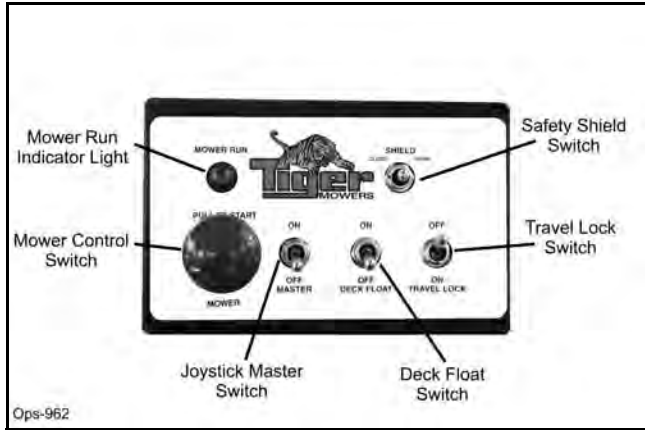

The control panel is located on the operator's seat. It includes a Mower Run Indicator Light, a Mower Control Switch, a Joystick Master Switch, a Safety Shield Switch, a Travel Lock Switch, and a Deck Float Switch. The Safety Shield Switch is used to engage the safety shield, which is a protective device that prevents the blades from cutting the operator. The Travel Lock Switch is used to lock the travel controls, which prevents the operator from moving the mower without the proper safety procedures. The Deck Float Switch is used to adjust the deck height, which allows the operator to cut grass at different heights. The Joystick Master Switch is used to control the direction of travel, which allows the operator to move the mower forward, backward, and in turns. The Mower Control Switch is used to start and stop the mower, which allows the operator to operate the mower safely. The Mower Run Indicator Light is used to indicate when the mower is running, which allows the operator to monitor the mower's status.

! DANGER

SAFETY SHIELD OPERATION

• Failure to close Safety Shield may allow objects to be thrown outward with great force which can cause property damage, bodily injury, or death.

1. Keep Safety Shield fully closed when cutting grass and weeds to reduce possibility of objects being thrown outward by the Blades and to prevent contact with the Blades if persons are in the area.
2. Before cutting brush, trimming limbs, or other such operations, raise Safety Shield fully to allow the blades to contact the material if area is clear of passersby. Operator must stop cutting and close shield if passerby enters the thrown objects area or blade contact area.
3. Repair or replace Safety Shield as needed.
4. Always transport with Safety Shield closed. Ops-963



Ó[[{

U] ^! } ù & } HCB


CD9F5HCB

CD9F5HCB

>cmghW `7 cbhfc`

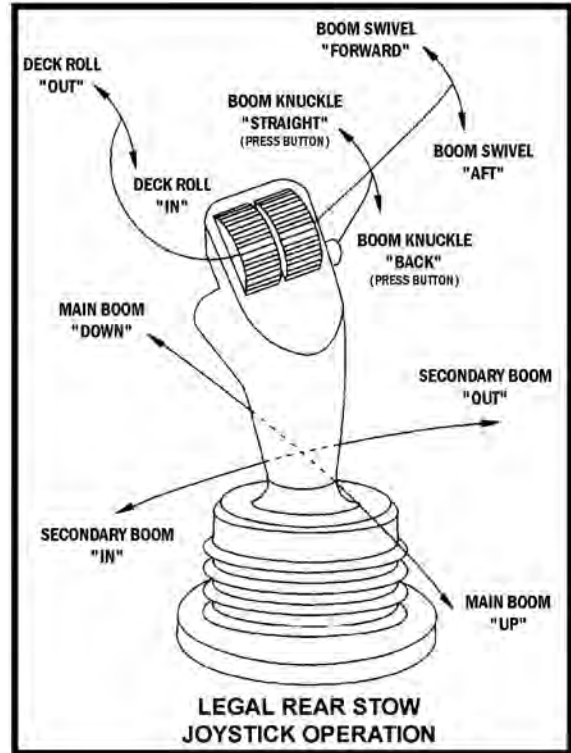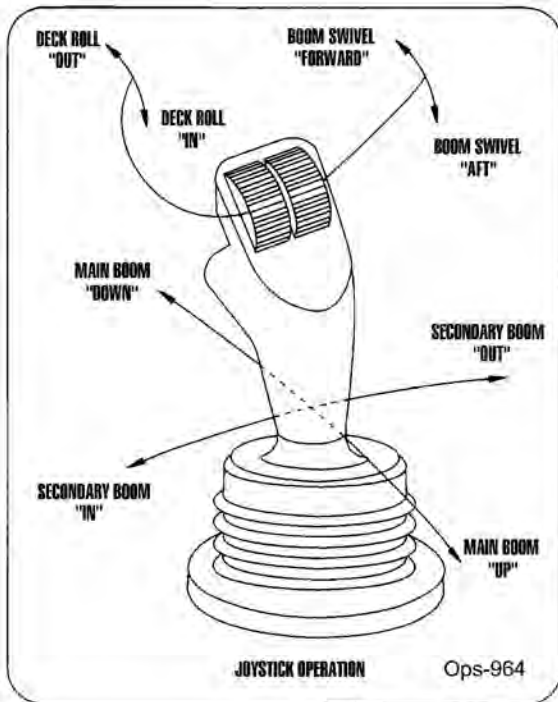

RUÿÙVÔS ØY ÖÓÔS T UXÒÙ T ÖD ÓUT

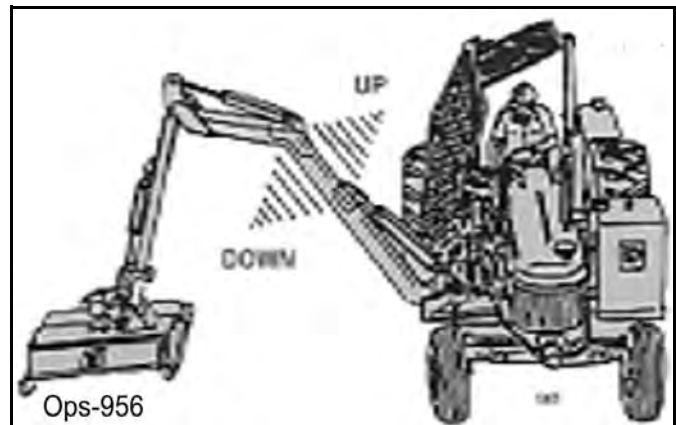


Ó[[{

U] ^! aã } ù &ã } HÉÍ


CD9F5 HCB

CD9F5 HCB


RUŸÙVŦS ŠÒØŦŦŦPV TUXÒÙ ÙÒÔÙPÔÆŸ
ÓUUT

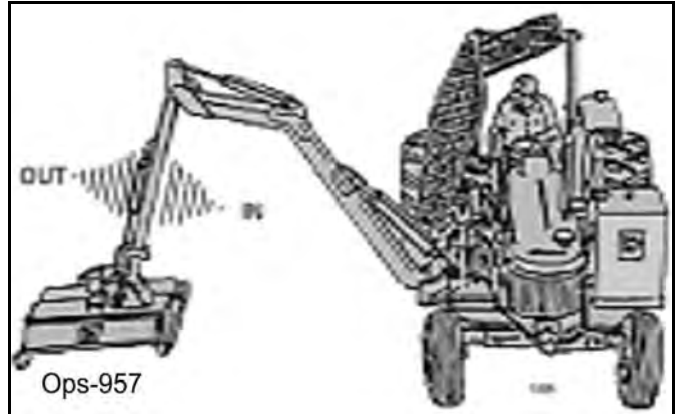

ŠÒØŦŦŦPV RUŸÙVŦS ÙÙŠŠÒÙ TUXÒÙ ÔÔÔS ÙÙŠŠ

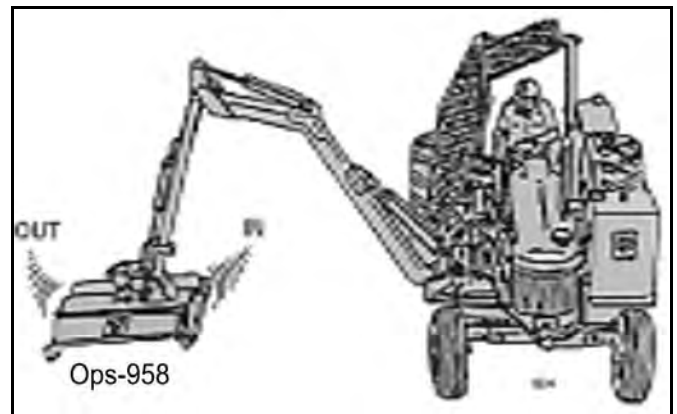

ÙŦŦPV RUŸÙVŦS ÙÙŠŠÒÙ TUXÒÙ ÓUUT
ÙŸ ÅÒŠ

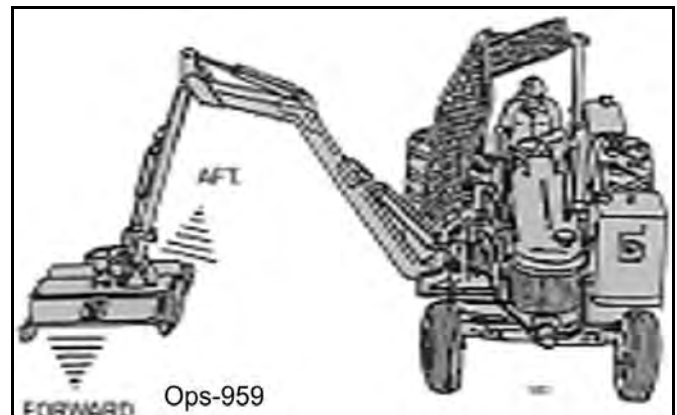

Ó[[{


U] ^{aa} } Ù^{aa} } HĒĒ

CD9F5HCB

CD9F5HCB

⚠ DANGER

ပင်လယ် ပြင်ပတွင် အသုံးပြုခြင်းသည် အန္တရာယ်ရှိသည်။ အသုံးပြုသူသည် အသုံးပြုမီတွင် အသုံးပြုညွှန်ကြားချက်ကို အသိအမှတ်ပြုရမည်။ အသုံးပြုသူသည် အသုံးပြုမီတွင် အသုံးပြုညွှန်ကြားချက်ကို အသိအမှတ်ပြုရမည်။ အသုံးပြုသူသည် အသုံးပြုမီတွင် အသုံးပြုညွှန်ကြားချက်ကို အသိအမှတ်ပြုရမည်။

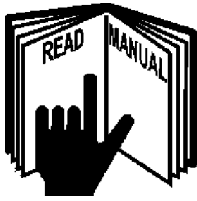


⚠ WARNING

အသုံးပြုသူသည် အသုံးပြုမီတွင် အသုံးပြုညွှန်ကြားချက်ကို အသိအမှတ်ပြုရမည်။ အသုံးပြုသူသည် အသုံးပြုမီတွင် အသုံးပြုညွှန်ကြားချက်ကို အသိအမှတ်ပြုရမည်။ အသုံးပြုသူသည် အသုံးပြုမီတွင် အသုံးပြုညွှန်ကြားချက်ကို အသိအမှတ်ပြုရမည်။

⚠ DANGER

အသုံးပြုသူသည် အသုံးပြုမီတွင် အသုံးပြုညွှန်ကြားချက်ကို အသိအမှတ်ပြုရမည်။ အသုံးပြုသူသည် အသုံးပြုမီတွင် အသုံးပြုညွှန်ကြားချက်ကို အသိအမှတ်ပြုရမည်။ အသုံးပြုသူသည် အသုံးပြုမီတွင် အသုံးပြုညွှန်ကြားချက်ကို အသိအမှတ်ပြုရမည်။

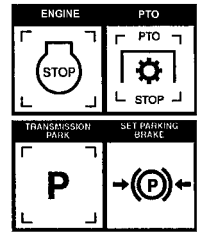

၀၁၁၁

အသုံးပြုညွှန်ကြားချက်

CD9F5HCB



Viðeigandi varningur er sýndur í myndunum hér á eftir. Þessi varningur er sýndur í myndunum hér á eftir. Þessi varningur er sýndur í myndunum hér á eftir.




Ólífu og smurur eru mikilvægur hluti af viðhaldi á vélum. Þetta er mikilvægur hluti af viðhaldi á vélum.

Væðing og smurur eru mikilvægur hluti af viðhaldi á vélum. Þetta er mikilvægur hluti af viðhaldi á vélum.

Væðing og smurur eru mikilvægur hluti af viðhaldi á vélum. Þetta er mikilvægur hluti af viðhaldi á vélum.

Ungunnið er mikilvægur hluti af viðhaldi á vélum. Þetta er mikilvægur hluti af viðhaldi á vélum.

Ólífu og smurur eru mikilvægur hluti af viðhaldi á vélum. Þetta er mikilvægur hluti af viðhaldi á vélum.

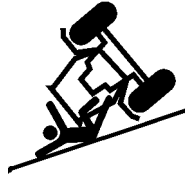

CD9F5HCB

Öflugur og Yfirvæðing

Væðing og smurur eru mikilvægur hluti af viðhaldi á vélum. Þetta er mikilvægur hluti af viðhaldi á vélum.



Op-24

Ólífu og smurur eru mikilvægur hluti af viðhaldi á vélum. Þetta er mikilvægur hluti af viðhaldi á vélum.

CD9F5HCB

CD9F5HCB

„&6fU YUbX'8 jZyfYbhU' @cW`GYHjb[

T æ^•~|^ @ dæd| àæ^• æ^ ã *[[á]]^ææ *
 & }áææ }É Vææd| àæ^• ææ à^ •^c d []^ææ
 ã à^] ^) á^] d^ ææ, ã * •ã *|^ |^æ , @^| àææ ã *
 æææ } [| [&^á d * ^c@| d]|[çæ^• ã ~|æ^|^•
 |^æ , @^| àææ ã *É ØUÜ T UUV ÖÜQÖÖ ÖÖÖ
 UÚÖÜÖÖÖ ÖÜPÖÖQÖPÜÉVÖÖ ÖÜÖÖÖ ÖÜÖÖÖÖÖ
 ÜPÜWÖÖ ÖÖ ÖÖÖÖÖÖ VUÖÖVÖÖÜ VU ÜÜUXÖÖÖ
 VÖÖ T UUV ÖÖÖÖÖÖÖ ÖÜÖÖÖÖ ÖÖVÖPÉ



Öæ æ• áæ^} *æ^ @ dæd| áæ^|^) ææ [& , @ }
 c } ã *É Y @ } ^} *æ^ á @ ^ áæ^|^) ææ [& , ã]
 |^ç^} c [| ã æ @ dæd| +[{ c } ã *É Ö } ã *
 } [{ æ & æ * & } áææ } •É [& ã * @ áæ^|^) ææ
] [çæ^• } [à^] ^ææ á • @ } |á } [c à^ •^áÉ


OPS-U- 0013



Óæ æ^ [~@ []^ææ * & } áææ } •ÉÖ [] c []^ææ @ Vææd| , æ@ , ^æ [| -æ| c àæ^•É
 Y @ } []^ææ * á , } ææ [[] , ^c []^ææ •ææ [| ææ •É@ àææ ã * áææ & ã ã & ^æ^•L
 ~^• ^ç^|^ ^ ææ æ á |^á & ^ [] •^á ã @ •^ & } áææ } •É Y @ } []^ææ * ã d ææ
 ææ æ• ~^• @ Vææd| ç -ææ * , ææ ã * |á @ æ á |^á & ^ [] •^áÉÓæ ææ [~dææææ] á [~ æ á
 , æææ [~c-| @ [@] * ~É *Qu2226/OKE+



ÖÖÜUÖ|^ææ * @ dæd| •^ææææ æ •^c@] ææ ã * àæ^ æ æ! •^c
 @ dæd| dæ •{ ã •ã } ã] ææ * *^æÉáæ^} *æ^ @ ÚVUE•d] @
 ^} ã ^É|^ [ç^ @ \^Éæ á , ææ-| ææ [çæ *] ææ d •d] É Úææ @
 dæd| •æç|^ç^| ã d ææ , |ææ^ [] ææ ã * *^æ d]|^ç^} c@ dæd|
 +[{ | [ã *É P^ç^| áæ { [~} cæVææd| @ææ { [çæ * [| , @^ @ ^} ã ^
 ã | } } ã *É U|^ææ @ Vææd| & } d [| • +[{ @ dæd| •^ææ [] |ÉÖÖÖD

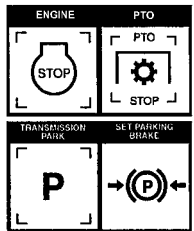

Ö [{

U|^ææ } Ú&æ } HÉÉ

CD9F5HCB

CD9F5HCB

." 8f]j]b]`h YHfUWcf`UbX'6cca

Ùæðc[~á]æð* ææ•[, •]^^á æðá *]æð`æ] ð&^æ^ ^[~]•]^^á , @ { æðæðð* &{]^æ & }d[]~@ dæð]É Þ^ç^! []^ææ @ dæð]æ•]^^á• @æ&æ} [cà^•æ^] @ðá^á [, @æ@, ð]!^ç^}c@ []^ææ : ÷[{ •ç]]ð* ~`æ]`á`]ð* æ^ { ^*^ } &ÉQ@ [, ^•æ^]ð* []^ }ð^ &æ^• []^ææ*É•ç] @ dæð] ð { ^áææ^ æ @ dæð] , ð]à^ áðæ`|çç & }d[]É

Ú^]f] { ç] } • , æ@ç@ dæð] æð { [, ^] æ• [, •]^^á• ç á^æ { ð^ @ , @ dæð] , æ@ æææ@á ð]^ { ^ } c@æðá^• æç] }ÉÖ^æ { ð^ @ •æ^•]^^á ç { æðæð] []^æ & }d[]~@ dæð] , @ } { æð* ç] } •É Y@ } ç] } ð* , æ@ @ ð]^ { ^ } c@ [ç^æ] , []ð* ^ } *çæðá , æ@ [~ @ ~ } æð ð&^æ^áÉQ [, æðáæð } æð&ææ & ÷ [] @ ~ } æ , @ } ç] } ð* [] , @ }]æ•ð*]æ^ [à•ç`&ç] •É



V] æ[æ [ç^ç] } •Éá]æ^ @ dæð] , æ@ææ æðá æ •æ^•]^^ á•É^•]^^æ` , @ } []^ææ* [ç^] [* @ *] [~ } áÉ & [••ð* áæ&@ • [] • [] ^ •É æðá ç] } ð* &] ^ •É W^ ^çç^ { ^ &æç } , @ } []^ææ* [] •æ^ • [] ^ •É S^ ^ @ dæð] ð æ [, *^æ , @ } * [ð* á [, } @] É ÖU ÞUV & æc [] ÷^É , @^] á [, } @] É



OPS-B- 0006

Ó [{ U] ^] æ } ù & ç } H F



T[, æ c@ •]^^ä c@æ^ [~ &æ •æ^ []^ææ æ ä & }d [] c@ dæd [] æ ä { [, ^EV@ & }!!&c { [, ð* •]^ä ä^ ^) ä • [] c^ææ & } äææ } æ ä *!æ • c^ ^Éä^) •æÉæ ä @æ @ [~ & cÉ P [] { æ*! [] } ä •]^ä ä æ*^ æ ã ÷ [{ G d í { } @H \) @E W^ • [] , { [, ð* •]^ä ä • , @ [] ^ææ* [] [] ^æ • c^ • [] ^ • Éäæ&@ • Éä: [] ð → É [ç^! @ææ [ä • d^ &æ] • É [] , ^ [ð^ • É! , @] ä ä æ æ ä ÷ [] ^æ } [à b & æ æ^ d à^ æ [æ^ ä É çOT æ D

- "&CdYfUhb['GdYYX'UbX': fci bX'GdYYX

Ö [] ^ ä •] ^ ä ÷ [] { [, ð* , ð] ä^ ^) ä ~ [] [] c@ @æ @Éc] ^Éæ ä ä^) •æ [~ ç^*^ææ } d à^ & cÉ Ö [P [c ^æ&ä ä í T Ú P , @ [] ^ææ*ÉU] ^ææ c@ { [, ^ææ ~ || ææ ä Ú V U •] ^ ä d { ææ ææ àææ •] ^ ä ÷ [] æ & æ æ & cÉÜ^æ d c@ dæd [] ^ææ [ç { æ } æ [] c@ dæd [] ð • d { ^ } c [] æ^ ÷ [] c@ ^) * ð^ •] ^ ä æ ä *^æ d [] [çæ^ c@] ^ ~ ð ä ä [] ^ææ* æ ä ä^ ä^ ä *! [] ^ ä •] ^ ä É T æ^ •] ^ c@æ c@ { [, ^æ [] ^ææ* ææ ~ || ææ ä •] ^ ä ä^ ÷ [] ^) c^ ð* c@ ç^*^ææ } d à^ & cÉ Ö æ • æææ ä • d [] & ææ * àææ^ , æ@^) * ð^) ^æ æ^ É

Ö [] ^ ä •] ^ ä æ ææ ç^ ä ä^ d æ • { æ • ð } *^æ • ^ ^ &æ } æ ä } [c à^ c@ ^) * ð^ [] ^ææ* •] ^ ä É V@ [] ^ææ [] { æ ä ä^ ~ ð ä ä d ç^ [] ^æ [] c , æ@^ ç^ [] æ^æ æ^æ æ^æ & { àæææ } • d ä^ c^ [] ð^ c@ ä^ • c^ææ æ ä } æ^æ , @ [] [çæ^ c@ { [• cæææ] ^ [] [] { æ & ÷ [{ c@ ð] [] ^) cæ ä { [• c^ - ææ] c dæd [] ^ææ } É c@ c@ • ^ ç^ æ [~ & ææ & } äææ } • ð & ææ^ É c@ *! [] ^ ä •] ^ ä • @ [] ä ä^ ä^ æ^ ä É OPS-B- 0009



T[, æ c@ •]^^ä c@æ^ [~ &æ •æ^ []^ææ æ ä & }d [] c@ dæd [] æ ä { [, ^EV@ & }!!&c { [, ð* •]^ä ä^ ^) ä • [] c^ææ & } äææ } æ ä *!æ • c^ ^Éä^) •æÉæ ä @æ @ [~ & cÉ P [] { æ*! [] } ä •]^ä ä æ*^ æ ã ÷ [{ G d í { } @H \) @E W^ • [] , { [, ð* •]^ä ä • , @ [] ^ææ* [] [] ^æ • c^ • [] ^ • Éäæ&@ • Éä: [] ð → É [ç^! @ææ [ä • d^ &æ] • É [] , ^ [ð^ • É! , @] ä ä æ æ ä ÷ [] ^æ } [à b & æ æ^ d à^ æ [æ^ ä É çOT æ D

- " 'CdYfUhb['H Y5HUW YX'Ack Yf' < YUXg

V@ à [] { &æ æææ c@ d æ ä [] ^ææ { ^ ç^ [] @ææ • [] ^ æææ ^ ÷ [] æ , æ^ [] æ^æ [~ ç^*^ææ } & } d [] æ } | æææ } • É V@ æææ c@ ä @ææ • æ^ ä^ ä^) ä ÷ [] ä^æ^) cæ } | æææ } • É V@ @ææ • @ [] ä ä^ • ^ & c^ ä äæ^ ä [] c@ { [, ð* æ } | æææ } æ ä c@ [] æææ } c@æ c@ ~ } ææ ä^ ð* [] ^ææ ä É

Ü^æ d c@ c@ • ^ { à [] ^ææ } [~ c@ { æ } æ d ^) •] ^ c@ @ææ æ [] [] ^ [] æææ c@ ä d c@ à [] { æææ æ ä @ ä æ æ æ ð^ æ^ [] [] ^ [] & } ^ & c^ ä É OPS-B- 0010



V@^æ æ^ [à ç^ ~ • æ ä ææ^] [] c^ ææ æææ • ð c@ [] ^ææ [] ~ c@ T [] , ^É Ü Ö T Ö T Ó Ò Ù Ä V@ { æææ^ æ [- c^] [] ^ææ ä ð @ææ^ ä [] • @ æ ä ð @ææ , ^ ä • É V@ Ó ææ^ [~ c@ T [] , ^É &æ c@ [] , [à b & c æ • @] ä • æ^ } [c] [] [] ^ [] ð • ææ^ ä æ ä { æææ^ ä É Ü^æ ~ • ð b [] [] ^ ç^) ä^ææ [] æ [& æ] ^) • • ææ^ æ æ^) d ð •] ^ c@ • ææ c [~ c@ [] ^ææ [] É ä • ææ ä^ • É [] æ • ^ • ä^ ð c@ æææ Ö [] [c] [] ^ææ c@ { æææ^ , æ@ æ^ [] ^ ð c@ ð { ^ ä ææ æ^æ ð d [] { [, ð* ææ^ [] ^ æ , ææ HEE^æ c [~ { [, ^É çOT ææ c@



Ö [] { U] ^ææ } ð^æ } HÉH

CD9F5HCB

CD9F5HCB

- " 'G i Hbf '8ck b'h Y5 HUW YX< YUX!': cf'GfubXUF'9ei]da Ybh

V | • @cá[, } ဆေးခံအံ့ { [, '၊ @ဆံ့-ဒံ့•càlဒံ့* @
 dဆံ့ | d ဆေး {] |'လ • d] E^&^ဆ^ လ } ဒံ့^ ပီပီ
 d ဆံ့ | c@ } àဒံ့^ } ဆ^ & လ | @ဆံ့EV@ { [, '၊ @ဆံ့
 , ဒံ့ & { ^ d ဆေး {] |'လ • d] , ဆံ့ ဆံ့ ဆံ့
 ဆံ့ [~ } c [~ ငါ E^O [] { c^ } ဆံ့^ [] àဒံ့^ } ဆံ့^ @
 & လ | @ဆံ့ ဆေး @ @ ပီပီ ~ } |'•• @ | ^ ဒံ့ ဆေး
 ^ { '၊ * '၊ } & • ဆံ့ ဆံ့ } E




On-Off Switch

ပီဆံ့ @ d ဆံ့ | [] ဆေး | 'လ • '၊ ဆံ့ E] ဆံ့ @
 dဆံ့ • { ဒံ့ • ဒံ့ } ဒံ့] ဆံ့ [] ^ dဆံ့ ဆံ့ à ဆံ့] | @
] ဆံ့ ဒံ့ * à | ဆံ့ E • @cá[, } @ ^ } ဒံ့^ E | ^ { ငါ @
 \ ^ Eဆံ့ à , ဆံ့ - | ဆံ့ { [ငါ } d & { ^ d ဆေး {] |'လ
 • d] à ^ - | ^ ^ ငါ ဒံ့ * @ dဆံ့ | E OPS-B-0011_D



⚠ DANGER

ဝဝဝဝဝဝ | ဆံ့ ဒံ့ * @ dဆံ့ | • ^ ဆေး ဆံ့ • ^ c@] ဆံ့ ဒံ့ * à | ဆံ့ ဆံ့ à | • ^ c
 @ dဆံ့ | dဆံ့ • { ဒံ့ • ဒံ့ } ဒံ့] ဆံ့ ဒံ့ * ^ ဆံ့ E à ဒံ့^ } ဆံ့^ @ ပီပီ • d] @
 ^ } ဒံ့^ E | ^ { ငါ @ \ ^ Eဆံ့ à , ဆံ့ - | ဆံ့ { [ငါ } ဒံ့ *] ဆံ့ d • d] E ပီဆံ့ @
 dဆံ့ | • @ | 'လ • d] ဒံ့ d ဆေး [,] ဆံ့ ^ []] ဆံ့ ဒံ့ * ^ ဆံ့ d] | 'လ • c@ dဆံ့ |
 - { []] ဒံ့ * E ပီပီ 'လ • à ဒံ့ { ~ } cဆေး | ဆံ့ | @ဆံ့ { [ငါ } ဒံ့ * [] , @ ^ @ ^ } ဒံ့^
 à | ' } } ဒံ့ * E U | 'ဆံ့ @ V | ဆံ့ | &] d | • - { [@ dဆံ့ | • ^ ဆံ့ } | ' E ဝဝဝဝ

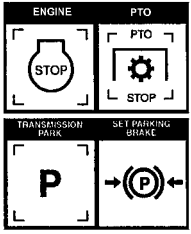

ဝ [{ U | 'ဆံ့ } ပံ့ & ငါ } H E U

CD9F5HCB

CD9F5HCB

Y @} []^|æþ* []}~ à|æ| [æ•È @æ^
 & }•æ^æþ} { | [@: | [æ ~•^•ÈÛ~ || d @ •æ^
 [- @ | [æ [&æþ } æ~ d æ|, æ | | |, ð* dæ-æ
 d]æ•ÈÖ [] [c^æ&^à @ |^* æ•]^^ à |æ æ•^cð
 ~ [^ | •æ [| { } } æþ æþ { | æ | æ | c | æ dæd | •È
 Ö, æ • •æ æ^c, @ } dæ } [| d * @ dæd | æ à
 { |, ^ | [] } ~ à|æ| [æ•ÈÖ]^æþ } ð à ~ •æ•È
 @ à [[{ ^æ } à • d | æ @ æ @ | @ } @ dæd | •
 , æ @ [à^ ææ ~ | @ | ^ æ^] [à •æ à ^ •È [| •È
 | æ^ [à • d ~ &æ } • [| æ ^ ç^æ | • @æ { æ à ð
] æ @ [~ @ { |, ^ | @æ [| à [[{ ÈW^æ ææ } æ à
 | à ~ & •]^^ à ð [@ | ç^æ | • [|]^^ à • dæ } æ ð
 @ æ^æ OPS-B-0016




Op-104



Þ^ç^æ | æ|, & @ | ^ } [| [@: |] ^ | • } • d | æ^ [] @ V | æ d | [| Q] | ^ ^ } È
 æ | ð * [~ & æ | ^ • | ç^æ • ^ | æ ~ • ð b | ^ [| à^æ @ È ç^æ



T æ^ & ^ æ æ @ æ @ % | |, T [ç^æ * X^æ | + Q T X D • æ } ð ð • æ | à ð
 • ~ & @ æ, æ æ d à^ æ | æ | ç^æ | æ æ à | ^ * æ | È Y @ } dæ } [| d * @
 Ò ~ ð { ^ } ç^æ • ^ @ V | æ d | ç^æ æ * , æ ð * | æ @ æ à { | | |, æ | [& æ
 dæ-æ | ^ * | æ } • È ç^æ

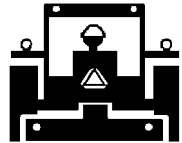

Û^à ~ & •]^^ à à^ ç^æ | } ð * [| æ] | ð * @ à | æ • È
 Ö • ~ | ^ @æ à [@ | æ^]^^ à æ^ æ^ [& ^ à d * ^ @ |
 , @ } [] ^ | æþ * [] } ~ à|æ| [æ•È OPS-U-0023



Op-25

Ó [{

U] ^ | æþ } Û^ææ } È È H

CD9F5HCB

CD9F5HCB

0E:0j*^ @ &000. • [000, @) 00 0^)^àÈ 00
 &000. 00^]^||0* à[, } 000 000 00000•c
 00{ •^|0^•È 000^~||^ 00 0^)^ 00 •^&|0* &000. [!
 [00! 000^)^ •^•0* à[[{ ^• [! à00^• 0 00] |
 { 000^ { 0^•0} È W^•^00^ { ^ 000^ , @)
 000000* 000^ |^ { [00* 00 •^&|0* à^000^ 00 00
 ^00^ { ^ 0^•0} 000 [0^• , @) !|^00^à 00 00
] [0^] 000 0 0000^•0* 0 000^ È



Y 00 0000* 00 d000! 000 00]|^ { ^} È { 00
 [&000^ } 00 • 0^] • 0 &00 000 00 d000! 000
 00]|^ { ^} c 000^ } [c { [0^•à [! • 000^à 000 000
 •^&|0* &000. 000^ { 0000^•à 0^•0} È 000^ |0*
 d00^] [! c 000^à à! 000^ È • 000^ c!] 0* È [! • , ^|00*
 000^] , 00]|^ { | { ^àÈ • 0^] 000^ } ^000^ 00 [&000^
 0 00^] ^&000 •^&|0 [~00 [000 È OPS-U- 0026

CAUTION 00d000^ 00] [c]|^•^&0^ |^0^|È00 à[[{ , 00 0^] à 0 • , 0* 0^ , 000 • 00 [, ^• 00^ÈP00^ [00!
]|^• []]|^|^000^ 0 0^] d [! 00 • , 0* 0* { [0^] , @) &|00^•] 00 00^ |^ { [0^•àÈT 000^ • |^ 00
]|^• []|^ 00^ } [c0 00 [• 000^] 0 à^ 000 [! &^• @à à^ 00 , 0* 0* à[[{ È

00^d000• , 00^ | &|00^• 000^ à^•^&|^ 0^ { 000^ 000^ È 000^ c!] [! , 000 0 00 &^] 0^ [~|000^àÈÈ] , ^! à^& [] 0^
 00 d000^ à^àÈ000^ à • @ c [~00 d000^ |ÈV@ d000^ | 000 000 { [, ^! 0000 • 0^] à } , à^ &000^ à à [, } •^&|^!
 0 00 d000^ à^àÈ

CAUTION 0000^] 00c [~000 []|^ 0000* •^&0^] È [! 00^ [00! •^&0^] [~000 { 00^ 000^ } [c0 []|^!
 ^] à^•• 0^ [àÈ 0^] 0000^ [! | V0^! à^00^ [! 00 0000^•• [] 00 0^ 0^ [~000 { 00^ 000^ |
 00 • 000^ &^

00 [{ U]|^ 000^ } 0^&0^ } HÈ |

CD9F5HCB

CD9F5HCB

Ó[[{

U] ^! aã } ù ^ &ã } HË î

A 5 =BH9 B5 B7 9 'G9 7 H=C B

T aš c} aš &^ Ú^&ā } | Ě

A5-BH9 B5 B7 9

A5-BH9 B5 B7 9

FY[i `Uf`A UjphYbUbWY

V@ q̄ l'çç ç, @|/|^* |ç•^çççç * •Q̄ |à à^ à[]^ ç^ àè^à [] Q̄ |• [-[]^ |çççç] ÈW^ @ dçççç |• Q̄ | { ^ç | ç à^ç | ç^, @ } |^* |ç•^çççç * ç |^* ç^à^È

Û^ç | ç @ Ò^ç çç^à T çç ç } ç & ^ç &ç } ç | ~ @ | ç • d^ &ç } • [] * |^ç ç * È Ò[]^ ç ç à ~ • ^ @ Ò çç T çç ç } ç & • @^ç | ç ç ç^à ç ç @ ^ } à [-ç ç • ^ç &ç } È

8 U]mcf'9j Yfmi, `<ci fg

QOT	ÛÒÛXÒ	ÔUTT ÔPVÙ
Ô ç^ Û@çççç ^ÈWÈ ç ç B Ûç à Û@çç	Ô ^ç^	Ô ^ç^ ç ç • d^ &ç^à ç à^çç^à { çç ç^ç &çç }
Û { } Ô ç^ Û@çç Ò[]^ ^	Ô@& ç ç à S^ à^	Q̄ • ^ à ç^ • @çç^ } à çç
Ô çç \ • @ççççç ç	Ô@& ^ àà^ { { ^ç	Û^ çç^ * { { ^ç ç àç ç^à { ç • ç^ *
Ûç [çÛ [ç ç	S^ à ççç	Q̄ ç &ç^ ^ç^ ~ } çç ç çç] ^çç çç^ } à
P^ à çç ççççç * •	Ô@& ç çç •	Vç @ } , @ } ^ç^à^È Ò [ç^ • ^ çç ç^à ç &çç ç çç • È^ ^ { çç çÛ ^ççç çç } •
S) ç^ •	Ô@&	Q̄ •] ^ççç { ç • ç^ * [àç ç ç^à \ } ç^ • È &çç^ * ç ç } ^ç^à^È
Û ç ç^à { [~ ç^ * à ç •] ç ç^à ç ç^ & ç	Ô@&	V ~ ^ ç ç ççççç ç ç ç ç ç ç ç ç ç ç ç V ~ ^ ç ç ç ççççç ç ç ç ç ç ç ç ç ç ç ç
S) ç^ { [~ } ç^ * à ç ç } ç^ ç ç ç ç [àçç^ àççç	Ô@&	Û ^ç^ à ççç ç @^ççç^ Èçç ç ~ ^ ç ç ç ççççç È
Ôç \ çççç^ Óçç { [~ } ç^ * à ç çç \ çççç^ àçç ç •] ç ç^à^ç	Ô@&	V ~ ^ ç ç ç ççççç ç ç ç ç ç ç ç ç ç ç ç V ~ ^ ç ç ç ççççç ç ç ç ç ç ç ç ç ç ç ç
Ó ç	Ô@& çççç • ç	Ô@& ç à [\ ^ } Èçç @ } ç ^* ç^à
T çç çç ç^ ç ç Ó^ç	Ô@&	Û ç ç ~ ^ à ç ç ç ç ~ ^ •] ^ççççç } • ç ç ç • ^ç &çç }
P^ à çç çççç ç S^ç^	Ô@&	ççç ç à ^* ç^à] ç ç ç ^ç { { ^ } àççç } •
Û çç çççç Ô ç^çççç çççç^ç Ó çç çççç^ ç ç à Û@çççç []^ ^	S^ à ççç	Ô ^ç^ ç ç • d^ &ç^à ç à^çç^à { çç ç^ç &çç }
Ô ç^ Û@çççç ç Ô ~ } à Û [^ ^	S^ à ççç	Ô ^ç^ ç ç • d^ &ç^à ç à^çç^à { çç ç^ç &çç }

Ô [{ T çç ç } ç & Û^ççç | È

A5-BH9B5B79

K 99? @MCF'9J9FM(\$' < CI FG

Q0T	ÙÒÙXÒ	ÔUT T ÒPVÙ
Ù[æ^ Ù] ð à ^	Š à ææ	Òç^! € @^! • [, ^\

K 99? @MCF'9J9FM)\$' < CI FG

Q0T	ÙÒÙXÒ	ÔUT T ÒPVÙ
Q Væ\ P^ àÈQ^ æ Qæ! %\$'a JWcb'Z'HyfD	Ô@æ *^	Ô@æ *^ æ! -ã•cí € Q^! • [] Èc@) ^ç^! í €€ Q^! • [^æ
Q Èã^ Pã @Ú!^••~ ^ Qæ! Ç\$'a JWcb'Z'HyfD	Ô@æ *^	Ô@æ *^ æ! -ã•cí € Q^! • [] Èc@) ^ç^! í €€ Q^! • [^æ

ACBH< @MCF'9J9FM)%\$' < CI FG

#9A ^	G9FJ=79	7CAA9BHG
P^ à æ æ Q^ æ Š^ç^	Ô@&	Qæá æ } ^^á^á
P^ àÈVæ\ Ó ^æ@!	Ô ^æ ð @& ð ^ æ^	Ô ^æ [^] æ^ Ô ^ { ^} çæ ^~ á^á
Ù^æ Vá^ V^] ^ € € ÙH Fì È ÈH Fì È Èì	T æ ÙÈÈÈÈ G G G	

M95 F @MCF'9J9FM) \$\$' < CI FG

#9A ^	G9FJ=79	7CAA9BHG
Ù] ð à ^ Ó ^æ^ P^ àÈVæ\ Q^ æ Q Væ\ P^ àÈQ^ æ Qæ! Ç\$'a JWcb'Z'HyfD	Ô@æ *^ Ô@æ *^ Ô@æ *^	
Q Èã^ PÚ Qæ! Ç\$'a JWcb'Z'HyfD	Ô@æ *^	[Ô@æ *^ , @} ð áææ^á à^ ^•dæ} ð áææ È
P^ àÈVæ\ Ó ^æ@!	Ô@æ *^	

Ó[{ T æ ç } æ & Ù^&ç } | È

A5-BH9B5B79

A5-BH9B5B79

HFCI 6 @G<CCHB;

ÙŸT ÛVUT Û	ÔœWÙÒ	ÛÒT ÒÖŸ
<p>JYfUjcb</p> <p>GÈŠ [•^ Ó œ</p> <p>GÈÖ ˆœ! œ•^ { à Wj àœœ &^</p>	<p>FÈ Š [•^ Ó œ</p> <p>GÈÖ ˆœ! œ•^ { à Wj àœœ &^</p>	<p>FÈ Ô@& œ à œ œ à œ @} d ^& { { ^} à^ à d ~ ^ • ^ & • È GÈÖ @& : àœ œ ^ à œ ^ • È à & [& ˆœ! • @œ È Û ^ œ ^ ã } ^ ^ à ^ à È GÈÖ @& : , à È [] ^ È ^ & È ^ } œ * ^ à ã œ & ˆœ! œ • ^ { à </p>
<p>Ack Yf'k J''bch`jzh</p>	<p>FÈP^ àÈœ ˆ œ Š ,</p>	<p>FÈ Ô@& œ à ^ -œ P^ à œ ˆ œ</p>
<p>Ack Yf'k J''bchighUfh cf'fi b</p>	<p>FÈÓ [, } ~ • ^</p> <p>GÈÓ œ çœœ ^ • & [• ^ à HÈŠ , [ã ^ ç ^ I ÈŠ ã ^ ^ œ</p> <p>Í ÈÒ ^ & d [] œ • [^ } [ã -œ c</p>	<p>GÈ Vã @} [^] œ ^ -œ * • œ à @ • ^ • HÈ Ô@&] ^ • • ^ ã ã ^ ÈŠ ã ^] ^ • • ^ ã Ó [] d [Xœœ ^ • @ ~ à à ^ œ ^ œ c G € Û Û Û Û Í È Q •] ^ & È ^] œ [^] œ ^ & ã à ^ </p>

A5-BH9B5B79

Ó [{ T œœ œ } œ & Û ^ & œ } | È

A5-BH9B5B79

HF CI 6 @G<CCHB; 77CBHB1 98L

ÜYT ÚVUT Ù	ÔœMÙÒ	ÜÒT ÒÖY
Aclcf`fi bg`Vi h k J``bchW IÈ	FÈÓ^ œ GÈV^}•q}^	FÈ Q• ^&cà^ œ ã á] ~ ^•ÈÜ^ æ& à^ œ ã á ^ ææ }^^á^áÈ GÈ Qãb•cœ}•q}^ }~c+æ, æ@! , æ@!ã +•@, ã@q [~*~æ^È
Ack Yf`hi fbg`g`ck`m cf`bchiU^È	FÈÔ[}œ q ã œ ^•d&œ*• [{ [ç^ { ^} cã çæç^ à[á^È GÈÜ~ &œ } ã ^• [à•d~&œá HÈS[, [ã ^ç^	FÈ Ü^ { [ç^ æ*^ } ~c[] •æ^ [~ æ*^ çæç^ à[& ÈÜ^ { [ç^ •] ã *Èæ á ~•^ }^^á^ } [•^ çã^ * ã q] ~ • [+[{ à[& ÈÔ@& à[& ã á •] [+ & } œ q æ• ã á •&æ&@•È Ô^æ] æœ [^ æ& ã•&æ&@áÈ GÈ Ô@& + \ã \^• [[à•d~&œ } ã •~&œ } @•^È HÈ Ô@& P^áÈœ \ ç^ ã á -ãÈ
Di a d`k J``bchik cf_	FÈÒœ&••q^, ^æ [] ã œ } æ] æœ	FÈ Öã æ•^ { à ^ ã á ^ æÈ
Aclcf`k J``bchik cf_	FÈÒœ&••q^, ^æ [] ã œ } æ] æœ	FÈ Öã æ•^ { à ^ ã á ^ æÈ





P UVÒKQ+[, { ^œ |ã æææ|È& &]|^••|^ ã á +[, ç|^ { ^ +| æ |••|^&œ á @á:æ |æ] | à|^ { •È
Qc@•[|^œ } q ^ [|] | à|^ { &æ } [cà^ +~} á ã cœ •^&œ } È&æ | c@ V^&@ ææ Ù^|ç&^ |^| |^•^} œæ^ æc@
} { à|^ •@, } [] c@ +[] c& ç^| [~cœ { ã ~æÈ

A5-BH9B5B79





Ó[{ T æ œ } ã & Ù^&œ } | È

A5-BH9 B5 B7 9

A5-BH9 B5 B7 9

Torque for Standard Fasteners													
Nominal Dia. (in.)	threads per inch	 Grade 2			 Grade 5			 Grade 8			 Grade 9		
		Tightening Torque			Tightening Torque			Tightening Torque			Tightening Torque		
		Lubed	Dry Plated	Dry plain	Lubed	Dry Plated	Dry plain	Lubed	Dry Plated	Dry plain	Lubed	Dry Plated	Dry plain
		K = 0.15	K = 0.17	K = 0.20	K = 0.15	K = 0.17	K = 0.20	K = 0.15	K = 0.17	K = 0.20	K = 0.15	K = 0.17	K = 0.20
Unified Coarse Thread Series													
1/4	20	49 in-lbs	59 in-lbs	66 in-lbs	76 in-lbs	86 in-lbs	101 in-lbs	107 in-lbs	122 in-lbs	143 in-lbs	126 in-lbs	143 in-lbs	168 in-lbs
5/16	18	101	122	135	157	178	209	221	251	295	259	294	346
3/8	16	15 ft-lbs	18 ft-lbs	20 ft-lbs	23 ft-lbs	26 ft-lbs	31 ft-lbs	33 ft-lbs	37 ft-lbs	44 ft-lbs	39 ft-lbs	43 ft-lbs	51 ft-lbs
7/16	14	24	29	32	37	42	49	52	59	70	61	70	82
1/2	13	37	44	49	57	64	75	80	90	106	94	106	125
9/16	12	53	63	70	82	92	109	115	130	154	135	153	180
5/8	11	73	87	97	113	128	150	159	180	212	186	211	248
3/4	10	129	155	172	200	227	267	282	320	376	331	375	441
7/8	9	125	150	167	322	365	429	455	515	606	533	604	710
1	8	187	225	250	483	547	644	681	772	909	799	905	1065
1 1/8	7	266	319	354	596	675	794	836	966	1132	988	1132	1333
1 1/4	7	375	450	500	840	952	1121	1163	1345	1545	1357	1545	1810
1 1/2	6	652	783	869	1462	1657	1950	2011	2311	2688	2311	2688	3162
Fine Thread Series													
1/4	28	56 in-lbs	68 in-lbs	75 in-lbs	87 in-lbs	99 in-lbs	116 in-lbs	123 in-lbs	139 in-lbs	164 in-lbs	144 in-lbs	163 in-lbs	192 in-lbs
5/16	24	112	135	150	174	197	231	245	278	327	287	325	383
3/8	24	17 ft-lbs	20 ft-lbs	23 ft-lbs	26 ft-lbs	30 ft-lbs	35 ft-lbs	37 ft-lbs	42 ft-lbs	49 ft-lbs	43 ft-lbs	49 ft-lbs	58 ft-lbs
7/16	20	27	32	36	41	47	55	58	66	78	68	78	91
1/2	20	41	49	55	64	72	85	90	102	120	105	120	141
9/16	18	59	71	78	91	103	121	128	146	171	151	171	201
5/8	18	82	99	110	127	144	170	180	204	240	211	239	281
3/4	16	144	173	192	223	253	297	315	357	420	369	418	492
7/8	14	138	165	184	365	403	474	502	568	669	588	666	784
1	14	210	252	280	542	614	722	765	867	1020	896	1016	1195
1 1/8	12	298	357	397	668	757	890	1083	1227	1444	1269	1439	1693
1 1/4	12	415	498	553	930	1055	1241	1509	1710	2012	1768	2004	2358
1 1/2	12	734	880	978	1645	1865	2194	2668	3024	3557	3127	3544	4169

Torque values for 1/4 and 5/16-in series are in inch-pounds. All other torque values are in foot-pounds. K = 0.15 for "lubricated" conditions
K = 0.17 for zinc plated and dry conditions
K = 0.20 for plain and dry conditions
D = Nominal Diameter
F = Clamp Load
Torque values calculated from formula T=KDF, where

Torque-Tension Relationship for Metric Fasteners													
Nominal Dia. (mm)	Pitch	 Class 4.6			 Class 8.8			 Class 10.9			 Class 12.9		
		Tightening Torque			Tightening Torque			Tightening Torque			Tightening Torque		
		Lubed	Dry Plated	Dry plain	Lubed	Dry Plated	Dry plain	Lubed	Dry Plated	Dry plain	Lubed	Dry plain	
		K = 0.15	K = 0.17	K = 0.20	K = 0.15	K = 0.17	K = 0.20	K = 0.15	K = 0.17	K = 0.20	K = 0.15	K = 0.20	
3	0.5	0.28	0.32	0.38	0.73	0.82	0.97	1.0	1.2	1.4	1.2	1.8	
3.5	0.6	0.44	0.50	0.59	1.1	1.3	1.5	1.6	1.9	2.2	1.9	2.5	
4	0.7	0.66	0.74	0.87	1.7	1.9	2.3	2.4	2.7	3.2	2.8	3.8	
5	0.8	1.3	1.5	1.8	3.4	3.9	4.5	4.9	5.5	6.5	5.7	7.6	
6	1	2.3	2.6	3.0	5.8	6.6	7.7	8.3	9.4	11	9.7	13	
6	1.25	2.1	2.3	2.7	5.3	6.0	7.0	7.6	8.6	10	8.8	12	
7	1	3.8	4.3	5.0	9.7	11	13	14	16	19	16	22	
8	1	5.9	6.6	7.8	15	17	20	22	24	29	25	34	
8	1.25	5.5	6.2	7.3	14	16	19	20	23	27	24	31	
10	1.25	11	13	15	29	33	39	42	48	56	49	66	
10	1.5	11	12	14	28	32	37	40	45	53	47	62	
12	1.25	21	23	28	53	60	71	76	86	101	89	119	
12	1.5	20	22	26	51	58	68	73	82	97	85	113	
12	1.75	19	21	25	49	55	65	70	79	93	81	108	
14	1.25	26	29	34	66	75	89	95	108	127	111	148	
14	1.5	28	32	37	72	82	96	103	117	138	121	161	
14	2	30	34	40	78	88	104	111	126	148	130	173	
16	1.5	50	57	67	129	146	171	184	208	245	215	287	
16	2	47	53	62	121	137	161	173	196	230	202	269	
18	1.5	73	82	97	187	212	249	268	303	357	313	417	
18	2.5	65	73	86	167	189	222	239	270	318	279	372	
20	1.5	101	115	135	270	306	360	374	424	498	437	583	
20	2.5	91	104	122	238	267	314	337	382	449	394	525	

Clamp load calculated as 75% of the proof load for specified bolts. K = 0.15 for "lubricated" conditions
K = 0.17 for zinc plated, dry conditions
K = 0.20 for plain and dry conditions
D = Nominal Diameter
F = Clamp Load
All torque values are listed in foot-pounds
Torque values calculated from formula T=KDF, where

011

T 33 3) 3 & 3^8 3 } | 3

A5-BH9B5B79

@ 6F75HCBF97CAA9B85HCBG

8 YgW]d]h]cb	5 dd`]WU]cb	; YbYfU`GdYW]Z]WU]cb	FYWta YbXYX AcV]`@ Vf]WUbh
Viæd P^â!æ æ	Ü^•^!ç[ä	RÖË€Ö T ØT FFHÍ Ê FFI F ØPT GÓFHI Ö ØPGEFD	T[àã~ ä G
T[, ^! P^â!æ æ Ö[â V{] ^!æ ^• €»Ø ÜæcW]	Ü^•^!ç[ä	ØU Í Ø æY ^æË, V{]	T[àã ÖVÓ FÍ T
P[{ æ V{] ^!æ ^• F€»Ø ÜæcW]		RÖË€Ö T ØT FFHÍ Ê FFI F ØP T GÓFHI Ö ØPGEFD	T[àã~ ä G
P[{ æ V{] ^!æ ^• FÍ »Ø ÜæcW]		ØU Í Ø æY ^æ	T[àã ÖVÓ G
Pã @U] ^!æ * V{] É Öâ[ç^ J€»Ø		ØU F€€ Ø æY ^æ	T[àã ÖVÓ FÍ T
Øæ Ü^æ Ö^æà[ç	Ö!^æ^	ÜØÜ Ü^} @æ Öçd^ { ^ Ü!^••^!^ Ö^æ S^ à^	T[àã ÜPÖ Í Y Ê€ T[àã F Ü^} @æ Ö^æ
Ö^ æ! Ü@ecB Ö! [~ } á Ü[^! Ü@ecØæD	Ö!^æ^ Ö~ }	Šæ { Ö! [] ^ç Öçd^ { ^ Ü!^••^!^ PŠÖØU HGE	T[àã * ^æ^ ÖT Æ
Ö! ð^ Ü@ecÖ [~] ^! Øæ æ á Ü[æ^ D	Ö!^æ^ Ö~ }	Šæ { Ö! [] ^ç Öçd^ { ^ Ü!^••^!^ PŠÖØU HGE	T[àã * ^æ^ ÖT Æ
Ö! ð^ Ü@ecY [\ ^ É Wß ð cB Üç à Ü@ec	Ö!^æ^ Ö~ }	Šæ { Ö! [] ^ç Öçd^ { ^ Ü!^••^!^ PŠÖØU HGE	T[àã * ^æ^ ÖT Æ
Ö! [{ Ü ð^ Ö! [{ Ö ð^ á^! Ü ð^ ç Ü[æ^ B Øæ Ö! [{ D	Ö!^æ^ Ö~ }	Šæ { Ö! [] ^ç Öçd^ { ^] ^••^!^ PŠÖØU HGE	T[àã * ^æ^ ÖT Æ
Ö^ & Ö! [{ Ü ð^ cB Ö^ & Üç] Öab • ç ^ } c Ü[æ^ B ØæD	Ö!^æ^ Ö~ }	Šæ { Ö! [] ^ç Öçd^ { ^ Ü!^••^!^ PŠÖØU HGE	T[àã * ^æ^ ÖT Æ
Ö^ & Ü] ð^ á^ Ü[æ^ D	Ö!^æ^ Ö~ }	Vá^! Ü] ð^ á^ S^ à! æç c] æç } { à^ € €€€€	T[àã @ÜPÖ GGE

A5-BH9B5B79


Ö! [{ T æ ç } æ & Ü^æç } | Ê

A5-BH9B5 B7 9

A5-BH9B5 B7 9

89H5=@8`A5-BH9B5 B7 9


F9D@7-B; ` <= <'DF 9GG F9' <M8F5I @7 :=@9F'9@A9BH

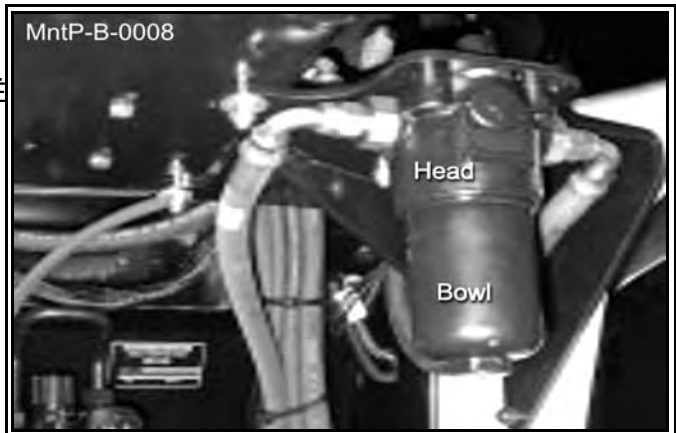

À)•~!^ •••{ @e à^} •@c à[, } àá à^É
]!^•~!á^áÉŠ &æ Pá @Ú!^•~!^ Øá @~•á*É
 Ó}~á{ @e @ ^{^}c @e á àá~c d à
 á•æ^á { æ&• @ ^{^}c}Ø [] @ áá
 { [á] æÉØæ]^KXHE FÉÉ Ç [!á á^ FÉÉ
 PÖEJ { [á^D Š &æ @ àá{ [- @ Pá @
 Ú!^•~!^ Ó, |É^á* @ á}![]æ •}æ}^!
 , ^} &Ø!Éæ&cæ á c!}á* á æ&~}^!& &, á^
 ! [æ]ÉØ [!á* æ @ àá{ [- @ à, |D!^ [ç^
 @ à, |~{ @ @æÉV@ á•c&~}^! [æ]•
 , á•^^{ æ @ @ [Éá*]æ•^ @ •^æá* ^æ É
 U) & @ [Éá* @e &^æ^á @ •^æá* ^æ @
 à, |•@~!á•}á ^^^ÉVæá* &æ}[çd á!] @ à, |É~á @^ [çá* @ à, |~{ @ @æÉY ØPØÖK
 à, |, á à~||[-[áÚ~! @ [á~{ @ à, |á d æ&}æ^!ÉØ [á•@~!á^ &]•æ^!á &}æ áá
 á^ d @ ~, áá&á} @~* @ @ ^{^}cá [-^æ^ÉØ^æ @ á•æ^ [- @ à, |á%ááá]!^•^}É
 Ú^ [ç^ @ [!á ^{^}c~{ @ áá @æ á^]!á* , ááá [æ] { [á]ÉÖá [•^ [- @ ~•^á ^{^}c
]![]^!ÉÚ^ [ç^ @ }^, ^{^}c~{ @]æ ááá* ÉWá* ^~! á*^!Éáæ áá]á!æ @ [Éá* á @
 d] [- @ }^, ^{^}cÉ Øæ @ }^, ^{^}cá d áá} @ { [~}á* à•• , áá @ @æL æ•!^ @e
 @ ^{^}cá ~||^•æ^á [] @ à••ÉØ^æ áá á•] &c @ [Éá* @e á áá^ á á @ à, |É~!á!æ , á@
 [áÉVá* æ& &, á^! [æ]É• &^, @ à, |áæ á á d @ @æÉ}•!á* @e @ à, |@e } [cá^] & [••
 @^æ^á á d @ @æÉØ}á^ Á Á @} @ à, |á d @ @æÉ•á* @ •}æ}^! , ^} &Ø!Éæ&Ø~@
 ! [æ] [- @ à, |, á á&{ ^ á @! [] & @ [Éá* ^}æ^ @ •^æá* ^æ ÉU) & @ à, | @e àá{ ^á
 [~^æá É → @ à, | á FØ c!}ÉØ^}•!^• @e @ [Éá* á •æ^á]![]^! , ááá @ •^æá* ^æ É
 Ø^ {^}c&æ^*^ [çáá!á^æ•^ á! á }], &{]^ÉÚæc @ { æ&^ á á á•] &c @ áá! áá&@á á*
 @e @!á } [á!áá* ~{ @ áá áá^ á!ÉV@ á á•c d á á}^ áá € @~!• [-]!áæ}É @} ^áá
 çÉ @~!•D! , @} ááæ^á á!^•d áá} á ááá!É

; F95G-B; `7I HH9F`G<5: H: @=@ACK9FG

Š &æ *!^æ^: ^! \ • [] ^æ@^}á [- &^ ^! • @eØÉ
 @•^ æ^ [[æ^á [] @^ á^æá* &ç^!É P[!{ æ
 &}ááá}• !^~á^ []^ [! ç []~{ }• á ^æ@
 á^æá* É•á* Šæ { ÉØ []^Ø Øc^ ^ Ú!^•~!
 !^æ^ &}~á{ á d PŠÓØWU HGE•]^ááá}•É
 V@ á d á á}^ , ááá ááá *!^æ^ *~} ááá
 [! æ , \ ci f]bhffj Ug"75I H-CB. Cj Yf [fYug]b[
 a UniWU gYdfYa Uhi fYgYU`ZU]i fY"

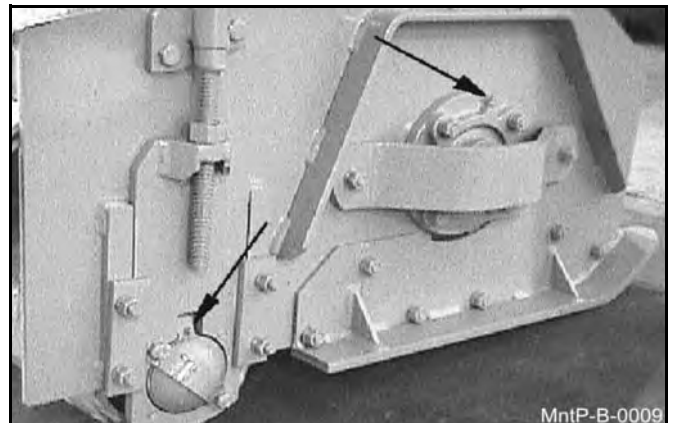

Ó[{ T áá } á &^ Ú^á } !ÉG

A5-BH9 B5 B7 9

A5-BH9 B5 B7 9

; F95 G-B; `DC-BHG`CB`6 CCA`5 B8`D=JCH

Š[&æ *|^æ^ :^|\ • [] á^&] ð[c••^ { à^É[] @
 á^& ^) á [~•^&] áæ` à[[{ Éæ { æð^& } áæ`
 à[[{ ð ð ð ð á æ•, ð^|^) á [~{ æ à[[{ ÉQð&c
 Šæð { É[] |^ç Oð^ { ^ Ú|^•~|^*|^æ^
 & } |{ ð * ð ÞŠÖÇÉU HÇ •] ^&ææ } • ~ } ð
 |^æ^ á^ ð • ð] |{ d` á^ +[{ ^) á•É



897?`GHCD`58>I GHA9BH

U) à[[{ +æÉ[[•^) || & ð * } ~ÉV`) æð•d ^) c
 à[|c ð Éæ á`) á^& & | ð á^ | `c ð ~|| ^ç } • ð } É
 Oæð • c à[|c `c` } ð @ @ æð • c d` & @ • @ à[[{ É
 æ á ç @ } || & } ~É BCH9. 6 c`h g\ ci `X` bch\] h
 Vcca `VYZ`fY`Wn]bXYf`fYUW Yg`Z ``fUj Y"



; F95 G-B; `GD-B8 @

Š[&æ *|^æ^ -æð * [] ð • æ^ [~á^& @` • ð * É
 Qð&c Vá^ | Ú ð á^ Š` à`ææ`É] æc } { á^
 € | | € € € € ð ð •] ð á^ @` • ð * É ç |, æ @ |` à`ææ`c
 ~ } ð |` à`ææ`c , ^^) • [`c [~d] •] ð á^ • ^æÉ
 Š` à`ææ` •] ð á^ , ^^ | [| ^ç | ^ | € @` | • [~ • ^É




Ó[[T æ ç } æ & Ú^&ç } | È |

A5-BH9B5B79

A5-BH9B5B79


; F95G-B; 6CCA7M@B89FGLD-JCHDC-BHG

Š &æ @ : ^\ [] @ à ˆ ˆ ^) à æ * [-& |ð à^! æ à
 [] | [à ^) à æ * É Q & c Š æ { É [{] | ^ ¢ Ó d ^ { ^
 Ú | ^ . . ^ | ^ * | ^ æ ^ & } -á { á * ¢ P S Ó É Ú U H G E
 •] ^ & á æ æ } • ~ } á * | ^ æ ^ à ^ * á • ¢] | [d ˆ à ^ - [{
 ^) à • É V @ [] | [& à ˆ | ^ á ¢ à ˆ ˆ • ^ á [] @ { æ
 à [[{ & |ð à^! É • ^ & } á æ à [[{ & |ð à^! É á &
] á [É æ á • , á | & |ð à^! • á æ [| æ | @ ˆ |
 á ¢ | ¢ æ É

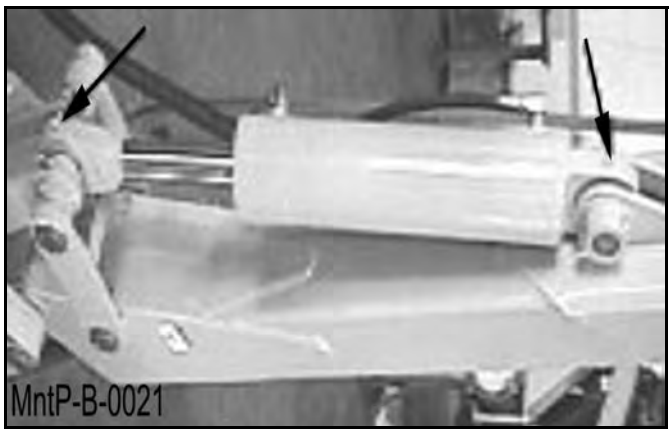

65 @J5 @9G

V @ à æ | ¢ æ ^ æ @ @ á | æ | æ | ^ • ^ | ¢ [á { æ } ^ á
 ¢ à ^ & [• ^ á á | á * & | æ { æ ¢ } æ & [| | ^] æ
] | [& à ˆ | ^ • É H < 9 ˆ 6 5 @ @ J 5 @ 9 G A I G H ˆ 6 9 ˆ C D 9 B
 fl UbX'Y dU'U'Y'k]h 'j Uj Y'L'K < 9 B 'H F 5 7 H C F ˆ G
 F 9 ! G H 5 F H 9 8 ˆ C F ˆ D I A D ˆ G 7 C I ˆ D @ 8 ˆ H C
 A C H C F ˆ C F ˆ D ˆ H C ˆ ˆ æ | ^ ¢ á [• [, á | ^ • | ¢ á
 & { [] [^] c æ | ^ Á

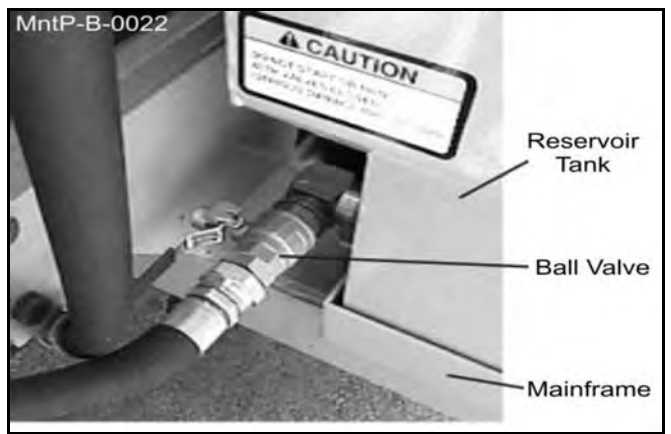

Ó [{ T æ ¢ } æ & Ú ^ & á } | É ĩ

A5-BH9B5B79

A5-BH9B5B79

FCH5FM?B= 9`F9D@79A9BH

- FÈ Ó·~!^ ^~ @^ææ{]|^ { ææ@*·^c[~)^, \} ß^· ÷!|^|æ^ { ^} ð
- GÈ Ü^ { [ç^ \} ß^· æ à ð·] ^&c@|^· ÷!| àæ æ^É@ [, ææ@÷!| &ææ· ð @ àã \ ð-æ] |ææ|^Dæ [~ } à @ @|^·É
- HÈ Š`à^ c@^ææ· ð@æ æ^ã^ã^ÉQ·æ à [|@ @ [~* @) ð æ à àã \ ÷! { à [æ { ·æ^ [~àã \ ð|ææ^ àæÉ Q·æ } ^, ·^| - ð | & ð * } ~ º æ à ð | ~ ^ @ { ð | €€ - ð | à·É
- IÈ V@ \} ß^··@|^·, ð* ÷^^| ð ææ· [| à·@&· ÷! { ð | ææ, @ } ·dã ð* [àè&ºÉ

WARNING K <9B'7I HHB; <95JM6FI G<Z?B= 9`6C@HG<CI @ '69`BGD97H98`<CI F @M5B8 F9HCFEI 98`HC`%\$+\$'8FMCF', \$\$'C=@8': H' @G"

F9D@79A9BH'C: `FCH5FM8-G?# @89`65F

CAUTION : U]i fY'hc`Z`ck`h`Y`Z`ck]b[`k`Ufb]b[g`UbX`]bgf]i W]cbg`a`UnifYgi`h]b`gYf]ci`g]b`f`fmic`XUa`U`Y`hc`h`Y`Yei`jda`Ybhc`f`dfcd`Yf]m`

- FÈ V@ à [|@ @æææ@ @ @ àã \ ð @ @ ·] ð à ^ { ~·cà^ *!ææ^ | ÈV@·^ | ð ð & @ à [|@ æ^ ð à^ ð | ~ ^ à ð GÈ à | ^ [| F | | [ð à - ð | à·É
- GÈ Qe@^ææ [| & ð * æ^) c { æ à^ æ] | ð à ð @^ææ· [~æ { [~ } æ* à [|@ à^ ÷! ^ @^ æ^ ð ·æ|^àÉ
- HÈ 8]g`g`a`i`ghVY]bgdYWHX`XU]miZ`f` \ U]f`]bY`WUW`g`VYk`YYb`gd]bX`Y`a`ci`bh]b[`Vc`lg`cf`U`ci`bX`h`Y`_b]Z`Y`a`ci`bh]b[`Vc`lg`h`H`YgY`WUW`g]bX]WUW`a`YfU`ZU]i`i`Y`WU`gYX`VmigY]`YfY`UVi`gY`-ZWUW`g`U`f`dfYgYbh]h`Y`X]g`_a`i`ghVY`fYd`UWY"
- IÈ Q·]^&c @ @ àã \ { [~ } æ* à [|@ àææ· , @ } & @ & ð * æ æ @ ^ ·· [~ \ } ð { [~ } æ* à [|@ È Qæ àã \ { [~ } æ* à [|cã [| ·^Éæ { ~·cà^ !^ { [ç^ãÉc@^ææ· &^æ^ãÉ÷!· @c@^ææ [| & ð * æ^) cæ] | ð àÉæ à æ @^)^ à ð] | | ^ | ð | ~ ^ çæ^ ^É
- ÍÈ Qæ } ð { [~ } æ* à [|cã [| ·^Éc@·^ | - [| & ð * } ~ c { ~·cà^ !^ |ææ^ à æ ææ^c | !^ææ æ } ÈŠ`à |ææ c@^ææ· ð@æ æ^ã^ã^ÉQ·æ à [|@ @ [~* @) ð æ à àã \ ð|ææ^ àæ ÷! { à [æ { ·æ^ÉQ·æ } ^ | - [| & ð * } ~ º æ à ð | ~ ^ @ { ð | €€ - ð | à·É

Ó [{ T æ æ } æ & ð ^ æ } | È J

A5-BH9B5B79

6`UXYD]bg`UbX`8!F]b[`bgdYW]cb

Óæá Úá • æá ÖËá • áæí ÷, ^æ [ðæ æ^ æ ÷ ||, •K


DANGER

Q.] ^&c@ Óæá] á • æá ÖËá • áæí ÷ [÷] [÷ , ^æÉæ^ • ^ @ & ÷] á • æá á] æá æá] [] ^ | •] ! ^æÉÜÓÚÓÓ ÓÓÓÓ Úá • æá ÖËá • Q T ÖÖÖ/ÖÖÖ ã-@ ^ @æ^K

- ~ Xáæ^ &æí • []
- ~ QæÚá [] ÖËá • @ çáæ^ , [] æ^æÉ!
- ~ QæÚá [] ÖËá • @ * [^ • [] &] ^á æ^æ

Qæí ^ ð] ^] æá æ } [{ æ^ , []] á • [] ÖËá • { æ^ æá ð æææ d [] @æ-æí ^ æá ^á &á } [~@ à [\ ^] æc , @æ@ æ ææ^ • ^á á ~ à [áá á ð] ^ [] áææÉ

Qæ æ^ ^] æá @] á • æá ÖËá • , @] ^ç^ ^ç&^ • ç^ , ^æ á } [æááÉ

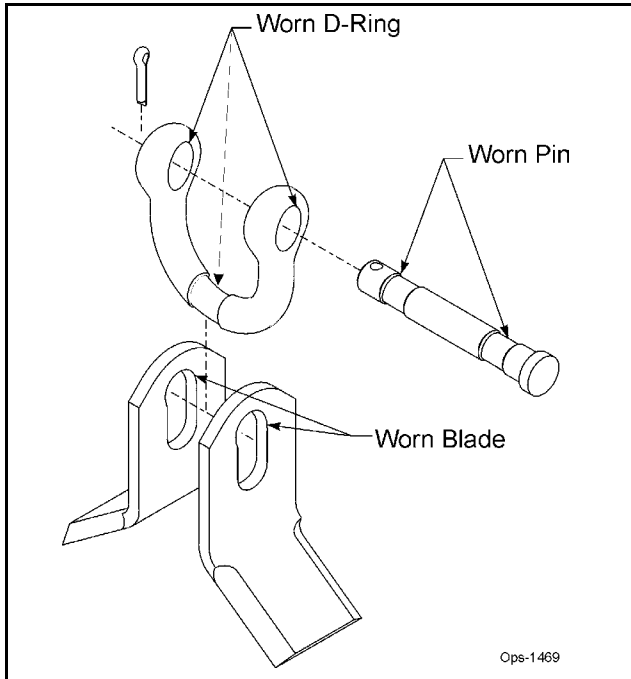

Important

Q@ & ÷] á • æá à [\ ^] à ^ &] ææc , æ@ @] æá àæá • É^ { [ç^ @] á • æá ^ç^ • @ æá @æá • @æá ÖËá • [@æ@ & ÷] á • æá [] [• æá • æá [~@ ÖËá • ÉV@ , á] ! ^ç^] c@] ^ç^ • ^ç [~àæá • ÷ [{ • , á * á * àæí æá @æá • @ & ÷] á É OPS-U-0045

A5-BH9B5B79

Ó [{ T æá } æá Ú^á } | Éç

A5-BH9 B5 B7 9


A5-BH9 B5 B7 9

: `Uj` 5l Y6 `UXYg`-bgdYWjcb

⚠ DANGER

Q•]^&c @ Qj&^• a&^i f|& }|{ & , ^&E Ü0ÚS000 0EŠ ÓŠ000Ú {} @ &^i&!
 Q T 0000/0ŠY ã-ã^ à|&^• @&^K

- ~ Ó& { ^ à^} c|: à^f|{ ^à f|{ & [|ã ð &• @&^É|!
- ~ Uç&• @&^ , ^& ð• &^ @ à|&^ à|c@|^É|!
- ~ 0&^ &^• &^ ç&^|É|!
- ~ Ó^^] * [~ *^• ð @ à|&^• • !-&^ &^]|^•^} c|!
- ~ Ó [~ *^• [| &@] ^à &^ ð @ &^ * ^à*^ &^ |&^*^! @&^ FD-Ú { { É|!
- ~ V@ { &^i& } @|^&^ * ^à*^ @ à^^ , [|} &^ &^ à { [|^ @&^ FD-Ú { { D

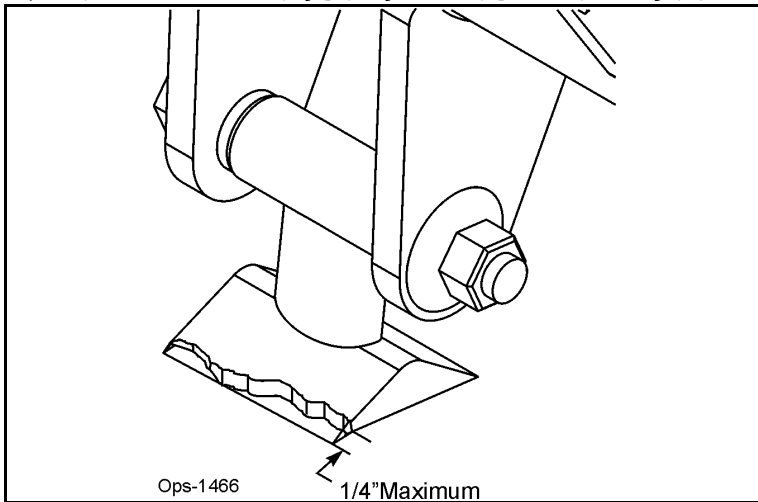

0&^|^ d|^|^|&^ , [|} [| à&^ &^à à|&^• { &^|^&^ d &^&^ d[] @&^ &^|^ [~@ à|&^• &^ à^&^&^] [~@ à|^|^] &^, &^d^ (^) à|^• f|^& , @&@ &^ &^•••^i&^• à|^&^ ð b|^ [| à^&^É

0&^ &^|^|^|&^ à|&^• ð •^•

- ~ Qj&^• @&^&^ à&^ &^à { &^ ð à&^&^••^ç|^••^iç&^ [| &^••^ÉQ[] ^ à|&^• ã , [|} [| à&^ &^à [@|^ à|&^• [] @•&^ •• @&^, ð @&^ à^^) •• à^&^&^ à d @•&^ ••^ç|^••^iç&^ [| &^••^É
- ~ V@ Qj&^• 0&^ [| d|^|^|^] • &^•] ^^à• ^ç&^&^à ð * 0000 ÚÚT &^ à ã à^} &^ &^|^ à&^&^ &^à &^@ &^&^|^É Ó&^|^|^ &^• ð à|&^• , ^& @à^ç ^^) ~•^à à|&^• , &@||•• [~{ &^i&^ f|{ * [~ *^• [| , ^& &^ {] &^à d }^ , à|&^• &^ &^•••^ç|^••^iç&^} &^ à à&^ &^ d @ Qj&^• 0&^ [| d|^|^|^] &^•|^|^|&^ à|&^• &^ &^ {]|^••^É

Important

W•^ [|]^ *^•] ~ ð•^ Ç&^ [Qã•d&^|^|^|&^ (^) c|&^&^•É à|&^• à|^ &^ à &^••^ÉU@|^ à|&^• &^ à à|^ { &^ } [c { ^^c @|^ ~ ð•|^|^] • [~ Ç&^ [Qã•d&^ &^ à &^• à|^* [|]^&^} |^•|^|^] ð ð &^&^ ð &^ à à|^* @ [,] ~ c-| { ~ } à|^ @ { [,]^É

⚠ CAUTION

È^ç|^ &^ {] c d • @] ^ } à|&^•É OPS-U-0042

Ó [{ T &^ &^ } &^ ð &^ } | ÉCG

A5-BH9B5 B7 9

A5-BH9B5 B7 9

) \$!': @=@?B= 9'6 @89'F9D@79A9BH

FE Q\}k^• k^ aak k^a [| àaã| , []Éc@^ , ã}^^a d à^!^|k^a k k^ÉÜ^|kãq* k•q*|^ \}ã &k kã•^•^ç^!^ \}ã &k kã•^•^ç^!^ çã|kã} kã [|••k^ aak k^ d @ { [, ^!ÉV@ \}ã •@~|ã }|cà^ , ^|à^á [] +| k^!^k []É

GE Q k•|^|k^ @ @ \}ã à|@ , @} |^|kãq* @ @ \}k^•ÉÖU ßUV ÜÖWÜÒ VPÒ SPÖÖ ÓÚŠVÜ UÜ ßWUÉ

HE QE^ { à|^ \}k^•Éà•@•Éà|@ kã}~@ k•@ , } ã]k^•&ã} [~@ { k~kÉ

IE Q•k@ @ [| &ã* @ç}~c [@k@ +k-k^ [~@]~cã d , kã• @ @ \}ãÉ

IE Q| | [| &k %ã F+|^~kã}çd @^k•É

IE V|^~^}~çd |É-É|à-ÉS}ã {~c , ã* +^^É

WARNING ÖU ßUV!^É•^ @ [| &ã* @ç}~ +| { [~]ã* @ @ \}k^•ÉQ @ç}~cà& { ^ [|•^É!|^~ãà|^ [| çã { | \}ã|^|k^ { ^ }c [| k^ [@!|^k []Éc@ {~c à^ aã&kãà kã|^|k^a , k@^ , }~@É

*'Í'6CCA': @=@?B= 9'F9D@79A9BH

FE Q\}k^• k^ aak k^a [| àaã| , []Éc@^ , ã}^^a d à^!^|k^a k k^ÉÜ^|kãq* k•q*|^ \}ã &k kã•^•^ç^!^ çã|kã} kã [|••k^ aak k^ d @ { [, ^!É

GE QE^ { à|^ \}k^•É&çãÉà|@ kã}~@ k•@ , } ã]k^•&ã} [~ { k~kÉ

HE Q•k@ [| &ã* @ç}~c [@k@ +k-k^ [~]~cã d , kã• @ @ \}ãÉ

IE Q| | [| &k %ã F+|^~kã}çd @^k•É

IE V|^~^}~çd HÍ ØVÈSÓUÈS}ã {~c , ã* +^^É

WARNING 8C'BCHfY!i gY'h Y'cW|b| \ YI 'bi hg'Zf'a ci bh|b| 'h Y_b|j Yg"=Zl YI 'bi hVYwta Y'ccgYzcf fYei jfYfYa cj U'Zf'_b|Z'fYd'UWwA Ybhcf'Ubrich Yf'fYugcbz'h Ymia i ghVYX|gWUfXYX'UbX fYd'UWX'k |h 'bYk 'bi hg"

?b|j Yg'gl ci `X'bchVY'k YXYX'cb'Zf'UbrifYugcb"

WARNING

<95JM8I HMGD=B8 @'5GG9A6 @M-BGH5 @@H-CB'5 B8'695F-B; ' 58>I GHA9BH

K5FB-B; °QE|^•• TWÜV à^~•^a d ã•k à^kã* &]•Éà^kã* & }^•Ékã•^•^ÉÖU ßUV~•^ k@ { ^| d ã•k |k^•Éà^kã*•É|^•^k ÉV@]k@ [~k•^ { à| { k à^ aak k^aÉ

BCH9KV@ *|^k^ :|^ kã}~••^ k^ [| k^a [] @ @ d]•k^ [~@ •] ã|^ @~•ã*ÉÓ•|^ @ •] ã|^ã k^•^ { à|^ & |!&d^É

Ó•~|^ d , ^k^^ [| @&ã} kã [@!] [| @&k^ ^~ã { ^ }c@ }^^a , @ , [|ã* [] •] ã|^ k^•^ { à|^É


Q [{ T kã } k & ß^&ã } | É

A5-BH9B5B79

A5-BH9B5B79

HK9 GD-B8 @ 5 GG9A6 @M

Ú^ @ áæ |æ à^|, f| ä^} äæä } [~] äá^] æóÉ, @^•^!çäá *É

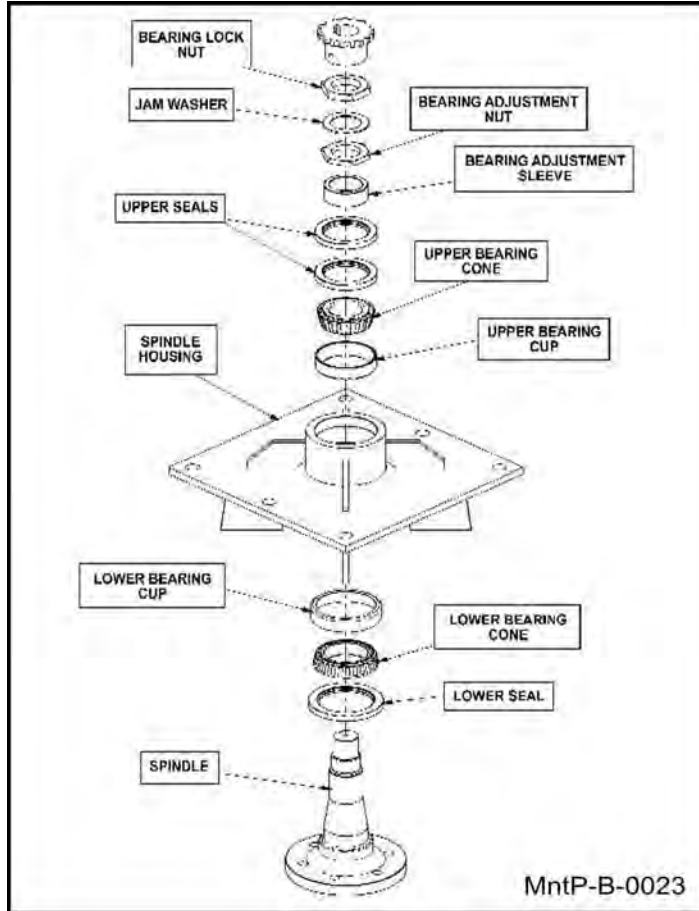

Ó[[{

T ää ç} ä & ù^&ä } | ää

A5-BH9B5B79

A5-BH9B5B79


6cca 7m]bXYf'FYa cj U'UbX'FYd'UWw Ybh=bgfi W]cbg

- FE Ò^æ @ æ^æ[-æ] ^{ } ^ à^f^ ^, ^î * @ à[[{ { [, ^ @æÈ
- GE Ø[[@ dæd|^æ, æ@ [^ ^æà^cæ^ ^à æ^ à^ ÈÛ, ^ @ à[[{ { [, ^ @æ d @ *|^ } àÈÖ^ } à @ à[[{ d @ ~|@c^ææ@æ à [, ^ @ { [, ^ @æ ^æ } @ *|^ } àÈÖ^ ÞUV æ{] c d ^ } æ @ &] à^ , æ@ @ à[[{ d @ ^æ^à [dæ } [] c [] æ } È
- HE Þ@c [-@ dæd|^æ] *æ^ @] æî * àæ^È] æ @ dæd|^æ } { ã • ð } ð @] æ] [] æ } Èæ à ^ [ç @ ^ ^ à^f^ àæ [] } } È
- IE Ø[[, @ • ^ç d & [] d [[{ ç } ^æ^ à^f^ ^ [çî * æ ^ @ àæ] æ & { [] } ^ } •
- IE Y^æ Þæc *] æ • æ à ð] ^ ^ dæ^ * [ç , @ , [] î * , æ@ @ àæ] æ @ • æ à -æî * È
- IE Þ^æ^æ æ [] ^ • ^ ^ [{ @ @ àæ] æ & ã & ã à { æ } æ ^ d \ ð * ^æ@çæ^ • ^æ } , æ@ @ dæÈ d | ^ } ð ^ [-EW] à @ T æ } æ Uç^] æ ~ } & } ã @ } ã ^ ~ ð] ^ , æ@æ ^ ^ & d [ç] @ àæ] æ çæÈ
- IE W] à à [& • Èæ • æ à [] æ ~ æ [ç] @æ @ ã c d • } [] c @ , ^ à @ [-@ à [{ • ^æ } æ à ^ [ç] ^ • ^ ^ f [{ @ &] à^ [] } } î * È
- IE Ò @ & d • ^ @æ @ &] à^ d à ^ ^] æ à ã } [c } à^] ^ • ^ à { [çî * @ &] à^] ð • à ^ æ à EV @] ð • @] à à [] ^ æ à • @] à • æ ^ f [{ @] ð à [] ^ æ ð È ç @] ð • æ @ æ à & } [ç] à È @ &] à^ { æ à ~ } à^] ^ • ^ ^ ET æ ^ • ^ @ à [{ & { [] } ^ } • æ] [] ^ • } È [] ç à æ à @æ] ^ • ^ ^ à^] à [{ @ & & æ
- JE Ò] à^ æ • ^ { à ð • æ @ æ } æ à & æ æ , @ @] ð • æ ^ ^ [ç à È] [] c @ @ àæ] æ &] à^ , æ@æ ~ æ [ç] È
- FE Þ [] [] ^ @ @ àæ] æ & } ^æ } • d @ &] à^ È Ò æ ~ [] • & ^ , @ • ^ -æî * æ à æ [] , æ ^ ^ [æ î *] ^ • ^ d à^ à [-EW] Ö d ^ ^ Ò æ È U ð } • ç à & [] Èæ à @ ç @ æ • @] à • æ à d @ • æ d] ^ ç] ç [] ^ d æ ^ @ àæ] æ [] È ç , æ • & } • [] c @ T æ] æ Þæc Ö æ Þ à ^ æ æ à ^ æ æ à ^ à Þ^ [] } æ Þ [ç & Ö ~ ð { } d È ç æ & @ } { æ à ^ ~ à à d ^ æ æ } •] à [] È
- FE Òæ à [] à • [-@ -æî * , æ@ ~ æ] • à^ { ^æ & } È
- GE Þ^ [ç @ &] à^] ð • • æî * , æ@ @ ÞÜÖ } à &] à^] ð È æ ^ • ^ @ &] à^ ã] [] ^ [] • } [] ç à Èæ à ^ [ç @ àæ^] à &] à^] ð EV @ &] à^ { æ à @æ È • ^] [] ^ [] æ * ç & } ã ^ d] æ æ à æ à^ @ &] à^ È } ^ à à È ^ ç æ • æ & ^ [{ æ [] ^ } d • æ] æ @ &] È ð à^ [{ @ { æ } È
- FHE T^æ ^ @ àæ & à^ ç ^ @ &] à^] ð @ ^ æ à ç } à @ } ^ , &] à^ @ &] à^ } * @] ð d æ {] } æ } ð • æ] È
- FE Ö • æ @ } ^ , &] à^] ð] æ æ à ð • æ à [] @ &] à^] ð • æ à ^ æ ð * æ à , æ È
- FE Þ^ [ç @ ^ æ & Èæ à ^ ð • æ @ @ àæ] æ @ • È
- FE Ò @ & @ @ àæ] æ ^ ç [] [-@ à [{ [, ^ d ^ } • ^ @ ^ ã • -æ } c [] È [] , @ { æ } æ c | ^ ^ & { { } àæ } • f [] [] ^ [] ç] ^ æ à ç] à^ ç & @ ã ^ • æ à ^ ~ à^ [] • d æ à [] d @ • ^ ç È
- FE Ò^æ @ æ^æ[-æ] ^{ } •] ð d • æî * @ dæd|^æ
- FE Ò] • [] c @ U] ^ æ] c T æ } æ f] ð • d & } ð] ^ æ à d @] [] ^ [] ^ æ }] [] & à^ È
- FJE Ø [{ @ dæd|^æ , æ@ @ • ^æ à^ cæ^ ^ à È] ^ æ @ à [{ d ^ } • ^ [] [] ^ [] ^ æ } [-@ à [{ ~ } & } È
- GE Ø [{ @ dæd|^æ , æ@ @ • ^æ à^ cæ^ ^ à È] ^ æ @ à [{ & } d [] d ~ [] ç } à æ à ^ dæ @ } ^ , &] à^ • ç] æ ^ d] ^ ^ æ ^ dæ] ^ æ [{ @ • ^ ç È
- GE Ø [{ @ dæd|^æ , æ@ @ • ^æ à^ cæ^ ^ à È [] f] • ð } • [-æ à [] ^ æ È ç [] ^ æ à [à^ ç à È @ c @ dæd|^æ] , } æ à f [] , @ • ç } d ^ [ç] ^ • ^ ^ [{ @ @ àæ] æ & & æ È } ^ @ • ^ [-@ ^ æ Èæ à ^ • [ç @ ã • È
- GE W] [] & {] ^ } [-@ ^ ~ à^] ^ æ È ^ ç] d Þ ç À f d ^ & @ & @ &] à^ f [] [] ^ [] ^ æ } È

Ó [{ T æ ç } æ & Þ & } | È

A5-BH9B5B79

A5-BH9B5B79

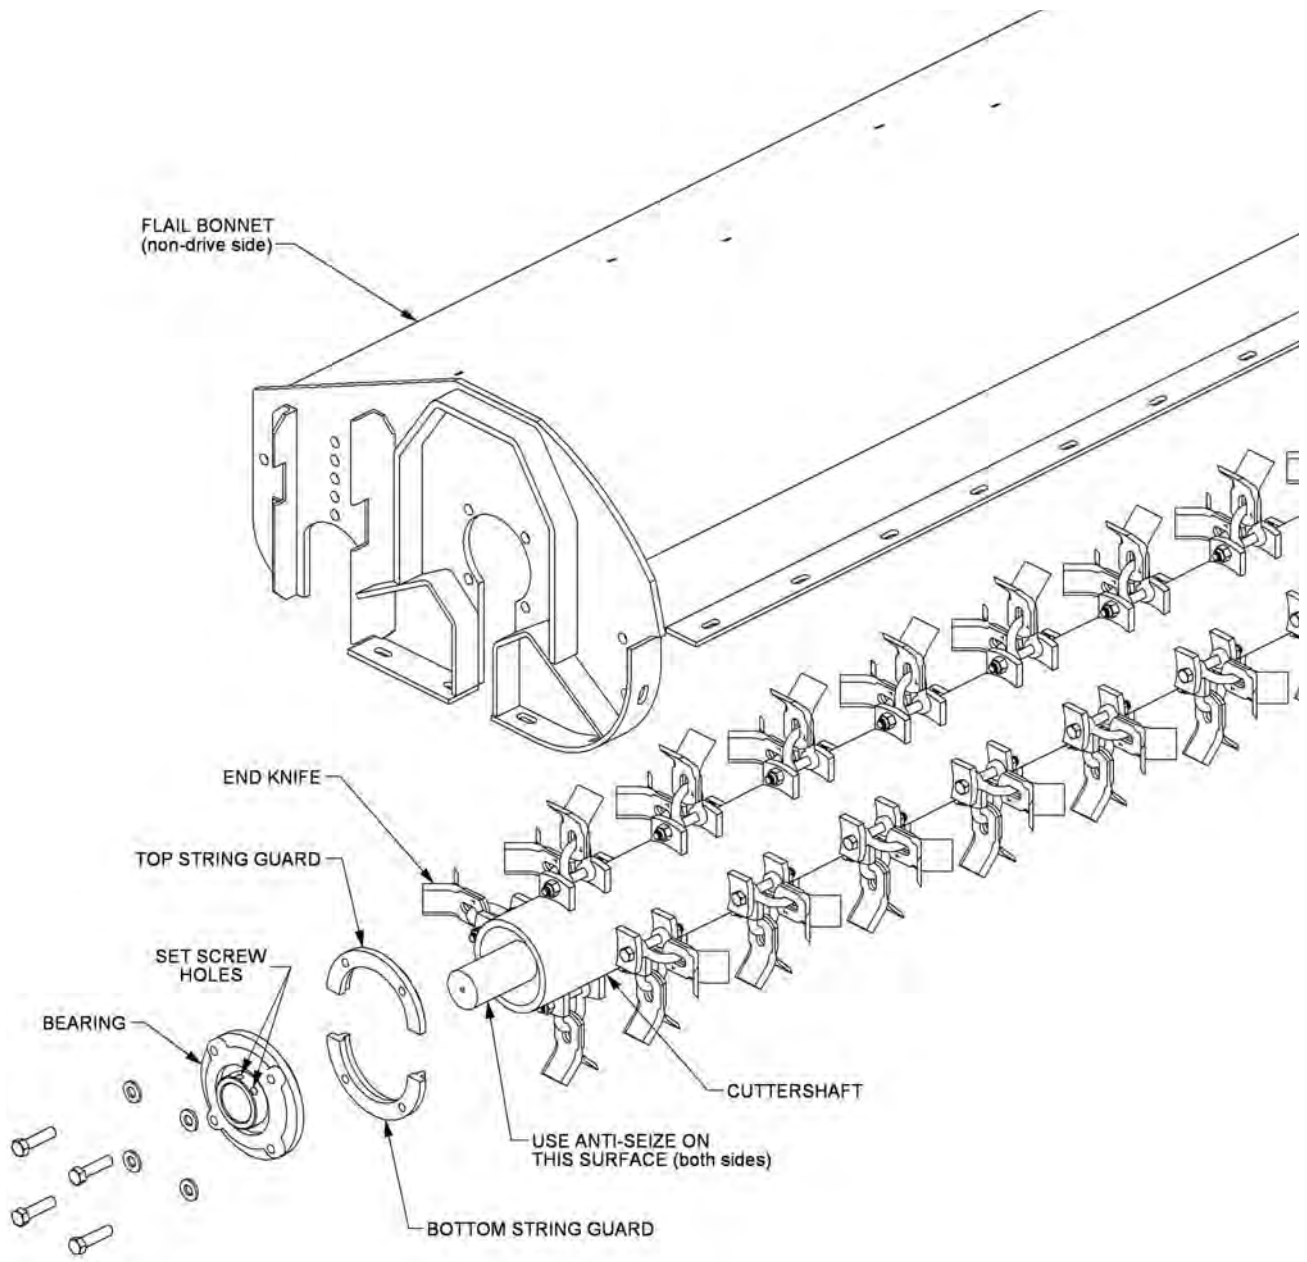

Ó[[{

T ađ c} ə & ù^&đ } | ĒG

A5-BH9B5B79

A5-BH9B5B79

85-QMA5-BH9B5B79`G7<98I @

V@ f||, q* •^içæ• •@~|à à^]^i+{ ^à àæí [i ^ç^i^ ì @~i• [~•^içæÉ f||, q* @@ à^æáà { æçç } æ & q•d` &ç }• q @ []^iæí • { æ` æÉ

~~~~~ Ú { } Öiç^ Ú@ecKQ!^~ áà, æ@áç^ • @edç~ ]^i &@& f|i^}á ]æ æ á | àiææ æ: \ \ •É

~~~~~ Öiç \ • @ecæçç çç KQ!^~ q ]^i á, æ@~ àà^i \*i [ { ^ç &@& & } áæç } Éi^ ]ææ á- { á•q\* [ ] áæ æ^áÉ

~~~~~ Úç [ c ] [ qç KQç &ç^i^æ^~ } çç çç } ^æ çç } á•É

~~~~~ P^á|æ|æ ççç •KÖ@& f|i |^æ, æ@] ççç [ ] &çáà [ ççáÉ Vá @^ } ççç • [ ] |^ ]ææ @•^ ç { ^áæç } É

~~~~~ S) çç •KQ• ]^&ç f|i { á•q\* [ ] áæ æ^á \ } çç •É&çç \*^ çç } |^ &ç [ ] |^ç •^ç Dæ } ^^ááÉ

~~~~~ Öiç KÖ@& É Vá @^ çç ]ææ à^ç çç } ^^ááÉ

~~~~~ T çç çç çç çç KQ ]^çç [ @^, á• ] ^çç á |^çç ~^á à [ |ç ççç |áá q ç çç ~^ • ] ^çççç } • q çç •^&ç } É

~~~~~ P^á|æ|æ çç çç ççç KÖááÉá^~ áááÉi^ çç çç çç { { } áæç } •É

~~~~~ Ú^æ ççç Öiç^É Öiççç ççç \* ççç á Ú@ec Öi~ ]^i •K Öi^æ^ çç çç d` &ç á q @@ á^ æáà Á ççç } æ & Á^ &ç } É

~~~~~ Ö çç Ú@ecçç á Öi [ ~ ] á Ú [ ]^i KÖi^æ^ çç çç d` &ç á q @@ á^æáà Á ççç } æ & Á^ &ç } É

Ú^içæ]^i+{ ^à à^ K~~~~ ÖæK'ççç çççç P [~]
 T^ççK~~~~
 T ççç } æ & Ú^ &ç }
 EEV@]æ^ { æ à^ &ç] áá ççç •^á çç] ççç [~@ áæç { ççç } æ & [~ çç^É

Ö [{ T ççç } æ & Ú^ &ç } | È€

>8`*%\$F`69B; 5 @6FI H9

D5 F HG
G9 7 H-C B

D5 F HG'CF 8 9 F -B; ; I -89

V@ 4||, ð* ð*d~&ç}• æ^ [-!^à d @] |ã ð æ } ^à|^•• à^æ æ à ^!| ð
]!| &••ð*]~!&@^ [!à!• 4| @ ^~ ð { ^} cð @ { æ } æÈ

FÈ V@ Úæ Ú&ç} ã]!^ æ^à ð [|* ææ•^~^} & æ à *! [~] ð* [~] æ @ @æ
à^ []* d @ àæ æ { æç^ ^æ |^à ð @ { æ } æÈ Úæç { à!• æ à
Ö•&ðç}• æ^ *ç^} d @] [| ææ @] æ æ à ~ æ ç• |^~ ã^àÈ

GÈ V@ Ú~!&@^ U!à! { ~•cð àææ @ BUa YUbX'5 XXfYgg [~@] ^!• [] []
[! * æ ã æ] [!à!ð* @] æ Èk \ c'g\ ci 'X'VY'W U [YXÈ æ à ã] [•• ã |È @ gYf]U
bi a VYf'cZH Ya UW]bY 4|, @ @ @] æ æ à^ ð* [!à!^àÈ

HÈ V@]~!&@^ [!à! { ~•c&^æ |ã c@ ei Ub]mcZYUW 'dUfÈ @ & {] |^ç
æ à & ||^&c dUfhibi a VYfÈ æ à @ àæ æ BUa Y'cZH Y'dUfÈ

I È V@ { æ } æç |^!|^•!ç^ @ |ã @ d ~ à^ ç }] æ æ |È

I È Ú [^] æ { æ à^ ~ } |ã ç à ç { •, @ @ æ ^] ^ & ç } | [à ~ & ç } ç { • } [c
] [! { æ ^ • d & ^ à æ à æ ^ • à b & ç d •] ^ & ç } æ à ð * È Ú ^ ~ ^ • ç ~ [ç] 4| • ~ & @
] æ à^ 4|^•!} à ð * æ] ~!&@^ [!à!È

I È V@ { æ } æç |^!|^•!ç^ @ |ã @ d & æ ^ } |ã •, æ ç c |ã |] [ç È

PUVOKY @] [!à!ð* |^] |æ { ^ } ç à^ & ç È ^! d @] æ c } { à!• æ à
à^•&ðç}• |ã ç à ð @ •æ ç •^ & ç } ð @ 4|] c [~ @ { æ } æÈ



1000

ç | { ç ã ~ { •æ^ ç à d * ~ ç ç ç^ [] ç ~ {] [! à ~ & ç |ã ç ç È
æ ç • ~ ^ * ^ } ~ ð ^ H] [Yf |^] |æ { ^ } c] æ È V@ ~ • ^ [~ ð -! ð |
|^] |æ { ^ } c] æ { æ & ç • ^ } |^ { æ |^ [! & ç d] @ ç ç |^
, @ & ç | à |^ • | ç ð • ð ð • ð b |^ [! à ç È


Öã&cæ ^ ~ ^ • ç } • |^ * ç à ð *] æ ç d K

H] [Yf 7 cfdcfU] ç b
H H F P È Š [~ ã ^ Ç ç È
Ú ð ~ ç Ç ç • È Ù Ö Í Ì F È
%, \$\$!, ('!*, (-
'%*\$)!' '*!+- \$\$

PART NAME INDEX

| | |
|---|----|
| DQO 'O QWP V'MK | 6 |
| VTCEVQT'O QWP V'MK | 8 |
| VTCEVQT'O QWP V'MK.'J [F T C W N K E U | : |
| ECDNG'O CP WCN+'NKH'XCNXG'/'7"URQQN | 32 |
| GNGEVTQP K'E'NKH'XCNXG'O QWP V | 34 |
| 7"URQQN'ECDNG'EQP VTQN'O QWP V | 36 |
| ECDNG'O CP WCN+'NKH'XCNXG'DTGCMF QY P | 38 |
| XCNXG'UGNGE VQT.'TU | 3: |
| RWO R'F T K G U J C H V | 42 |
| P Q V G U | 43 |
| DQO T G U V / D G P I C N ' D T W C | 44 |
| RCP Q T C O K E ' U C H G V [' U E T G G P | 46 |
| CZNG'UVCDNK GI | 48 |
| Y J G G N ' U R C E G T | 4: |
| Y J G G N ' Y G K J V | 4; |
| P Q V G U ' 3 | 52 |

BOOM MOUNT KIT

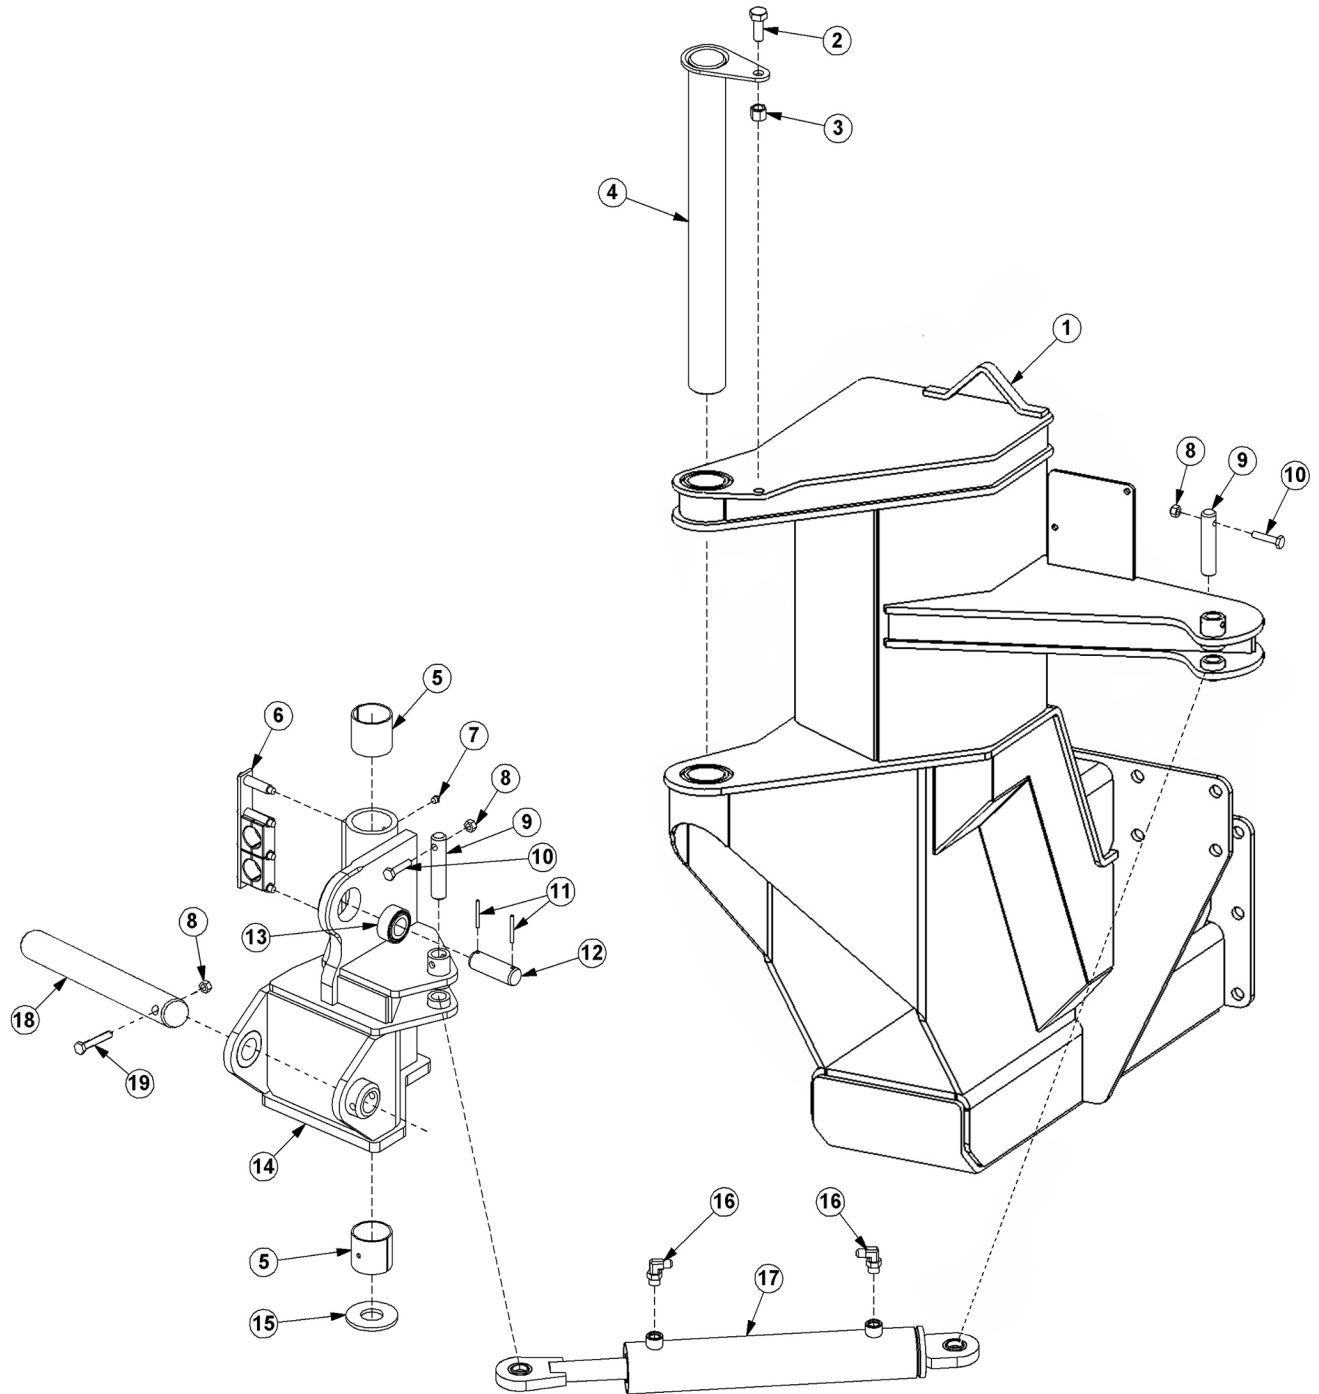


BOOM MOUNT KIT

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|-----------|------|---|
| 3 | /// | / | O CRHTCO G', TGHGT"VQ"VTCEVQT"O QWP V'MKV |
| 4 | 439: 4 | 3 | ECRUETGY .7E \$Z'3/5 16\$. 'PE |
| 5 | 43999 | 3 | P[NQEMP WW.'7E \$. 'PE |
| 6 | 545: 3 | 3 | RRP ."40'\$Z'"4607\$. 'ECR |
| 7 | 54544 | 4 | DWUJ RPI |
| 8 | 287273: 7 | 3 | ENCOR'MKV |
| 9 | 8V5433 | 4 | I TGCUG\ GTM.'3E \$'PRV |
| : | 43899 | 5 | P[NQEMP WW.'9B8\$Z'"4\$'PE |
| ; | 545: 2 | 4 | RRP ."3\$ |
| 32 | 438: 5 | 4 | ECRUETGY .9B8\$Z'"4\$. 'PE |
| 33 | VD3245 | 4 | TQNN'RRP |
| 34 | 28642322 | 3 | RRP ."3/3 16\$ |
| 35 | /// | / | URJ GT'ECN'DGCT'RPI ", P QV'HQT"UCNG |
| 36 | 289223: 7 | 3 | UY K&GN'CUUGO DN[|
| /// | 28532372 | 3 | UY K&GN'Y GNF O GP V |
| 37 | 28742472 | 3 | DGCT'RPI ."Y CUJ GT |
| 38 | 54: 32 | 4 | CF CRVGT.'GNDQY |
| 39 | 2872324; | 3 | E[NRFFGT.'"5\$Z'"350 : \$ |
| 3: | 28642244 | 3 | RRP ."30'\$Z'"34\$ |
| 3; | 438: : | 3 | ECRUETGY .9B8\$Z'"5/3 16\$ |

TRACTOR MOUNT KIT

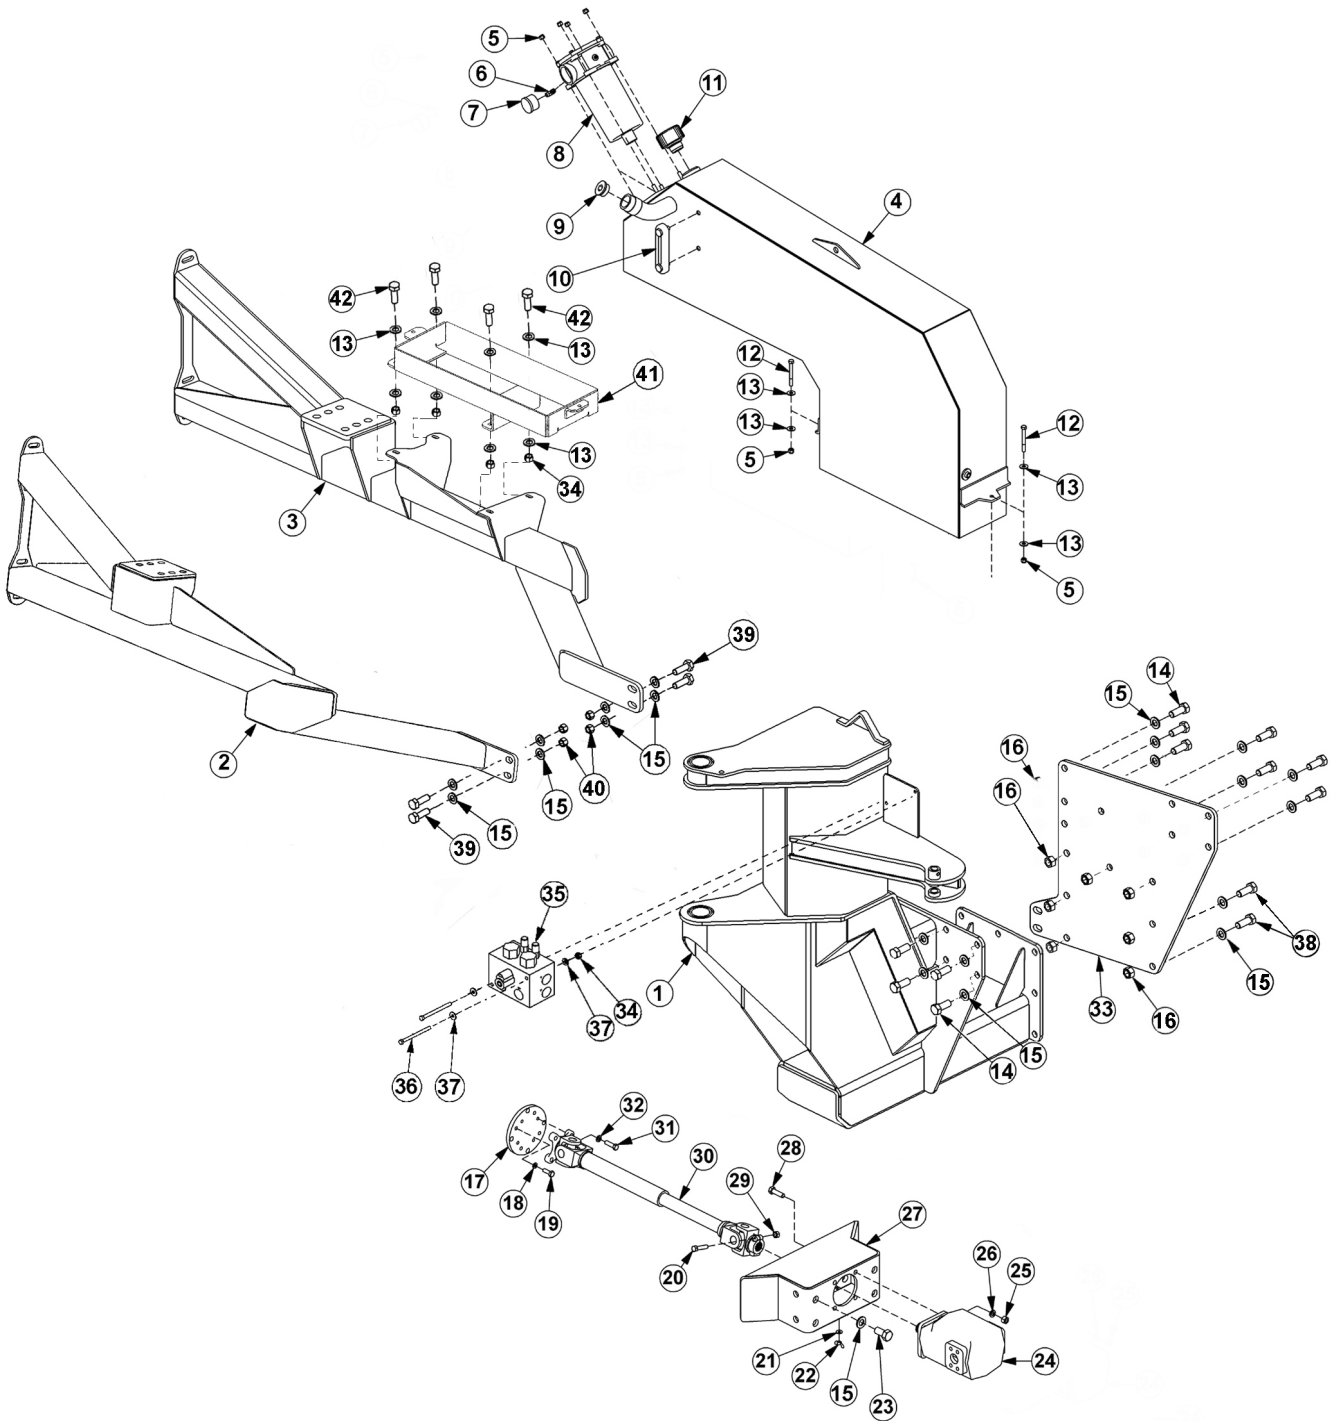

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|-----------------------------|
| 1 | 06300251 | 1 | MAIN FRAME, JD 6140/6150R |
| 2 | 06300252 | 1 | AXLE BRACE, RH |
| 3 | 06300253 | 1 | AXLE BRACE, LH |
| 4 | 06700091 | 1 | TANK, RES, WHEEL WELL, ASSY |

TRACTOR MOUNT KIT

Continued...


| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|-----------------------------------|
| 5 | 21725 | 6 | HEX NUT, 1/2", NC |
| 6 | TF4888 | 1 | STREET ELBOW, 1/8" X 90DEG |
| 7 | 6T0649 | 1 | FILTER GAUGE |
| 8 | 06505044 | 1 | FLTR ASSY, IN-TANK CPLT, SAE 10MP |
| 9 | 06505127 | 1 | PLUG, SAE, #20 |
| 10 | 06505067 | 1 | SIGHT GAUGE |
| 11 | 06505077 | 1 | CAP, PRESSURE, 3.0PSA |
| 12 | 21639 | 4 | CAPSCREW, 3/8" X 3-1/4", NC |
| 13 | 22016 | 16 | FLATWASHER, 3/8" |
| 14 | 31731 | 16 | CAPSCREW, 20MM X 50MM, 2.5 PITCH |
| 15 | 33880 | 32 | FLATWASHER, 3/4", GR 8, SAE |
| 16 | 31722 | 12 | HEX NUT, 20MM, 2.5 PITCH |
| 17 | 34998 | 1 | SPACER, DRIVESHAFT, JD72-7510/20 |
| 18 | 32691 | 4 | LOCKWASHER, 10MM |
| 19 | 23113 | 4 | CAPSCREW, 10MM X 30MM, 1.5 PITCH |
| 20 | 21658 | 1 | CAPSCREW, 7/16" X 2", NF, GR8 |
| 21 | 22014 | 1 | FLATWASHER 1/4" |
| 22 | 32519 | 1 | WING NUT, 1/4", NC |
| 23 | 24860 | 4 | CAPSCREW, 20MM X 40MM, 2.5 PITCH |
| 25 | 21727 | 4 | NYLOCK NUT, 1/2", NC |
| 26 | 06533004 | 4 | FLATWASHER, 1/2", SAE, GR8 |
| 27 | 34993 | 1 | PUMP MNT, JD, U DRIVE |
| 28 | 21733 | 4 | CAPSCREW, 1/2" X 2" NC |
| 29 | 34848 | 1 | HEX NUT, 7/16" NF, GR8 (STOVER) |
| 30 | 34999 | 1 | DRIVESHAFT, U-JOINT |
| 31 | 21680 | 4 | CAPSCREW, 7/16" X 1-1/4", NC, GR5 |
| 32 | 21989 | 4 | LOCKWASHER, 7/16" |
| 33 | 06402240 | 1 | UPRIGHT, LH, JD6150R |
| 24 | 23152 | 1 | PUMP, P350 - 1-3/4" GEAR |
| 34 | 21627 | 12 | NYLOCK NUT, 3/8", NC |
| 35 | 06510083 | 1 | BRAKE VALVE, SOL, 3000PSI, METRI |
| 36 | 21644 | 2 | CAPSCREW 3/8 X 5", NC |
| 37 | 22016 | 4 | FLATWASHER, 3/8", GR8 |
| 38 | 27281 | 7 | CAPSCREW, 20MM X 60MM, 2.5P |
| 39 | 21833 | 4 | CAPSCREW, 3/4" X 2-1/4", NC |
| 40 | 21854 | 4 | HEX NUT, 3/4", NC |
| 41 | 06380060 | 1 | MNT, TANK, WHL WLL, ADJ |
| 42 | 21631 | 4 | CAPSCREW, 3/8" X 1-1/4", NC, GR8 |

TRACTOR MOUNT KIT, HYDRAULICS

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|-----------|------|---|
| 3 | ///// | / | O CRP 'HTCOG', TGHGT"VQ"VTCEVQT"O QWP V'MK/RCI G |
| 4 | ///// | / | J [FTCWNÆ"VCPM', TGHGT"VQ"VTCEVQT"O QWP V'MK/RCI G |
| 5 | ///// | / | CZNG'DTCEG', TGHGT"VQ"VTCEVQT"O QWP V'MK/RCI G |
| 6 | 287252: 6 | 3 | GNDQY .3/34\$HQT"Z"3/34\$HQT.O CEJ |
| 7 | 287252: 5 | 3 | CF CRVGT.3/34\$O QT"Z"3/34\$O QT |
| 8 | 5652; | 3 | DCNN'XCNXG.3/34\$HQT |
| 9 | 56932 | 3 | CF CRVGT.3/34\$O QT"Z"3/34\$O L |
| : | 545: 4 | 5 | DTCEMGV.J QUG |
| 32 | 55: : 2 | 6 | HNCVY CUJ GT.'5 16\$.UCG |
| 33 | 5292: | 5 | ECRUETGY .'42O O"Z"; 2O O .40R |
| 34 | 46: 6; | 4 | URCEGT |
| 35 | 28722923 | 3 | J QUG.3/34\$Z"348\$ |
| 36 | VH6: 74 | 4 | HNCPI G'MK'.%42 |
| 38 | ///// | 3 | RWOR", TGHGT"VQ"VTCEVQT"O QWP V'MK/RCI G |
| 39 | 28722652 | 3 | J QUGIVWDG.36"Z": 4\$ |
| 3: | 56298 | 3 | ENCOR'MK'.36 |
| 3: | 56848 | 3 | VWDGIENCOR'DTCEMGV |
| 42 | //// | 3 | DTCEMG'XCNXG', TGHGT"VQ"VTCEVQT"O QWP V'MK' |
| 43 | 555: 4 | 4 | GNDQY .'34O D'Z"34O L |
| 44 | 54: 8; | 3 | P RRRNG.'O CNG'NQPI .'3O QT"Z"3O L |
| 45 | 55777 | 5 | CF CRVGT.'3O D'Z'3O L |
| 46 | 287228: 8 | 3 | J QUG.'3\$Z"495\$*TGVWTP+ |
| 47 | 287228: 7 | 3 | J QUG.'3\$Z"4: ; \$*RTGUWTG+ |
| 48 | 565: 6 | 3 | GNDQY .'3/34"QTD"Z"3/34O L67 |
| 49 | 28722922 | 3 | J QUG.'3\$Z"39: \$ |
| 4: | 56286 | 3 | CF CRVGT.'3/36\$O QT"Z"3\$O L |

CABLE (MANUAL) LIFT VALVE - 5 SPOOL

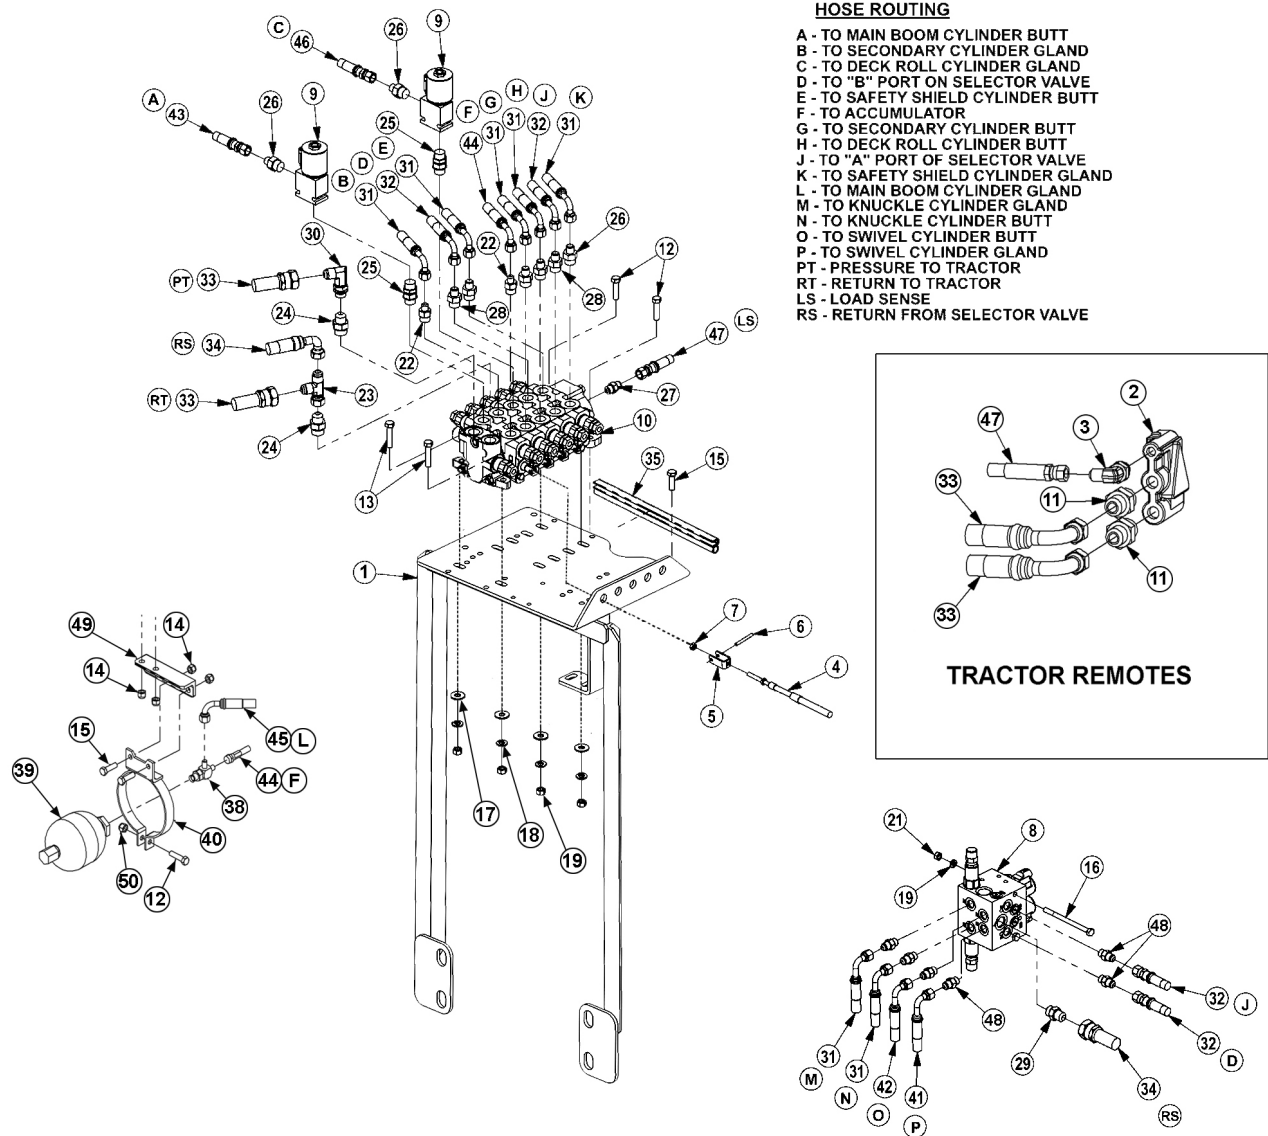


| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|----------------------------|
| 3 | 2856226 | 3 | XCNXG'O QWP V.'1F 8ZZZ T |
| 4 | //// | 3 | VTCEVQT'TGO QVGU |
| 5 | 28728235 | 3 | GNDQY .'36O O 'Z'7 B8\$O |
| 6 | 28727322 | 7 | EDN.'EP VTN.'32: \$ |
| 7 | 8V6633 | 7 | ENGXIU.'EDN'EP VTN.'5 B8\$ |
| 8 | 8V5239 | 7 | TQNNRRP .'5 B8\$Z'3\$ |
| 9 | 43722 | 7 | J GZ 'P WW.'3 I6\$. 'P H |
| : | 28724277 | 3 | XNX.'UGNGEVQT.'TU |

CABLE (MANUAL) LIFT VALVE - 5 SPOOL

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|-----------|------|--|
| ; | 28732272 | 4 | VTX" NEM" O GVT RCEMEQIN |
| 32 | 2872425: | 3 | XNX."7URJ UE." VTD." NU." TU" *TQVCT["O QY GTU+ |
| 33 | 55685 | 4 | CF CRVGT."440 O "Z" 34\$"OL |
| 34 | 43854 | 5 | ECRUETGY ."51 \$"Z" 3/34\$."PE |
| 35 | 43855 | 4 | ECRUETGY ."51 <Z" 3/516\$."PE |
| 36 | 43849 | 6 | P[NQEMP WW."51 \$."PE |
| 37 | 43853 | 6 | ECRUETGY ."51 \$"Z" 3/316\$."PE |
| 38 | 437; 5 | 4 | ECRUETGY ."7138\$Z" 6/34\$."PE |
| 39 | 44238 | 6 | HNCVY CUJ GT."51 \$ |
| 3: | 43; : : | : | NQEMY CUJ GT."51 \$ |
| 3; | 43; : 9 | 4 | NQEMY CUJ GT."7138\$ |
| 42 | 43847 | : | J GZ "P WW."51 \$."PE |
| 43 | 43797 | 4 | J GZ "P WW."7138\$."PE |
| 44 | 2872425: | 4 | XNX."EJ GEM |
| 45 | 8V5; ; 4 | 3 | TWP "VGG."34\$"O LZ" 34\$HZ "Z" 34\$OL |
| 46 | 28725233 | 4 | CF CRVGT."71 \$O QT"Z" 34\$OL |
| 47 | 5354; | 4 | CF CRVGT."34\$"O QT"Z" 34\$O QT."CFL |
| 48 | 55493 | 8 | CF CRVGT."34\$O QT"Z" 51 \$OL |
| 49 | 54; 23 | 3 | CF CRVGT."51 \$O QT"Z" 51 \$OL |
| 4: | 565; 8 | 4 | CF CRVGT."TUVTEVT."34\$O QT"Z" 51 \$OL |
| 4; | 5574: | 3 | CF CRVGT."34\$O QT"Z" 34\$OL |
| 52 | 28725244 | 3 | GNDQY ."34\$HZ "Z" 34\$OL; 2Å |
| 53 | 28722282 | 9 | J QUG."316\$Z" 364\$ |
| 54 | 28722786 | 4 | J QUG."34\$Z" 64\$ |
| 55 | 287228: 7 | 3 | J QUG."3\$Z" 4: ; \$ |
| 56 | 28728: 8 | 3 | J QUG."316\$Z" 48: b |
| 57 | 4: 275 | 3 | VTO "NM"; B8\$Z" 31 HP."RDN, 322/31 |
| 5: | 2872524; | 3 | TWP "VGG."34\$"O QT"Z" 51 \$O LZ" 51 \$OL |
| 5; | 46522 | 3 | CEEWO WNCVGT |
| 62 | 45: : : | 3 | DTMV."CEEWO WNCVGT |
| 63 | 2872236: | 3 | J QUG."316\$Z" 432\$ |
| 64 | 287224; 9 | 3 | J QUG."316\$Z" 442\$ |
| 65 | 287228; 9 | 3 | J QUG."316\$Z" 432\$ |
| 66 | 55966 | 3 | J QUG."316\$Z" 56\$ |
| 67 | 287228: : | 3 | J QUG."316\$Z" 4: : \$ |
| 68 | 287228: 9 | 3 | J QUG."316\$Z" 48: \$ |
| 69 | 287228: ; | 3 | J QUG."316\$Z" 64\$ |
| 6: | 54; 23 | 8 | CF CRVGT."51 \$"O QT"Z" 51 \$OL |
| 6; | 28682294 | 3 | DTCEMGV |

ELECTRONIC LIFT VALVE MOUNT

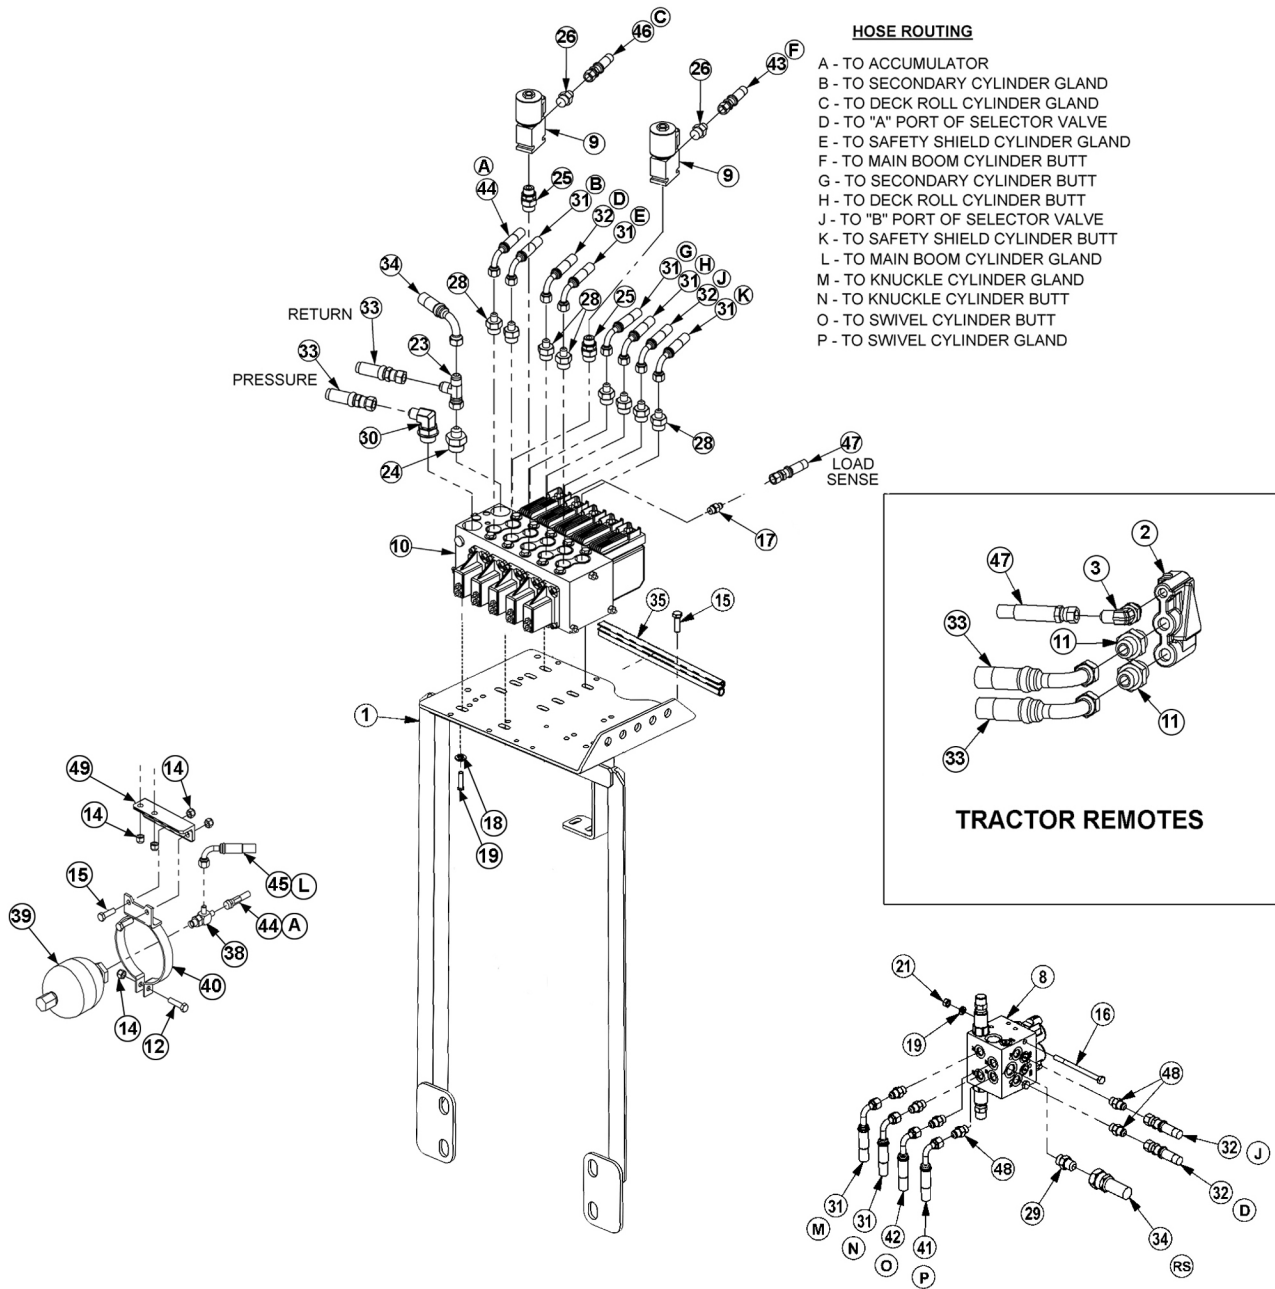

HOSE ROUTING

- A - TO ACCUMULATOR
- B - TO SECONDARY CYLINDER GLAND
- C - TO DECK ROLL CYLINDER GLAND
- D - TO "A" PORT OF SELECTOR VALVE
- E - TO SAFETY SHIELD CYLINDER GLAND
- F - TO MAIN BOOM CYLINDER BUTT
- G - TO SECONDARY CYLINDER BUTT
- H - TO DECK ROLL CYLINDER BUTT
- J - TO "B" PORT OF SELECTOR VALVE
- K - TO SAFETY SHIELD CYLINDER BUTT
- L - TO MAIN BOOM CYLINDER GLAND
- M - TO KNUCKLE CYLINDER GLAND
- N - TO KNUCKLE CYLINDER BUTT
- O - TO SWIVEL CYLINDER BUTT
- P - TO SWIVEL CYLINDER GLAND

TRACTOR REMOTES


ELECTRONIC LIFT VALVE MOUNT

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---------------------------------------|
| 1 | 06340048 | 1 | VALVE MOUNT, JD6XXXXR |
| 2 | ---- | 1 | TRACTOR REMOTES |
| 3 | 06506013 | 1 | ELBOW, 14MM X 5/16" |
| 8 | 06502055 | 1 | VLV, SELECTOR, RS |
| 9 | 06510050 | 2 | TRV LCK, METRIPACK COIL |
| 10 | 06502097 | 1 | ELECTRONIC LIFT VALVE |
| 11 | 33463 | 2 | ADAPTER, 22MM X 1/2" MJ |
| 12 | 21632 | 3 | CAPSCREW, 3/8" X 1-1/2", NC |
| 13 | 21633 | 2 | CAPSCREW, 3/8: X 1-3/4", NC |
| 14 | 21627 | 4 | NYLOCK NUT, 3/8", NC |
| 15 | 21631 | 4 | CAPSCREW, 3/8" X 1-1/4", NC |
| 16 | 21593 | 2 | CAPSCREW, 5/16" X 4-1/2", NC |
| 17 | 33392 | 1 | ADAPTER |
| 18 | 21987 | 4 | LOCKWASHER, 5/16" |
| 19 | 21579 | 1 | CAPSCREW, 5/16" X 3/4", NC |
| 21 | 21575 | 2 | HEX NUT, 5/16", NC |
| 23 | 6T3992 | 1 | RUN TEE, 1/2" MJ X 1/2" FJX X 1/2" MJ |
| 24 | 33591 | 1 | ADAPTER, 3/4" MOR X 1/2" MJ |
| 25 | 31611 | 2 | ADAPTER, 5/8" OR X 1/2" ADJ OR |
| 26 | 33271 | 6 | ADAPTER, 1/2" MOR X 3/8" MJ |
| 28 | 32307 | 9 | ADAPTER |
| 29 | 33528 | 1 | ADAPTER, 1/2" MOR X 1/2" MJ |
| 30 | 33294 | 1 | ELBOW |
| 31 | 06500060 | 7 | HOSE, 1/4" X 142" |
| 32 | 33744 | 2 | HOSE, 1/2" X 42" |
| 33 | 34612 | 1 | HOSE, 1" X 289" |
| 34 | 06500564 | 1 | HOSE, 1/4 X 268` |
| 35 | 28053 | 1 | TRM LK, 9/16" X 1/8FN, PBL*100-1/8 |
| 38 | 06503029 | 1 | RUN TEE, 1/2" MOR X 3/8" MJ X 3/8" MJ |
| 39 | 24300 | 1 | ACCUMULATER |
| 40 | 23888 | 1 | BRKT, ACCUMULATER |
| 41 | 06500148 | 1 | HOSE, 1/4" X 210" |
| 42 | 06500297 | 1 | HOSE, 1/4" X 220" |
| 43 | 06500697 | 1 | HOSE, 1/4" X 210" |
| 44 | 33744 | 1 | HOSE, 1/4" X 34" |
| 45 | 06500688 | 1 | HOSE, 1/4" X 288" |
| 46 | 06500687 | 1 | HOSE, 1/4" X 268" |
| 47 | 06500689 | 1 | HOSE 1/4" X 42" |
| 48 | 32901 | 6 | ADAPTER, 3/8" MOR X 3/8" MJ |
| 49 | 06460072 | 1 | BRACKET |

JD6140R LRS

5 SPOOL CABLE CONTROL MOUNT

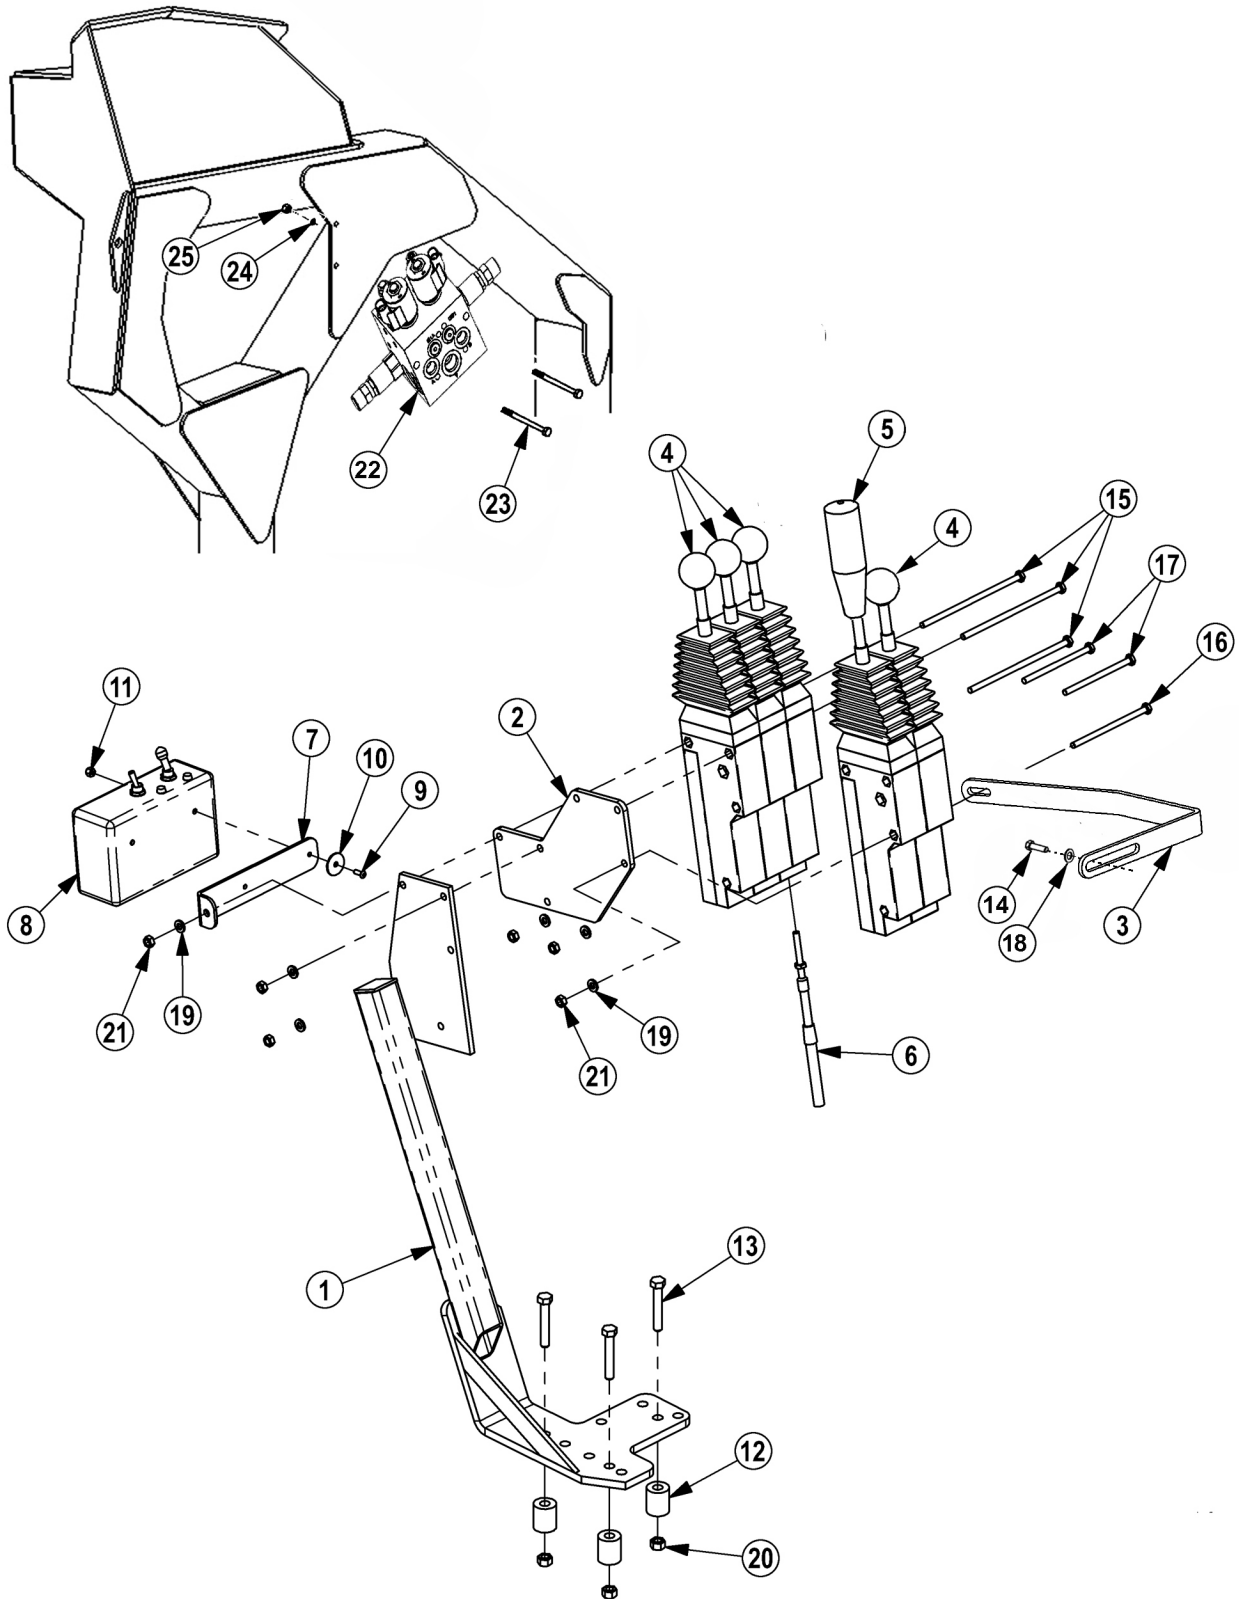


5 SPOOL CABLE CONTROL MOUNT

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|--------------------------------|
| 1 | 23865B | 1 | CBL CTRL MT BRK |
| 2 | 06400179 | 1 | CABLE CONTROL STAND STABILIZER |
| 3 | 06411882 | 1 | CONTROL STAND SUPPORT |
| 4 | 6T1251 | 4 | CBL CTRL BOX,180 DEG |
| 5 | 06505023 | 1 | CBL CTRL BOX,180 DEG,W/BUTTON |
| 6 | 06505100 | 5 | CBL,CNTRL,108 |
| 7 | 34496 | 1 | BRKT,SWITCHBOX,UNI |
| 8 | 06510049 | 1 | SWITCHBOX ASSY,BOOM,RS |
| 9 | 6T3951 | 2 | SCREW,MACHINE,8/32" X 1/2" |
| 10 | 34508 | 2 | WASHER,FENDER,#10 |
| 11 | 6T3952 | 2 | HEX NUT,8/32",NYLOCK |
| 12 | 27082B | 3 | SPACER |
| 13 | 21635 | 3 | CAPSCREW,3/8" X 2-1/4",NC |
| 14 | 33534 | 1 | CAPSCREW,10MM X 20MM,1.5PITCH |
| 15 | 21545 | 3 | CAPSCREW,1/4" X 6",NC |
| 16 | 21543 | 1 | CAPSCREW,1/4" X 4-1/2",NC |
| 17 | 21542 | 2 | CAPSCREW,1/4" X 4",NC |
| 18 | 32691 | 1 | LOCKWASHER,10MM |
| 19 | 21986 | 6 | LOCKWASHER,1/4" |
| 20 | 21627 | 3 | NYLOCK NUT,3/8",NC |
| 21 | 21525 | 6 | HEX NUT,1/4",NC |
| 22 | 06502055 | 1 | VLV,SELECTOR,RS |
| 23 | 21593 | 2 | CAPSCREW,5/16" X 4-1/2",NC |
| 24 | 21987 | 2 | LOCKWASHER,5/16" |
| 25 | 21575 | 2 | HEX NUT,5/16",NC |

CABLE (MANUAL) LIFT VALVE BREAKDOWN

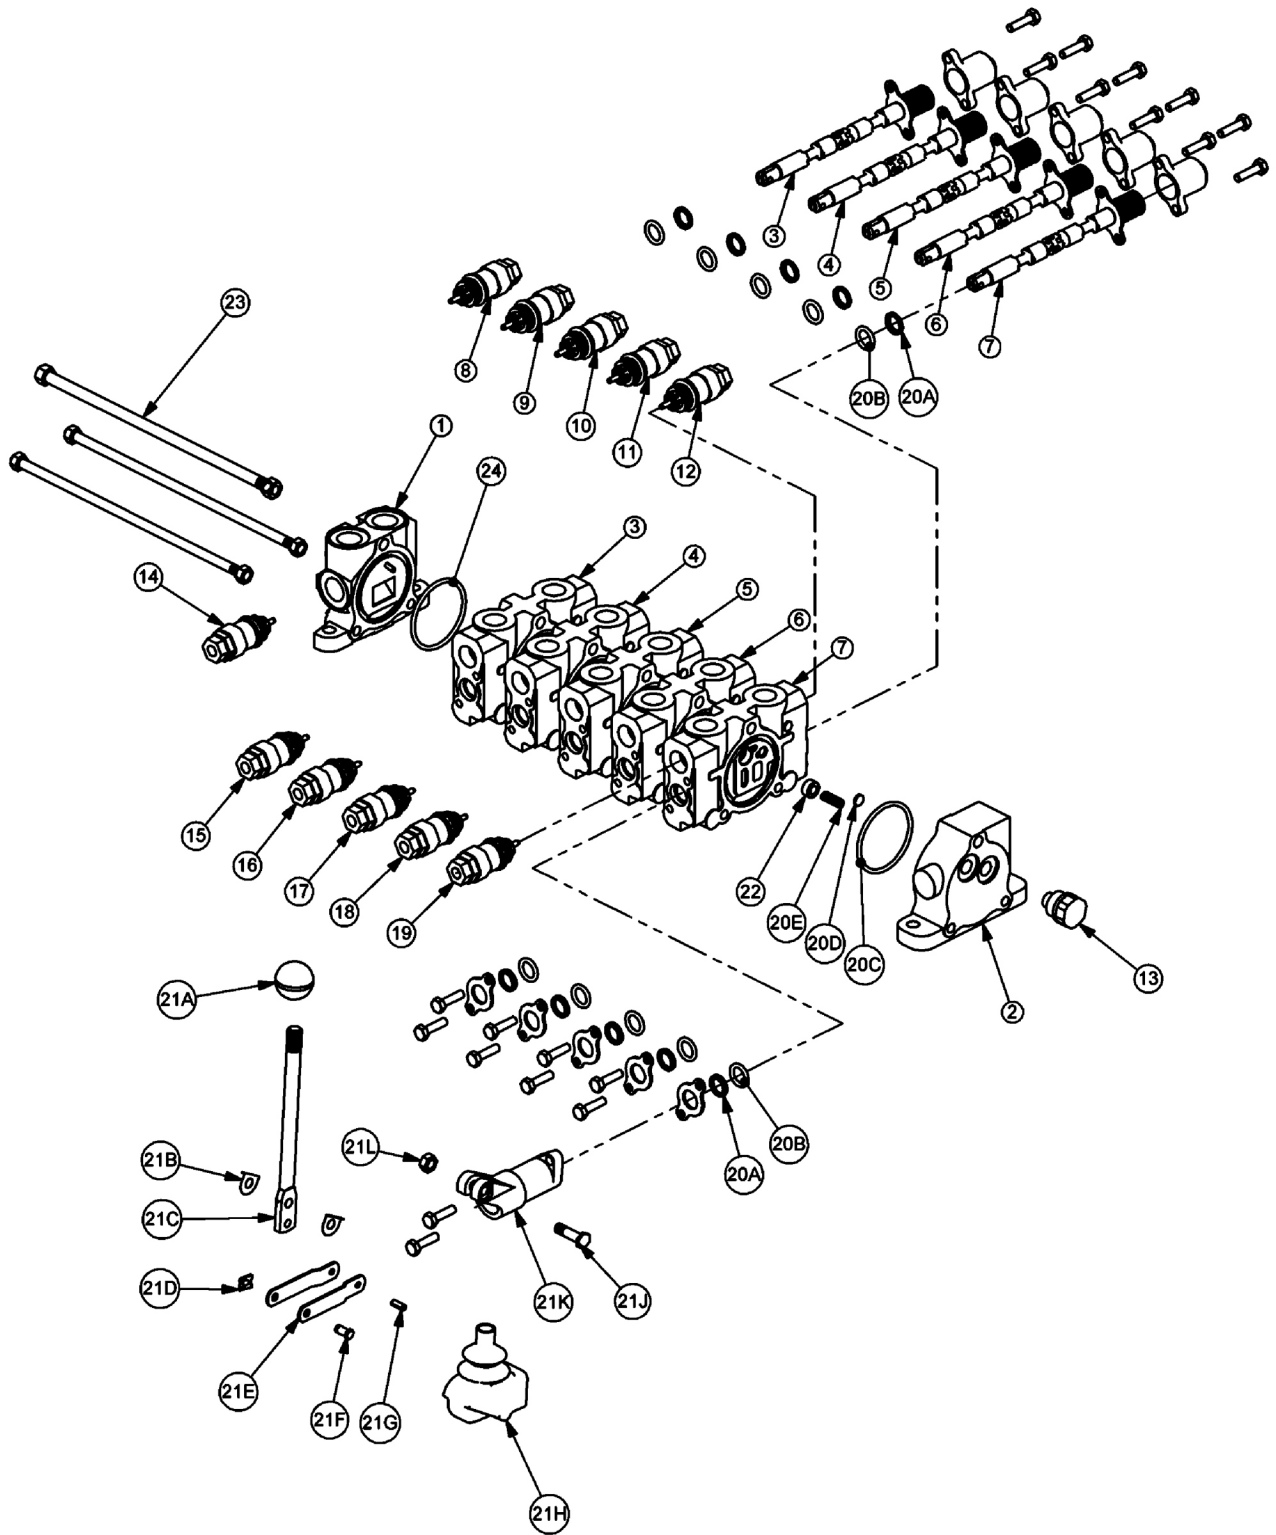


CABLE (MANUAL) LIFT VALVE BREAKDOWN

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|--|
| 1 | 31595 | 1 | INLET END COVER |
| 2 | 31594 | 1 | END COVER, LOAD SENSE |
| 3 | 31597 | 1 | VALVE SECTION (DOUBLE ACTING, CENTER SPRING) |
| 4 | 31597 | 1 | VALVE SECTION (DOUBLE ACTING, CENTER SPRING) |
| 5 | 31597 | 1 | VALVE SECTION (DOUBLE ACTING, CENTER SPRING) |
| 6 | 31598 | 1 | VALVE SECTION (DOUBLE ACTING, CENTER SPRING, METERED) |
| 7 | 31597 | 1 | VALVE SECTION (DOUBLE ACTING, CENTER SPRING) (REMOVE SHUTTLE DISC) |
| 8 | TF4212 | 1 | RELIEF VALVE, 200 PSI |
| 9 | TB1017K | 1 | RELIEF VALVE, 2150 PSI |
| 10 | TB1017J | 1 | RELIEF VALVE, 1800 PSI |
| 11 | 06502089 | 1 | RELIEF VALVE, 2400 PSI |
| 12 | 22588 | 1 | RELIEF VALVE, 500 PSI |
| 13 | 06503068 | 1 | #6 O-RING PLUG |
| 14 | 6T4209 | 1 | #10 O-RING PLUG |
| 15 | 06502085 | 1 | RELIEF VALVE, 3000 PSI |
| 16 | TB1017F | 1 | RELIEF VALVE, 1500 PSI |
| 17 | TB1017F | 1 | RELIEF VALVE, 1500 PSI |
| 18 | 06502120 | 1 | RELIEF VALVE, 2100 PSI |
| 19 | 22588 | 1 | RELIEF VALVE, 500 PSI |
| 20 | 31593 | 5 | VALVE SEAL KIT (FOR ONE SECTION) |
| 20A | ----- | 2 | WIPER |
| 20B | ----- | 2 | O-RING SMALL |
| 20C | ----- | 1 | O-RING LARGE |
| 20D | ----- | 1 | SHUTTLE DISC |
| 20E | ----- | 1 | SPRING |
| 21 | TB1017L | 5 | LEVER KIT (FOR ONE SECTION) |
| 21A | ----- | 1 | LEVER KNOB |
| 21B | ----- | 1 | LEVER |
| 21C | ----- | 2 | LEVER WASHER |
| 21D | ----- | 1 | LEVER CLIP |
| 21E | ----- | 2 | LINKAGE |
| 21F | ----- | 1 | LEVER PIN |
| 21G | ----- | 1 | ROLL PIN |
| 21H | ----- | 1 | LEVER BOOT |
| 21J | ----- | 1 | LEVER BOLT |
| 21K | ----- | 1 | LEVER DUST COVER |
| 21L | ----- | 1 | LEVER NUT |
| 22 | 31603 | 5 | COMPENSATOR |
| 23 | TB1017V | 1 | TIE ROD KIT |
| 24 | 24214 | 1 | O-RING, LARGE |

VALVE SELECTOR, RS

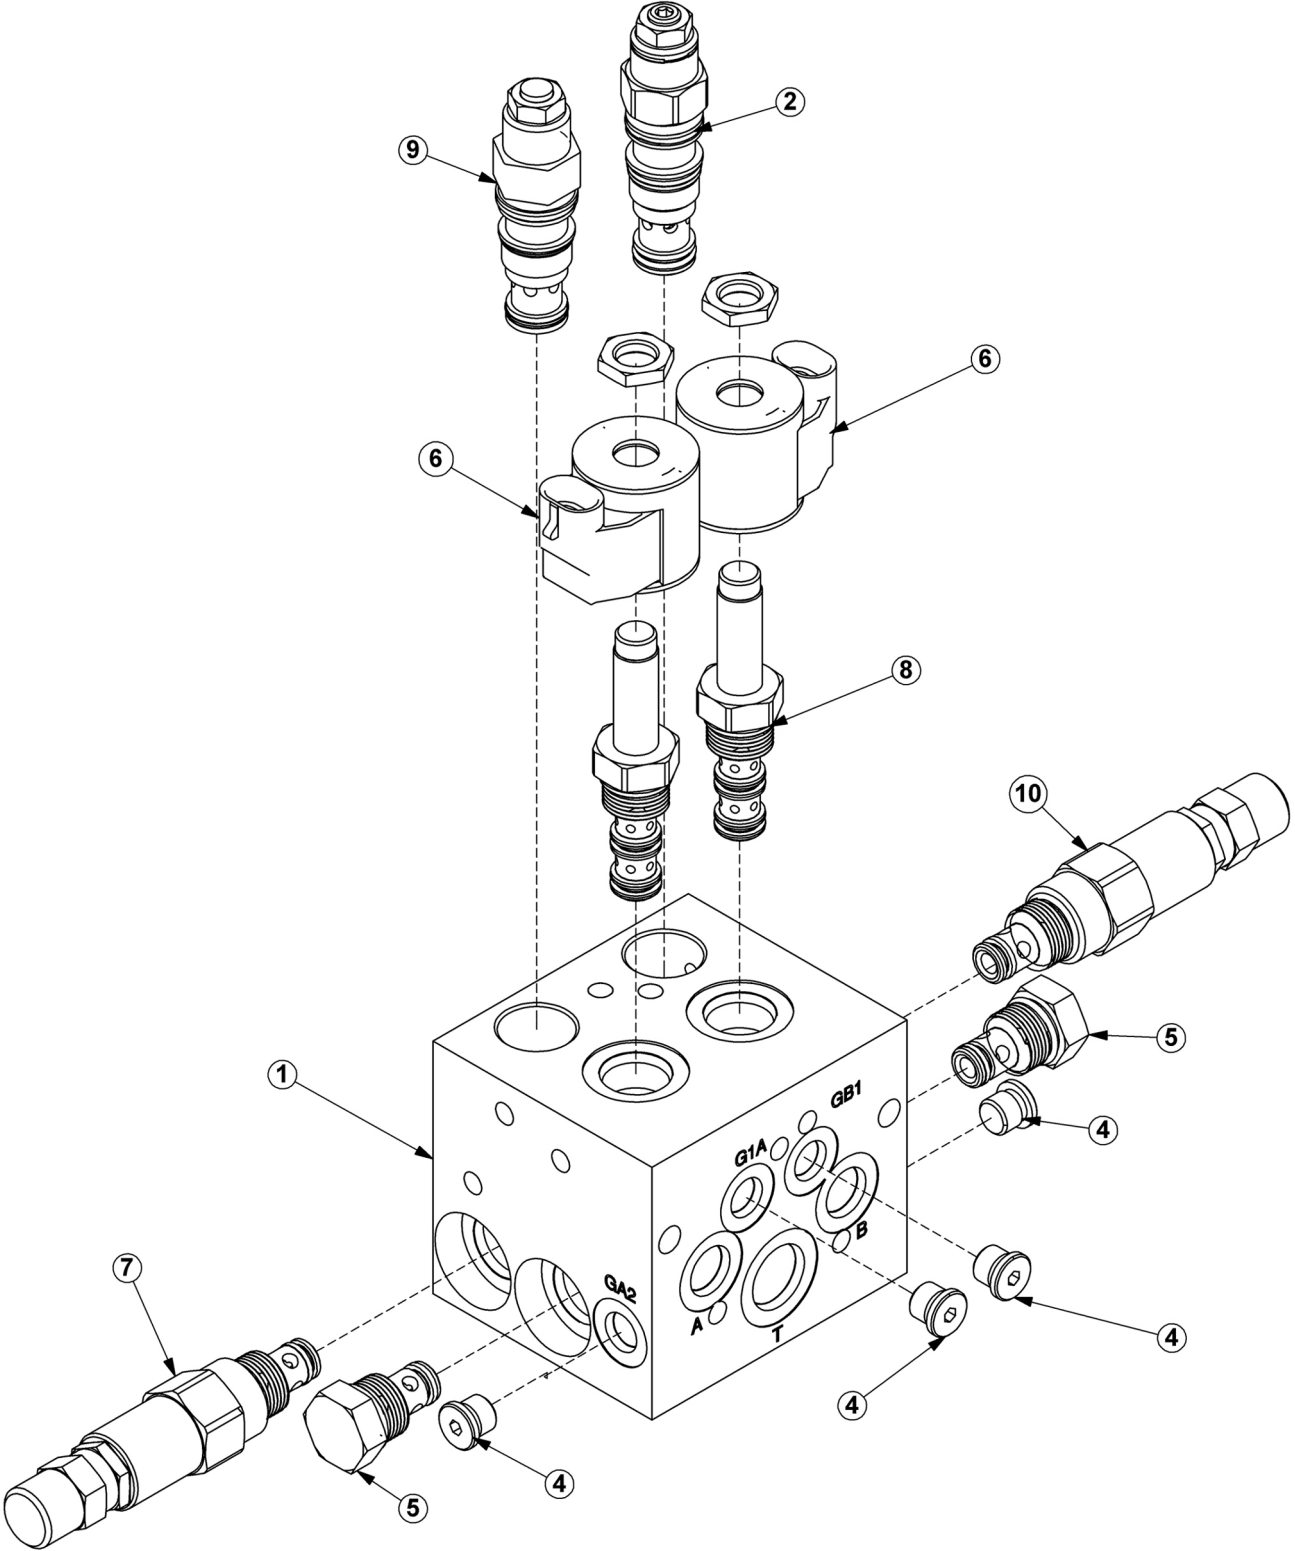


VALVE SELECTOR, RS

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|----------------------------|
| 1 | 06502145 | 1 | MANIFOLD |
| 2 | 06502144 | 1 | COUNTERBALANCE VALVE |
| 3 | 06502143 | 11 | EXPANDER PLUG 7MM |
| 4 | 06502142 | 4 | PLUG, SIZE-4 |
| 5 | 06502141 | 2 | CHECK VALVE |
| 6 | 06505145 | 2 | COIL, 12VDC, METRIPACK 150 |
| 7 | 06502140 | 1 | RELIEF VALVE, DIFF AREA |
| 8 | 06502139 | 2 | SOLENOID VALVE |
| 9 | 06502138 | 1 | COUNTERBALANCE VALVE |
| 10 | 06502137 | 1 | RELIEF VALVE, DIFF AREA |

PUMP DRIVESHAFT

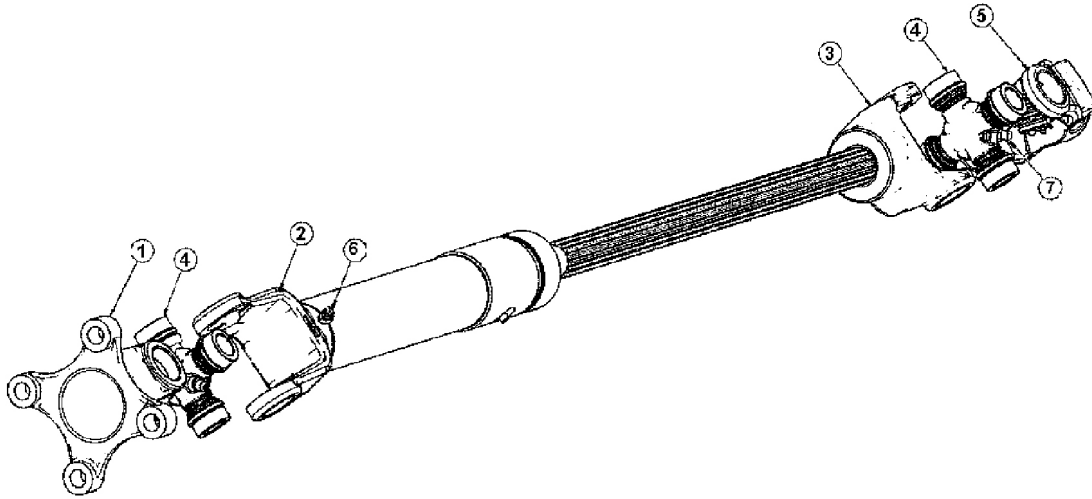


| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|-------------------------|
| --- | 34999 | 1 | DRIVESHAFT,U-JOINT,ASSY |
| 1 | 06505004 | 1 | YOKE PULLEY |
| 2 | 06505005 | 1 | SLEEVE |
| 3 | 06505006 | 1 | SHAFT |
| 4 | 06505007 | 2 | CROSS |
| 5 | 06505008 | 1 | YOKE DRIVE |
| 6 | 6T3203 | 1 | GREASE ZERK,1/4" X 45 |
| 7 | 6T3207 | 3 | GREASE ZERK,1/4" X STR |

NOTES

NOTES

BOOMREST AND AXLE BRACES

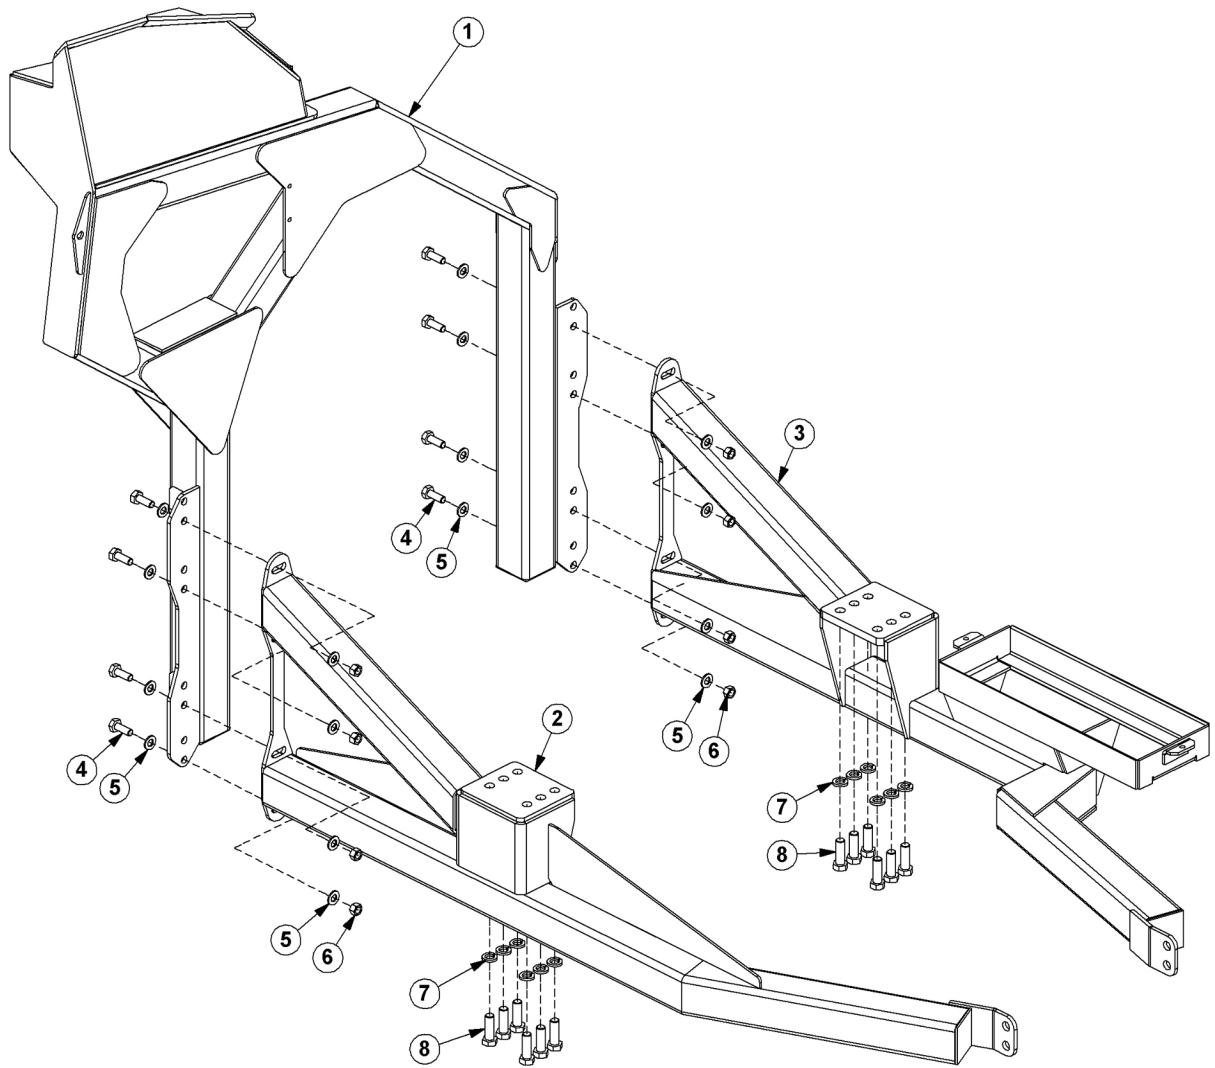


BOOMREST AND AXLE BRACES

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---------------------------|
| 1 | 06310156 | 1 | BOOMREST,LRS |
| 2 | 06300474 | 1 | AXLE BRACE,RH |
| 3 | 06300255 | 1 | AXLE BRACE,LH |
| 4 | 21782 | 8 | CAPSCREW,5/8" X 1-3/4",NC |
| 5 | 33764 | 16 | FLATWASHER,5/8",SAE |
| 6 | 21775 | 8 | HEX NUT,5/8",NC |
| 7 | 24881 | 12 | LOCKWASHER,20MM |
| 8 | 27281 | 12 | CAPSCREW,20MM X 60MM,2.5P |

PANORAMIC SAFETY SCREEN

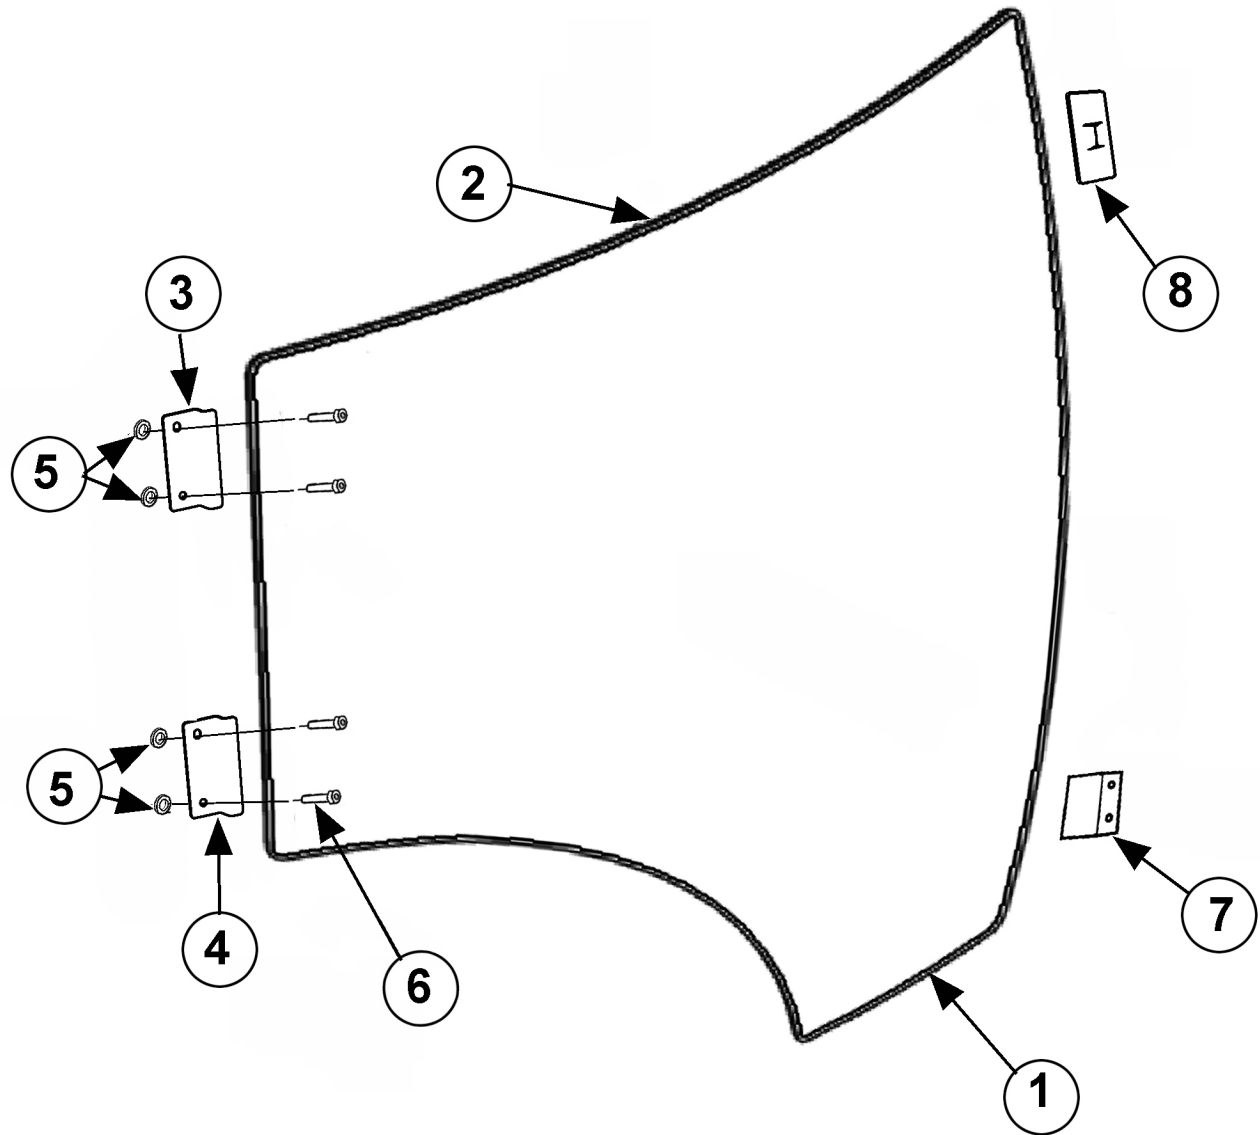

PANORAMIC SAFETY SCREEN






Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---------------------------------|
| 1 | 06490047 | 1 | POLYCARB, FRMD, JD6R,PAN, RH |
| 2 | 06537005 | 1 | ADHESIVE, WTHR STRP, BLK, 3M |
| 3 | 06330042 | 1 | BRKT, SFTY, SCRN, UPPR, JD61XXR |
| 4 | 06330041 | 1 | BRKT, SFTY, SCRN, LWR, JD61XXR |
| 5 | 06402170 | 4 | SPACER, 1X.56X.18 |
| 6 | 19M7561 | 4 | SCREW |
| 7 | L209050 | 1 | BRACKET |
| 8 | L209049 | 1 | BRACKET |

AXLE STABILIZER

HOSE ROUTING KEY

- A- FROM 1B PORT ON LIFT VALVE TO STABILIZER CYLINDER GLAND
- B- FROM 1B PORT ON LIFT VALVE TO MAIN BOOM CYLINDER BUTT
- C- FROM 1A PORT ON LIFT VALVE TO ACCUMULATOR
- D- FROM ACCUMULATOR TO MAIN BOOM CYLINDER GLAND
- E- FROM STABILIZER CYLINDER BUTT TO ACCUMULATOR

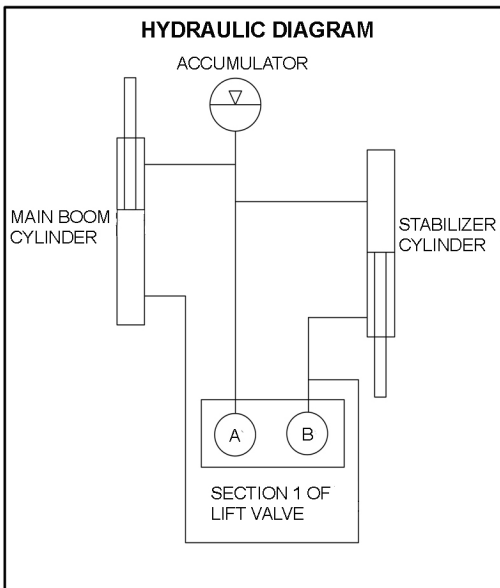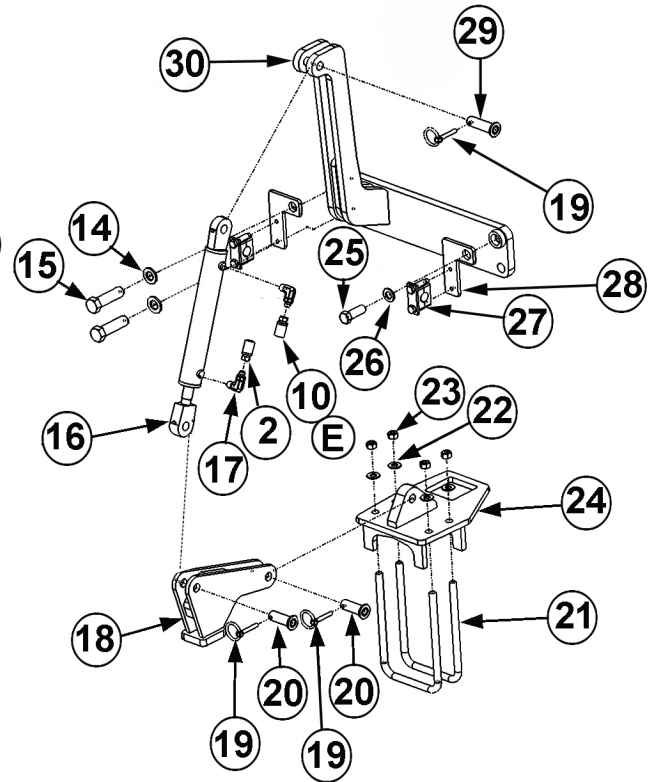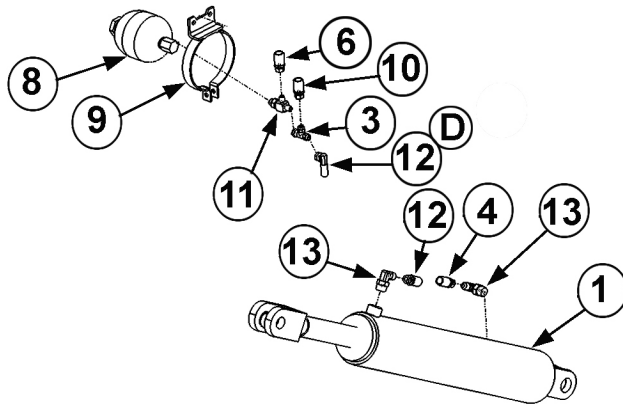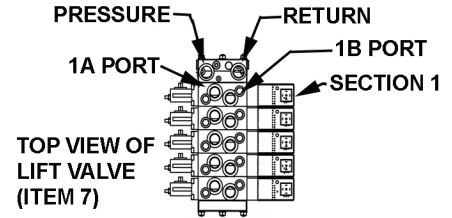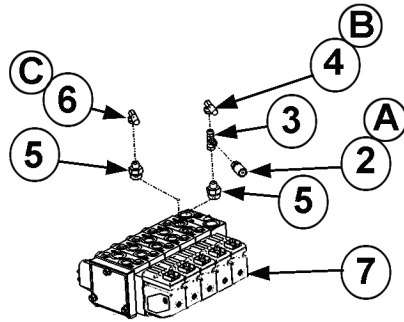


LOCATE HOLE IN ITEM 24 AROUND AXLE STOP ON RIGHT FRONT AXLE.
 USE ITEMS 21, 22, & 23 TO CLAMP ITEM 24 TO AXLE.
 AFTER INSTALLATION, ARTICULATE FRONT AXLE FROM STOP TO STOP AND EXTEND AND RETRACT CYLINDER FULLY TO ENSURE A PROPER FIT.

AXLE STABILIZER

Continued...


| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|-----------|------|--------------------------------------|
| 10 | --- | - | BOOM CYLINDER |
| 20 | 06500149 | 1 | HOSE, #4, 6FJX90X6FJX |
| 30 | 06503048 | 2 | RUN TEE, 3/8MJ X 3/8FJX X 3/8MJ |
| 40 | --- | - | HOSE |
| 50 | ---- | - | ADAPTER |
| 60 | --- | - | HOSE |
| 70 | ---- | - | LIFT VALVE |
| 80 | --- | - | ACCUMULATOR |
| 90 | ----- | - | ACCUMULATOR BRKT |
| 100 | 065000149 | 1 | HOSE, #4, 6FJX90X6FJX |
| 110 | --- | - | RUN TEE |
| 120 | ---- | - | HOSE |
| 130 | --- | - | ELBOW |
| 140 | 33880 | 2 | FLATWASHER, 3/4, GR8, SAE |
| 150 | 32703 | 2 | CAPSCREW, 20MM X 100MM, 2.5P, GR10.9 |
| 160 | 33785 | 1 | CYLINDER, 1-1/2 X 8 |
| 170 | 06503055 | 2 | ELBOW, 1/4ORB X 3/8MJ |
| 180 | 06310132 | 1 | LINK, PIVOT, STABILIZER |
| 190 | RD1032 | 3 | LYNCH PIN |
| 200 | 33984 | 2 | PIN, 3/4 X 2-7/16 |
| 210 | 06420140 | 2 | U-BOLT |
| 220 | 06533004 | 4 | FLATWASHER, 1/2, GR8, SAE |
| 230 | 21700 | 4 | HEX NUT, 1/2, UNE |
| 240 | 06310133 | 1 | MOUNT, AXLE |
| 250 | ---- | - | CAPSCREW |
| 260 | --- | - | FLATWASHER |
| 270 | ---- | - | CLAMP KIT |
| 280 | --- | - | BRACKET |
| 290 | 34799 | 1 | PIN, 3/4 X 2-15/16 |
| 300 | 06310177 | 1 | STABILIZER, AXLE, CYL MNT, JD6140-50 |

WHEEL SPACER

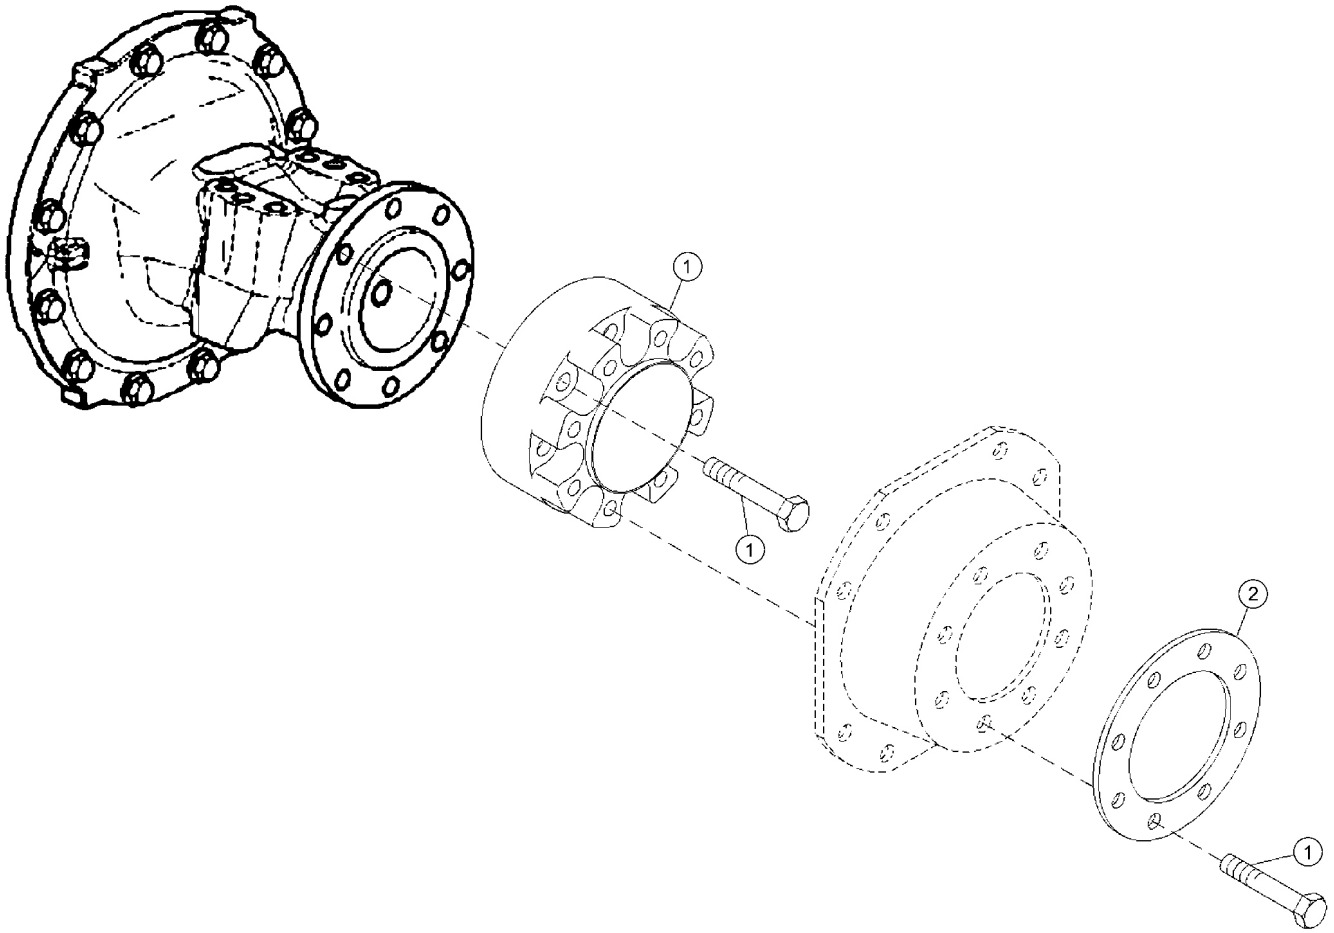

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|----------------------|
| 1 | 06770025 | 1 | KIT,SPCR,WHL,JD |
| 2 | 06400919 | 1 | RING,SPACER,WHEEL,JD |

WHEEL WEIGHT

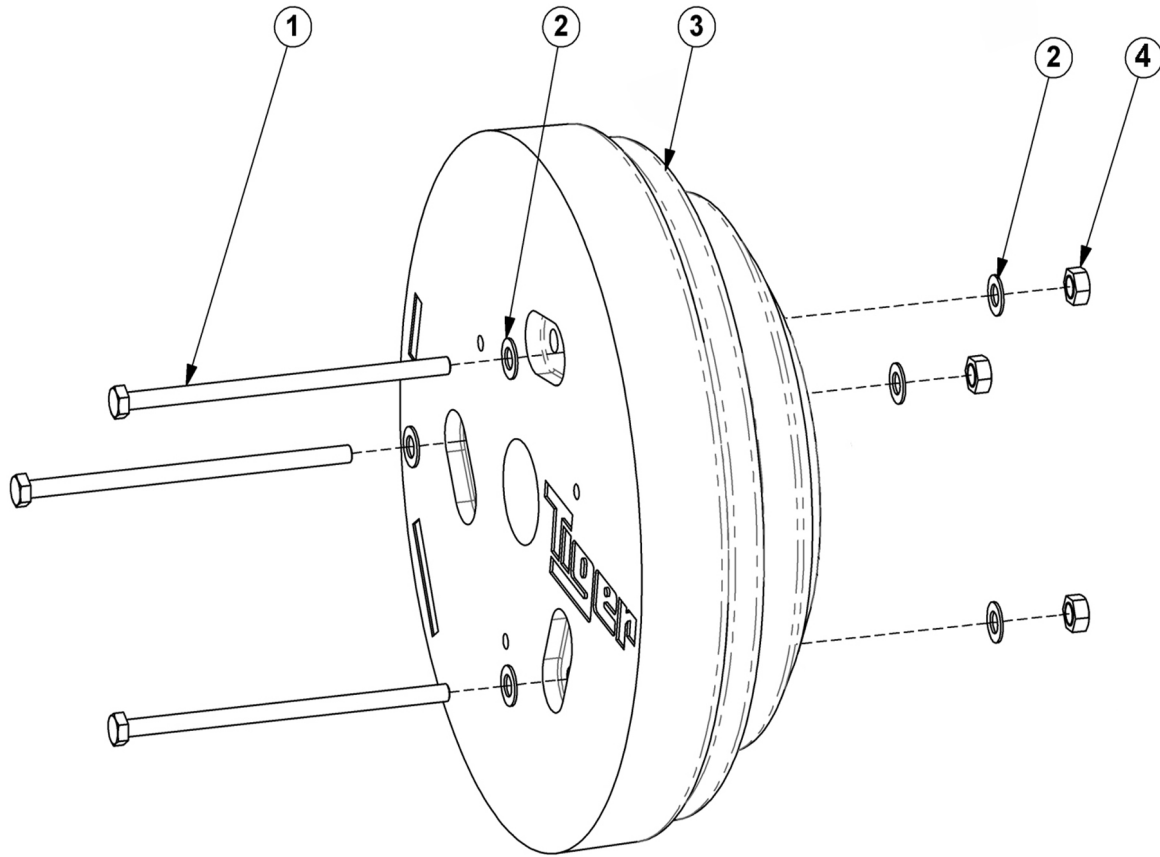

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|------------------------------------|
| 1 | 06530213 | 3 | CAPSCREW,7/8" X 16",NC,GR8, 3"THRD |
| 2 | 06533000 | 6 | FLATWASHER,7/8",GR8 |
| 3 | 32615 | 1 | WHEEL WEIGHT,1700# |
| 4 | 06531000 | 3 | HEX NUT,7/8",NC,GR8 |

NOTES

COMMON LEGAL REAR STOW T4

PARTS SECTION

PART NAME INDEX

| | |
|--|----|
| PARTS ORDERING GUIDE..... | 4 |
| BENGAL BRUTE HOSE ROUTING..... | 5 |
| BENGAL BRUTE BOOM ASSY T4..... | 6 |
| BENGAL BRUTE BOOM HOSES..... | 8 |
| BOOMREST..... | 10 |
| LEGAL REAR STOW RTRY PIVOT ASSY..... | 12 |
| LEGAL REAR STOW FLAIL PIVOT ASSY..... | 14 |
| 60IN ROTARY MOWER ASSEMBLY..... | 16 |
| 50IN ROTARY MOWER ASSEMBLY..... | 18 |
| 50IN ROTARY KNIVES AND DISH..... | 20 |
| 50IN ROTARY BLADE BAR AND KNIVES..... | 21 |
| 60IN ROTARY KNIVES AND DISH..... | 22 |
| 60IN ROTARY BLADE BAR AND KNIVES..... | 23 |
| 50IN FLAIL DRIVE ASSEMBLY..... | 24 |
| 50IN FLAIL MOWER ASSEMBLY..... | 26 |
| 50IN FLAIL MOWER ASSY, PASS-THROUGH KNIVES..... | 28 |
| 63IN FLAIL DRIVE ASSEMBLY..... | 30 |
| 63IN FLAIL MOWER ASSEMBLY..... | 32 |
| 3 IN X 13-7/8 IN WELDED CYLINDER BREAKDOWN..... | 34 |
| 3IN X 18IN WELDED CYLINDER BREAKDOWN..... | 35 |
| 3-1/2IN X 20IN WELDED CYLINDER BREAKDOWN..... | 36 |
| 4IN X 20IN WELDED CYLINDER BREAKDOWN..... | 37 |
| ROTARY MOWER SPINDLE ASSEMBLY..... | 38 |
| PUMP AND GRILL GUARD OPTIONS..... | 40 |
| RESERVOIR TANK FILTER ASSEMBLY..... | 41 |
| 5 SPOOL ELECTRONIC VALVE - BENGAL BRUTE..... | 42 |
| FRONT HYDRAULIC PUMP..... | 44 |
| 50IN AND 60IN ROTARY MOTOR BREAKDOWN..... | 46 |
| FLAIL MOTOR BREAKDOWN..... | 48 |
| MANUAL LIFT VALVE SWITCH BOX..... | 50 |
| MANUAL LIFT VALVE SCHEMATIC..... | 51 |
| ELECTRONIC LIFT VALVE SWITCH BOX..... | 52 |
| ELECTRONIC LIFT VALVE SCHEMATIC - REAR STOW..... | 53 |
| ELECTRONIC LIFT VALVE WIRING DIAGRAM..... | 54 |
| BOOM TRAVEL LOCK..... | 55 |
| SELECTOR VALVE SCHEMATIC..... | 56 |
| BRAKE VALVE ASSEMBLY..... | 57 |
| BRAKE VALVE HYDRAULIC SCHEMATIC..... | 58 |
| HYDRAULIC TROUBLESHOOTING GUIDE..... | 59 |
| ELECTRICAL TROUBLESHOOTING GUIDE..... | 60 |

COMMON LEGAL REAR STOW T4

PART NAME INDEX


| | |
|----------------------------------|----|
| TROUBLESHOOTING..... | 61 |
| TROUBLESHOOTING - CONTINUED..... | 62 |
| NOTES..... | 63 |

PARTS ORDERING GUIDE

The following instructions are offered to help eliminate needless delay and error in processing purchase orders for the equipment in this manual.

1. The Parts Section is prepared in logical sequence and grouping of parts that belong to the basic machine featured in this manual. Part Numbers and Descriptions are given to help locate the parts and quantities required.
2. The Purchase Order must indicate the **Name and Address** of the person or organization ordering the parts, **who should be charged**, and if possible, the **serial number of the machine** for which the parts are being ordered.
3. The purchase order must clearly list the **quantity of each part**, the complete and correct **part number**, and the basic **name of the part**.
4. The manufacturer reserves the right to substitute parts where applicable.
5. Some parts may be unlisted items which are special production items not normally stocked and are subject to special handling. Request a quotation for such parts before sending a purchase order.
6. The manufacturer reserves the right to change prices without prior notice.

NOTE: When ordering replacement decals, refer to the part numbers and descriptions listed in the safety section in the front of this manual.

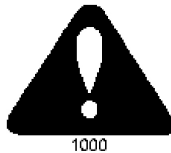


For maximum safety and to guarantee optimum product reliability, always use genuine **Tiger** replacement parts. The use of inferior replacement parts may cause premature or catastrophic failure which could result in serious injury or death.

Direct any questions regarding parts to:

Tiger Corporation
3301 N. Louise Ave.
Sioux Falls, SD 57107
1-800-843-6849
1-605-336-7900


BENGAL BRUTE HOSE ROUTING

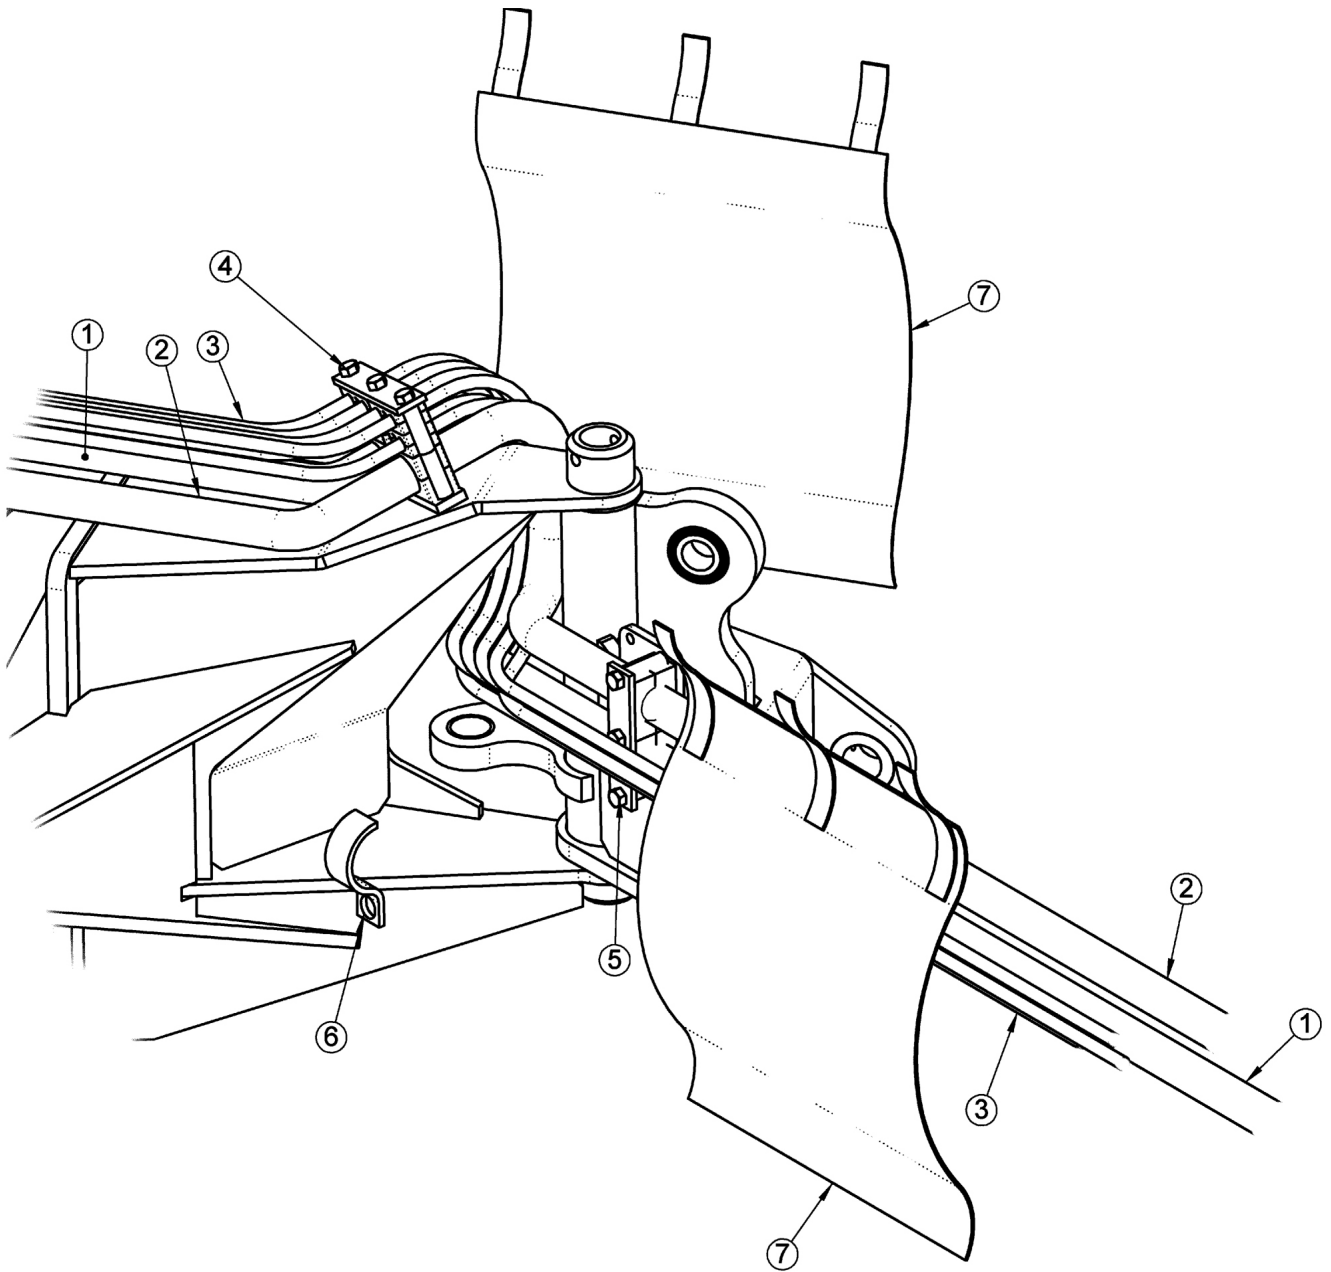

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---------------------------------|
| 1 | ----- | 1 | 1" HOSE TO MAIN BOOM LOWER TUBE |
| 2 | ----- | 1 | 1" HOSE TO MAIN BOOM UPPER TUBE |
| 3 | ----- | 6 | 1/4" HOSE TO MAIN BOOM |
| 4 | 06505085 | 1 | CLAMP KIT |
| 5 | 35131 | 1 | CLAMP KIT |
| 6 | TB3012 | 1 | CLAMP |
| 7 | 06505021 | 2 | HOSE COVER |

COMMON LEGAL REAR STOW T4

BENGAL BRUTE BOOM ASSY T4

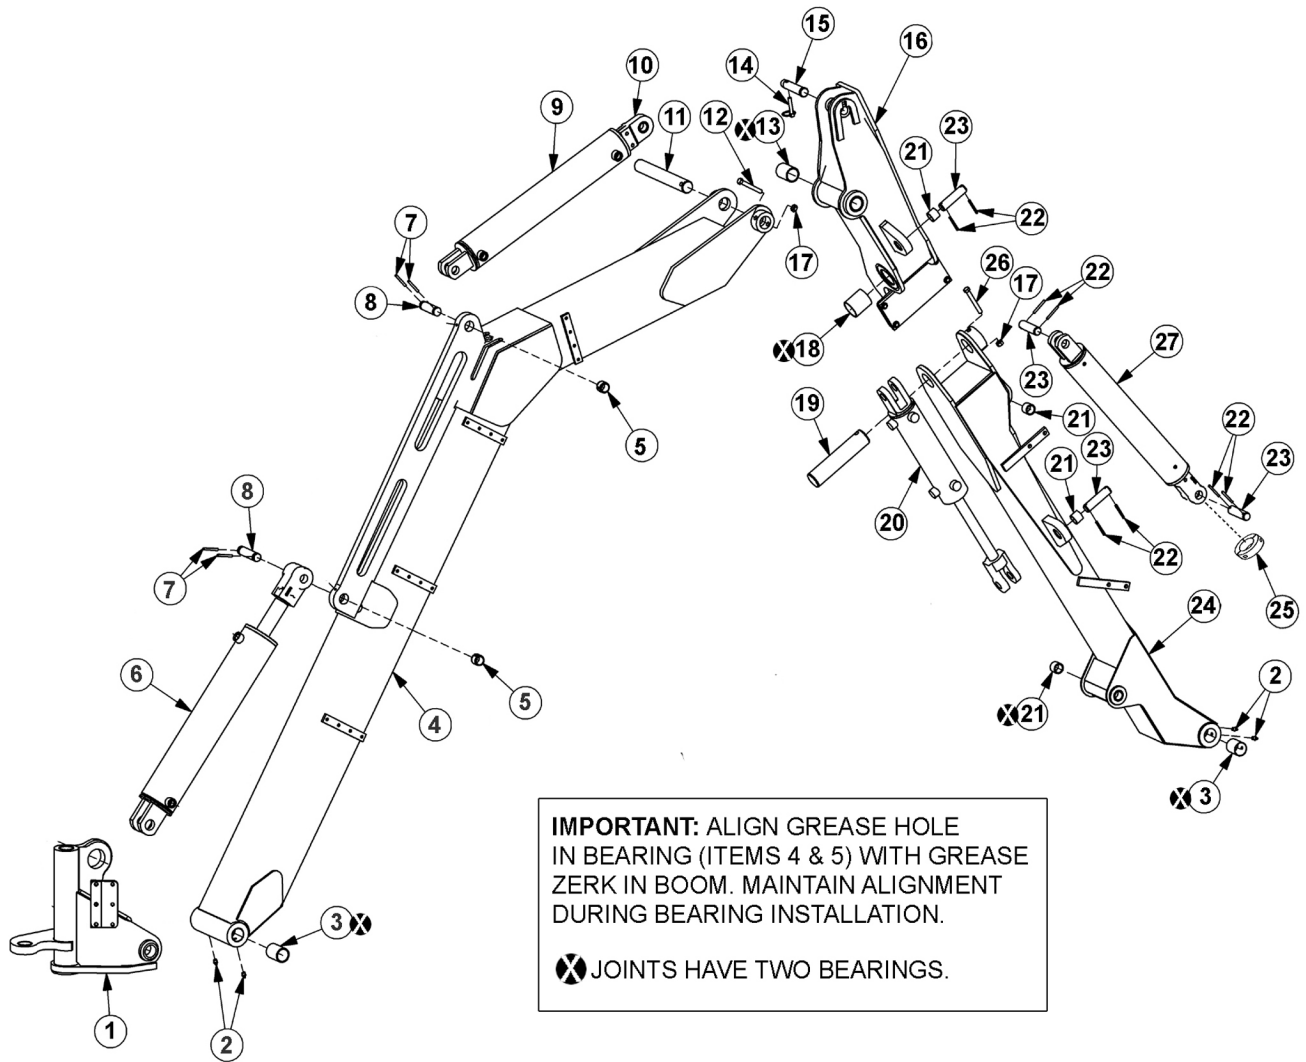

BENGAL BRUTE BOOM ASSY T4


Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---|
| 1 | 06700016 | - | SWIVEL ASSY *REFER TO TRACTOR MOUNT KIT |
| 2 | 6T3711 | 4 | GREASE ZERK, 1/8" NPT |
| 3 | 32321 | 4 | BUSHING, 1-1/2ID X 2 |
| 4 | 06700189 | 1 | MAIN BOOM ARM ASSY |
| 5 | TB3010 | 2 | BUSHING, 1ID |
| 6 | 06501020 | 1 | CYLINDER, 5 X 20 |
| 7 | 6T3014 | 2 | ROLLPIN, 1/4 X 2 |
| 8 | TB1045B | 2 | PIN, 1-1/4 X 3-3/8 |
| 9 | 06501022 | 1 | CYLINDER, 4 X 20 |
| 10 | 30172 | 1 | CLEVIS W/SPHERICAL BEARING |
| 11 | 06420015 | 1 | PIN, 1-1/2 X 11-3/4 |
| 12 | 21688 | 2 | CAPSCREW, 7/16 X 3-1/4, NC |
| 13 | 06520411 | 2 | BUSHING, 1-1/2ID X 2-1/2 |
| 14 | TF1143 | 1 | LYNCH PIN, 7/16 X 2 |
| 15 | TB1036 | 1 | PIN, 1 X 4-11/16 |
| 16 | 06700036 | 1 | KNUCKLE BOOM ARM ASSY |
| 17 | 21677 | 3 | NYLOCK NUT, 7/16 NC |
| 18 | 06520077 | 2 | BUSHING, 2ID X 2-1/2 |
| 19 | 06420017 | 1 | PIN, 1-3/4 X 8-9/16 |
| 20 | 06501021 | 1 | CYLINDER, 3 X 10 |
| 21 | 06520076 | 4 | BUSHING, 2ID X 1 |
| 22 | TB1023 | 10 | ROLLPIN, 7/32 |
| 23 | 06420014 | 4 | PIN, 1 X 3-5/8 |
| 24 | 06700187 | 1 | SECONDARY BOOM ARM ASSY |
| 25 | 35312 | 1 | SET COLLAR, 1.38ID (FOR ROTARY MOWERS) |
| --- | 35312 | 2 | SET COLLAR, 1.38ID (FOR FLAIL MOWERS) |
| 26 | 21689 | 1 | CAPSCREW, 7/16 X 3-1/2 |
| 27 | 06501023 | 1 | CYLINDER, 3 X 18 |

COMMON LEGAL REAR STOW T4

BENGAL BRUTE BOOM HOSES

BUNDLE ALL 1/4 INCH HOSES TOGETHER WITH ZIP TIES. WRAP WITH SPLIT HOSE WHERE THEY PASS THROUGH HOSE CLAMPS.

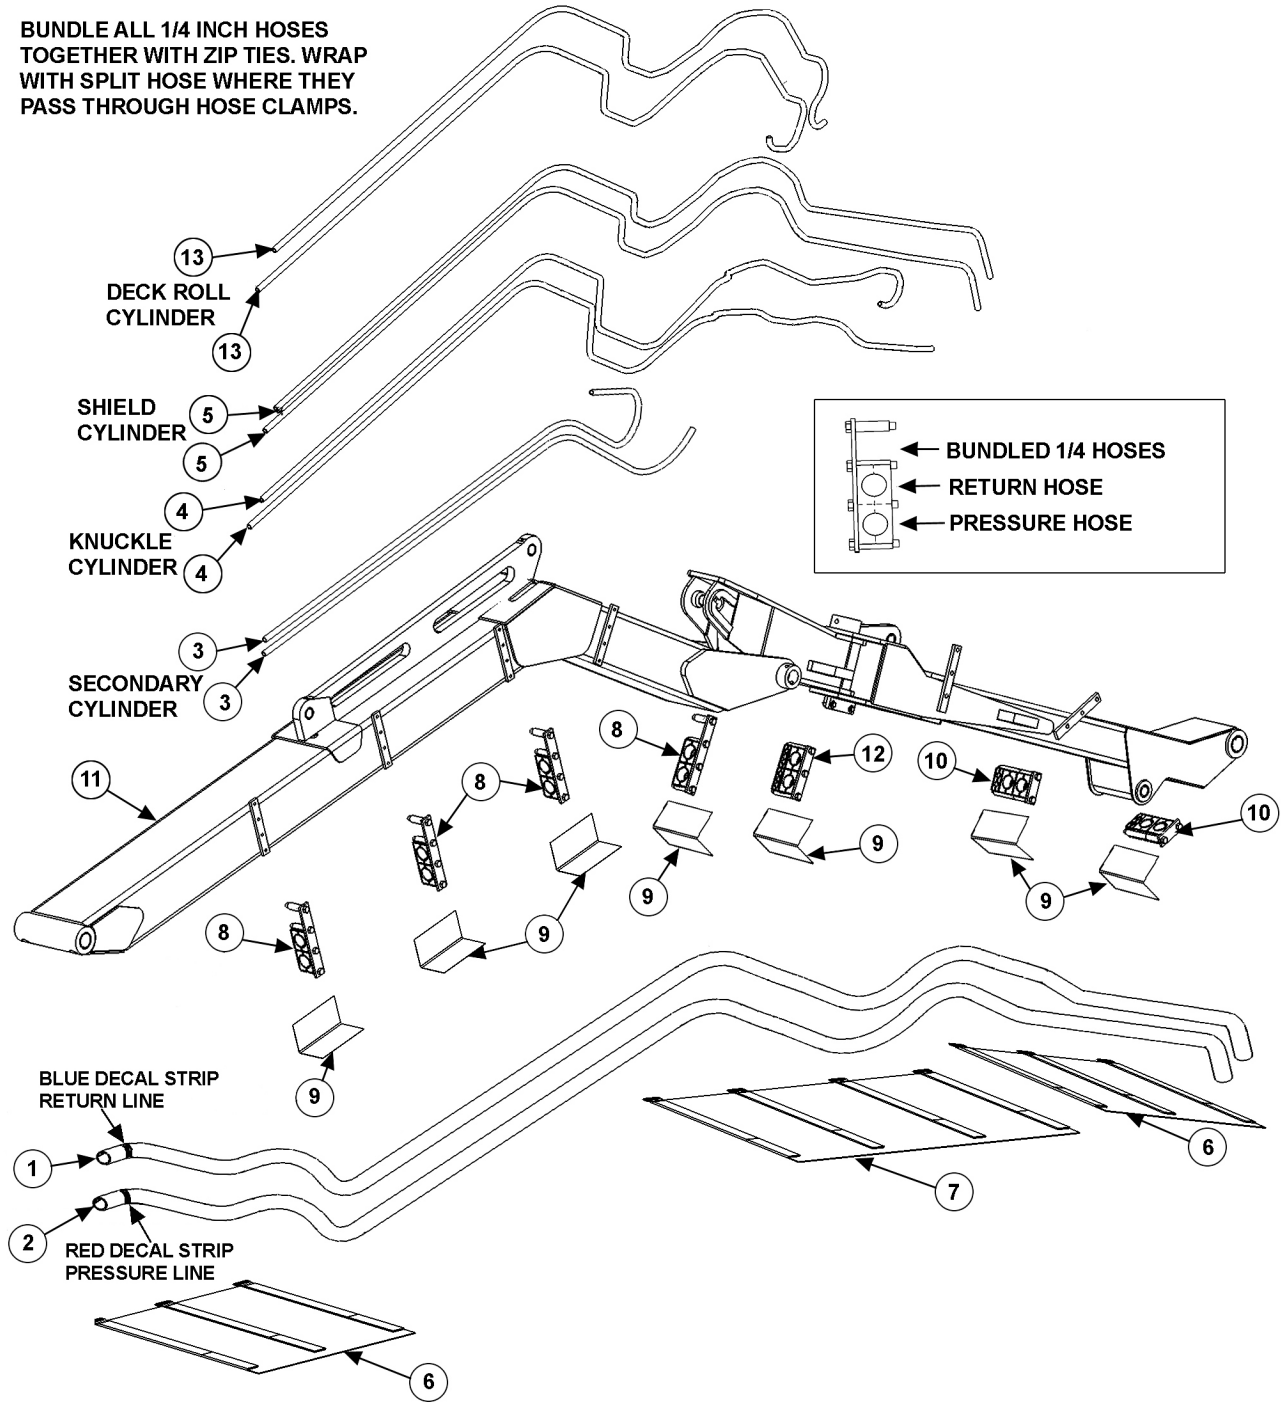


BENGAL BRUTE BOOM HOSES

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|-----------------------------------|
| 1 | 06500686 | 1 | HOSE, #16X218" (RETURN) |
| 2 | 06500685 | 1 | HOSE, #16X226" (PRESSURE) |
| 3 | 06500694 | 2 | HOSE, #4X83" |
| 4 | 06500709 | 4 | HOSE, #4X142" |
| 5 | 06500690 | 2 | HOSE #4X155" |
| 6 | 06505021 | 2 | HOSE WRAP |
| 7 | 06505022 | 1 | HOSE WRAP |
| 8 | 06505024 | 3 | CLAMP KIT |
| 9 | 6T3200 | 5 | SPLIT HOSE |
| 10 | 06505019 | 5 | CLAMP KIT |
| 11 | --- | - | LRS BOOM ASSY *REFER TO BOOM ASSY |
| 12 | 06505116 | 1 | CLAMP KIT |
| 13 | 06500015 | 2 | HOSE, #4 X 146" |

BOOMREST

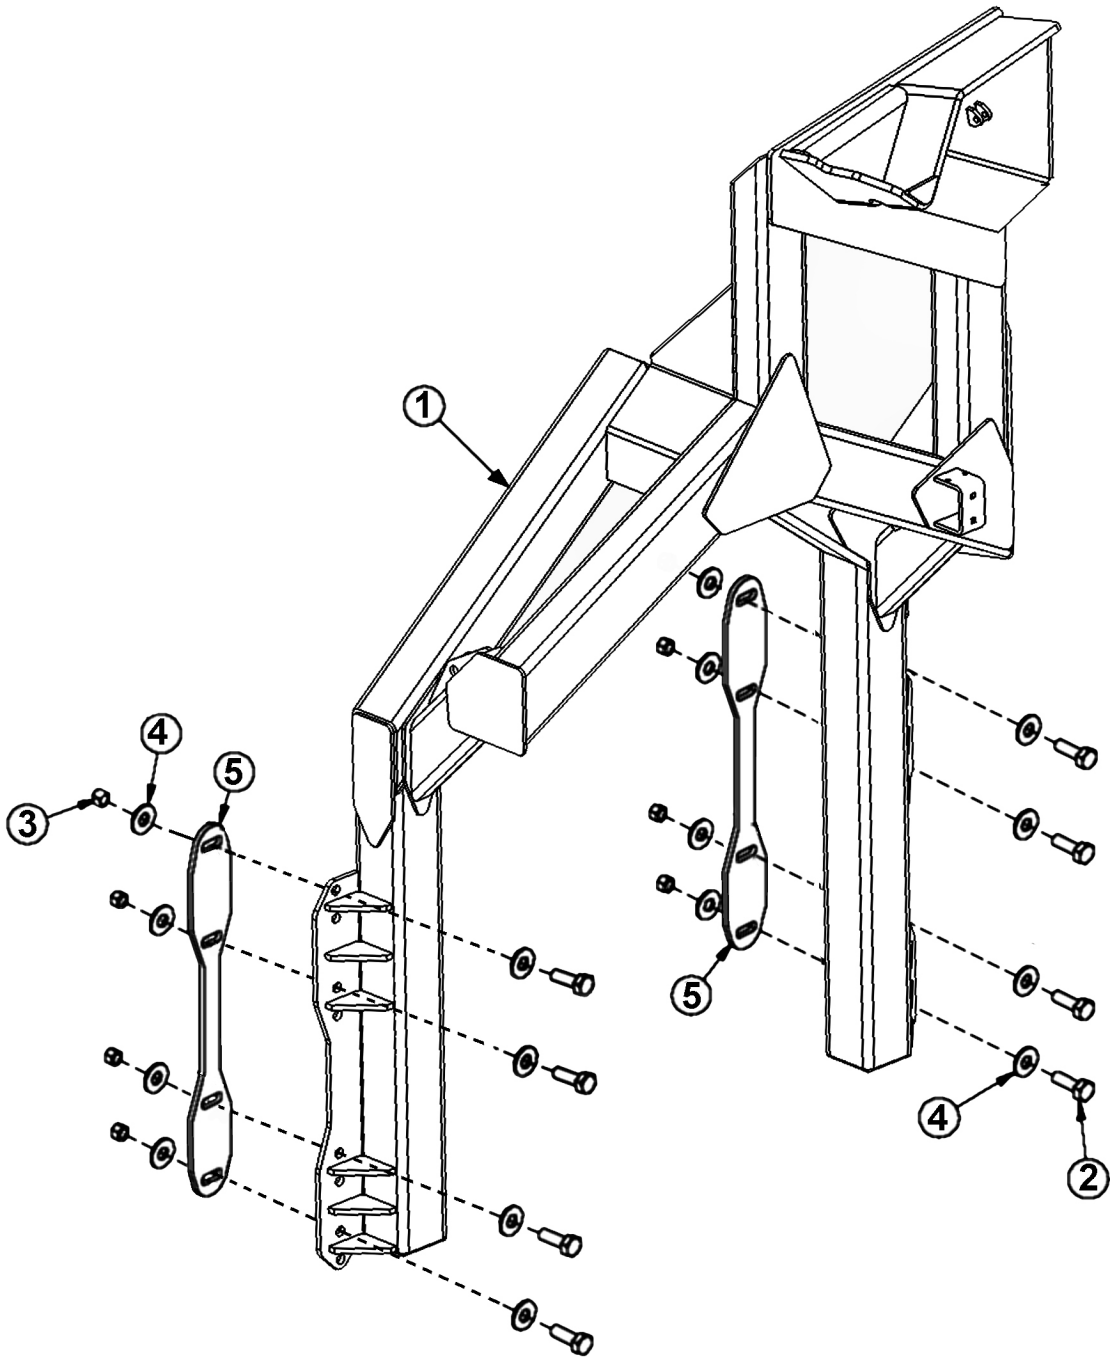

COMMON LEGAL REAR STOW T4


BOOMREST

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|--|
| 1 | 06310125 | 1 | BOOMREST, LRS, CT |
| 2 | 21782 | 8 | CAPSCREW, 5/8" X 1-3/4" NC |
| 3 | 21777 | 8 | NYLOCK NUT, 5/8" NC, GR8 |
| 4 | 33764 | 16 | FLATWASHER, 5/8", GR8 SAE |
| 5 | --- | - | AXLE BRACE *REFER TO TRACTOR MOUNT KIT |

LEGAL REAR STOW RTRY PIVOT ASSY

MOTOR SERIAL TAG ON
SHIELD SIDE OF MOWER
(MOTOR OFFSET TOWARDS BACK)

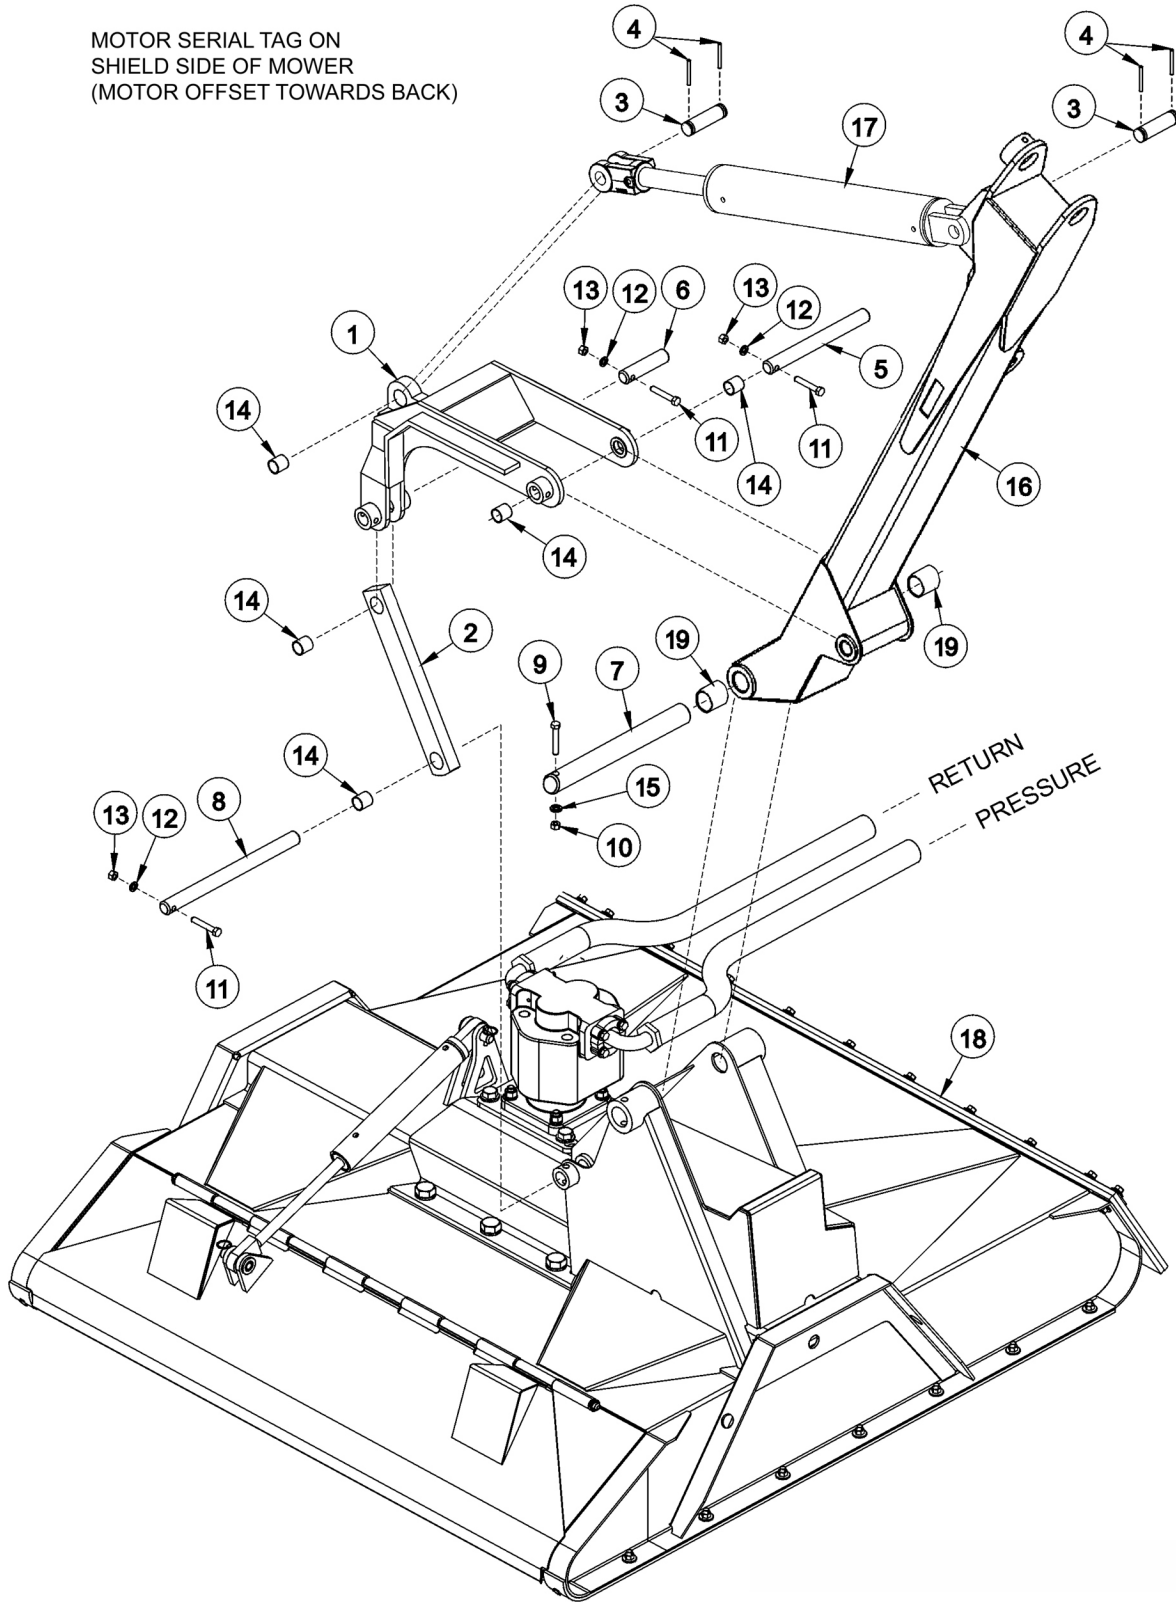

LEGAL REAR STOW RTRY PIVOT ASSY

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---|
| 1 | 06700016 | 1 | PIVOT ASSEMBLY |
| 2 | 06700015 | 1 | PIVOT ARM ASSEMBLY |
| 3 | 06420014 | 2 | PIN, CLEVIS |
| 4 | TB1023 | 4 | ROLL PIN |
| 5 | 06420019 | 1 | PIN |
| 6 | 06420020 | 1 | PIN |
| 7 | 06420016 | 1 | PIN |
| 8 | 06420021 | 1 | PIN |
| 9 | 21688 | 1 | CAPSCREW 7/16" X 2-3/4", NC |
| 10 | 21675 | 1 | HEX NUT, 7/16", NC |
| 11 | 21635 | 3 | CAPSCREW 3/8" X 2 1/4" |
| 12 | 21988 | 3 | LOCKWASHER 3/8" |
| 13 | 21625 | 3 | HEX NUT 3/8" |
| 14 | 06520076 | 5 | BEARING, 1ID X 1 |
| 15 | 21989 | 1 | LOCKWASHER 7/16" |
| 16 | ----- | - | SECONDARY BOOM *REFER TO BOOM ARM ASSY |
| 17 | ----- | - | CYLINDER *REFER TO BOOM ARM ASSY |
| 18 | ----- | - | ROTARY MOWER HEAD *REFER TO ROTARY DECK |
| 19 | 06520411 | 2 | BEARING, 1.50ID X 2.50 |

COMMON LEGAL REAR STOW T4

LEGAL REAR STOW FLAIL PIVOT ASSY


Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|--|
| 1 | 06700029 | 1 | PIVOT ASSEMBLY |
| 2 | 06700201 | 1 | PIVOT ARM ASSEMBLY |
| 3 | 06420014 | 2 | PIN CLEVIS |
| 4 | TB1023 | 4 | ROLL PIN |
| 5 | 06420019 | 1 | PIN |
| 6 | 06420020 | 1 | PIN |
| 7 | 06420018 | 1 | PIN |
| 8 | 06420021 | 1 | PIN |
| 9 | 21688 | 1 | CAPSCREW 7/16" X 3 1/4" |
| 10 | 21989 | 1 | LOCKWASHER 7/16" |
| 11 | 21675 | 1 | HEX NUT 7/16" |
| 12 | 21635 | 2 | CAPSCREW 3/8" X 2 1/4" |
| 13 | 21988 | 2 | LOCKWASHER 3/8" |
| 14 | 21625 | 2 | HEX NUT 3/8" |
| 15 | 06520076 | 5 | BEARING, 1ID X 1 |
| 16 | TB3031 | 1 | DOUBLE HOSE CLAMP (USED ON THE 63" FLAIL) |
| 16A | 31723 | 1 | CLAMP KIT, TBF 50 (USED ON THE 50" FLAIL) |
| 17 | ----- | - | CYLINDER - REFER TO BOOM ARM ASY |
| 18 | ----- | - | SECONDARY BOOM - REFER TO BOOM ARM ASY |
| 19 | ----- | - | FLAIL MOWER HEAD - REFER TO FLAIL CUTTER ASY |
| 20 | 06520075 | 2 | BEARING, 1.50ID X 2.50 |
| 21 | 06500158 | 1 | HOSE, 1" X 145" (USED ON THE 50" FLAIL) |
| 22 | 06500159 | 1 | HOSE, 1" X 158" (USED ON THE 50" FLAIL) |
| 23 | 06500159 | 2 | HOSE, 1" X 158" (USED ON THE 63" FLAIL) |
| 24 | 35312 | 2 | SPLIT COLLAR (USED ON FLAILS ONLY) |

COMMON LEGAL REAR STOW T4

60IN ROTARY MOWER ASSEMBLY

LINK TO THE SHIELD (OPTIONAL)

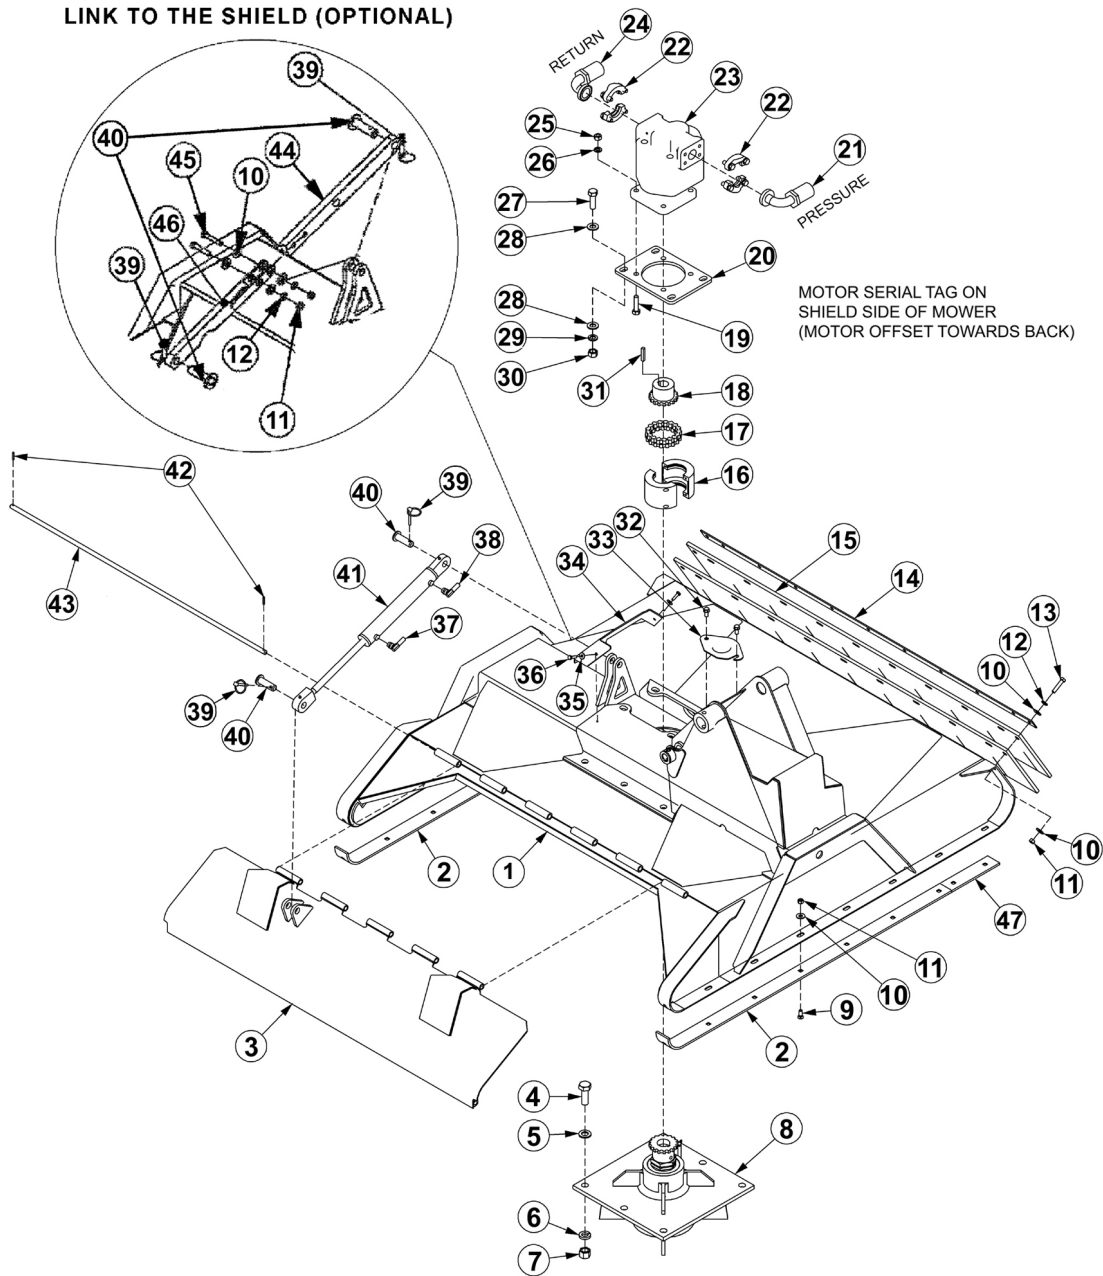

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|--------------------------------|
| 1 | 06320159 | 1 | DECK,WLDMNT,60" RTRY |
| 2 | 33777 | 2 | SKID SHOE,RTRY |
| 3 | 06320162 | 1 | SHIELD,60"RTRY |
| 4 | 33879 | 6 | CAPSCREW, 3/4 X 2 1/4,NF GR 8 |
| 5 | 33880 | 6 | FLATWASHER,3/4",GR 8,SAE |
| 6 | 21993 | 6 | LOCKWASHER,3/4",GR 8 |
| 7 | 6T2413 | 6 | HEX NUT,3/4,NF,GR 8 |
| 8 | 6T1024H5 | 1 | SPINDLE ASSY,CPLT,HD,5/8 HOLES |

COMMON LEGAL REAR STOW T4

60IN ROTARY MOWER ASSEMBLY


Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------------|-----------------|-------------|-------------------------------|
| 9 | 6T2270 | 16 | PLOW BOLT,3/8" X 1" NC |
| 10 | 22016 | 33 | FLATWASHER,3/8" |
| 11 | 21625 | 20 | HEX NUT,3/8",NC |
| 12 | 21988 | 11 | LOCKWASHER, 3/8" |
| 13 | 21633 | 11 | CAPSCREW, 3/8 X 1 3/4,NC |
| 14 | 6T0823 | 1 | FLAP RETAINER,60" RTRY |
| 15 | 06520238 | 2 | FLAP,60" RTRY |
| 16 | 6T1033 | 1 | COUPLER COVER |
| 17 | 6T1029 | 1 | COUPLER CHAIN |
| 18 | 21223 | 1 | SPROCKET |
| 19 | 21733 | 4 | CAPSCREW, 1/2 X 2,NC |
| 20 | 33776 | 1 | MOTOR MOUNT,PLATE,RTRY |
| 21 | 24490 | 1 | HOSE - PRESSURE |
| --- | 06500155 | 1 | HOSE-PRESSURE (LRS ONLY) |
| 22 | TF4852 | 2 | FLANGE KIT - #20 |
| 23 | 6504011 | 1 | MOTOR |
| 24 | 24489 | 1 | HOSE - RETURN |
| --- | 06500154 | 1 | HOSE-RETURN (LRS ONLY) |
| 25 | 21725 | 4 | HEX NUT, 1/2" NC |
| 26 | 06533004 | 4 | FLATWASHER, 1/2" |
| 27 | 6T2290 | 4 | CAPSCREW,5/8X2,NF GR 8 |
| 28 | 33764 | 8 | FLATWASHER,5/8",GR 8,SAE |
| 29 | 21992 | 4 | LOCKWASHER, 5/8 |
| 30 | 6T2408 | 4 | HEX NUT, 5/8, NF |
| 31 | TF1124 | 1 | SQUARE KEY |
| 32 | 33881 | 2 | CAPSCREW,FLG, 3/8 X 3/4,NC |
| 33 | 33779 | 1 | PLATE,COVER,KNF HOLE |
| 34 | 06410439 | 1 | COVER |
| 35 | 22014 | 2 | FLATWASHER,1/4 |
| 36 | 21530 | 2 | CAPSCREW,1/4 X 1,NC |
| 37 | 34187 | 1 | HOSE 1/4" X 75" |
| 38 | 34186 | 1 | HOSE 1/4" X 66" |
| 39 | RD1032 | 2 | LYNCH PIN |
| 40 | 33984 | 2 | PIN,SHIELD |
| 41 | 33785 | 1 | 1-1/2" X 8", CYLINDER, WELDED |
| 42 | 6T3017 | 2 | ROLLPIN |
| 43 | 06420139 | 1 | HINGE PIN,60" RTRY |
| 44 | 33772 | 1 | LINK, SHIELD,RTRY |
| 45 | 21634 | 2 | CAPSCREW, 3/8" X 2, NC |
| 46 | 33773 | 1 | LINK 2, SHIELD,RTRY |
| 47 | 06401245 | 2 | SKID SHOE,TRB60 |

COMMON LEGAL REAR STOW T4

50IN ROTARY MOWER ASSEMBLY

LINK TO THE SHIELD (OPTIONAL)

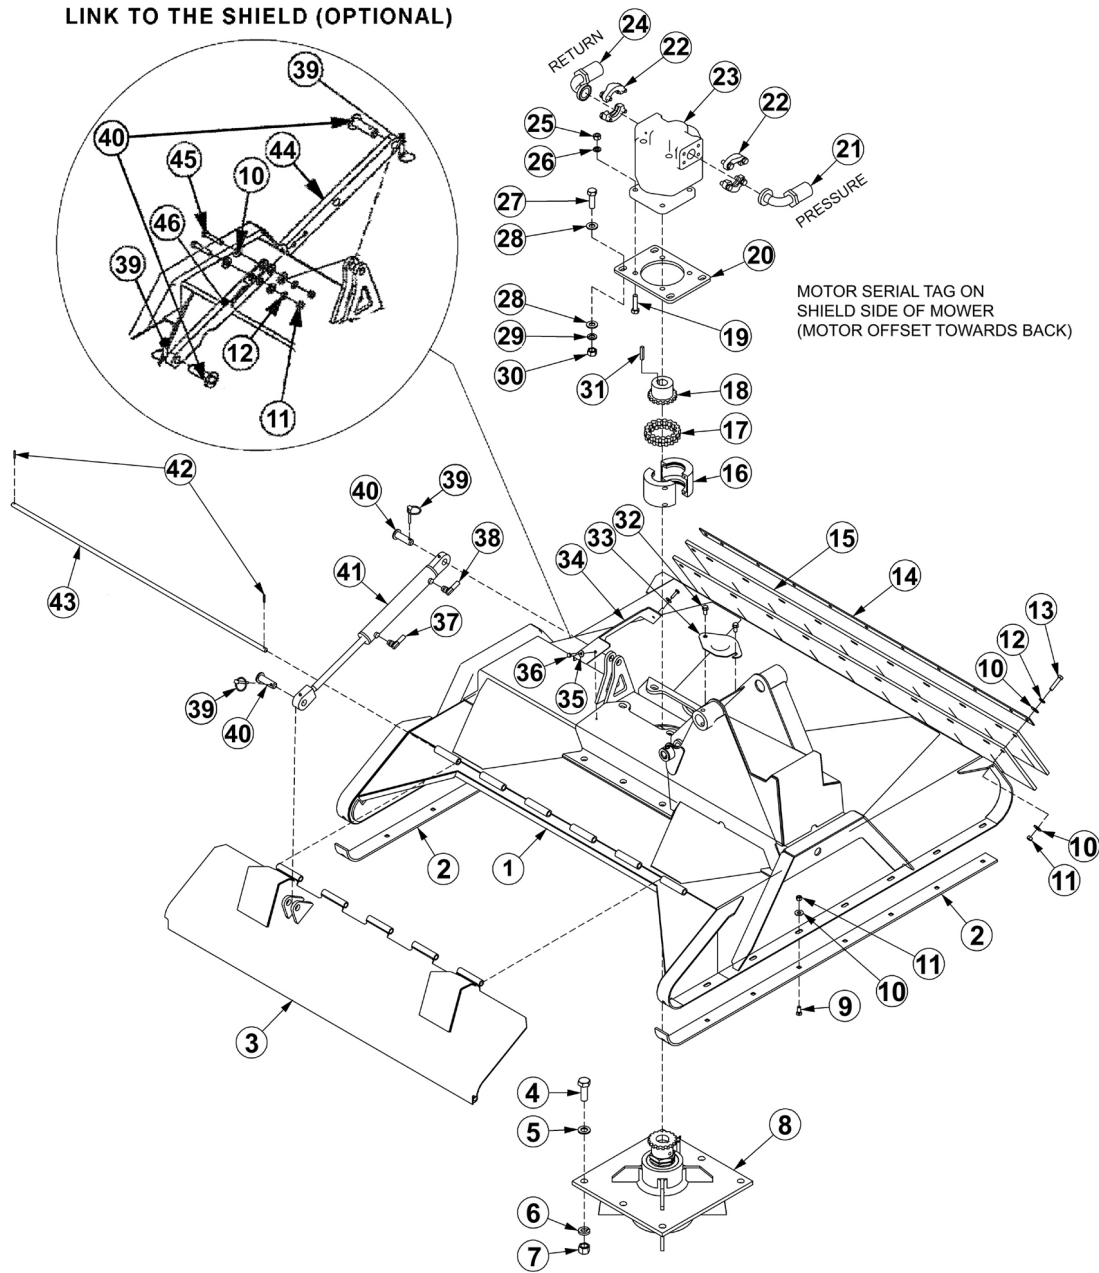

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|--------------------------------|
| 1 | 33780 | 1 | DECK,WLDMNT,50" RTRY |
| 2 | 33777 | 2 | SKID SHOE,50" RTRY |
| 3 | 33754 | 1 | SHIELD,50"RTRY |
| 4 | 33879 | 6 | CAPSCREW, 3/4 X 2 1/4,NF GR 8 |
| 5 | 33880 | 6 | FLATWASHER,3/4",GR 8,SAE |
| 6 | 21993 | 6 | LOCKWASHER,3/4",GR 8 |
| 7 | 6T2413 | 6 | HEX NUT,3/4,NF,GR 8 |
| 8 | 6T1024H5 | 1 | SPINDLE ASSY,CPLT,HD,5/8 HOLES |

COMMON LEGAL REAR STOW T4


50IN ROTARY MOWER ASSEMBLY

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------------|-----------------|-------------|-------------------------------|
| 9 | 6T2270 | 16 | PLOW BOLT,3/8" X 1" NC |
| 10 | 22016 | 33 | FLATWASHER,3/8" |
| 11 | 21625 | 20 | HEX NUT,3/8",NC |
| 12 | 21988 | 11 | LOCKWASHER, 3/8" |
| 13 | 21633 | 11 | CAPSCREW, 3/8 X 1 3/4,NC |
| 14 | 33774 | 1 | FLAP RETAINER,50" RTRY |
| 15 | 33775 | 2 | FLAP,50" RTRY |
| 16 | 6T1033 | 1 | COUPLER COVER |
| 17 | 6T1029 | 1 | COUPLER CHAIN |
| 18 | 21223 | 1 | SPROCKET |
| 19 | 21733 | 4 | CAPSCREW, 1/2 X 2,NC |
| 20 | 33776 | 1 | MOTOR MOUNT,PLATE,50" RTRY |
| 21 | 24490 | 1 | HOSE - PRESSURE |
| --- | 06500155 | 1 | HOSE- PRESSURE (LRS ONLY) |
| 22 | TF4852 | 2 | FLANGE KIT - #20 |
| 23 | 06504012 | 1 | MOTOR |
| 24 | 24489 | 1 | HOSE - RETURN |
| --- | 06500154 | 1 | HOSE-RETURN (LRS ONLY) |
| 25 | 21725 | 4 | HEX NUT, 1/2" NC |
| 26 | 06533004 | 4 | FLATWASHER, 1/2" |
| 27 | 6T2290 | 4 | CAPSCREW,5/8X2,NF GR 8 |
| 28 | 33764 | 8 | FLATWASHER,5/8",GR 8,SAE |
| 29 | 21992 | 4 | LOCKWASHER, 5/8 |
| 30 | 6T2408 | 4 | HEX NUT, 5/8, NF |
| 31 | TF1124 | 1 | SQUARE KEY |
| 32 | 33881 | 2 | CAPSCREW,FLG, 3/8 X 3/4,NC |
| 33 | 33779 | 1 | PLATE,COVER,KNF HOLE |
| 34 | 06410439 | 1 | COVER |
| 35 | 22014 | 2 | FLATWASHER,1/4 |
| 36 | 21530 | 2 | CAPSCREW,1/4 X 1,NC |
| 37 | 34187 | 1 | HOSE 1/4" X 75" |
| 38 | 34186 | 1 | HOSE 1/4" X 66" |
| 39 | RD1032 | 2 | LYNCH PIN |
| 40 | 33984 | 2 | PIN,SHIELD,50" |
| 41 | 33785 | 1 | 1-1/2" X 8", CYLINDER, WELDED |
| 42 | 6T3017 | 2 | ROLLPIN |
| 43 | 33778 | 1 | HINGE PIN,50" RTRY |
| 44 | 33772 | 1 | LINK, SHIELD 50" RTRY |
| 45 | 21634 | 2 | CAPSCREW, 3/8" X 2, NC |
| 46 | 33773 | 1 | LINK 2, SHIELD 50" RTRY |


COMMON LEGAL REAR STOW T4

50IN ROTARY KNIVES AND DISH

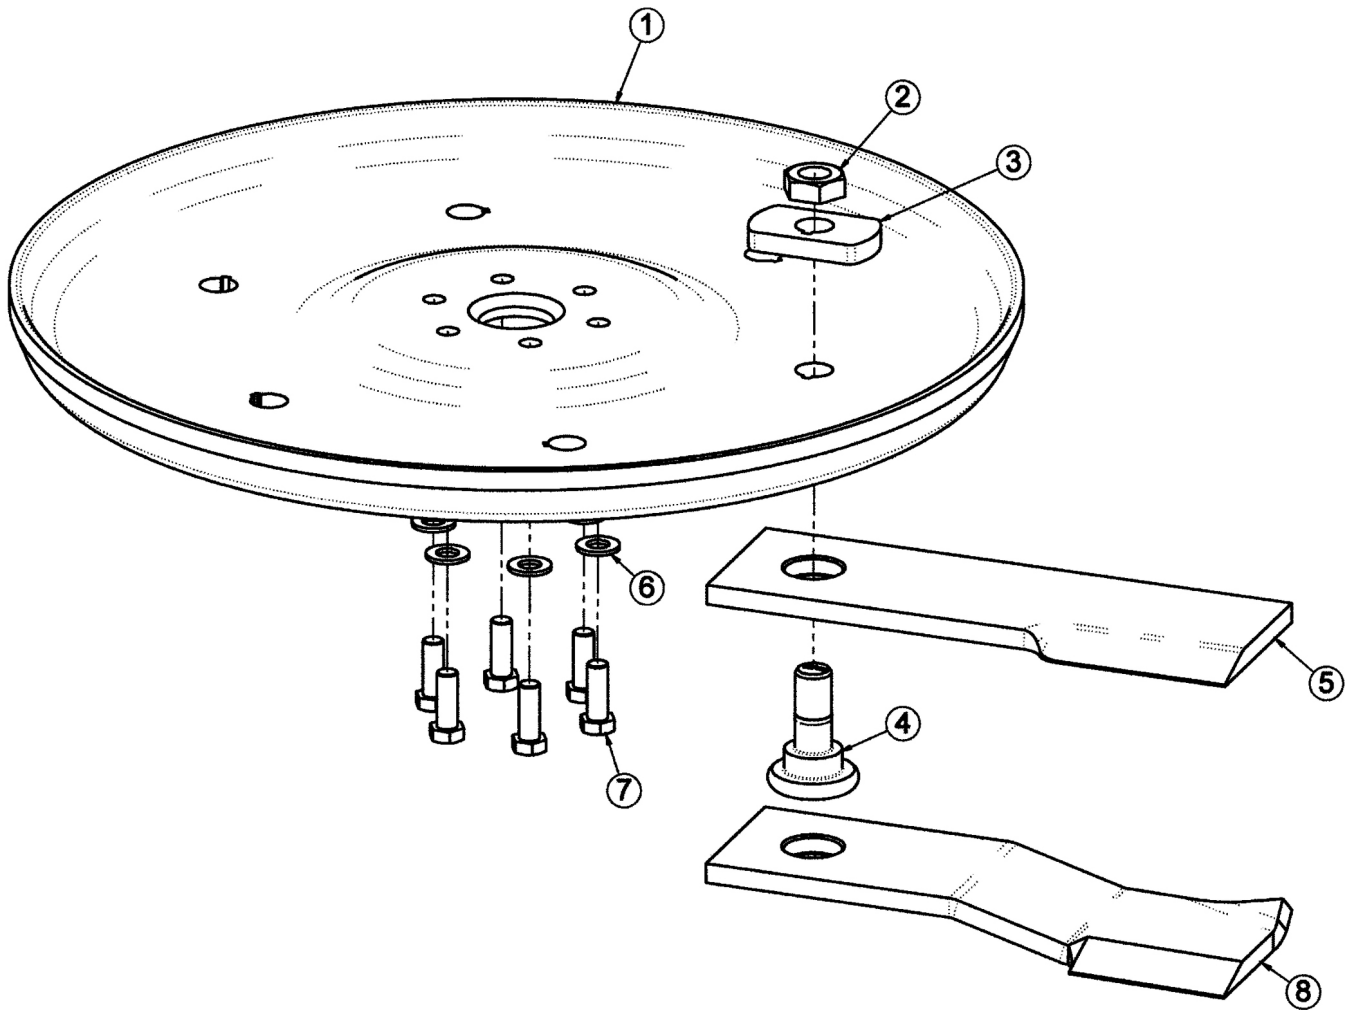


| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------|----------|------|--|
| ----- | 06700089 | - | KIT,TRB50,DISK,W/BOLT KIT (INCLUDES ITEMS 1,3 & 7) |
| 1 | 06770003 | 1 | BLADE MOUNTING DISK |
| 2 | 6T1023R | 2 | NYLOCK HEX NUT 1 1/8" |
| 3 | 34878 | 2 | SPACER |
| 4 | 06538000 | 2 | KNIFE MOUNTING BOLT |
| 5 | 06521001 | 2 | STANDARD KNIFE |
| 6 | 33764 | 6 | FLATWASHER |
| 7 | 6T2259 | 6 | CAPSCREW |
| ----- | 06770012 | - | BOLT KIT (INCLUDES ITEMS 6, 7 & LOCTITE) |
| 8 | 06521002 | 2 | GRASS KNIFE (OPTIONAL) |
| ----- | 6T1825 | - | LOCTITE - USED ON ALL DISK MOUNTING BOLTS |

50IN ROTARY BLADE BAR AND KNIVES

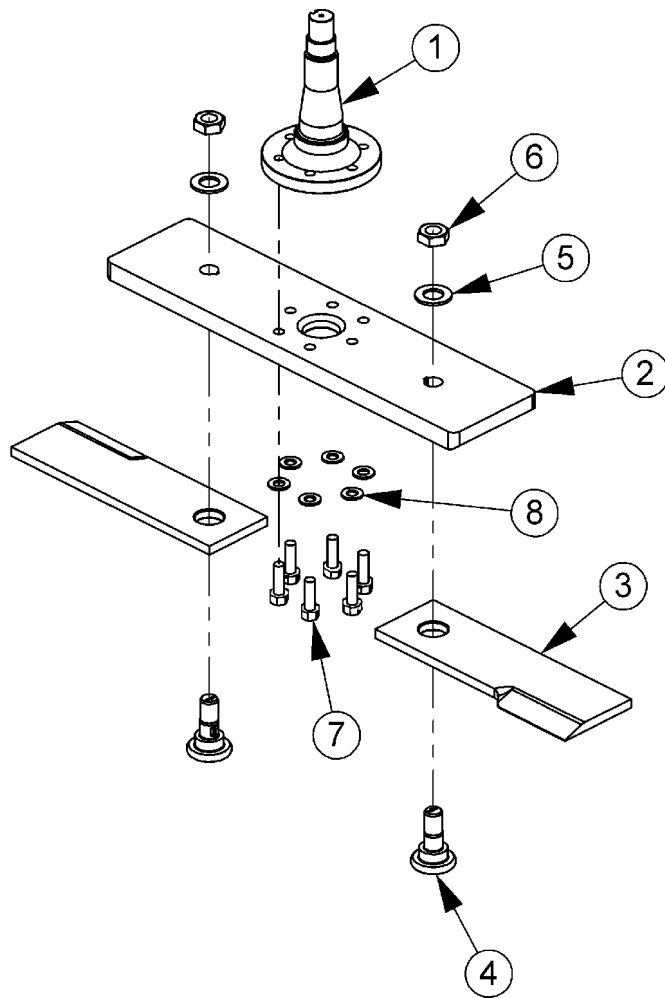


| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|-----------------------------|
| 1 | PT1018H5 | 1 | SPINDLE,5/8HOLES,HD,WO/TABS |
| 2 | 06400388 | 1 | BAR,BLADE,TRB |
| 3 | 06521001 | 2 | KNIFE,TRB50,5/8 |
| 4 | 06538000 | 2 | KNIFE MTG BOLT,5/8 SHOULDER |
| 5 | 06533002 | 2 | FLATWASHER,1 1/8,GR 8 |
| 6 | 6T1023R | 2 | KNIFE MTG NUT,1 1/8,NF,GR8 |
| 7 | 6T2259 | 6 | CAPSCREW,5/8X1-3/4,NF,GR8 |
| 8 | 33764 | 6 | FLATWASHER,5/8,GR 8,SAE |

60IN ROTARY KNIVES AND DISH

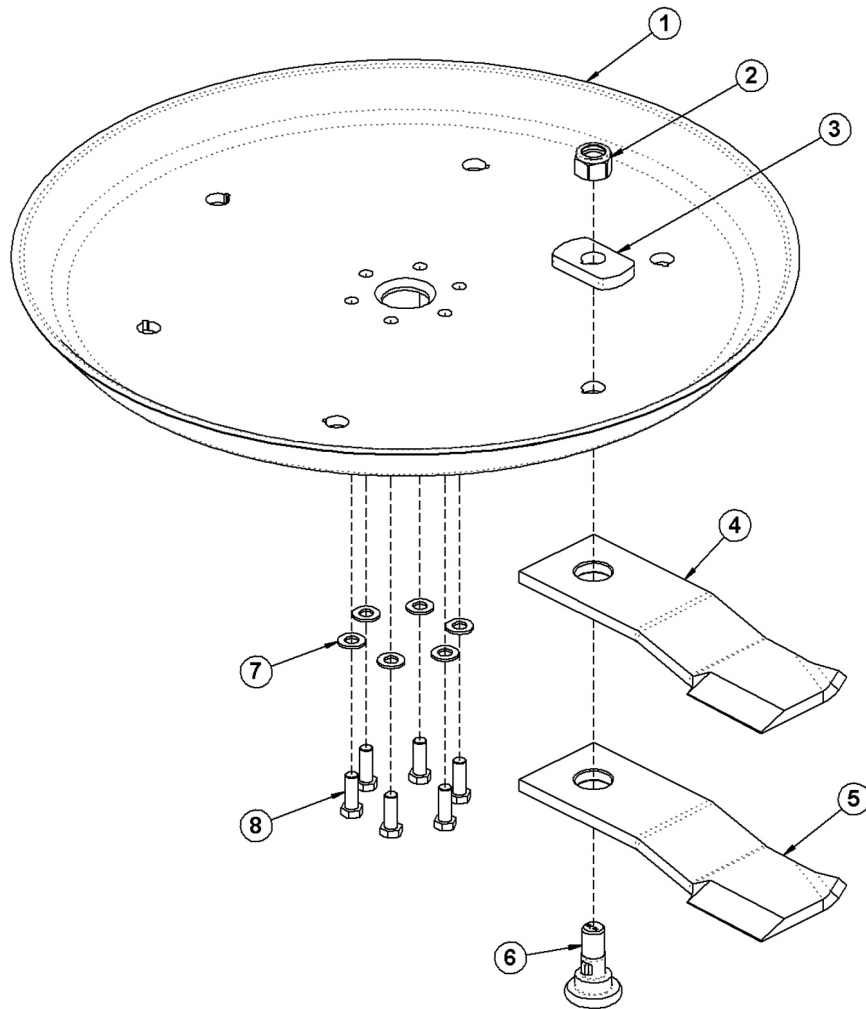


| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|-------------------------------------|
| 1 | 34876 | 1 | BLADE MOUNTING DISH,60" |
| 2 | 6T1023R | 2 | NYLOCK NUT,1-1/8",NF |
| 3 | 34878 | 2 | SPACER |
| 4 | 34684 | 2 | STANDARD GRASS KNIFE |
| 5 | 34685 | 2 | HIGH SUCTION GRASS KNIFE (OPTIONAL) |
| 6 | 34497 | 2 | KNIFE MOUNTING BOLT |
| 7 | 25270 | 6 | FLATWASHER,5/8",GR8,USS |
| 8 | 6T2259 | 6 | CAPSCREW,5/8" X 1-3/4",NF,GR8 |
| --- | 6T1825 | 1 | LOCTITE (USED ON ITEM 8) |
| --- | 27167 | - | BOLT KIT (INCLUDES ITEMS 7 & 8) |
| --- | 33893 | - | KNIFE KIT (INCLUDES ITEMS 2, 4 & 6) |

60IN ROTARY BLADE BAR AND KNIVES

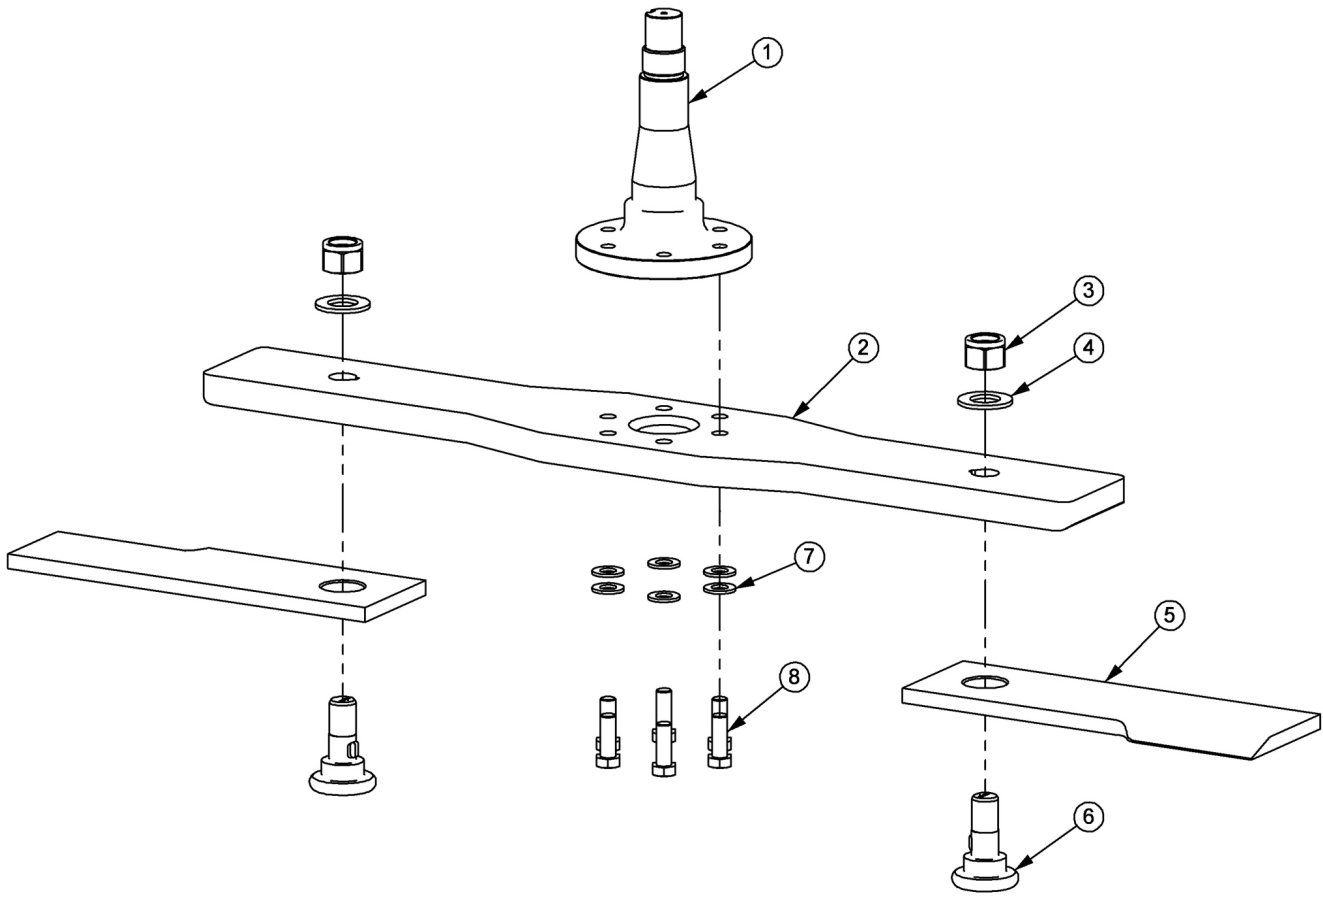

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|----------------------------------|
| 1 | PT1018H5 | 1 | SPINDLE |
| 2 | 06400690 | 1 | BAR, BLADE, RTRY60 |
| 3 | 6T1023R | 2 | KNIFE MTG NUT, 1-1/8, NYLOCK, NF |
| 4 | 06533002 | 2 | FLATWASHER, 1-1/8, GR8 |
| 5 | 06521001 | 2 | KNIFE, TRB50, 5/8 |
| 6 | 06538000 | 2 | KNIFE MTG BOLT, 5/8 SHOULDER |
| 7 | 33764 | 6 | FLATWASHER, 5/8, GR 8, SAE |
| 8 | 6T2259 | 6 | CAPSCREW, 5/8 X 1-3/4, NF, GR8 |

50IN FLAIL DRIVE ASSEMBLY

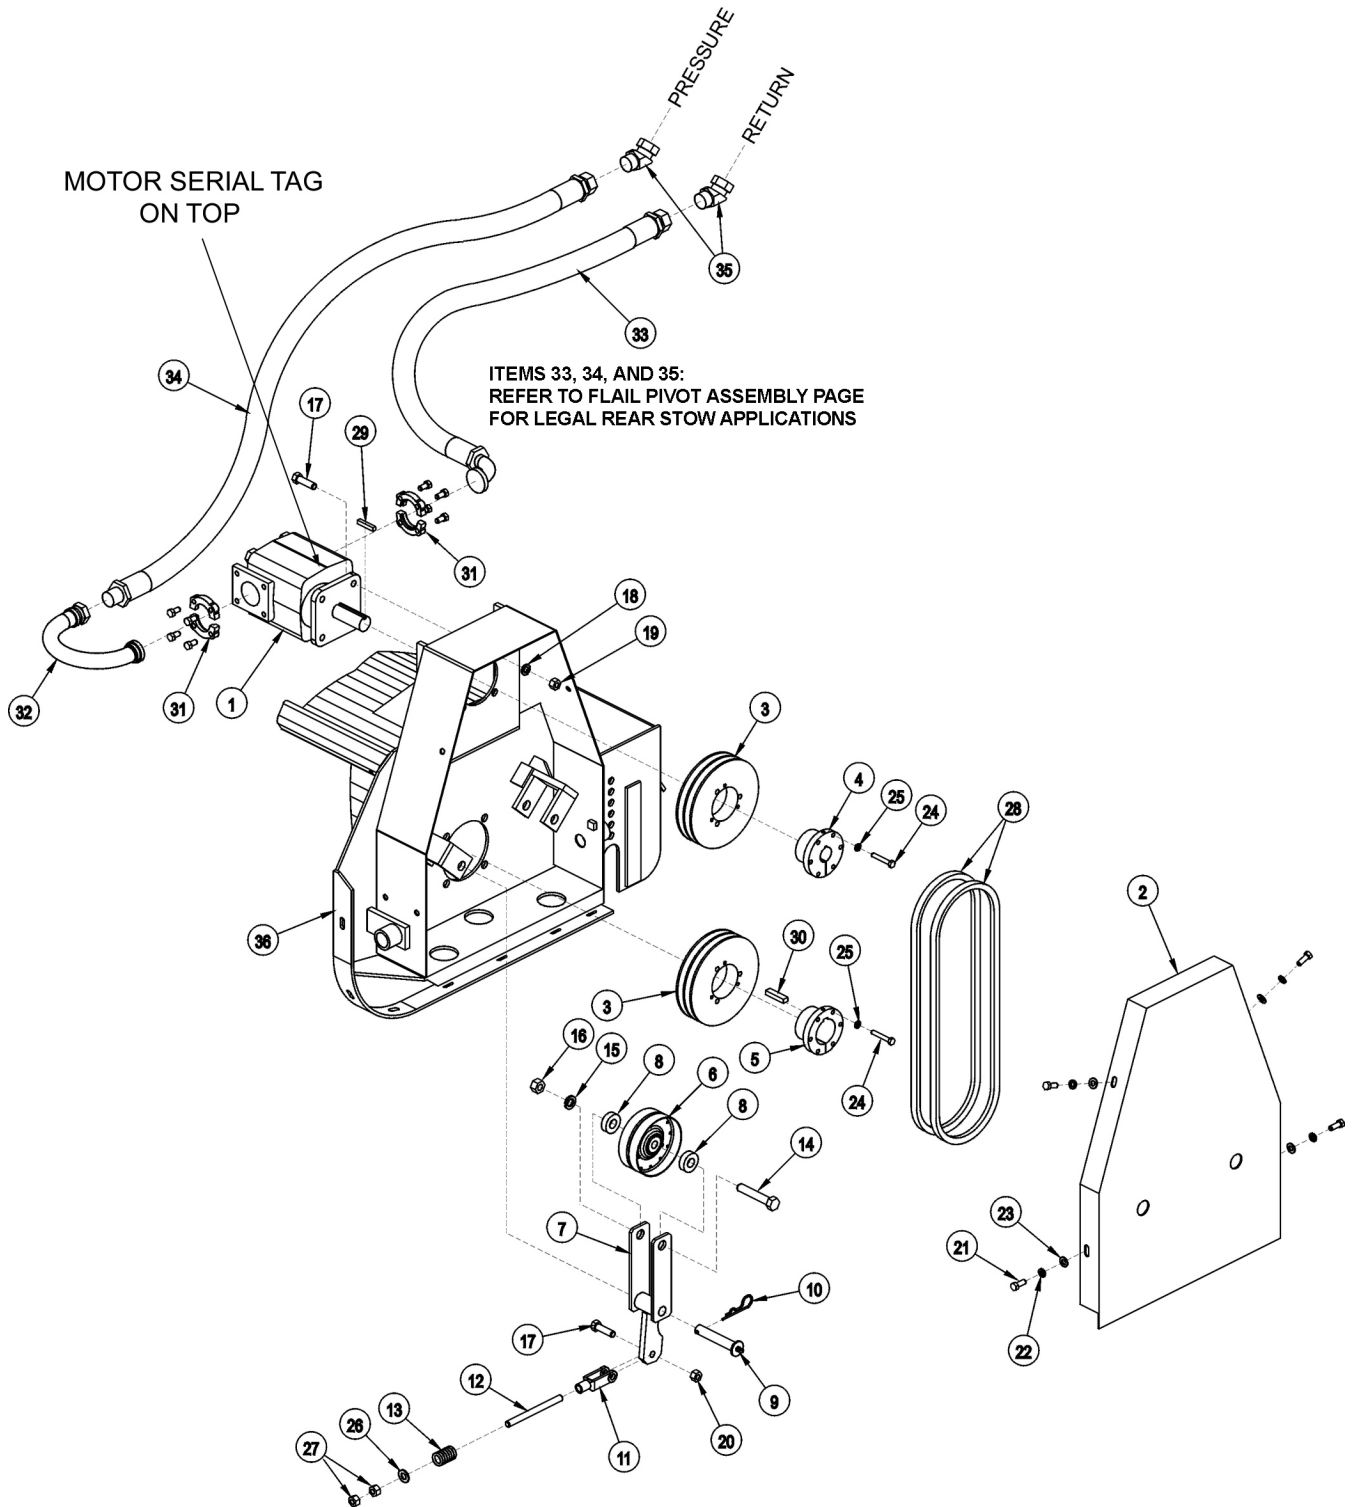


50IN FLAIL DRIVE ASSEMBLY

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|--|
| 1 | 06504132 | 1 | MOTOR (M350-1 3/4" GEAR) |
| 2 | TF3006 | 1 | BELT GUARD |
| 3 | TF3043 | 2 | SHEAVE |
| 4 | TF3013 | 1 | BUSHING |
| 5 | TF3011 | 1 | BUSHING |
| 6 | TF3034 | 1 | IDLER PULLEY |
| 7 | TF3205 | 1 | IDLER ARM |
| 8 | TF3206 | 2 | IDLER PULLEY SPACER |
| 9 | TF3605 | 1 | IDLER ARM PIN WITH ZERK |
| 10 | 6T3004 | 1 | R - CLIP |
| 11 | PT3611A | 1 | CLEVIS |
| 12 | 32481 | 1 | THREADED ROD |
| 13 | TF3620 | 1 | COMPRESSION SPRING |
| 14 | 21789 | 1 | CAPSCREW 5/8" X 3 1/2" |
| 15 | 21992 | 1 | LOCKWASHER 5/8" |
| 16 | 21775 | 1 | HEX NUT 5/8" |
| 17 | 21732 | 5 | CAPSCREW 1/2" X 1 3/4" |
| 18 | 21990 | 4 | LOCKWASHER 1/2" |
| 19 | 21725 | 4 | HEX NUT 1/2" |
| 20 | 6T2418 | 1 | LOCK NUT 1/2" |
| 21 | 21630 | 4 | CAPSCREW 3/8" X 1" |
| 22 | 21988 | 4 | LOCKWASHER 3/8" |
| 23 | 22016 | 4 | FLATWASHER 3/8" |
| 24 | 21584 | 6 | CAPSCREW 5/16" X 2" |
| 25 | 21987 | 6 | LOCKWASHER 5/16" |
| 26 | 27938 | 1 | FLATWASHER 1/2" |
| 27 | 21700 | 2 | HEX NUT 1/2" NF |
| 28 | TF3021 | 2 | BELT |
| 29 | TF1125 | 1 | SQUARE KEY |
| 30 | TF1025 | 1 | SQUARE KEY MOTOR |
| 31 | TF4852 | 2 | FLANGE KIT |
| 32 | 34227 | 1 | PREFORMED TUBE |
| 33 | 31218 | 1 | HOSE - RETURN |
| 34 | 34331 | 1 | HOSE - PRESSURE |
| 35 | 24724 | 2 | SWIVEL FITTING |
| 36 | ----- | - | CUTTER HEAD *REFER TO CUTTER HEAD ASSY |

COMMON LEGAL REAR STOW T4

50IN FLAIL MOWER ASSEMBLY

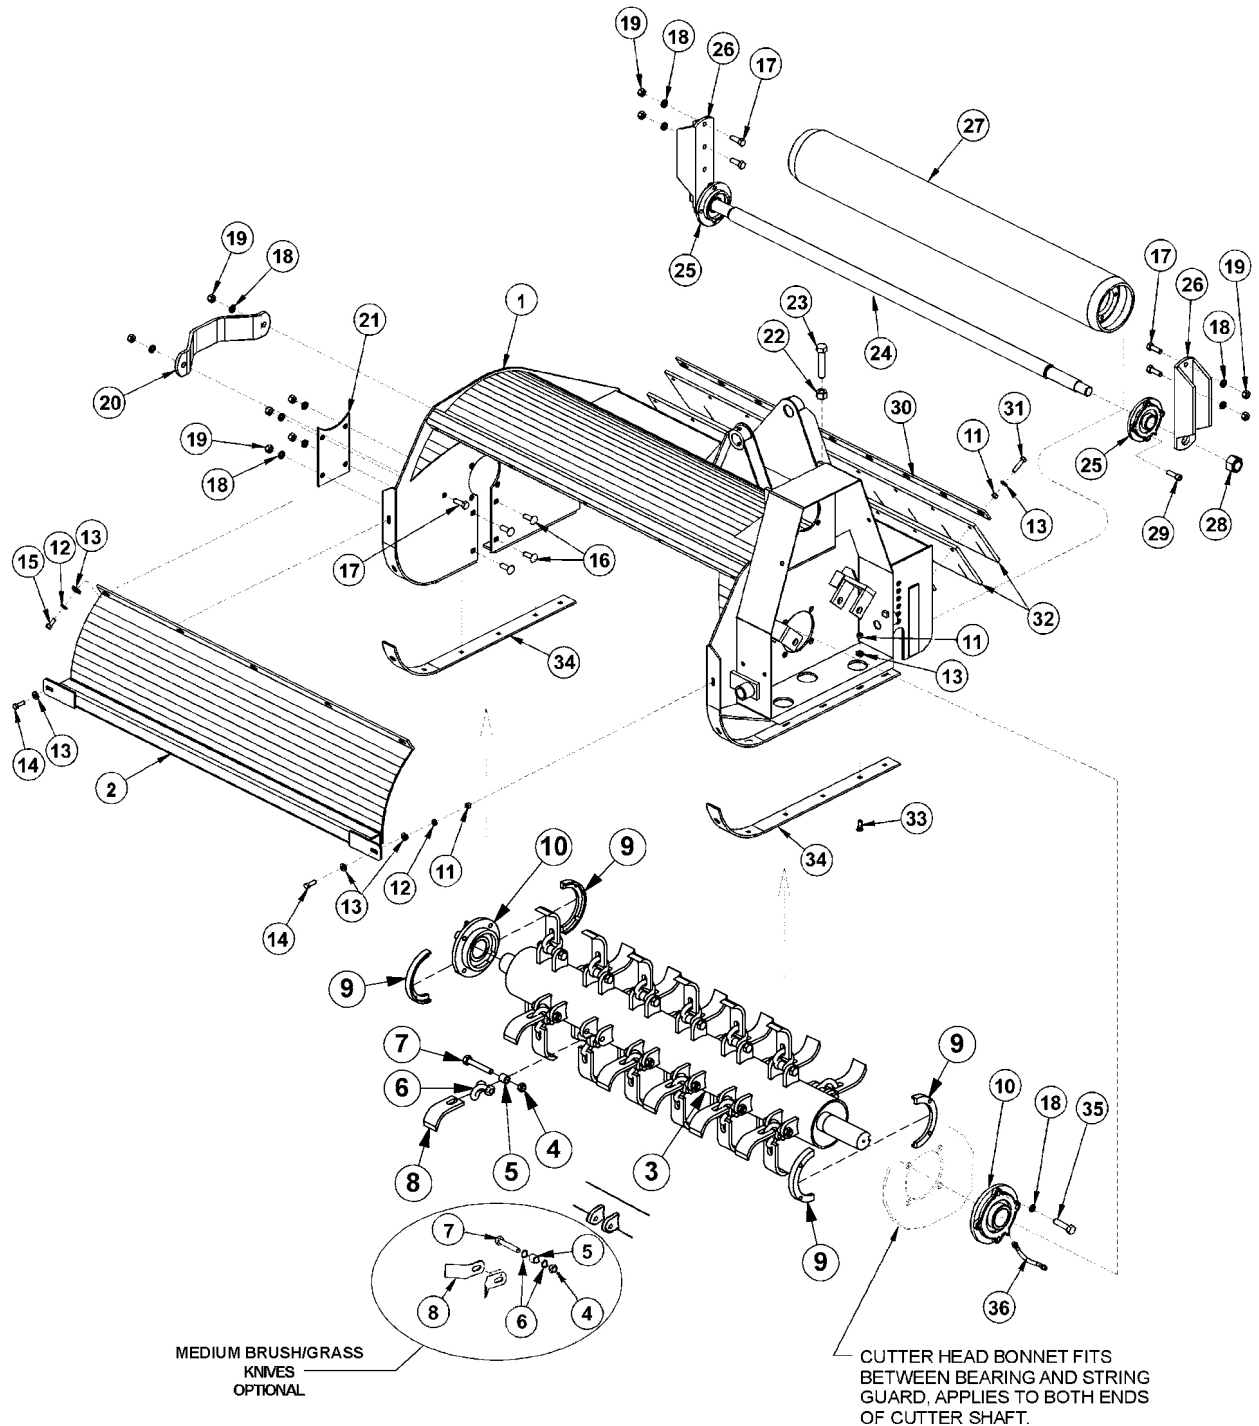

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---|
| --- | 34787 | 1 | FLAIL,BOOM,50,BRUSH,CPLT ASSY (LIGHT BRUSH/GRASS) |
| | 06742133 | 1 | FLAIL,BOOM,50,MD GRASS,CPLT ASSY (MEDIUM BRUSH/GRASS) |
| 1 | TF3003F | 1 | CUTTER HEAD BONNET |
| 2 | TF3004 | 1 | FRONT SHIELD |

COMMON LEGAL REAR STOW T4


50IN FLAIL MOWER ASSEMBLY

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|------------|------|---------------------------------------|
| 3 | 34783 | 1 | TBF50 (LIGHT BRUSH/GRASS KNIFE ASSY) |
| ---- | 06700115 | 1 | TBF50 (MEDIUM BRUSH/GRASS KNIFE ASSY) |
| 4 | 6T2419 | 24 | HEX NUT,9/16",NC,STOVER |
| 5 | 41725.01HT | 24 | BUSHING,1"OD X 5/8"ID |
| 6 | 34782 | 24 | CLEVIS (LIGHT BRUSH/GRASS KNIVES) |
| ---- | 06430122 | 48 | SPACER (MEDIUM BRUSH/GRASS KNIVES) |
| 7 | 34786 | 24 | CAPSCREW,9/16" X 3-1/2",NC |
| 8 | 34780 | 24 | KNIFE (LIGHT BRUSH/GRASS CUTTING) |
| ---- | 06521007 | 48 | KNIFE (MEDIUM BRUSH/GRASS CUTTING) |
| 9 | 31204 | 2 | STRING GUARD SET (2 PIECES PER SET) |
| 10 | TF1018 | 2 | FLANGE BEARING,2-3/16" |
| 11 | 21625 | 23 | HEX NUT,3/8",NC |
| 12 | 21988 | 7 | LOCKWASHER,3/8" |
| 13 | 22016 | 30 | FLATWASHER,3/8" |
| 14 | 21631 | 2 | CAPSCREW,3/8" X 1-1/4",NC |
| 15 | 21630 | 5 | CAPSCREW,3/8" X 1",NC |
| 16 | 6T7031D | 4 | PLOW BOLT,1/2" X 1-1/2",NC |
| 17 | 21731 | 6 | CAPSCREW,1/2" X 1-1/2",NC |
| 18 | 21990 | 18 | LOCKWASHER,1/2" |
| 19 | 21725 | 10 | HEX NUT,1/2",NC |
| 20 | TF1040 | 1 | CUTTER SHAFT GUARD |
| 21 | TF3007A | 1 | COVER PLATE |
| 22 | 21825 | 1 | HEX NUT,5/8",NC |
| 23 | 21838 | 1 | CAPSCREW,3/4" X 3-1/2",NC |
| 24 | TF3406 | 1 | GROUND ROLLER TIE ROD |
| 25 | TF1022 | 2 | FLANGE BEARING,1-3/8" |
| 26 | TF3407 | 2 | GROUND ROLLER ADJUSTMENT BRACKET |
| 27 | TF3405 | 1 | GROUND ROLLER |
| 28 | 6T1023R | 2 | NYLOCK NUT,1-1/8",NF |
| 29 | 6T2330 | 8 | CAPSCREW,7/16" X 1-1/2",SOCKET HEAD |
| 30 | TB1008 | 1 | FLAP RETAINING BAR |
| 31 | 21633 | 9 | CAPSCREW,3/8" X 1-3/4",NC |
| 32 | TB1006A | 2 | DEFLECTOR FLAP |
| 33 | 6T2270 | 12 | PLOWBOLT,3/8" X 1",NC |
| 34 | TF3001 | 2 | SKID SHOE |
| 35 | 06530218 | 8 | CAPSCREW,1/2" X 1-3/4",NC |
| 36 | TF1032 | 1 | FLANGE BEARING GREASE HOSE |

COMMON LEGAL REAR STOW T4

50IN FLAIL MOWER ASSY, PASS-THROUGH KNIVES

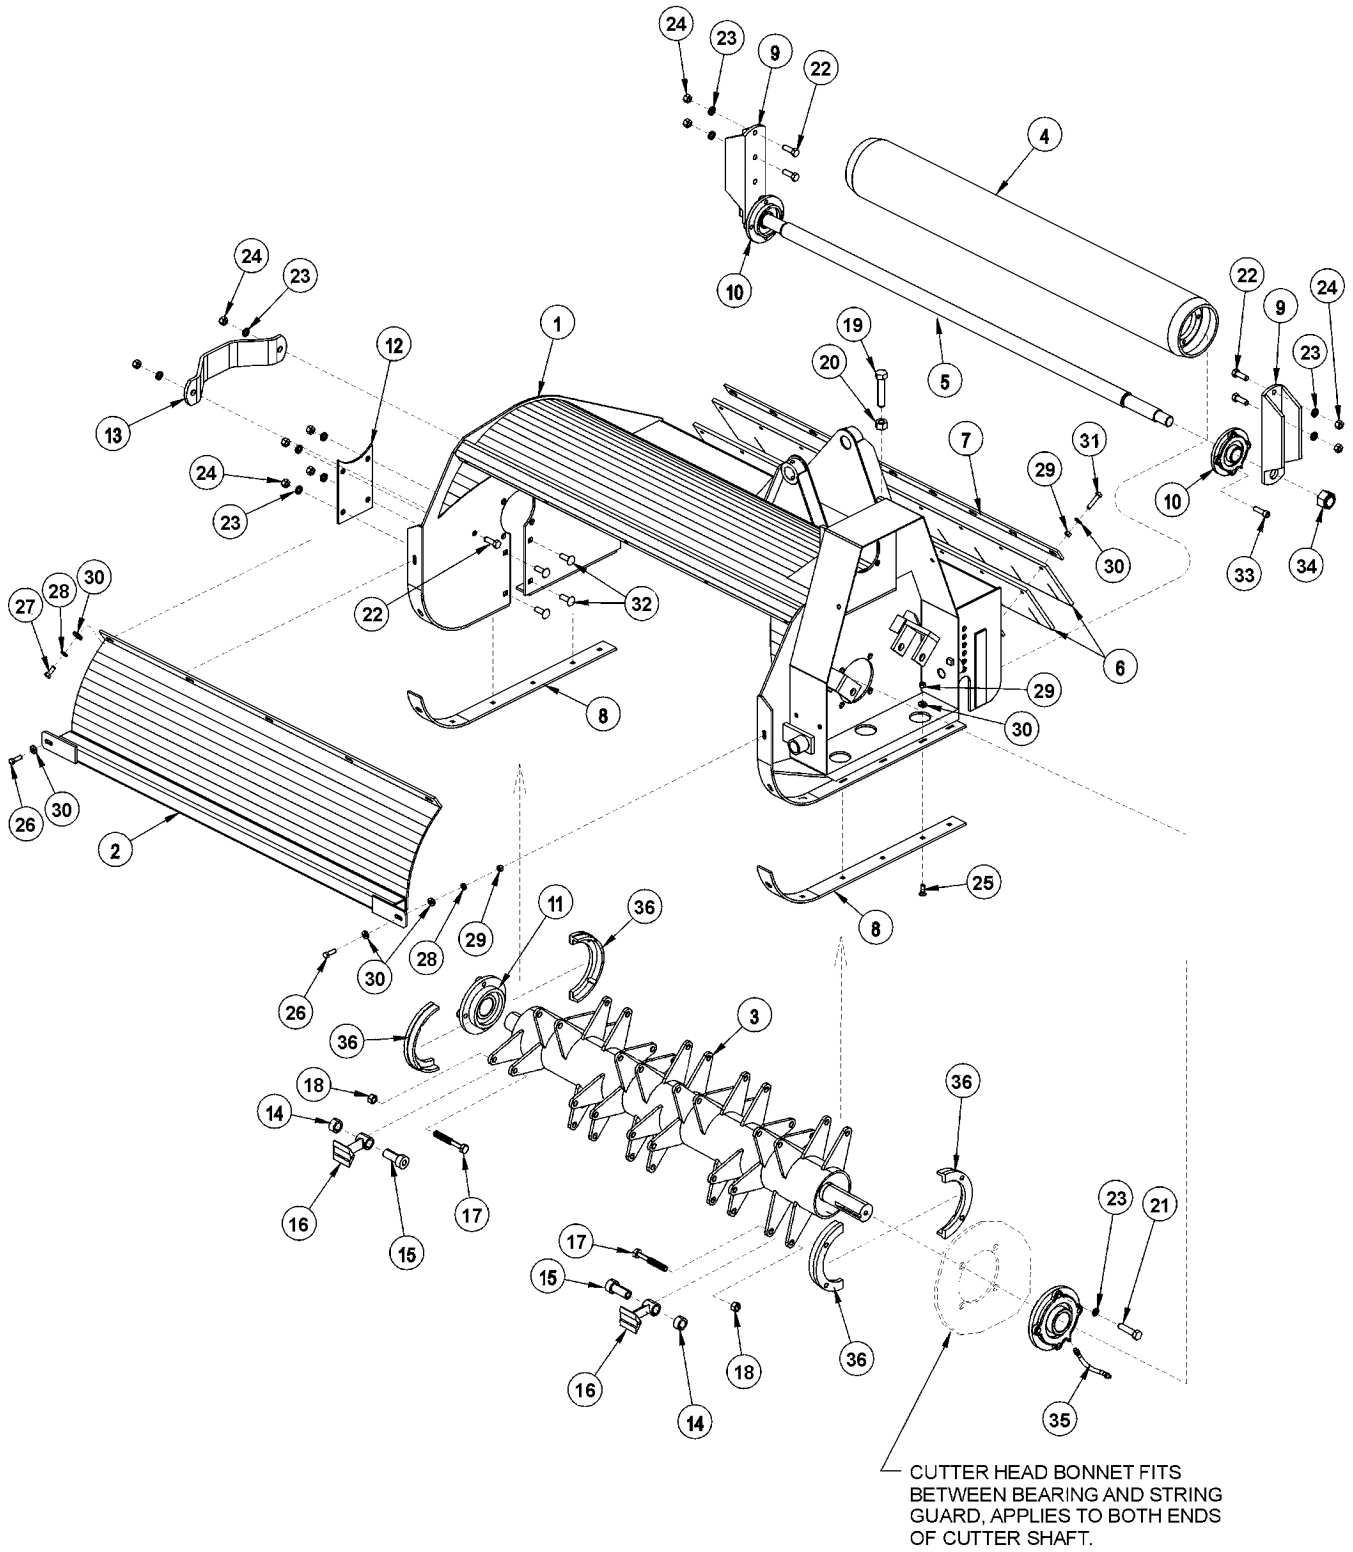

COMMON LEGAL REAR STOW T4

50IN FLAIL MOWER ASSY, PASS-THROUGH KNIVES

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|-------------------------------------|
| --- | 34172 | 1 | FLAIL,BOOM,50,CPLT ASSY |
| 1 | TF3003F | 1 | CUTTER HEAD BONNET |
| 2 | TF3004 | 1 | FRONT SHIELD |
| 3 | 33717 | 1 | TBF50,CUTTERSHAFT,PASS THRU KNIVES |
| 4 | TF3405 | 1 | GROUND ROLLER |
| 5 | TF3406 | 1 | GROUND ROLLER TIE ROD |
| 6 | TB1006A | 2 | DEFLECTOR FLAP |
| 7 | TB1008 | 1 | FLAP RETAINING BAR |
| 8 | TF3001 | 2 | SKID SHOE |
| 9 | TF3407 | 2 | GROUND ROLLER ADJUSTMENT BRACKET |
| 10 | TF1022 | 2 | FLANGE BEARING,1-3/8" |
| 11 | TF1018 | 2 | FLANGE BEARING,2-3/16" |
| 12 | TF3007A | 1 | COVER PLATE |
| 13 | TF1040 | 1 | CUTTER SHAFT GUARD |
| 14 | 33858 | 24 | SPACER,COLLAR |
| 15 | 33857 | 24 | SHOULDER,BUSHING |
| 16 | 46399.01 | 24 | KNIFE,FLAIL,FORGED |
| 17 | 33854 | 24 | CAPSCREW,5/8" X 4-1/2",NC |
| 18 | 32674 | 24 | HEX NUT,5/8",NC |
| 19 | 21838 | 1 | CAPSCREW,3/4" X 3-1/2",NC |
| 20 | 21825 | 1 | HEX NUT,5/8",NC |
| 21 | 21732 | 8 | CAPSCREW,1/2" X 1-3/4",NC |
| 22 | 21731 | 6 | CAPSCREW,1/2" X 1-1/2",NC |
| 23 | 21990 | 18 | LOCKWASHER,1/2" |
| 24 | 21725 | 10 | HEX NUT,1/2",NC |
| 25 | 6T2270 | 12 | PLOWBOLT,3/8" X 1",NC |
| 26 | 21631 | 2 | CAPSCREW,3/8" X 1-1/4",NC |
| 27 | 21630 | 5 | CAPSCREW,3/8" X 1",NC |
| 28 | 21988 | 7 | LOCKWASHER,3/8" |
| 29 | 21625 | 23 | HEX NUT,3/8",NC |
| 30 | 22016 | 30 | FLATWASHER,3/8" |
| 31 | 21633 | 9 | CAPSCREW,3/8" X 1-3/4",NC |
| 32 | 6T7031D | 4 | PLOW BOLT,1/2" X 1-1/2",NC |
| 33 | 6T2330 | 8 | CAPSCREW,7/16" X 1-1/2",NC,SCKT HD |
| 34 | 6T1023R | 2 | NYLOCK NUT,1-1/8",NF |
| 35 | TF1032 | 1 | FLANGE BEARING GREASE HOSE |
| 36 | 31204 | 2 | STRING GUARD SET (2 PIECES PER SET) |

COMMON LEGAL REAR STOW T4


63IN FLAIL DRIVE ASSEMBLY

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|----------------------------------|
| 1 | 06504132 | 1 | MOTOR (M350-1 3/4 GEAR) |
| 2 | 32569 | 1 | BELT GUARD |
| 3 | TF3044 | 1 | UPPER SHEAVE |
| 4 | TF3040 | 1 | LOWER SHEAVE |
| 5 | TF3013 | 1 | BUSHING |
| 6 | 28723 | 1 | BUSHING |
| 7 | 28679B | 1 | MOTOR CHANNEL |
| 8 | PT3611A | 1 | CLEVIS |
| 9 | 40496 | 1 | THREADED ROD |
| 10 | 28702 | 2 | BELT |
| 11 | TF3620A | 1 | TENSIONER SPRING |
| 12 | 28572 | 1 | SQUARE KEY |
| 13 | 26142A | 1 | SQUARE KEY |
| 14 | TF4852 | 2 | FLANGE KIT |
| 15 | 30308 | 1 | HOSE,1 X 69 - PRESSURE |
| 16 | 30309 | 1 | HOSE,1 X 78 - RETURN |
| 17 | 24724 | 2 | SWIVEL FITTING |
| 18 | TF1033 | 1 | GREASE ZERK |
| 19 | 27580 | 2 | BUSHING |
| 20 | 28682 | 1 | MOTOR CHANNEL WASHER |
| 21 | 21732 | 5 | CAPSCREW 1/2" X 1 3/4" |
| 22 | 21990 | 4 | LOCKWASHER 1/2" |
| 23 | 21725 | 4 | HEX NUT 1/2" |
| 24 | 6T2418 | 1 | STOVER NUT 1/2" |
| 25 | 21630 | 3 | CAPSCREW 3/8" X 1" |
| 26 | 22016 | 2 | FLATWASHER 3/8" |
| 27 | 21988 | 3 | LOCKWASHER 3/8" |
| 28 | 21584 | 6 | CAPSCREW 5/16" X 2" |
| 29 | 21987 | 6 | LOCKWASHER 5/16" |
| 30 | 27938 | 1 | FLATWASHER 1/2" |
| 31 | 21700 | 2 | HEX NUT 1/2" NF |
| 32 | ----- | - | CUTTER HEAD *REFER TO MOWER ASSY |

COMMON LEGAL REAR STOW T4

63IN FLAIL MOWER ASSEMBLY

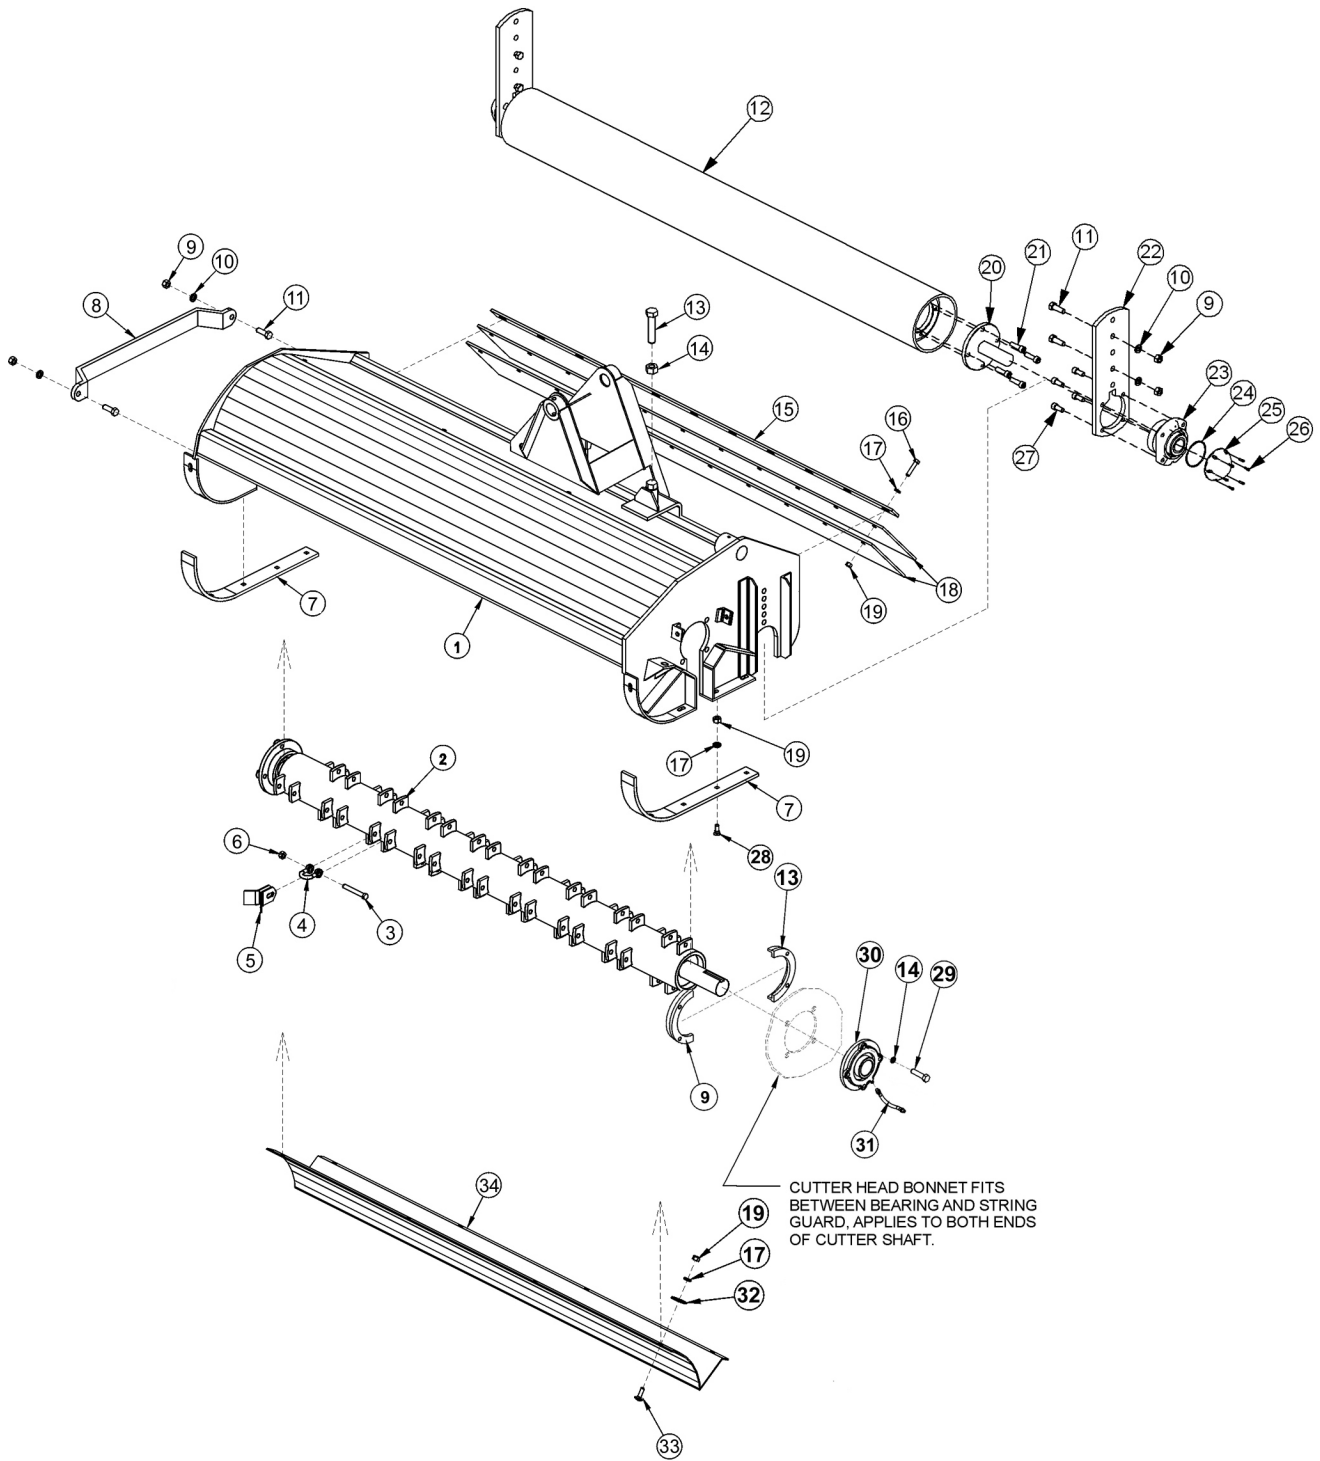


63IN FLAIL MOWER ASSEMBLY

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------|----------|------|---|
| ----- | 06200271 | - | FLAIL,BOOM,63,GRASS,CPLT ASSY |
| 1 | 28659H | 1 | CUTTER HEAD BONNET |
| 2 | 28743 | - | CUTTER SHAFT / KNIFE ASSY STANDARD GRASS |
| ----- | 28642C | 1 | CUTTER SHAFT,63,STD |
| 3 | 34011 | 36 | FLAIL KNIFE MOUNTING BOLT |
| 4 | TF1020 | 36 | FLAIL KNIFE MOUNTING CLEVIS |
| 5 | 33713 | 72 | FLAIL KNIFE - STANDARD |
| 6 | 21677 | 36 | NYLOCK NUT |
| 7 | 28086A | 2 | SKID SHOE |
| 8 | 27975A | 1 | CUTTER SHAFT GUARD |
| 9 | 21725 | 14 | HEX NUT 1/2" |
| 10 | 21990 | 14 | LOCKWASHER 1/2" |
| 11 | 21731 | 6 | CAPSCREW 1/2" X 1 1/2" |
| 12 | 28650A | 1 | GROUND ROLLER |
| 13 | 33863 | 2 | STRING GUARD,STD |
| 14 | 06533006 | 8 | FLATWASHER,1/2",SAE,L9 |
| 15 | 28700 | 1 | FLAP RETAINING BAR |
| 16 | 21633 | 11 | CAPSCREW 3/8" X 1 3/4" |
| 17 | 21988 | 28 | LOCKWASHER 3/8" |
| 18 | 28701 | 2 | DEFLECTOR FLAP |
| 19 | 21625 | 28 | HEX NUT 3/8" |
| 20 | TF1045B | 2 | GROUND ROLLER STUB SHAFT |
| 21 | 6T2330 | 8 | CAPSCREW 7/16" X 1 1/2" SOCKET HEAD |
| 22 | 28735 | 2 | ADJUSTABLE ROLLER BRACKET |
| 23 | 06520028 | 2 | BEARING,FLANGE,1-3/8,GRNDRLLR |
| 24 | 06520029 | 2 | O-RING |
| 25 | 06520027 | 2 | CAP,BEARING,GROUNDROLLER |
| 26 | 06530001 | 12 | CAPSCREW,SKT HD,8-32 X 1/2,SS |
| 27 | 6T2331 | 8 | CAPSCREW 7/16" X 1" SOCKET HEAD |
| 28 | 6T2270 | 10 | PLOW BOLT 3/8" X 1 1/4" |
| 29 | 06530217 | 8 | CAPSCREW 1/2" X 2",L9 |
| 30 | 28683 | 2 | FLANGE BEARING |
| 31 | TF1032 | 1 | FLANGE BEARING GREASE HOSE |
| 32 | 6T2615 | 7 | FENDER WASHER 3/8" |
| 33 | 6T2283 | 7 | CARRIAGE BOLT 3/8" X 1" |
| 34 | 28665A | 1 | BAFFLE (INSIDE UPPER REAR OF CUTTER HEAD) |

COMMON LEGAL REAR STOW T4


3 IN X 13-7/8 IN WELDED CYLINDER BREAKDOWN

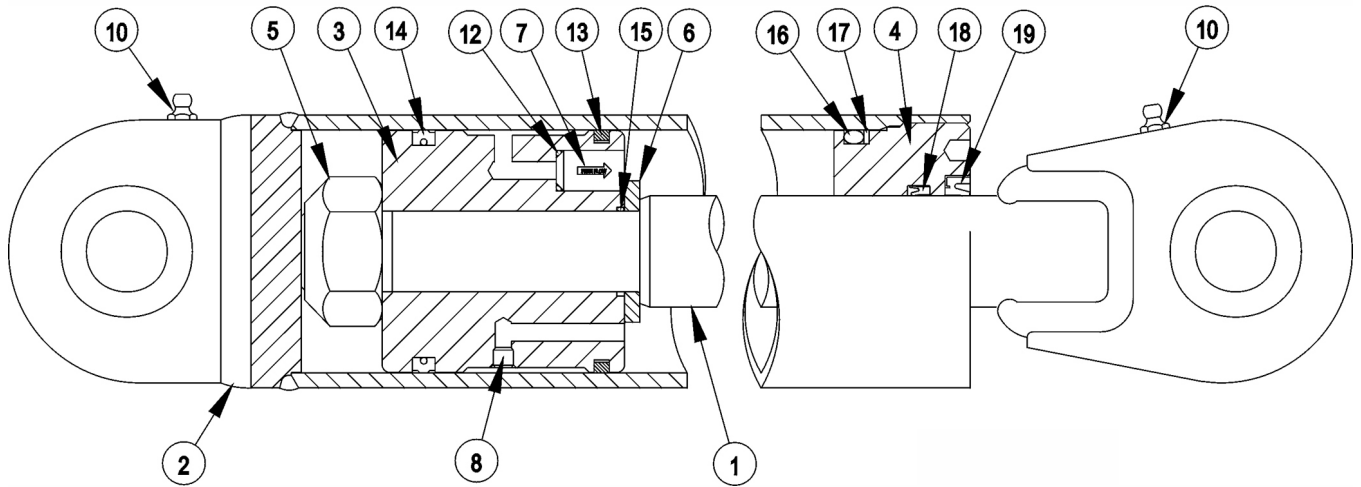

WARNING - MECHANICAL FASTENERS MUST BE TORQUED TO RECOMMENDED SPECIFICATIONS DURING REPAIR TO PREVENT PERSONAL INJURY OR EQUIPMENT DAMAGE.

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---|
| --- | 06501029 | - | CYLINDER,WELDED,3" X 13.87" |
| 1 | 06501630 | 1 | PISTON ROD ASSY |
| 2 | 06501631 | 1 | BUTT & TUBE ASSY |
| 3 | 06501632 | 1 | PISTON |
| 4 | 34574 | 1 | GLAND |
| 5 | 34575 | 1 | LOCK NUT,1"-14 UNS (TORQUE TO 315 FT.LB.) |
| 6 | 34576 | 1 | SPACER |
| 7 | 34577 | 1 | CHECK VALVE,KEPNER |
| 8 | 06501633 | 1 | ORIFICE |
| 9 | 33761 | 1 | SEAL KIT,PACKING (ITEMS 12 THRU 19) |
| 10 | ----- | 2 | GREASE ZERK |
| 12 | ----- | 1 | O - RING |
| 13 | ----- | 1 | CAST IRON PISTON RING |
| 14 | ----- | 1 | CROWN SEAL |
| 15 | ----- | 1 | O - RING |
| 16 | ----- | 1 | O - RING |
| 17 | ----- | 1 | BACK - UP WASHER |
| 18 | ----- | 1 | U - CUP |
| 19 | ----- | 1 | WIPER |
| 20 | 34334 | - | SPHERICAL BEARING (NOT SHOWN) |


3IN X 18IN WELDED CYLINDER BREAKDOWN

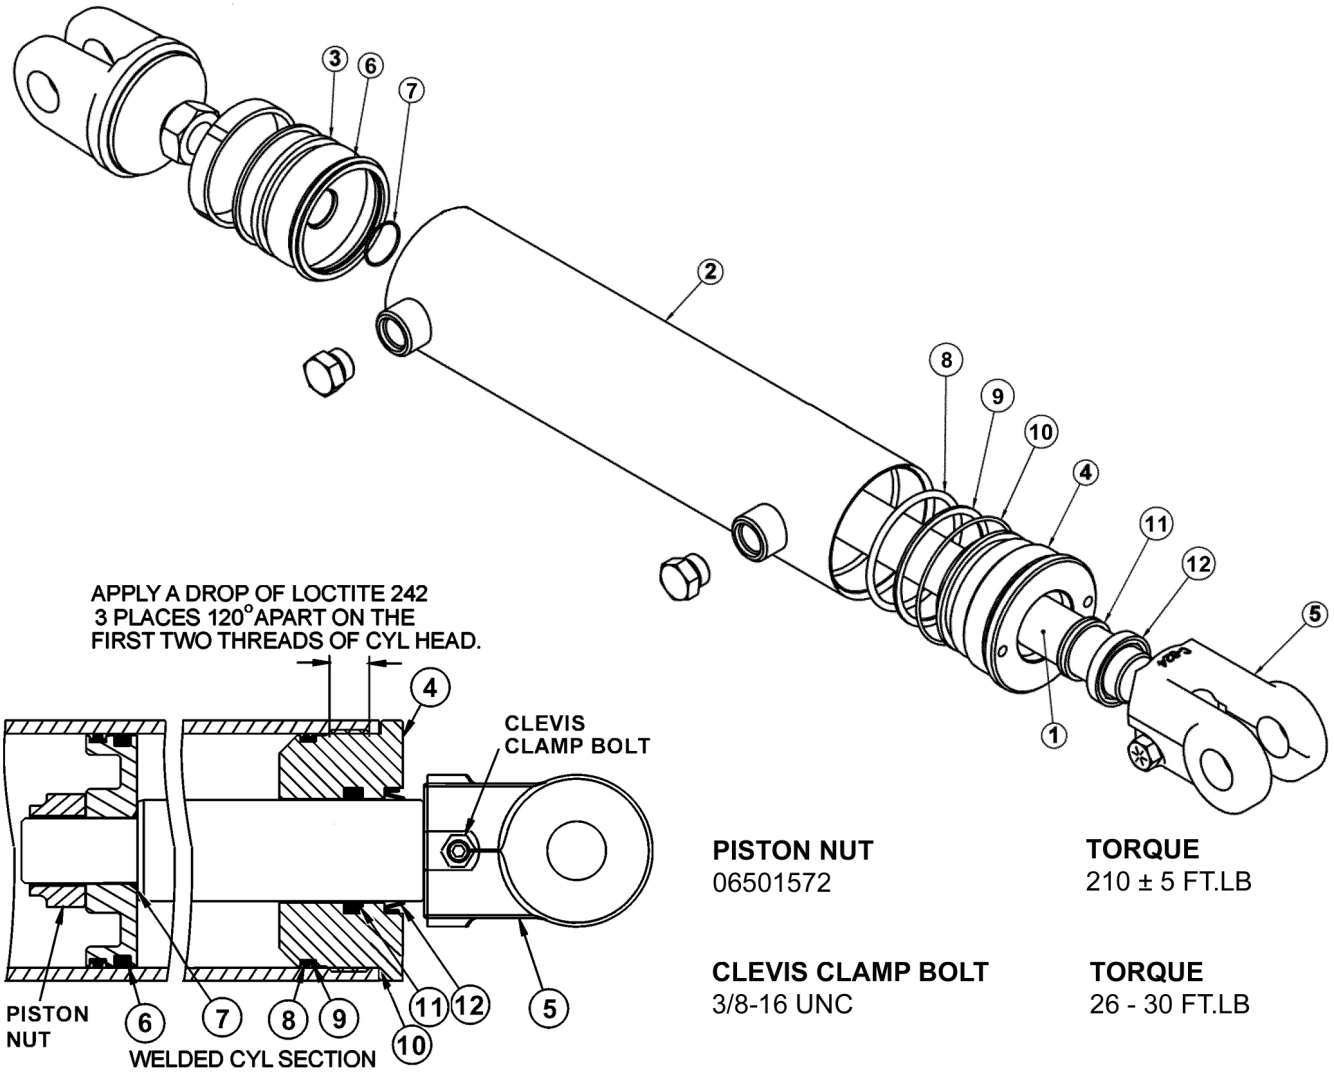

WARNING - MECHANICAL FASTENERS MUST BE TORQUED TO RECOMMENDED SPECIFICATIONS DURING REPAIR TO PREVENT PERSONAL INJURY OR EQUIPMENT DAMAGE.

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------|----------|------|--------------------------------------|
| ----- | 06501023 | - | HYDRAULIC CYLINDER COMPLETE |
| 1 | 06501561 | 1 | ROD |
| 2 | 06501562 | 1 | TUBE WELDMENT |
| 3 | 06501552 | 1 | PISTON |
| 4 | 06501563 | 1 | CYLINDER HEAD |
| 5 | 06501554 | 1 | CLEVIS |
| ----- | 06501564 | - | SEAL REPAIR KIT (ITEMS 6 THROUGH 12) |


3-1/2IN X 20IN WELDED CYLINDER BREAKDOWN

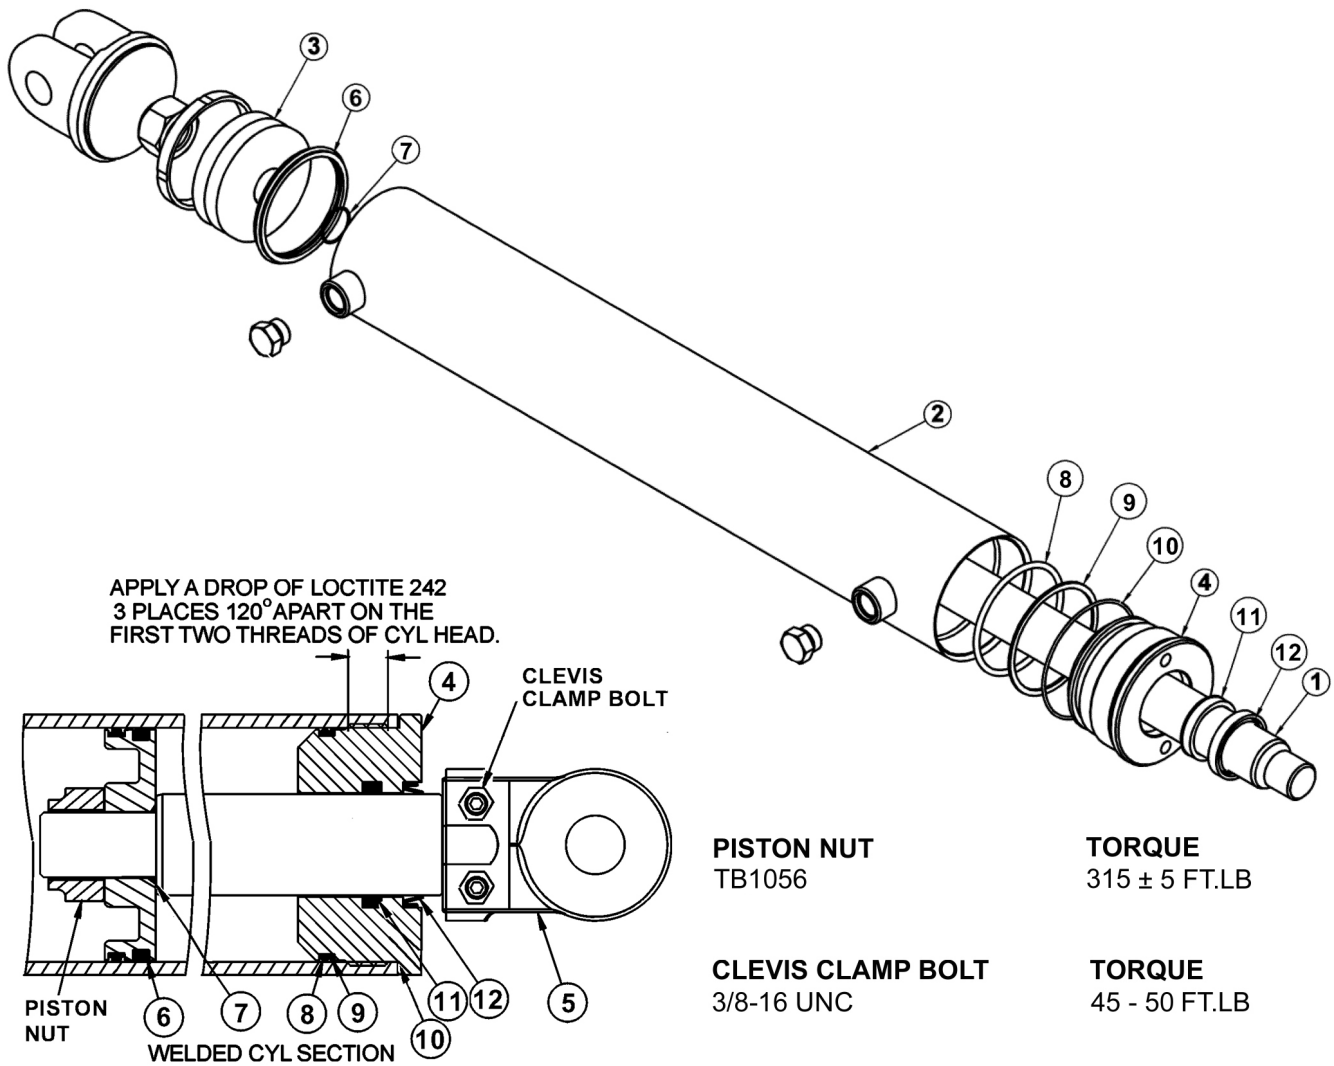

WARNING - MECHANICAL FASTENERS MUST BE TORQUED TO RECOMMENDED SPECIFICATIONS DURING REPAIR TO PREVENT PERSONAL INJURY OR EQUIPMENT DAMAGE.

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------|----------|------|--------------------------------------|
| ----- | 06501024 | - | HYDRAULIC CYLINDER COMPLETE |
| 1 | 06501565 | 1 | ROD |
| 2 | 06501566 | 1 | TUBE WELDMENT |
| 3 | 06501567 | 1 | PISTON |
| 4 | 06501568 | 1 | CYLINDER HEAD |
| 5 | TB3033 | - | CLEVIS |
| ----- | 06501569 | - | SEAL REPAIR KIT (ITEMS 6 THROUGH 12) |


4IN X 20IN WELDED CYLINDER BREAKDOWN

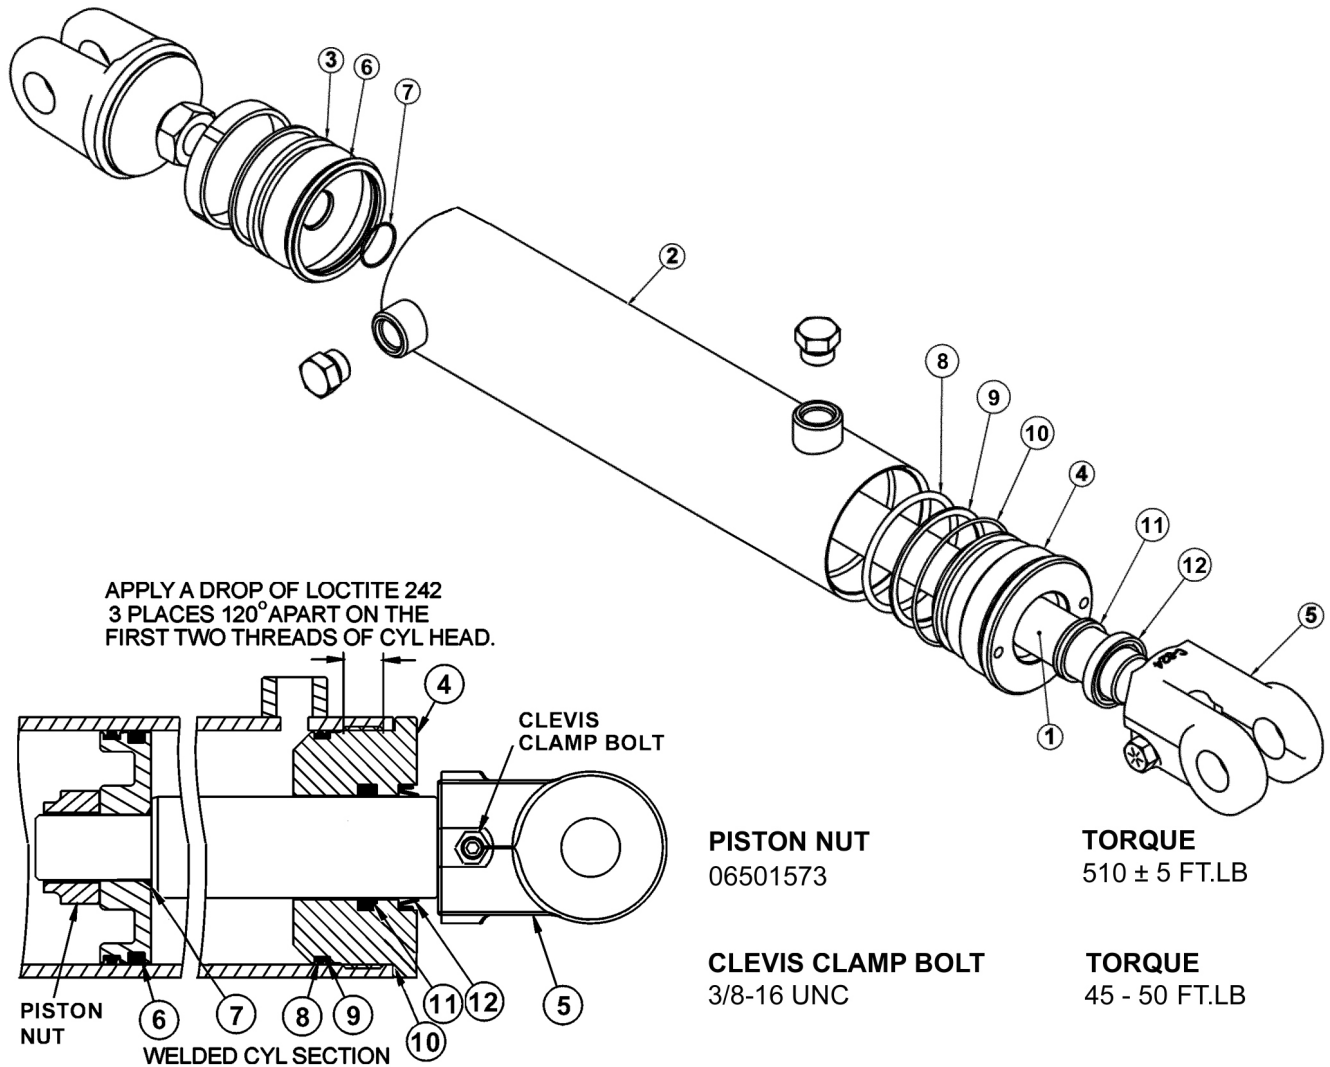

WARNING - MECHANICAL FASTENERS MUST BE TORQUED TO RECOMMENDED SPECIFICATIONS DURING REPAIR TO PREVENT PERSONAL INJURY OR EQUIPMENT DAMAGE.

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------|----------|------|--------------------------------------|
| ----- | 06501022 | - | HYDRAULIC CYLINDER COMPLETE |
| 1 | 06501556 | 1 | ROD |
| 2 | 06501557 | 1 | TUBE WELDMENT |
| 3 | 06501558 | 1 | PISTON |
| 4 | 06501559 | 1 | CYLINDER HEAD |
| 5 | 6T0172 | 1 | CLEVIS |
| 5A | 30172 | - | CLEVIS (FOR EXTENDED BOOM) |
| ----- | 06501560 | - | SEAL REPAIR KIT (ITEMS 6 THROUGH 12) |

ROTARY MOWER SPINDLE ASSEMBLY

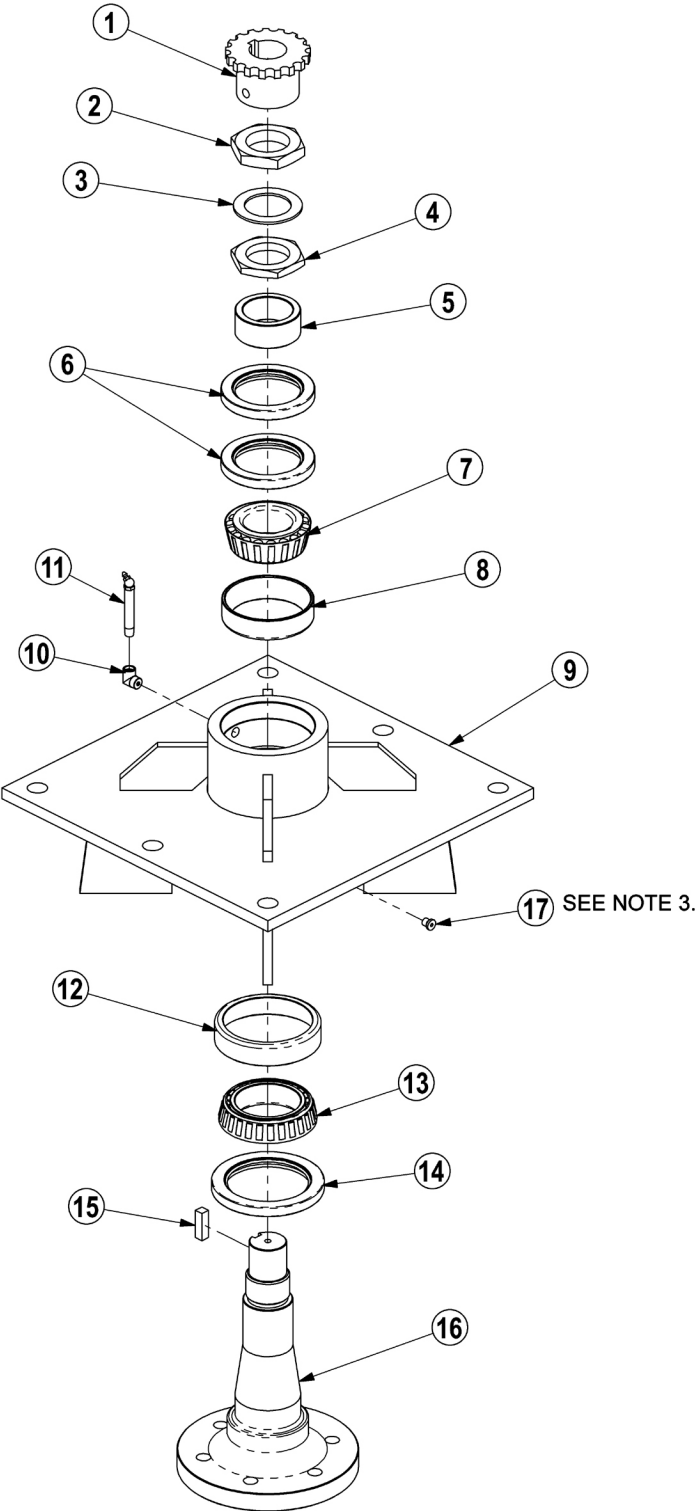

NOTES:


- 1. FREEPLAY: .001" - .003"
- 2. GREASE: FILL WITH MOBILITH SHC 220.
- 3. APPLY LOCTITE "271" TO O-RING PLUG THRDS.

ROTARY MOWER SPINDLE ASSEMBLY

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------|-----------|------|--|
| ----- | 6T1024H5 | - | SPINDLE ASSEMBLY COMPLETE |
| 1 | 6T1031 | 1 | SPROCKET |
| 2 | 6T1016 | 1 | BEARING LOCK NUT - THICK |
| 3 | 22596 | 1 | JAM WASHER |
| 4 | 6T1015 | 1 | BEARING ADJUSTMENT NUT - THIN |
| 5 | 6T1014 | 1 | BEARING ADJUSTMENT SLEEVE |
| 6 | 6T1011 | 1 | UPPER SEAL - SET OF 2 |
| 7 | 6T1012 | 1 | BEARING CONE |
| 8 | 6T1013 | 1 | BEARING CUP |
| 9 | 6T1010H | 1 | SPINDLE HOUSING |
| 10 | 30570 | 1 | FITTING STREET ELBOW |
| 11 | 33990 | 1 | GREASE ZERK |
| 12 | 6T1013H | 1 | BEARING CUP |
| 13 | 6T1012H | 1 | BEARING CONE |
| 14 | 6T1011H | 1 | LOWER SEAL |
| 15 | 6T1019 | 1 | SPINDLE KEY |
| 16 | PT1018H-5 | 1 | SPINDLE |
| 17 | 06503064 | 1 | O-RING PLUG, 1/8" |
| ----- | 31771 | - | SPINDLE REBUILD KIT (INCLUDES ITEMS 2 - 8 AND 12 - 15) |


PUMP AND GRILL GUARD OPTIONS

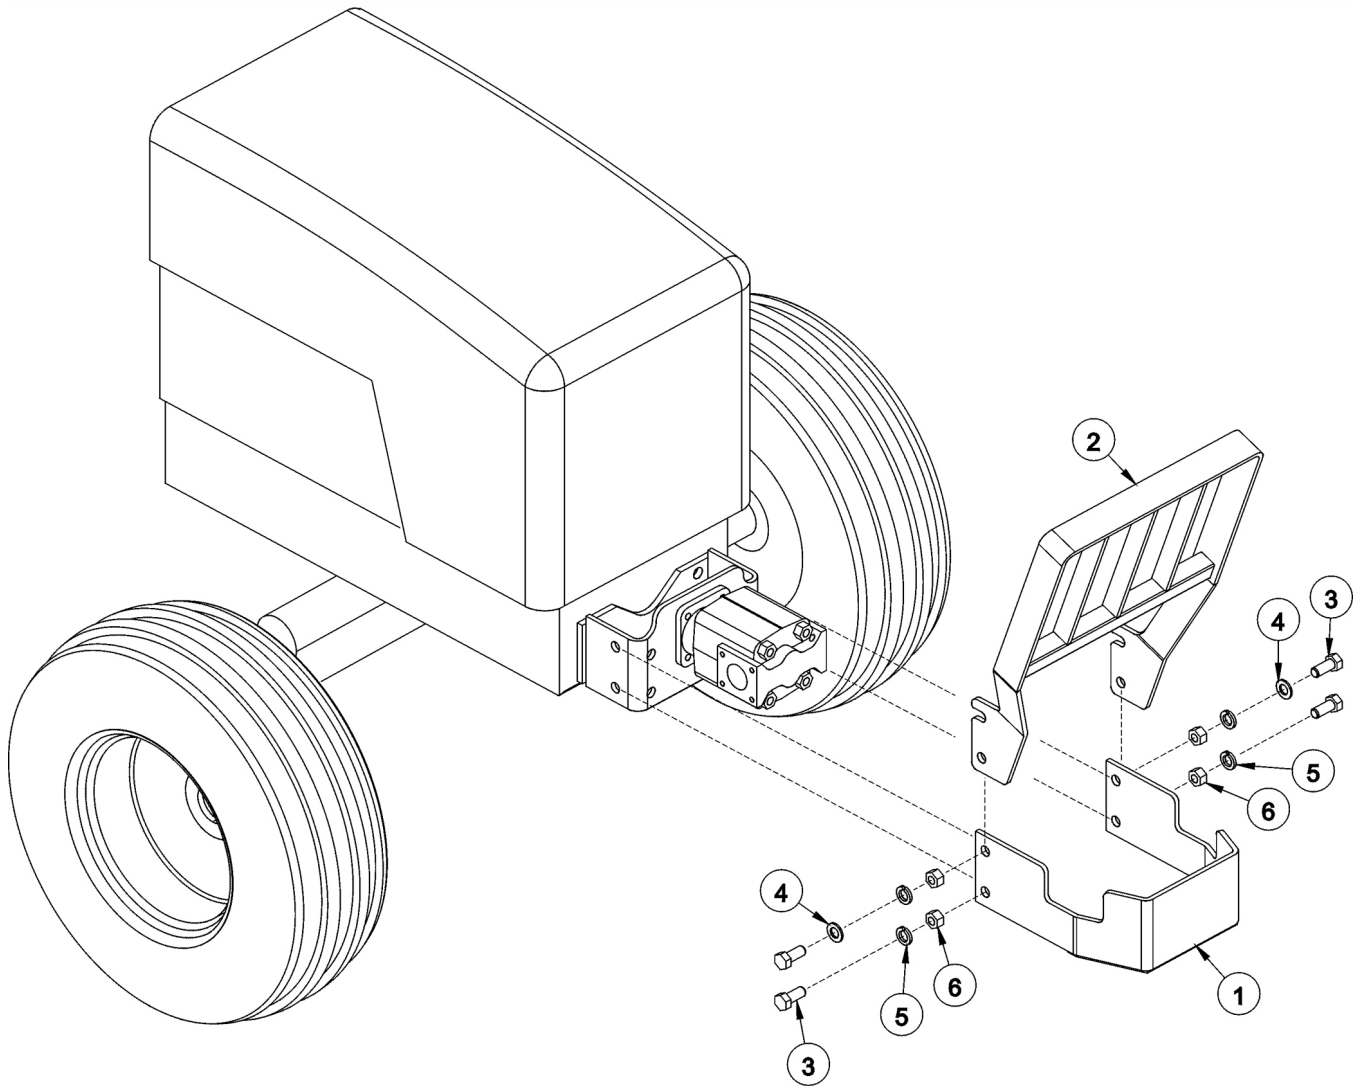

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---------------------------|
| 1 | 32430 | 1 | UNIVERSAL PUMP GUARD |
| 2 | 32737 | 1 | UNIVERSAL GRILL GUARD |
| 3 | 21833 | 4 | CAPSCREW,3/4" X 2-1/4",NC |
| 4 | 22021 | 2 | FLATWASHER,3/4" |
| 5 | 21993 | 4 | LOCKWASHER,3/4" |
| 6 | 21825 | 4 | HEX NUT,3/4",NC |

COMMON LEGAL REAR STOW T4


RESERVOIR TANK FILTER ASSEMBLY

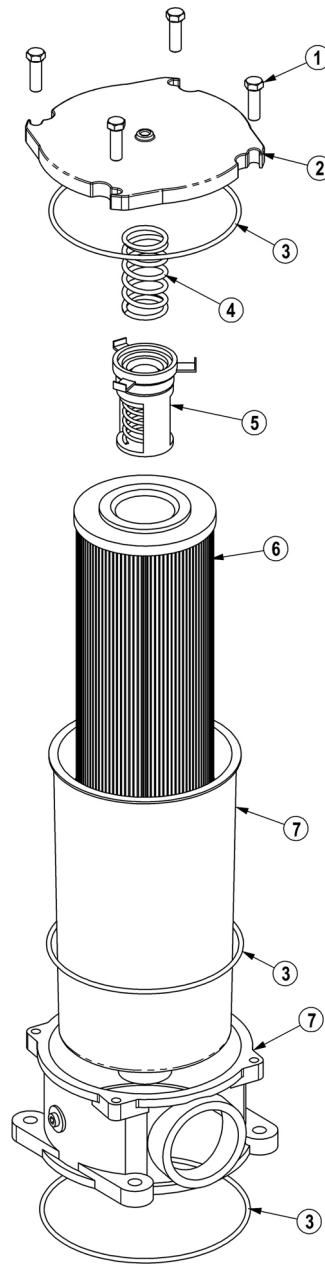

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------|----------|------|---------------------------------|
| ----- | 06505044 | - | FILTER ASSY SAE 10 MICRON |
| 1 | 28583 | 4 | CAPSCREW,8MM X 25MM(1.25 PITCH) |
| 2 | 06505045 | 1 | COVER |
| 3 | 06505046 | 1 | SEAL KIT |
| 4 | 06505047 | 1 | SPRING |
| 5 | 06505048 | 1 | BYPASS |
| 6 | 35259 | 1 | FILTER,10 MIC,RETURN LINE |
| 7 | 06505049 | 1 | CAN/BODY |

COMMON LEGAL REAR STOW T4

5 SPOOL ELECTRONIC VALVE - BENGAL BRUTE

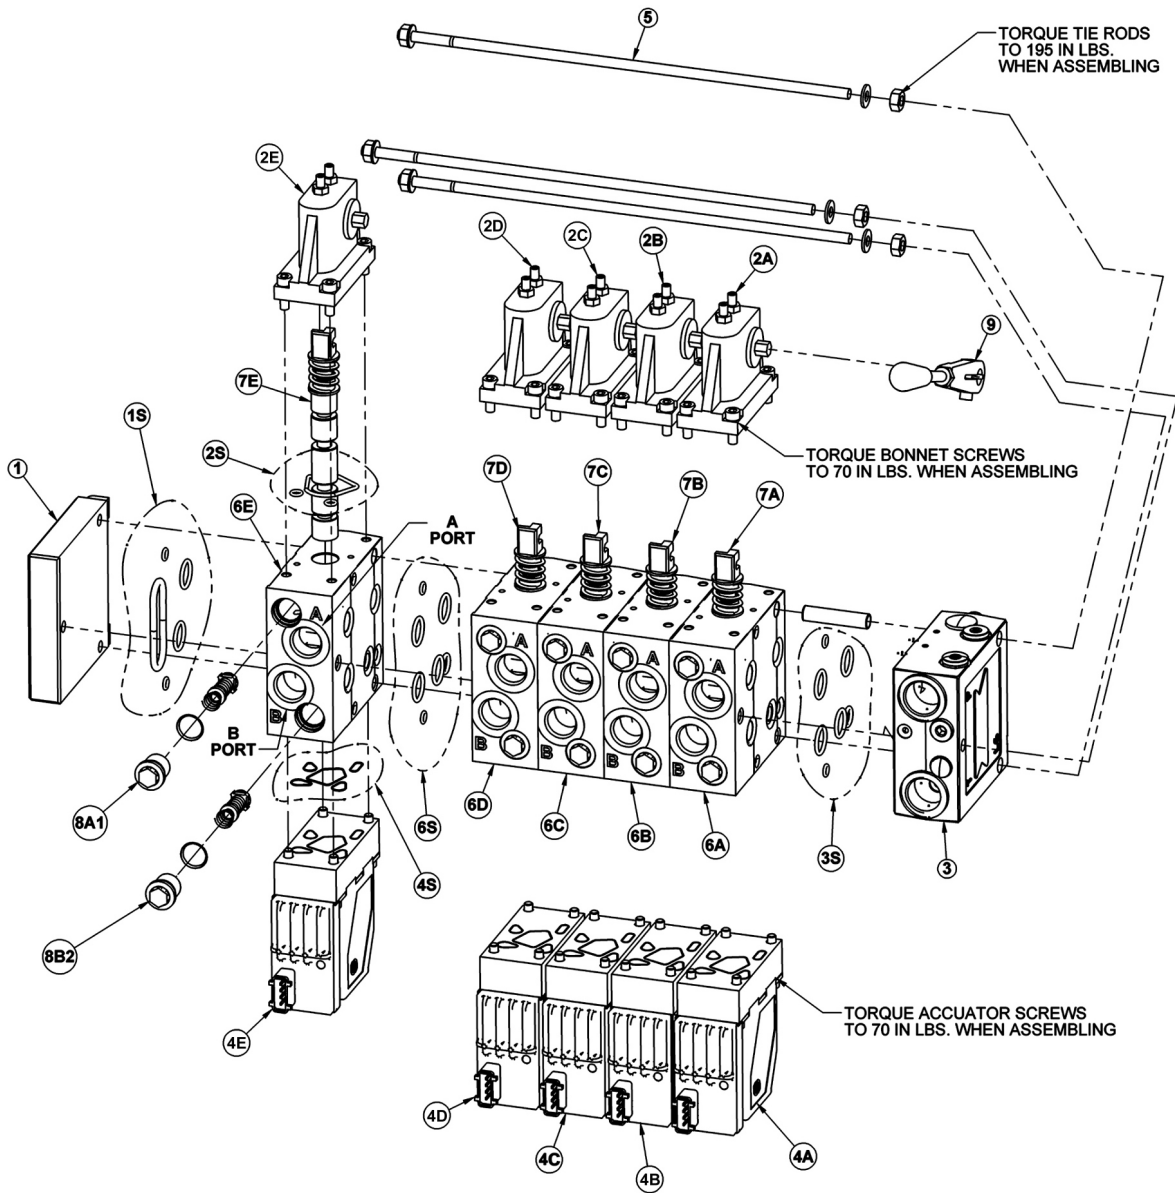

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------|----------|------|-------------------------|
| ----- | 06502097 | 1 | VLV,5SP,32PVG,REAR STOW |
| 1 | 06502074 | 1 | END PLATE |
| 1S | 06505013 | 1 | END PLATE SEAL KIT |
| 2 | ----- | 5 | BONNET |
| 2S | 06505042 | 1 | BONNET SEAL KIT |
| 2A | 42197 | 1 | MAIN BOOM BONNET |
| 2B | 42197 | 1 | SECONDARY BOOM BONNET |
| 2C | 42197 | 1 | DECK ROLL BONNET |
| 2D | 42197 | 1 | BOOM SWIVEL BONNET |
| 2E | 42197 | 1 | DECK SHIELD BONNET |

COMMON LEGAL REAR STOW T4


5 SPOOL ELECTRONIC VALVE - BENGAL BRUTE

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|------------------------------------|
| 3 | 34308 | 1 | INLET SECTION |
| 3S | 06505013 | 1 | INLET SECTION SEAL KIT |
| 4 | ----- | 5 | ELECTRONIC ACCUATOR |
| 4A | 06502101 | 1 | MAIN BOOM ELECTRONIC ACCUATOR |
| 4B | 06502101 | 1 | SECONDARY BOOM ELECTRONIC ACCUATOR |
| 4C | 06502100 | 1 | DECK ROLL ELECTRONIC ACCUATOR |
| 4D | 06502101 | 1 | BOOM SWIVEL ELECTRONIC ACCUATOR |
| 4E | 06502099 | 1 | DECK SHIELD ELECTRONIC ACCUATOR |
| 5 | 42202 | 1 | TIE-BOLT KIT |
| 6 | ----- | 5 | SECTION |
| 6S | 06505013 | 1 | SECTION SEAL KIT |
| 6A | 42698 | 1 | MAIN BOOM SECTION |
| 6B | 42698 | 1 | SEC BOOM SECTION |
| 6C | 06502076 | 1 | DECK ROLL SECTION |
| 6D | 42698 | 1 | BOOM SWIVEL SECTION |
| 6E | 06502077 | 1 | SHIELD SECTION |
| 7 | ----- | 5 | SPOOL |
| 7A | 42697 | 1 | MAIN BOOM SPOOL |
| 7B | 42697 | 1 | SEC BOOM SPOOL |
| 7C | 4242106 | 1 | DECK ROLL SPOOL |
| 7D | 06502073 | 1 | BOOM SWIVEL SPOOL |
| 7E | 42201 | 1 | DECK SHIELD SPOOL |
| 8 | ----- | 10 | ANTI CAV/SHOCK RELIEF |
| 8A1 | 06502084 | 1 | MAIN BOOM A PORT RELIEF |
| 8A2 | 06502081 | 1 | MAIN BOOM B PORT RELIEF |
| 8B1 | 42296 | 1 | SEC BOOM A PORT RELIEF |
| 8B2 | 06502082 | 1 | SEC BOOM B PORT RELIEF |
| 8C1 | 42295 | 1 | DECK ROLL A PORT RELIEF |
| 8C2 | 06502082 | 1 | DECK ROLL B PORT RELIEF |
| 8D1 | 06502070 | 1 | BOOM SWIVEL A PORT RELIEF |
| 8D2 | 06502083 | 1 | BOOM SWIVEL B PORT RELIEF |
| 8E1 | 06502081 | 1 | DECK SHIELD A PORT RELIEF |
| 8E2 | 06502081 | 1 | DECK SHIELD B PORT RELIEF |
| 9 | 33459 | 1 | HANDLE |

COMMON LEGAL REAR STOW T4

FRONT HYDRAULIC PUMP

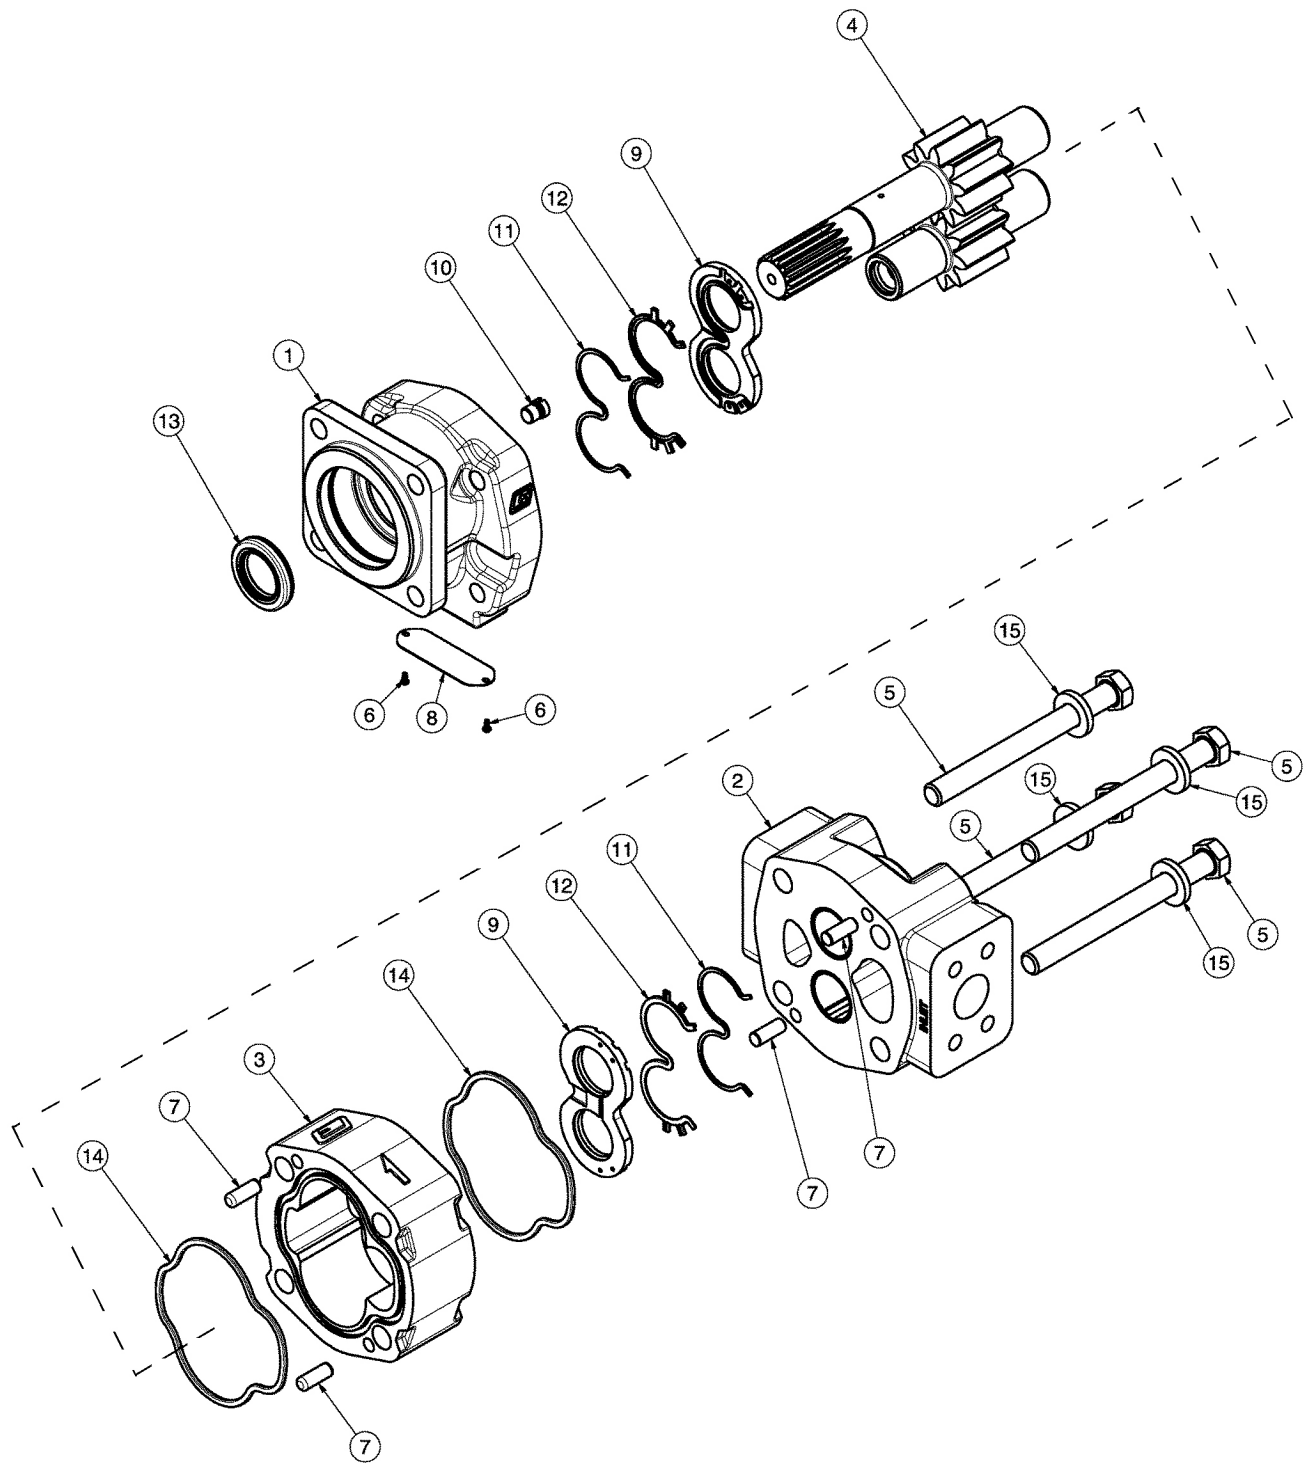


FRONT HYDRAULIC PUMP

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---------------------------------------|
| --- | 23152 | 1 | PUMP ASSEMBLY,1-3/4",COMPLETE |
| 1 | 22766 | 1 | SHAFT END COVER |
| 2 | 22779 | 1 | PORT END COVER |
| 3 | 22774 | 1 | GEAR HOUSING,1-3/4" |
| 4 | 22771 | 1 | GEAR SET |
| 5 | 23824 | 4 | CAPSCREW |
| 6 | 06504078 | 2 | SCREW,DRIVE |
| 7 | 22773 | 4 | DOWEL PINS |
| 8 | 06504077 | 1 | NAMEPLATE |
| 9 | 22770 | 2 | THRUST PLATE |
| 10 | 22767 | 1 | PLUG |
| 11 | 06504075 | 2 | SEAL,BK-UP |
| 12 | 06504074 | 2 | SEAL,CHAN |
| 13 | 22765 | 1 | SEAL,LIP |
| 14 | 06504076 | 2 | SEAL,SQ-R |
| 15 | 02961917 | 4 | WASHER |
| --- | 24150 | 1 | SEAL KIT (INCLUDES 11, 12, 13 AND 14) |

50IN AND 60IN ROTARY MOTOR BREAKDOWN

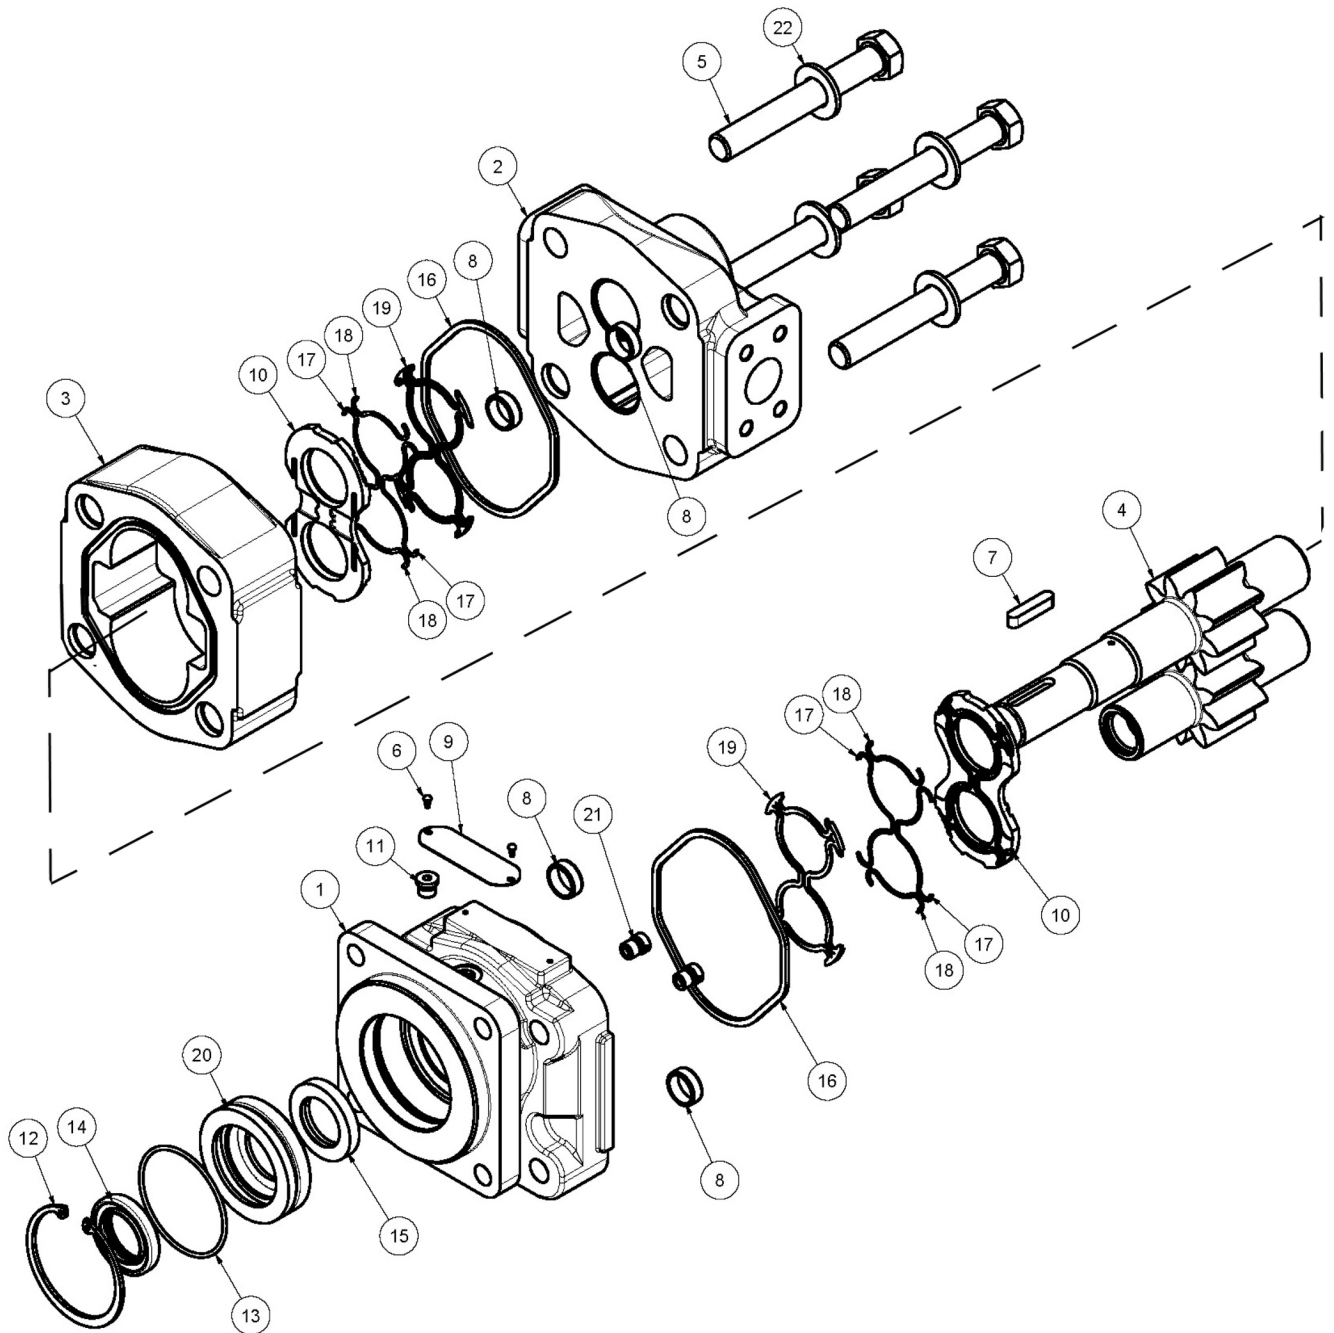

COMMON LEGAL REAR STOW T4


50IN AND 60IN ROTARY MOTOR BREAKDOWN

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|-------|----------|------|----------------------|
| | 06504011 | - | MOTOR ASSEMBLY,TRB60 |
| | 06504012 | - | MOTOR ASSEMBLY,TRB50 |
| 1 | 22790 | 1 | HOUSING, SEC |
| 2 | 06504088 | 1 | HOUSING, PEC |
| 3 | 06504062 | 1 | HOUSING, GEAR,TRB60 |
| ----- | 06504089 | - | HOUSING, GEAR,TRB50 |
| 4 | 06504090 | 1 | SET, GEAR SHAFT |
| 5 | 06504104 | 4 | CAP SCREW,TRB60 |
| ----- | 06504091 | - | CAP SCREW,TRB50 |
| 6 | 06504078 | 2 | SCREW, DRIVE |
| 7 | 06504092 | 1 | KEY |
| 8 | 06504093 | 4 | PIN, DOWEL |
| 9 | 06504094 | 1 | NAME PLATE |
| 10 | 06504095 | 2 | THRPL |
| 11 | 2961940 | 1 | PLUG, ODT |
| 12 | 2962200 | 1 | RING, SNAP |
| 13 | 06504096 | 1 | O RING |
| 14 | 6T5101 | 1 | SEAL, LIP |
| 15 | 06504097 | 1 | SEAL, LIP |
| 16 | 22797 | 2 | SEAL, SQ-R |
| 17 | 06504098 | 4 | SEAL, SIDE CHAN |
| 18 | 06504099 | 4 | SEAL, END CHAN |
| 19 | 06504100 | 2 | SEAL, BK-UP |
| 20 | 06504101 | 1 | RTNR, SEAL |
| 21 | 6T5809 | 2 | CHECK ASS'Y |
| 22 | 06504102 | 4 | WASHER |
| ----- | 06504103 | - | SEAL KIT |

COMMON LEGAL REAR STOW T4

FLAIL MOTOR BREAKDOWN

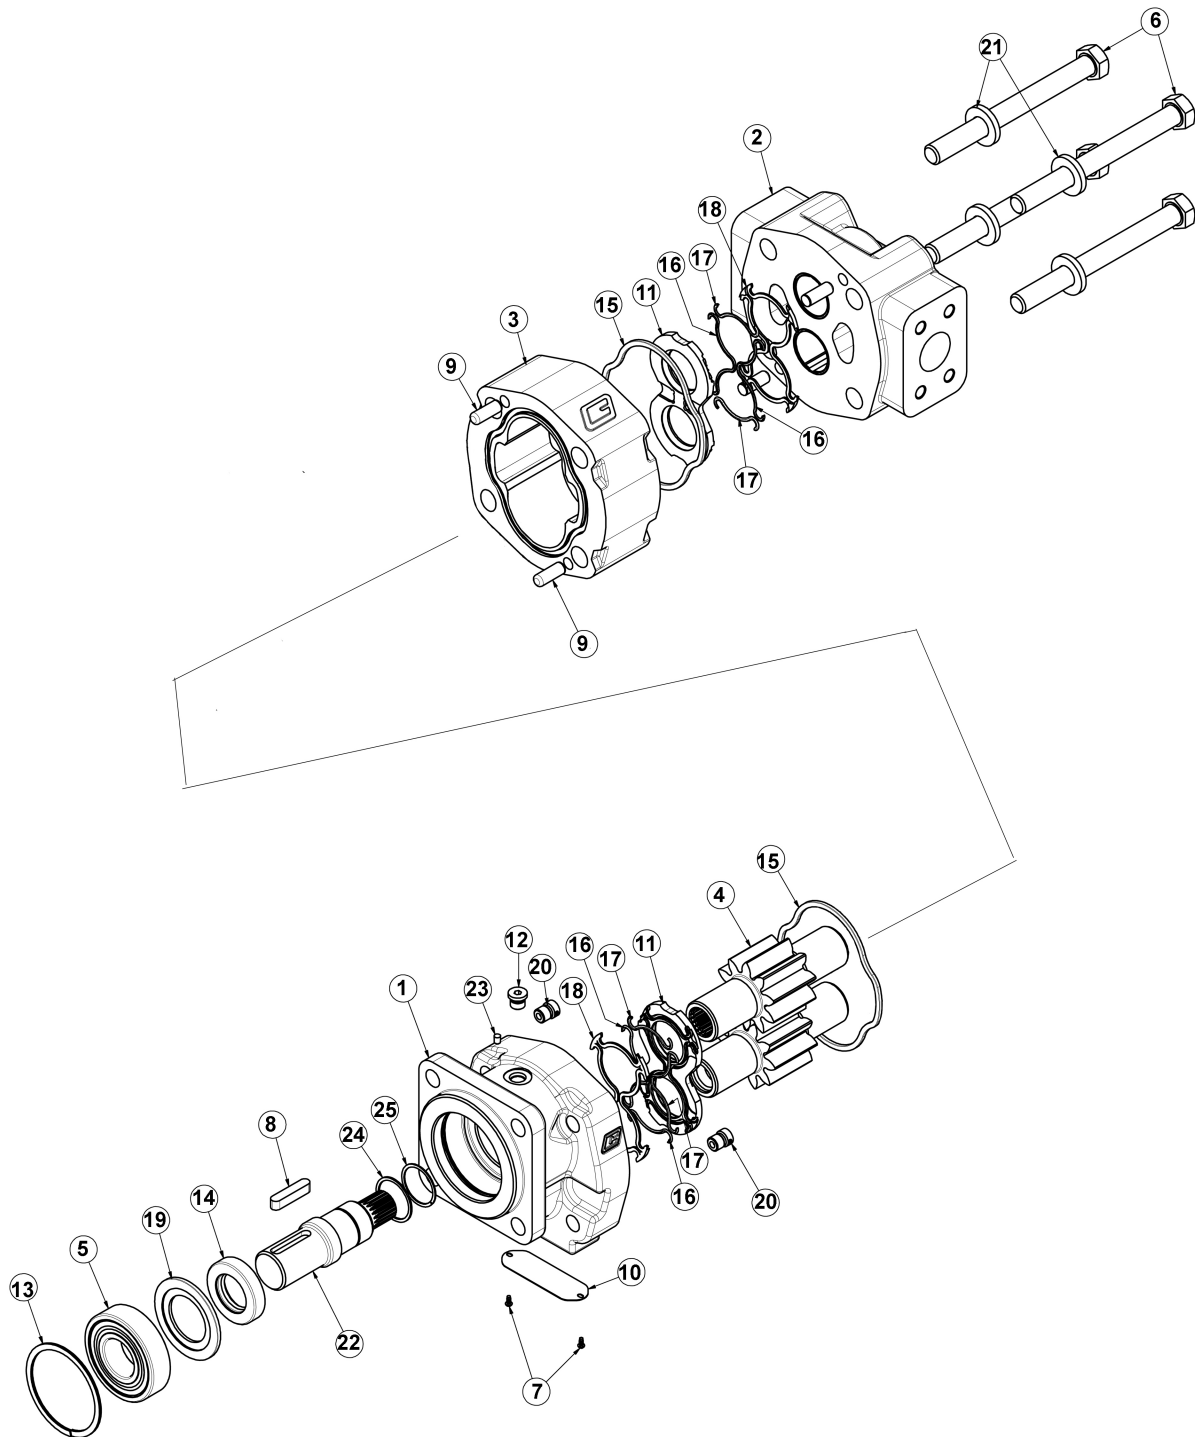

COMMON LEGAL REAR STOW T4


FLAIL MOTOR BREAKDOWN

Continued...

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|-----------------------------------|
| * | 06504132 | - | MOTOR ASSEMBLY 350 - TBF50, TBF63 |
| 1 | 06504141 | 1 | SHAFT END COVER |
| 2 | 06504040 | 1 | PORT END COVER |
| 3 | 06504041 | 1 | GEAR HOUSING |
| 4 | 06504117 | 1 | MATCHED GEAR SET |
| 5 | TF4402 | 1 | BALL BEARING |
| 6 | 06504043 | 4 | CAP SCREW |
| 7 | 06504044 | 2 | SET SCREW |
| 8 | 06504028 | 1 | KEY |
| 9 | 06504045 | 4 | DOWEL PIN |
| 10 | * | 1 | NAMEPLATE |
| 11 | 763759 | 1 | THRUSTPLATE |
| 12 | 2961940 | 1 | PLUG, ODT (0.25) |
| 13 | TF4401 | 1 | SNAP RING |
| 14 | 06504142 | 1 | LIP SEAL |
| 15 | TF4410 | 2 | GASKET SEAL |
| 16 | 06504046 | 4 | SIDE SEAL |
| 17 | 06504047 | 4 | END SEAL |
| 18 | TF4407 | 2 | BACK-UP SEAL |
| 19 | 06504122 | 1 | SEAL RETAINER |
| 20 | 6T5809 | 2 | CHECK ASSEMBLY |
| 21 | 2961917 | 4 | WASHER |
| 22 | 06504140 | 1 | SHAFT |
| 23 | 06504139 | 1 | BREATHER |
| 24 | 06504121 | 1 | SPACER, BRG |
| 25 | 06504119 | 1 | SNAP RING |
| * | 06504022 | - | SEAL KIT |


COMMON LEGAL REAR STOW T4

MANUAL LIFT VALVE SWITCH BOX

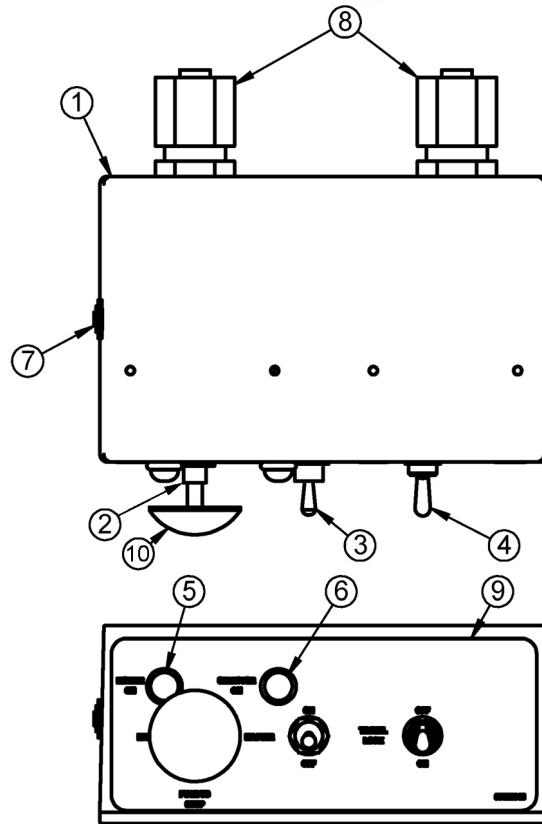


| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|----------------------------------|
| 1 | 06510049 | 1 | SWITCH BOX ASSEMBLY |
| --- | 06514010 | 1 | SWITCH BOX |
| 2 | 35226 | 2 | SWITCH,MOWER,COLEHERSEE |
| 3 | 33811 | 1 | SWITCH,MASTER/DECK FLOAT |
| 4 | 34532 | 1 | SWITCH,TRVL LCK |
| 5 | 6T3923 | 1 | INDICATOR LIGHT,ON,RED |
| 6 | 06510193 | 1 | INDICTATOR LIGHT,ON,GREEN |
| 7 | 06514006 | 1 | BREAKER,15A,SWBX |
| 8 | 34540 | 2 | STRAIN RELIEF |
| 9 | 06550043 | 1 | DECAL,SWTCHBX |
| 10 | 02964063 | 1 | KNOB,RED |
| 11 | 35227 | 1 | RELAY,DP,DT,12V,LY2F (NOT SHOWN) |

MANUAL LIFT VALVE SCHEMATIC

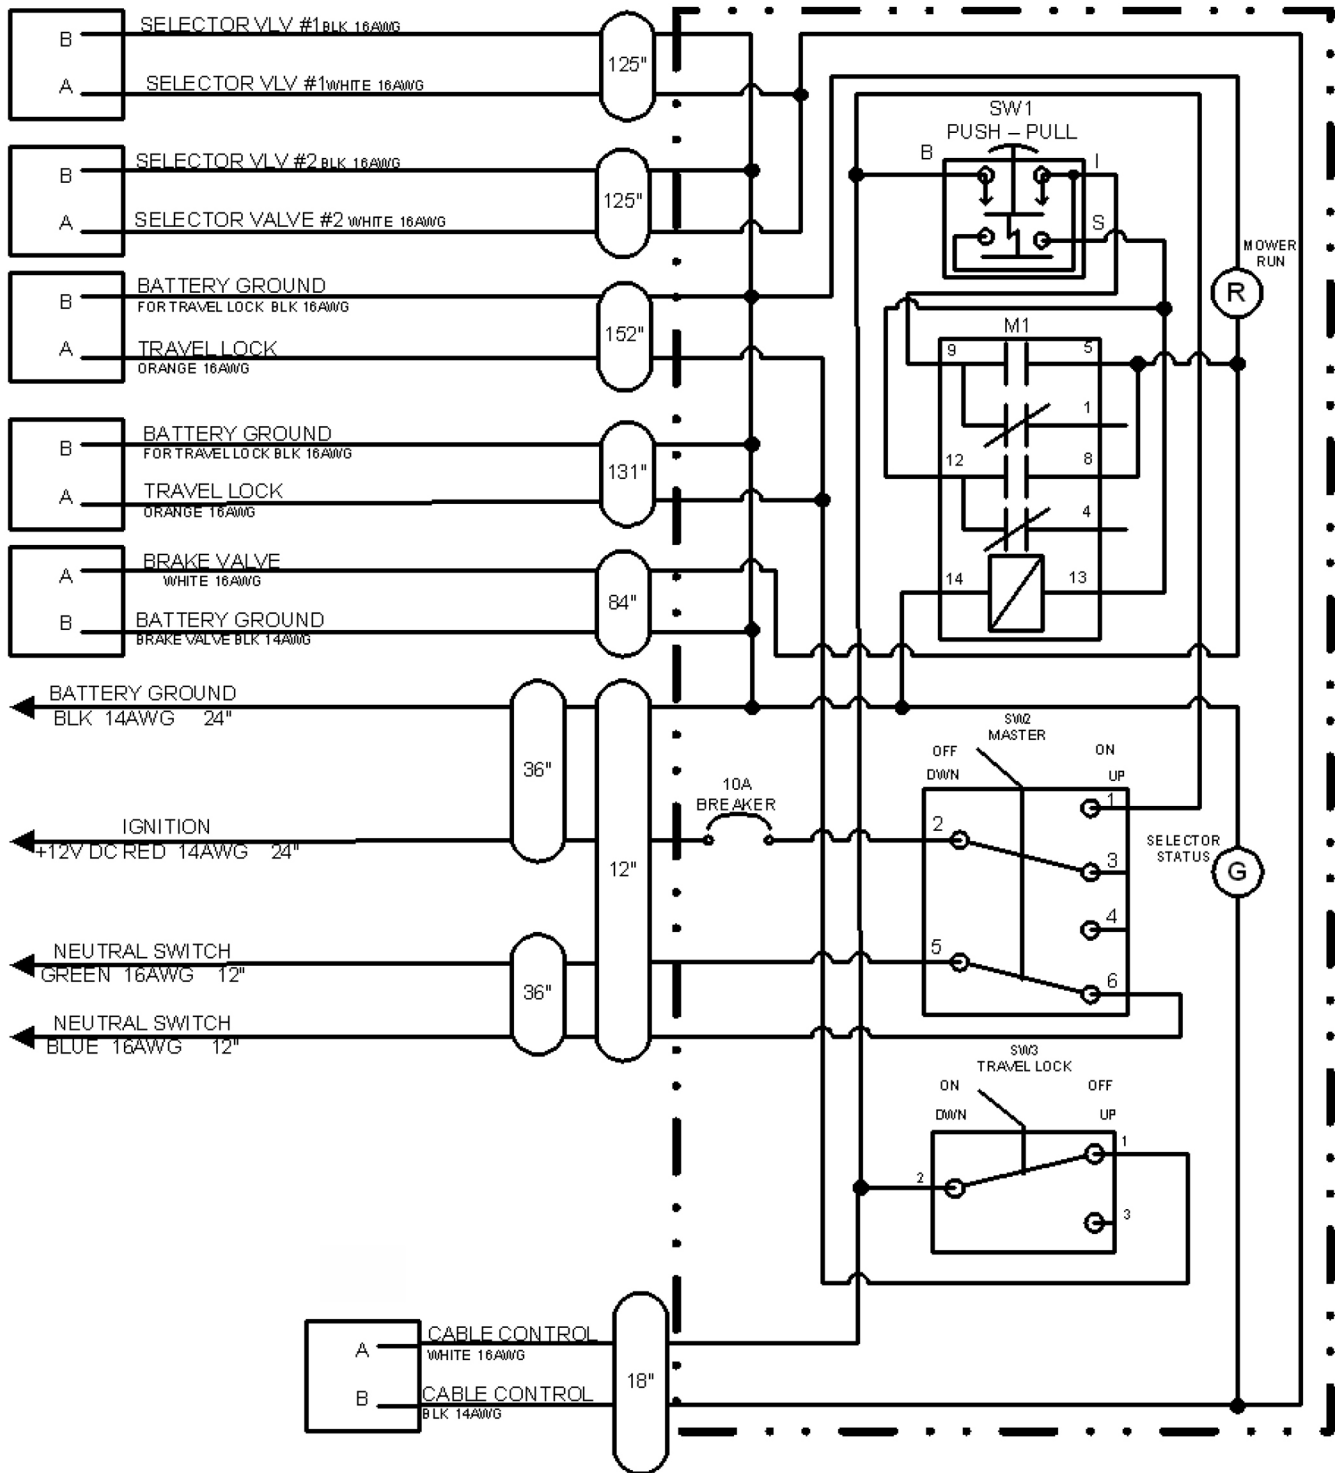


ELECTRONIC LIFT VALVE SWITCH BOX

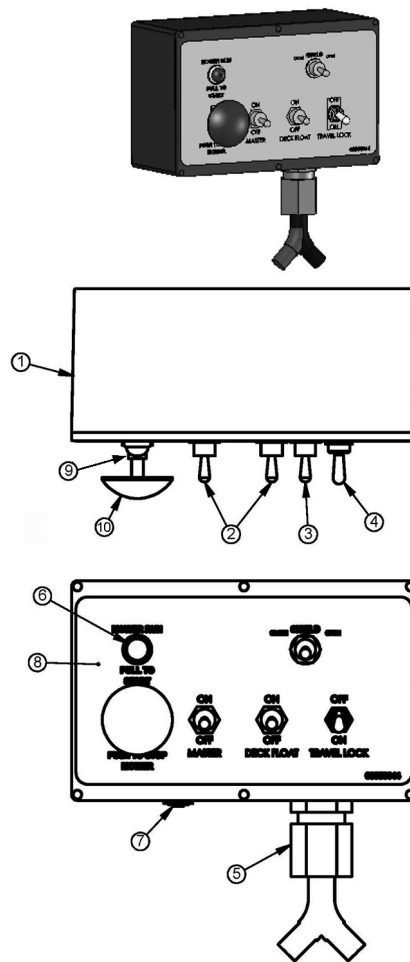


| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|--------------------------------|
| 1 | 06510195 | 1 | SWITCH BOX,ASSY |
| --- | 06514008 | 1 | SWITCH BOX |
| 2 | 33811 | 2 | SWITCH,MASTER/DECK FLOAT |
| 3 | 33813 | 1 | SWITCH,SFTY SHIELD |
| 4 | 34532 | 1 | SWITCH,TRVL LCK |
| 5 | 34540 | 1 | STRAIN RELIEF,3/4",BLACK,NYLON |
| 6 | 6T3923 | 1 | INDICTATOR LIGHT,ON,RED |
| 7 | 06514006 | 1 | BREAKER,15A,SWBX |
| 8 | 06550044 | 1 | DECAL,SWBX,06510047 |
| 9 | 35226 | 1 | SWITCH,MOWER,COLEHERSEE |
| 10 | 02964063 | 1 | KNOB,RED |
| 11 | 35227 | 1 | RELAY,DP,DT,12V,LY2F,35226 |


ELECTRONIC LIFT VALVE SCHEMATIC - REAR STOW

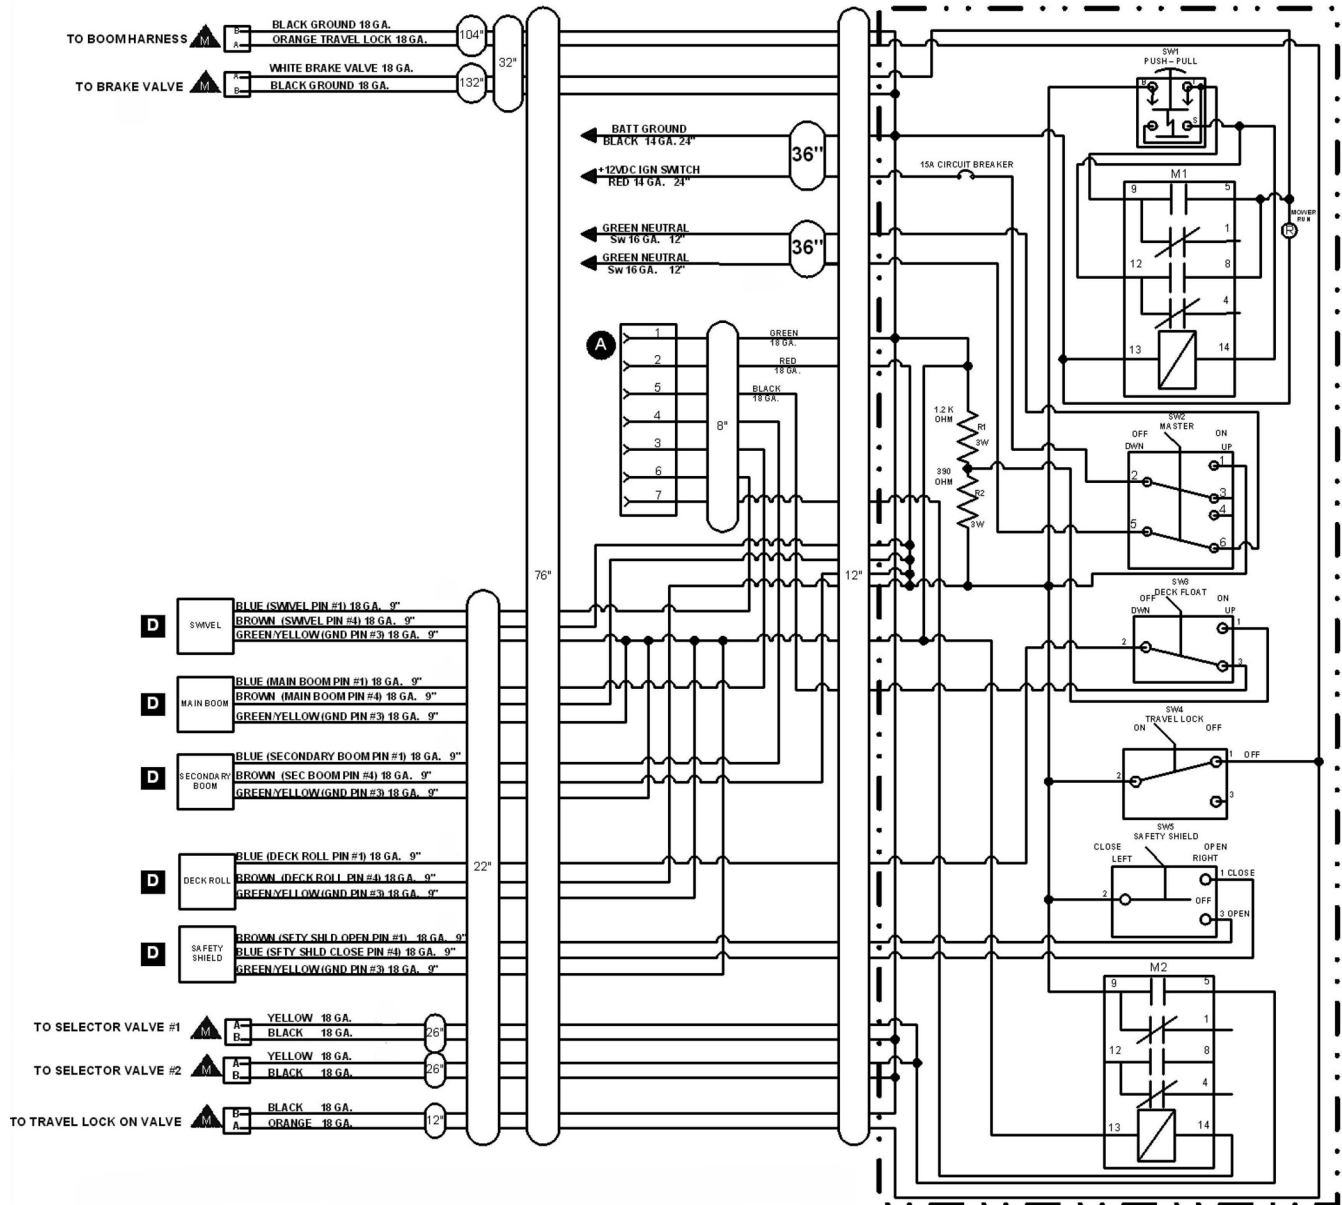

ELECTRONIC LIFT VALVE WIRING DIAGRAM

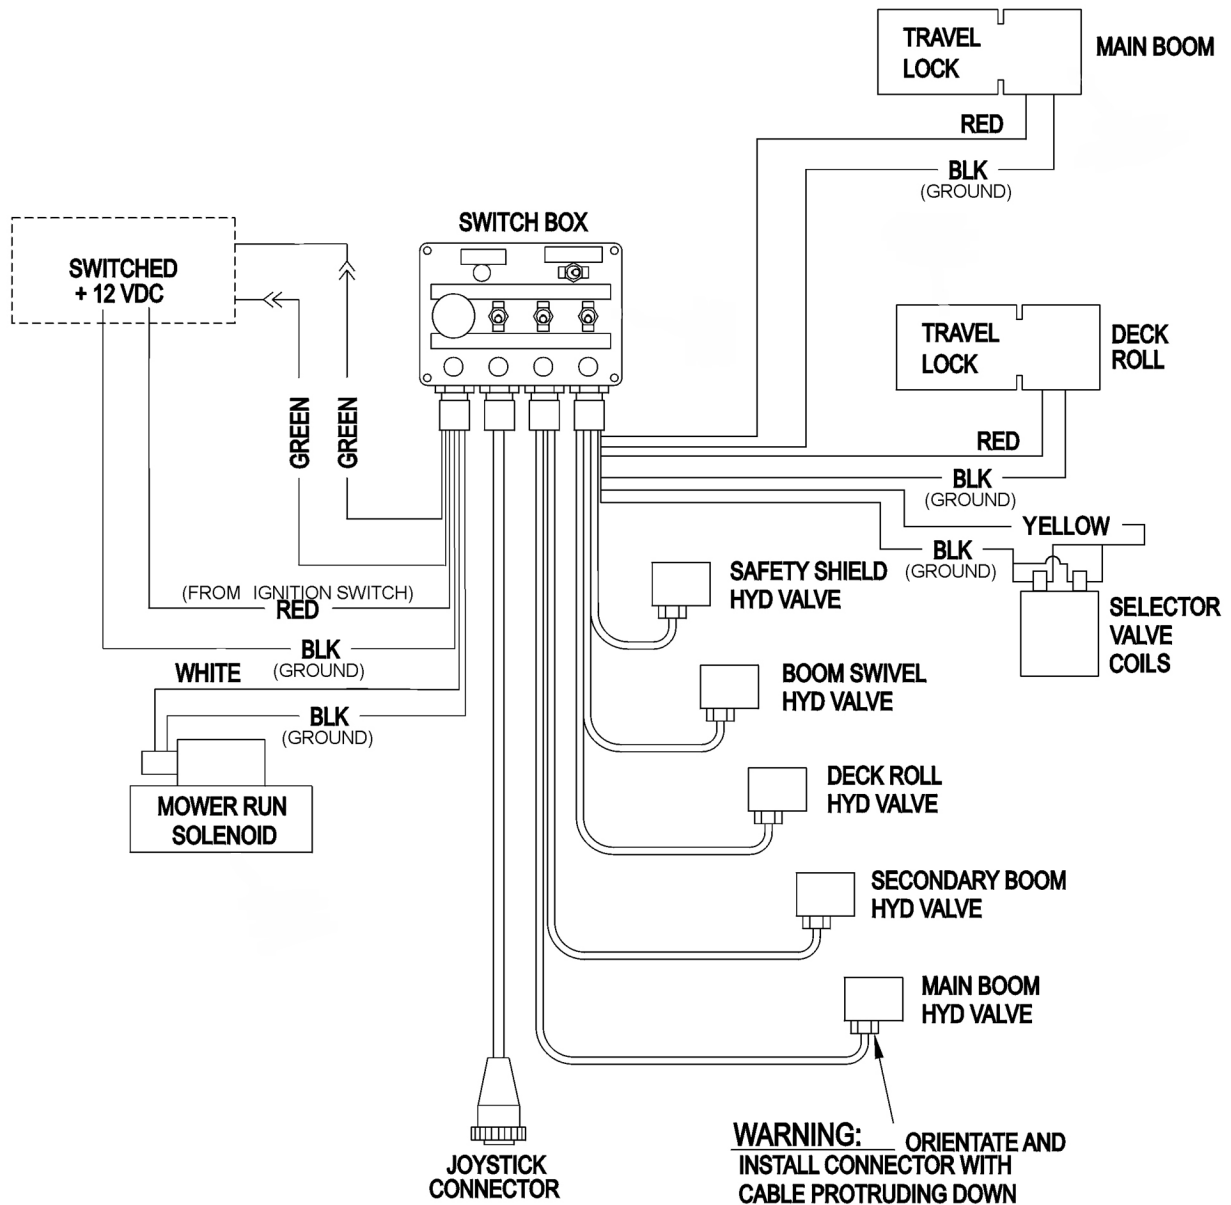

BOOM TRAVEL LOCK

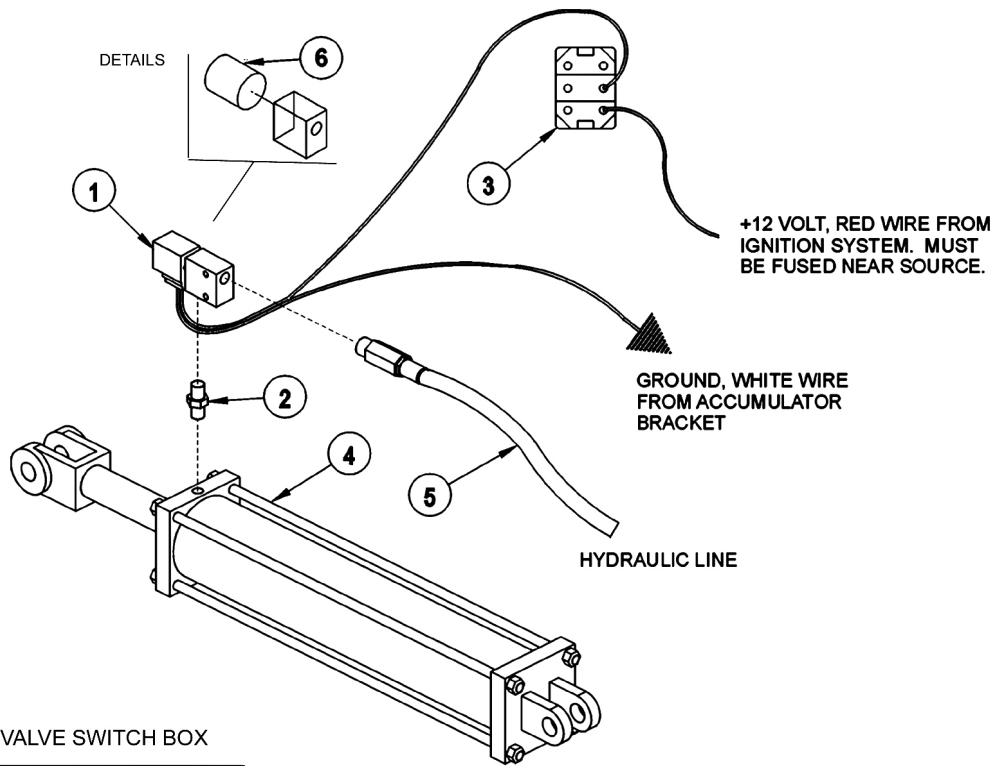

ELECTRONIC LIFT VALVE SWITCH BOX




MANUAL LIFT VALVE SWITCH BOX




| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|---|
| 1 | 06510050 | 1 | HYDRAULIC TRAVEL LOCK VALVE |
| 2 | 31329 | 1 | ADAPTER - STANDARD BOOM |
| 3 | 34532 | 1 | SWITCH,TRAVEL LOCK |
| 4 | ----- | - | MAIN BOOM CYLINDER *REFER TO BOOM ASSY |
| 5 | ----- | - | HOSE / FITTINGS *REFER TO BOOM HYD ASSY |
| 6 | 06510092 | 1 | COIL ,TRAVEL LOCK |

SELECTOR VALVE SCHEMATIC

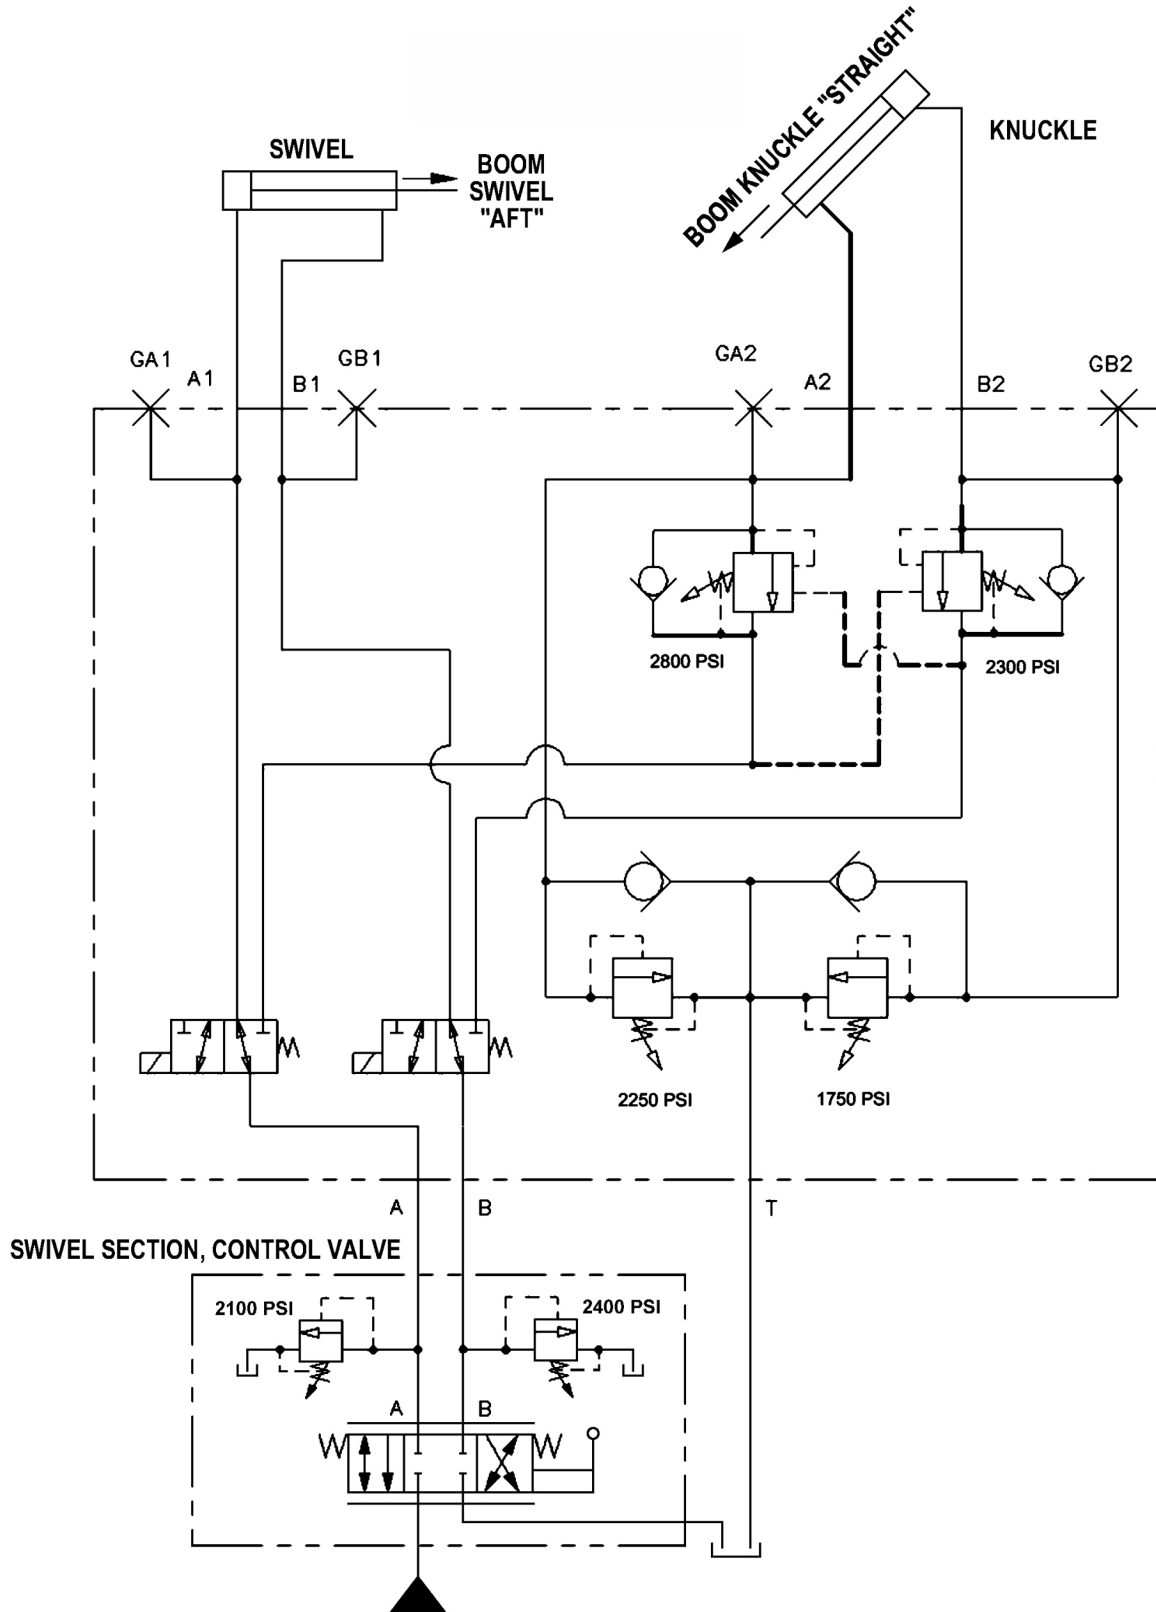


BRAKE VALVE ASSEMBLY

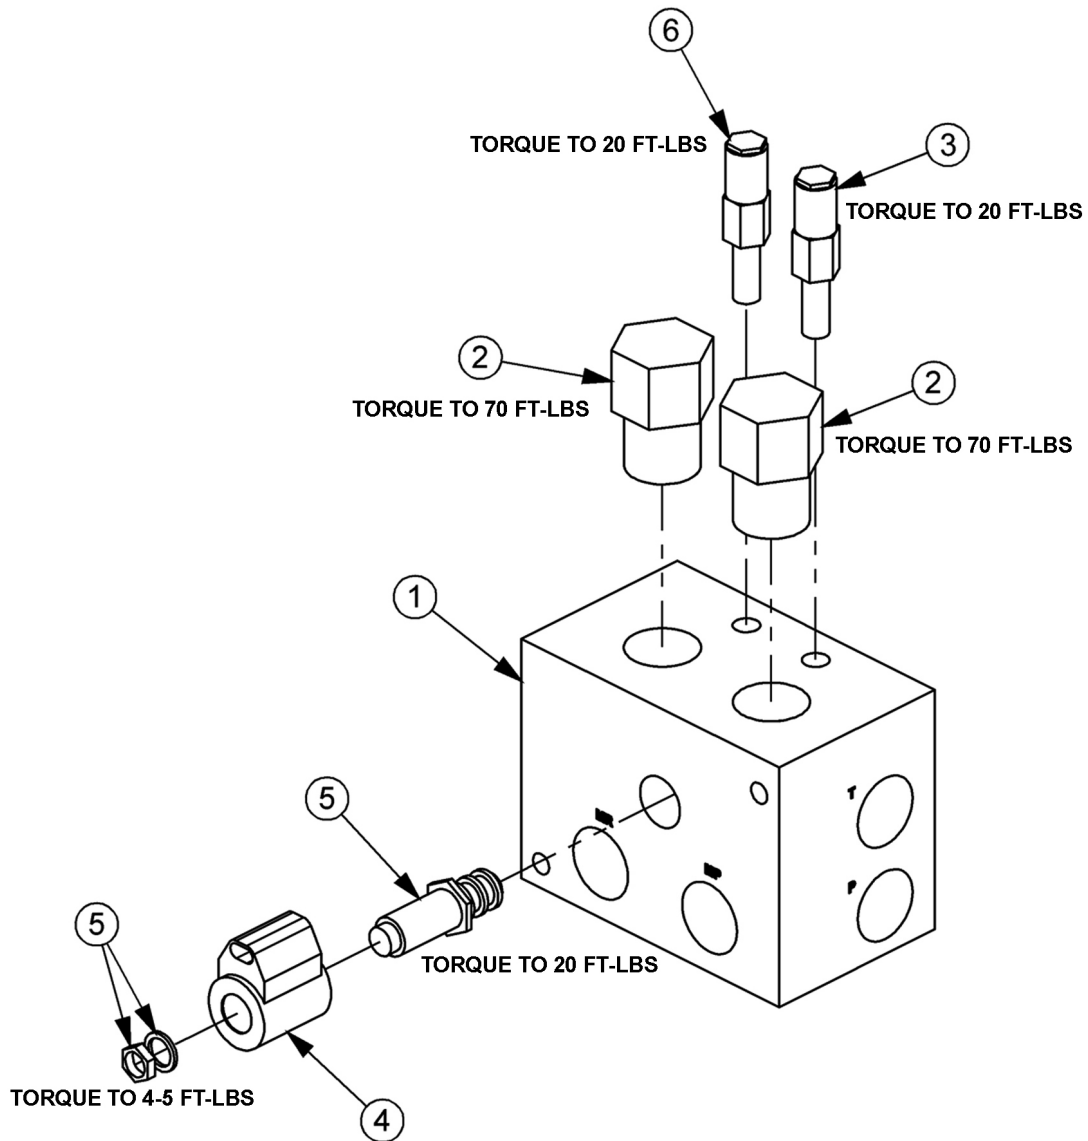

| ITEM | PART NO. | QTY. | DESCRIPTION |
|------|----------|------|--|
| --- | 06510083 | 1 | BRAKE VALVE, ASSY |
| 1 | 34092 | 1 | BRAKE VALVE, BLANK |
| 2 | 34094 | 2 | LOGIC ELEMENT |
| 3 | 34095 | 1 | RELIEF VALVE, 3000 PSI |
| 4 | 06510095 | 1 | METRI PAK COIL |
| 5 | 34093 | 1 | CARTRIDGE, 2 POSITION, 3 WAY (WITH NUT & WASHER) |
| 6 | 34091 | 1 | RELIEF VALVE, 2600 PSI |
| --- | 34096 | 2 | RELIEF SEAL KIT |
| ---- | 34097 | 1 | SOLENOID SEAL KIT |
| --- | 34098 | 2 | ELEMENT SEAL KIT |

BRAKE VALVE HYDRAULIC SCHEMATIC

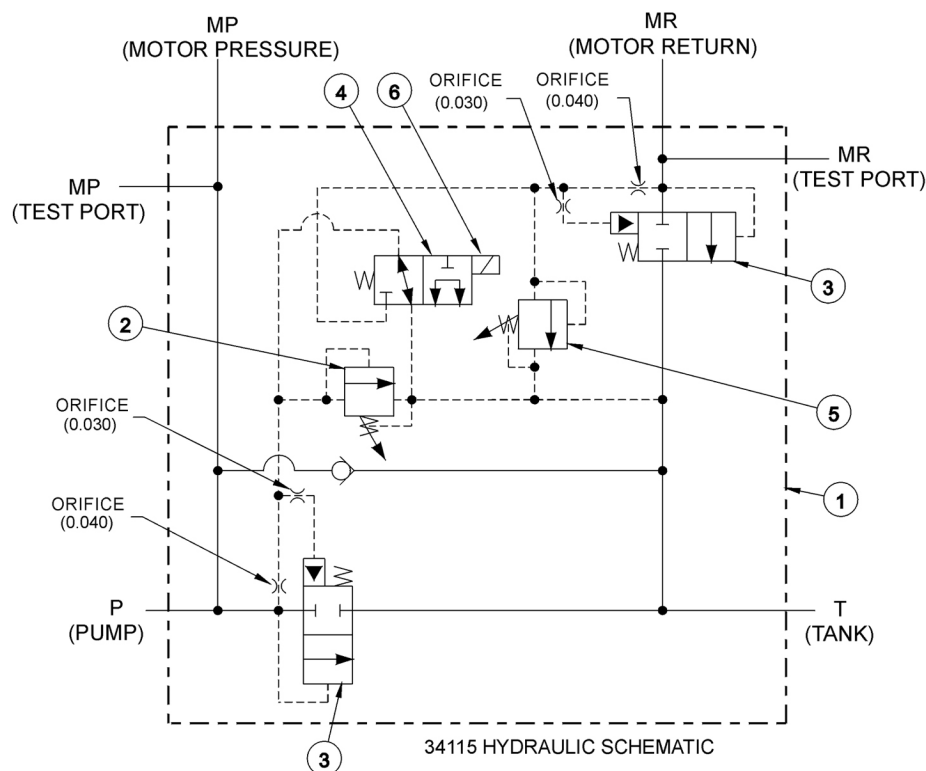

BRAKE VALVE TROUBLESHOOTING

FAILURE MODE:

- MOWER WILL NOT START - system pressure is low (engine not lugging).
- MOWER WILL NOT START - system pressure is high (engine lugging). "MR" port will be high pressure.
- MOWER WILL NOT ROTATE AT FULL SPEED - limited power.
- MOWER BLADE WILL NOT STOP - blade will not stop in proper time.

CHECK STEPS


- 1 thru 6
- 7
- 3 thru 5
- 7 thru 9

CORRECTIVE STEPS:

1. Check for voltage at solenoid (item 6), voltage must be between 10.2 volts and 13.8 volts.
2. Remove, inspect solenoid and cartridge (items 4, 6) for wear or contamination.
3. Remove, inspect logic elements near "P" port (item 3) for wear or contamination.
4. Remove, inspect 3000 psi relief valve (item 2) for wear or contamination.
5. Remove and inspect orifices near "P" port for contamination.
6. Remove "P" port hose and fitting, visually inspect for contamination, check ball for movement.
7. Remove and inspect orifices near "MR" port for contamination.
8. Remove, inspect 2600 psi relief valve (item 5) for wear of contamination.
9. Remove, inspect logic element near "MR" port (item 3) for wear or contamination.

HYDRAULIC TROUBLESHOOTING GUIDE

Hydraulic Troubleshooting guide

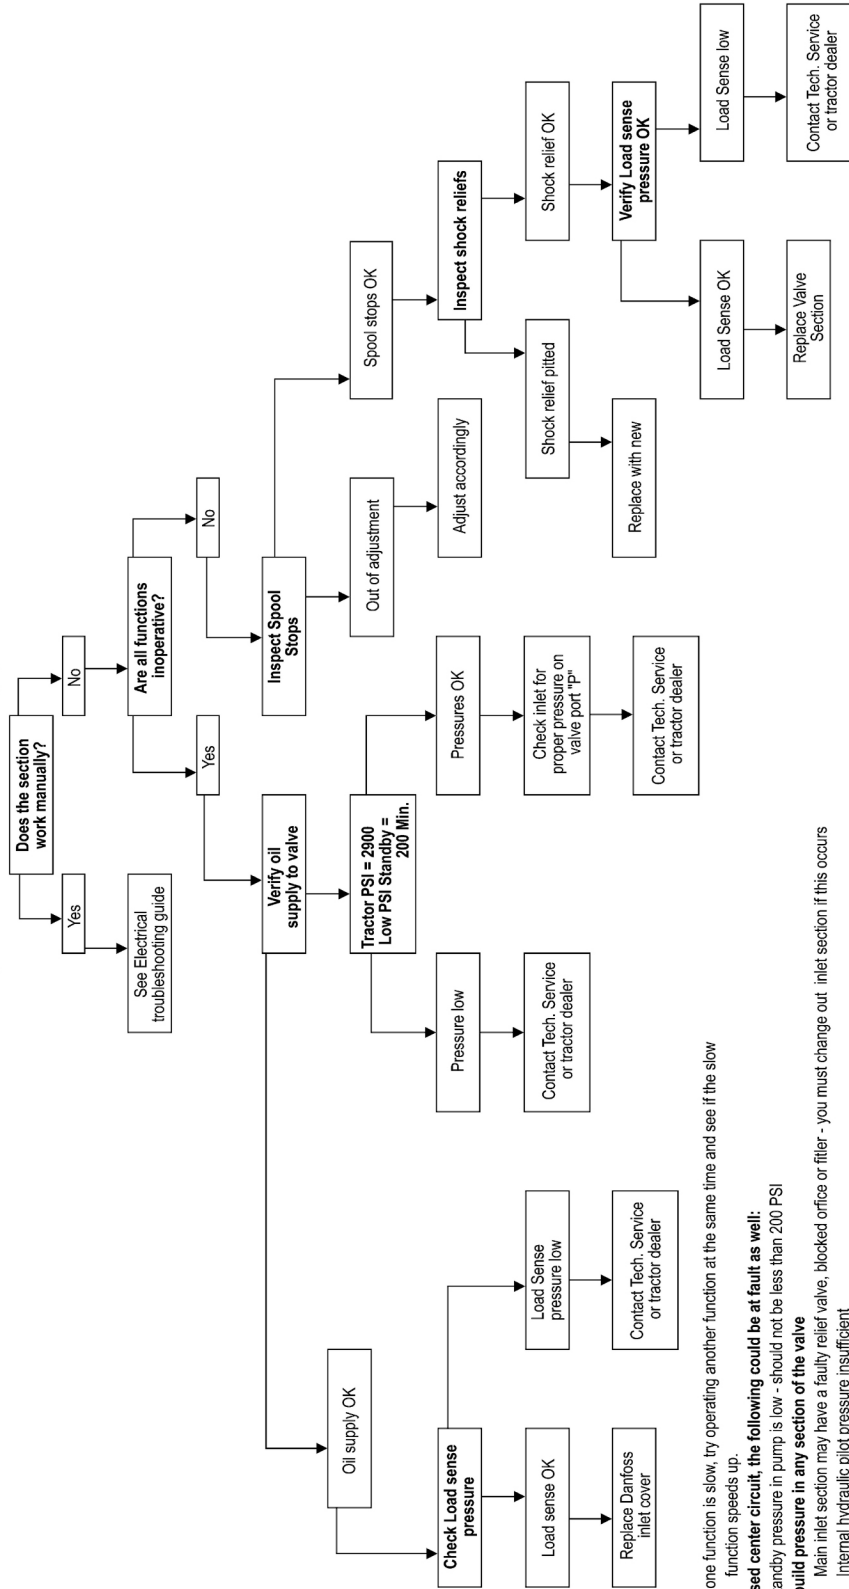

Notes: If one function is slow, try operating another function at the same time and see if the slow function speeds up.

On a closed center circuit, the following could be at fault as well:


Tractor standby pressure in pump is low - should not be less than 200 PSI

Cannot build pressure in any section of the valve

Main inlet section may have a faulty relief valve, blocked orifice or filter - you must change out inlet section if this occurs
Internal hydraulic pilot pressure insufficient

ELECTRICAL TROUBLESHOOTING GUIDE

Joystick Electrical Troubleshooting guide

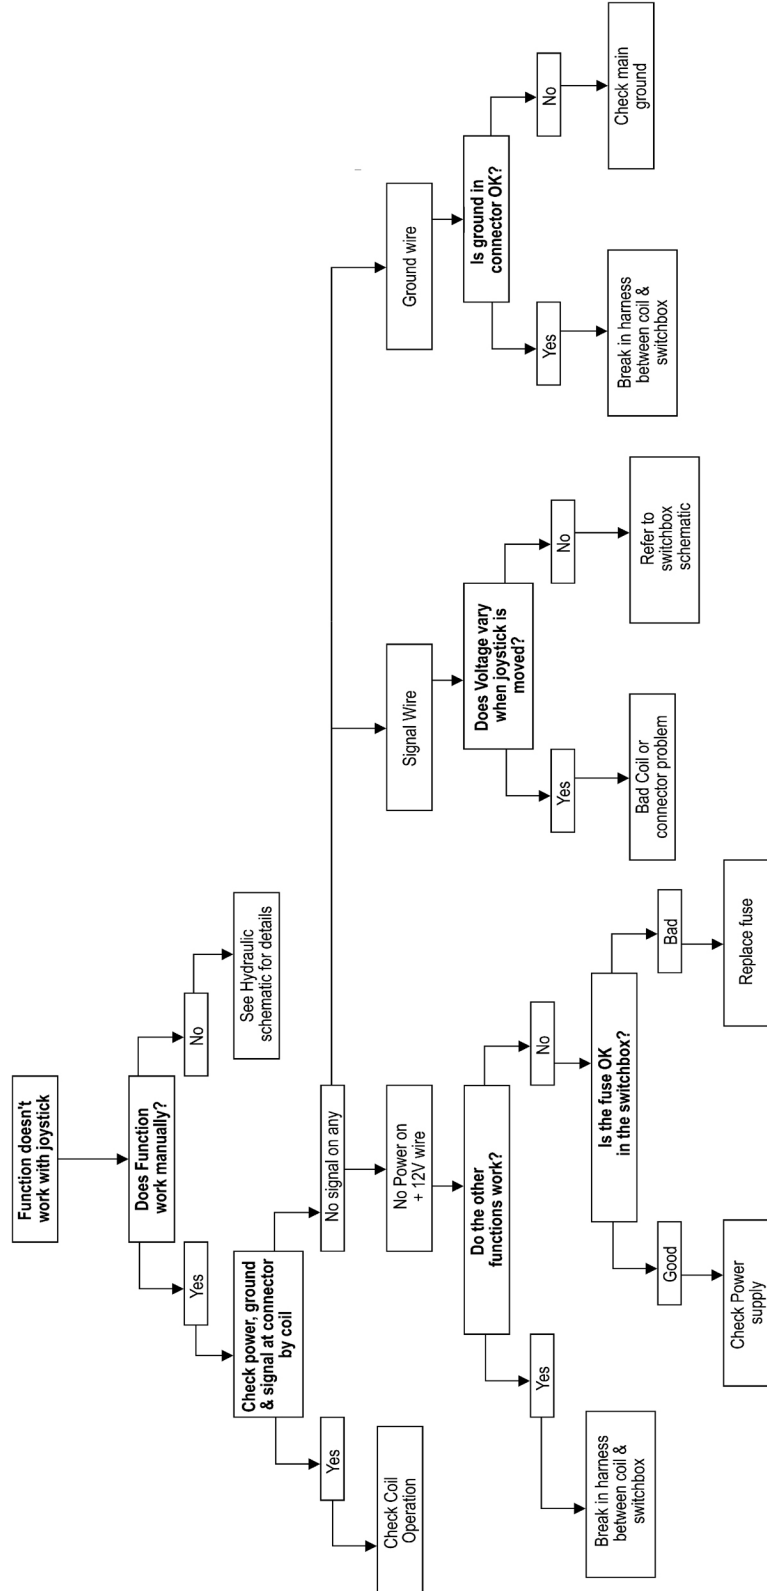

TROUBLESHOOTING

JOYSTICK TROUBLESHOOTING

Boom operation not responding to joystick movement.
Isolate hydraulic vs. electronic symptom.

Turn off electronic master switch (preventing electronic actuator on valve from attempting to hold spool in neutral position). With tractor engine running, operate the valve section with the manual handle. If function operates normally, continue with electronic inspection. If function does not operate normally, continue with hydraulic inspection.

Electronic inspection.

Connect a voltmeter to the cable connector of the valve section that is not operating. This will allow you to measure supply and signal voltage when the joystick is operated.

Main, Secondary, and Swivel Valves – signal voltage should be 50% of supply voltage with joystick in Neutral position, up to 75% of supply voltage in B direction, down to 25% of supply voltage in A direction. Signal voltage should change smoothly with lever movement.

Pin #1 – Supply Voltage Pin #2 – Signal Voltage Pin #gnd – ground

Deck Roll Valve or Float Valve – signal voltage should be 50% of supply voltage with joystick in Neutral position, up to 65% of supply voltage in B direction, down to 35% of supply voltage in A direction. Signal voltage should change smoothly with lever movement. Signal voltage should be approximately 75% of supply voltage when float switch is operated.

Pin #1 – Supply Voltage Pin #2 – Signal Voltage Pin #gnd – ground

Shield Valve or On/Off Valve – Voltage on pin #1 should be equal to supply voltage when switch is operated in A direction. Voltage on pin #2 should be equal to supply voltage when switch is operated in B direction.

Pin #1 – Signal Voltage Pin #2 – Signal Voltage Pin #gnd – ground

If none of the valve will operate with electrical signal, verify that there is oil pressure at the valve inlet. Electrical Valves must have pilot supply oil to move the spools.

Possible electronic problems.

Open circuit (broken wire, bad connection or loose connection in switch box).

Shorted to positive, ground, or other.

Incorrect voltage signal from joystick.

Continued on next sheet

TROUBLESHOOTING - CONTINUED

Hydraulic inspection.

Install 3 pressure gauges, on the valve inlet (use M port, or tee into hose supplying oil from the pump to the inlet), on the workport that is not operating, and on the LS port.

With the spools in Neutral

Gear pump – P should be approximately 200 psi, LS = 0, workport – pressure on cylinder or function.

LS pump – P should equal pump standby pressure, LS = 0, workport – pressure on cylinder or function.

Pressure Comp pump – P should equal pump standby pressure, LS = 0, workport – pressure on cylinder or function.

Gear pump – P should be approximately 200 psi higher than LS, LS should equal workport, workport – pressure on cylinder or function.

LS pump – P should be LS + standby, LS should equal workport, workport – pressure on cylinder or function.

Pressure Comp pump – P should equal pump standby pressure, LS should equal workport, workport – pressure on cylinder or function.

Operate one spool, measure pressures with function at end of travel or stop

Gear pump – P should equal valve relief setting or workport shock valve setting. LS should equal workport. Workport should equal relief setting or workport shock valve setting.

LS pump – P should equal valve relief setting, pump max pressure setting, or workport shock valve setting. LS should equal workport. Workport should equal relief setting, pump max pressure setting, or workport shock valve setting.

Pressure Comp pump – P should equal pump standby pressure, LS should equal workport. Workport should equal pump standby pressure or workport shock valve setting.

Operate more than one spool.

Gear pump – P should approximately 200 psi higher than LS. LS should equal highest workport pressure. Workport – pressure on cylinder or function.

LS pump – P should be LS + standby pressure. LS should equal highest workport pressure. Workport – pressure on cylinder or function.

Pressure Comp pump. P should equal pump standby pressure. LS should equal highest workport pressure. Workport – pressure on cylinder or function.

Possible hydraulic problems.

Cylinder leak.

LS signal leaking to tank before reaching pump LS port.

Hydraulic system or pump not supplying flow to valve.



TIGER CORPORATION
WARRANTY INFORMATION

Tiger Corporation, 3301 N. Louise, Sioux Falls, South Dakota, warrants to the original Retail Customer, the new Tiger equipment is free of defects in material and workmanship. Any part of said equipment that in Tiger's adjustment, show evidence of such defects will be repaired or replaced without charge, provided that the failure of part(s) shall have occurred within twelve (12) months from the date of delivery of said equipment to the Retail Customer. Expendable components such as knives, oil, chain sprockets, skid shoes, knife mounting disks and the like are excluded but not limited to this warranty.

The Retail Customer must pay the transportation cost to and from the Tiger Dealer's service shop for warranty service. Warranty service will be performed by the Tiger Dealer from whom the equipment was purchased, in his service shop and during his regularly scheduled days and hours of operation.

All Tiger obligation under this warranty shall be terminated if the equipment is modified or altered in ways not approved in writing by Tiger, if repair parts other than genuine Tiger repair parts have been used, or if the equipment has been subject to misuse, neglect, accident, improper maintenance or improper operation.

Tiger Corporation reserves the right to make improvements in design or changes in specification at any time without incurring any obligation to owners of equipment previously sold.

No agent or person has authority to alter, add to or waive the above warranties which are agreed to be in the only warranties, representations or promises, expressed or implied, as to the quality or performance of the products covered and which do not include any implied warranty of merchantability or fitness. In no event will Tiger be liable for incidental or consequential damages or injuries, including, but not limited to, loss of profits, rental or substitute equipment or other commercial loss.

**THERE ARE NO WARRANTIES WHICH EXTEND
BEYOND THOSE EXPRESSED HEREIN.**

It is the Purchasers obligation to sign the warranty registration form **AFTER** he / she has Read and Understands the Operation and Safety Instructions stated within this manual.

ONE LAST WORD

This manual cannot possibly cover all of the potentially hazardous situations you will encounter. By being familiar, though, with the safety rules, operating and maintenance instructions in this manual you can help prevent accidents. The objective of this manual is to help make you a better operator. Remember, **SAFETY IS YOU!**



Your safety and the safety of those around you depends on **YOU**. Common sense should play a large role in the operation of this machine.

Since we at Tiger Corporation are constantly striving to improve our products, we reserve the right to change specifications or design at any time.